

Sunseeker Awning


32143 (2.0m) / 32144 (2.5m)

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 15 mins

sunseeker

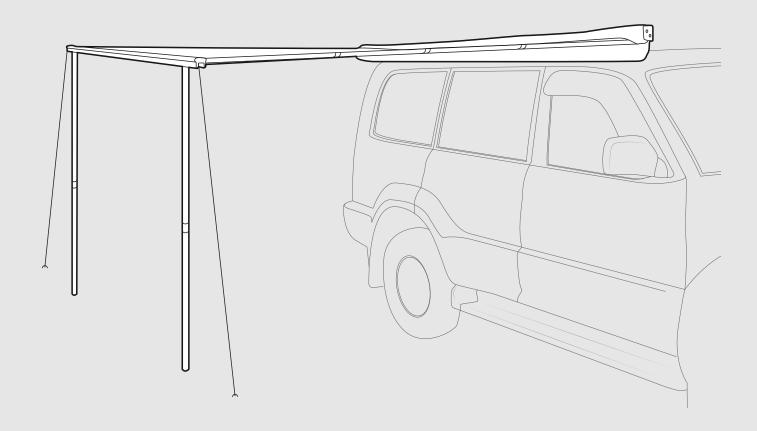

Rhino-Rack AUSTRALIA


22A Hanson Place, Eastern Creek, NSW 2766


Rhino-Rack USA

19822 E. 22nd Avenue, Unit B, Aurora, CO 80011 RHINORACK.COM


Document No: 520-RFI-00215 Issue No: 03


Issue Date: 28/05/2025

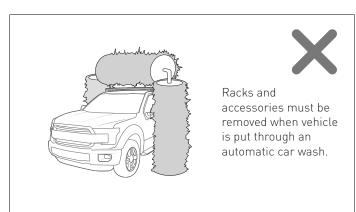


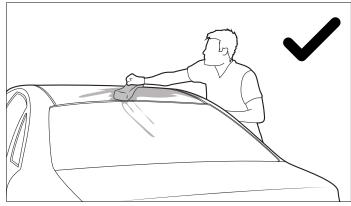





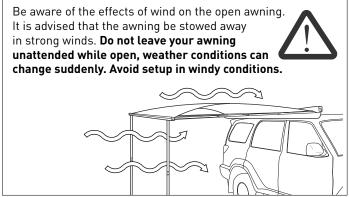


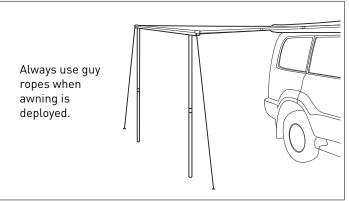


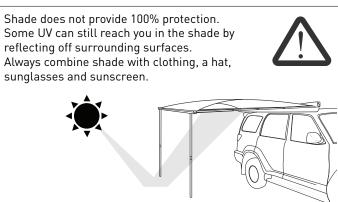

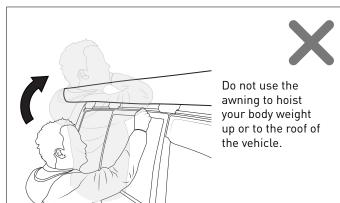

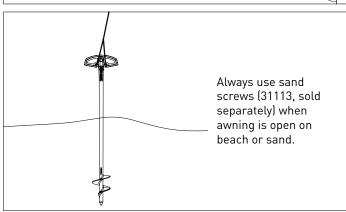

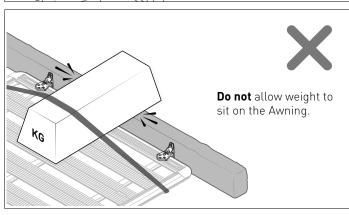

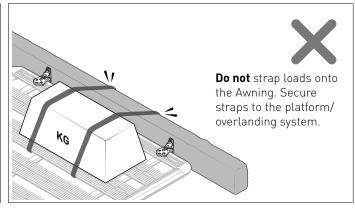

Page 2 of 19

Important Information

Recommendations

Use only non-stretch fastening ropes or straps.

Please remove Awning and crossbars when putting vehicle through an automatic car wash.

Do not stow away the awning for long periods if it is wet. You must allow the awning material to dry completely before storing for extended periods of time. When rolling up the awning, avoid excessive bunching up of the material before stowing. The awning should be rolled up as neatly as possible.

In service maintenance checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:








Load Ratings

With the addition of the Awning, the load capacity of your crossbars will have to be adjusted accordingly. The Awning with mounting brackets weighs approximately 11kg.

Note for Dealers and Fitters

It is your responsibility to ensure this fitting instruction is given to the end user or client It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Placement and Dimensions

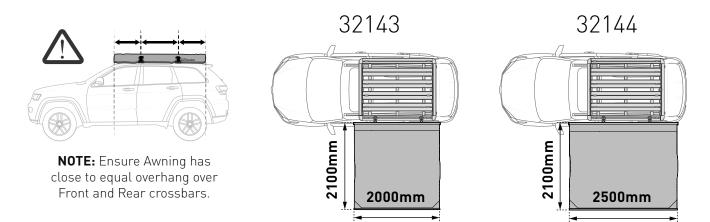

CONTENTS

Installation onto:


Pioneer Platforms — Steps 1 - 6 a

6 1 - 6 and 8 - 15

VA / RD / Sportz Crossbars — Steps 7 - 15

Operation — Steps 16 - 24

Parts List

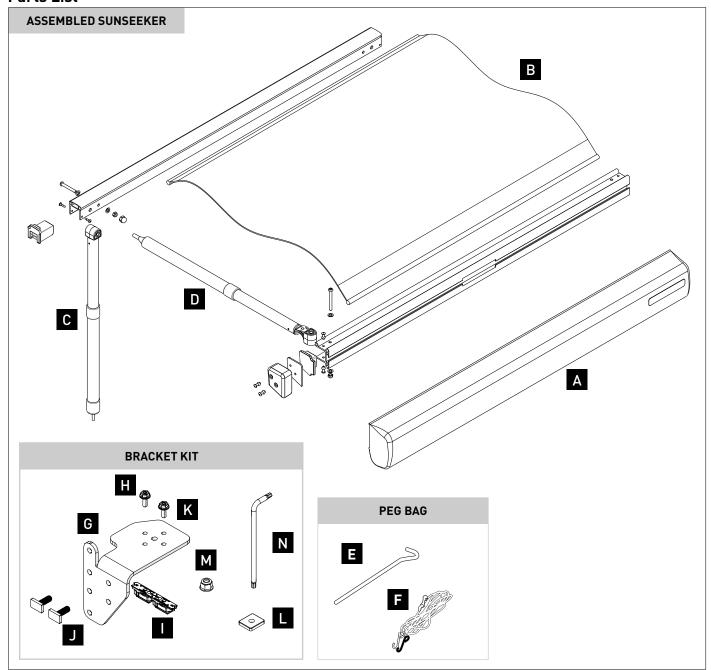

Item	ASSEMBLED AWNING	Qty
Α	Awning Bag	1
В	Awning Material	1
С	Vertical Front Pole	2
D	Horizontal Support Pole	2
Item	PEG BAG	Qty
пеш	F LO BAO	GLY
E	Metal Peg	3
F	Guy Rope	3

Item	BRACKET KIT	Qty
G	Base Bracket	2
Н	M6 x 16mm Hex Head Flanged Bolt	4
I	Zwifloc Drop-in Nut	4
J	T-bolt	4
K	M6 x 12mm Hex Head Flanged Bolt	4
L	Square Nut	4
М	M8 Nyloc Nut	4
N	Torx Key (T30)	1


TOOLS REQUIRED:


- **T1** Tape Measure
- **T2** 10 & 13mm (1/2") Spanner (or Socket wrench)
- T3 Step Ladder
- T4 Hammer/Mallet

Bracket Height Setup

The bracket can be set up in **4** different **height configurations**. Before starting, decide which configuration best suits your setup.


(For the purpose of these instructions, the steps are shown in the **LOW** configuration.)

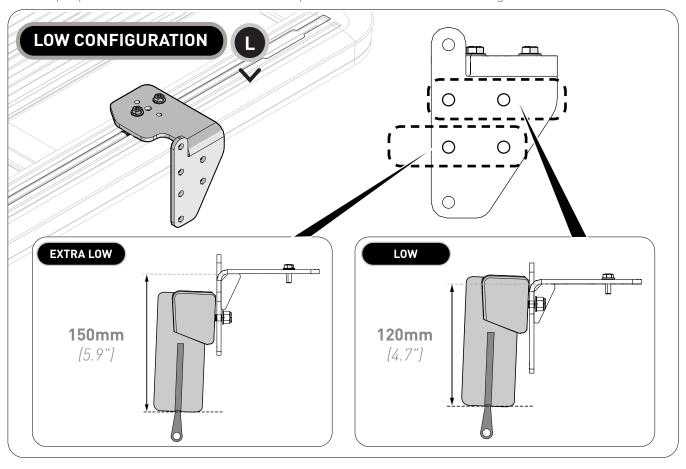


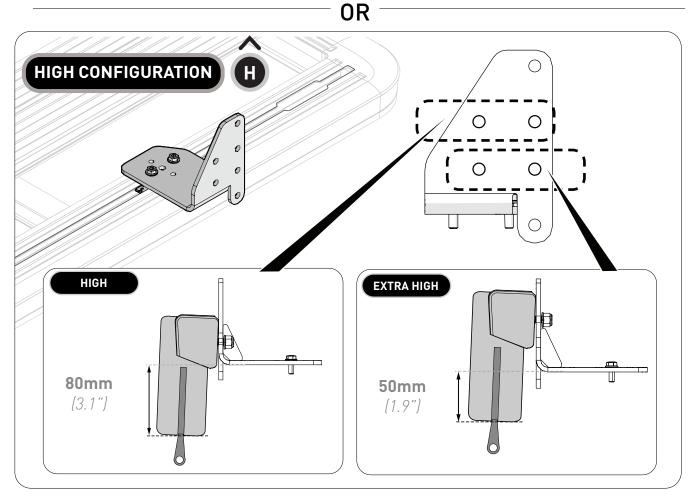


For Installation onto PIONEER PLATFORMS


(For Crossbars, skip to Step 7)

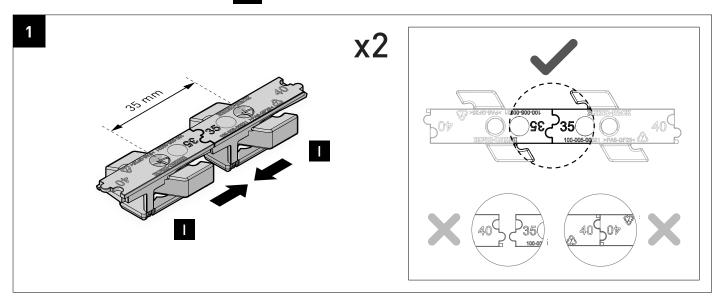


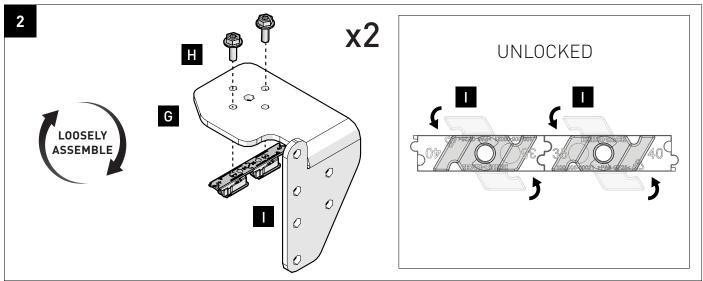

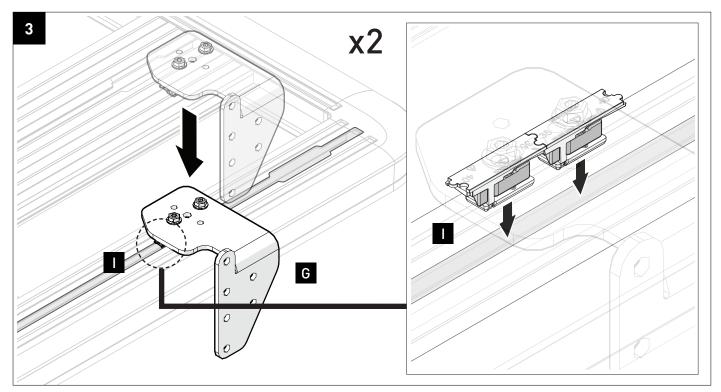


Page 6 of 19

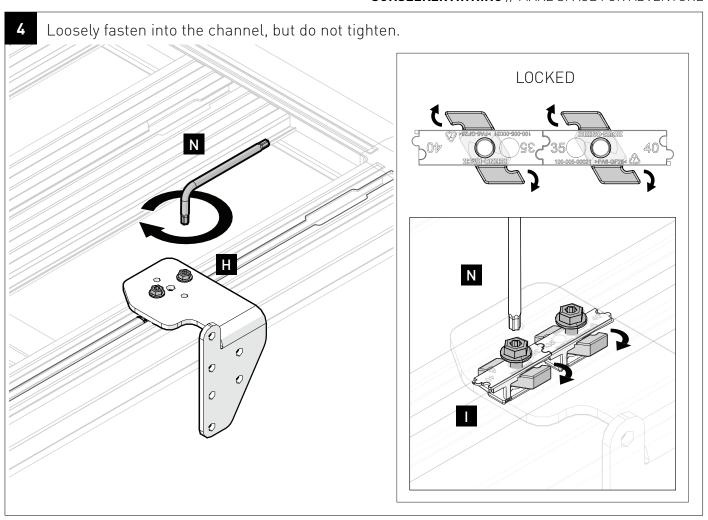

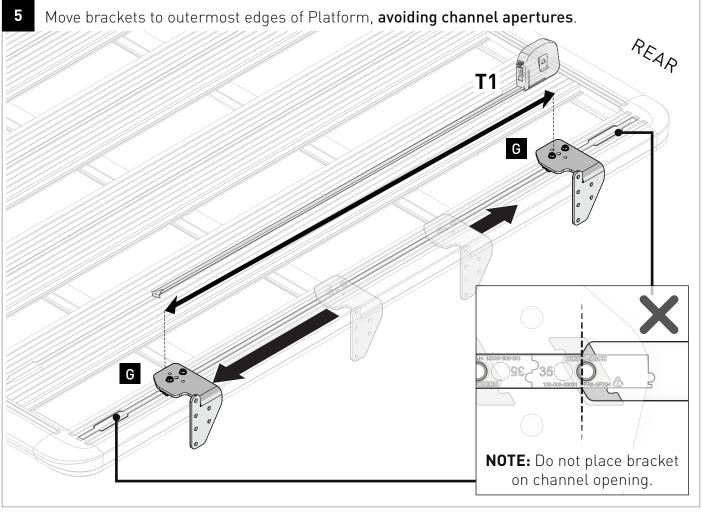


Page 7 of 19

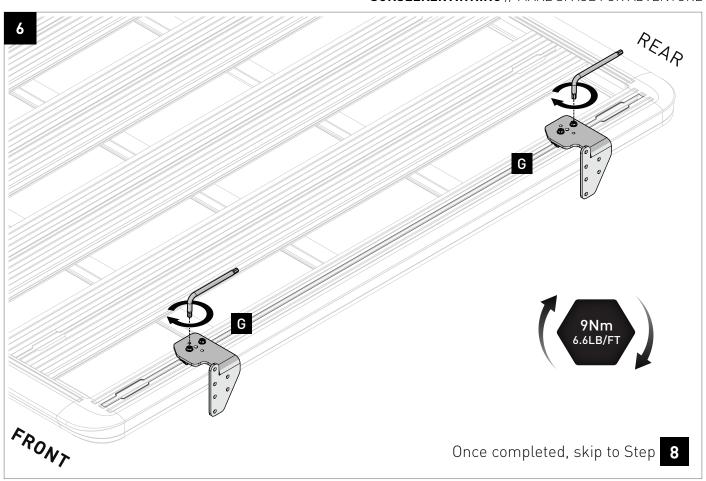

FOR INSTALLATION ONTO CROSSBARS


(For Platforms skip to Step 8)

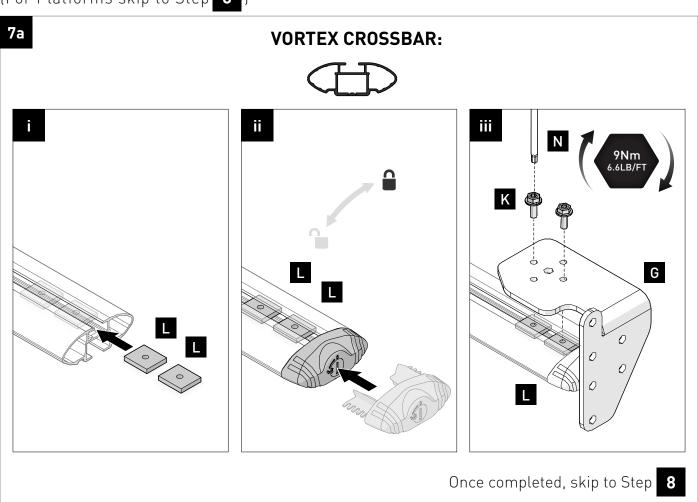


7b


RECONN-DECK CROSSBAR:




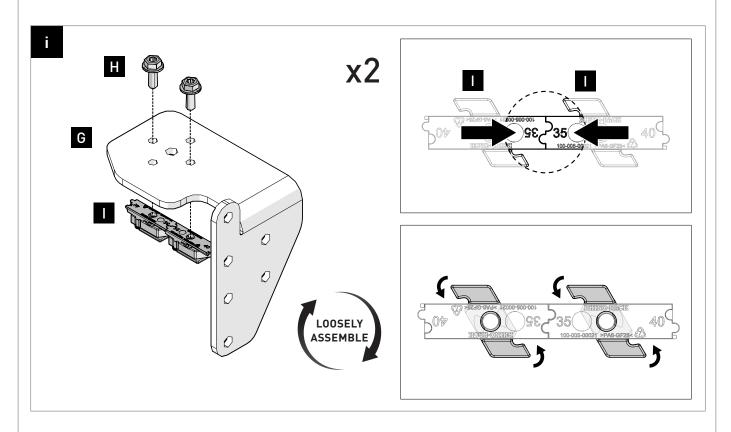


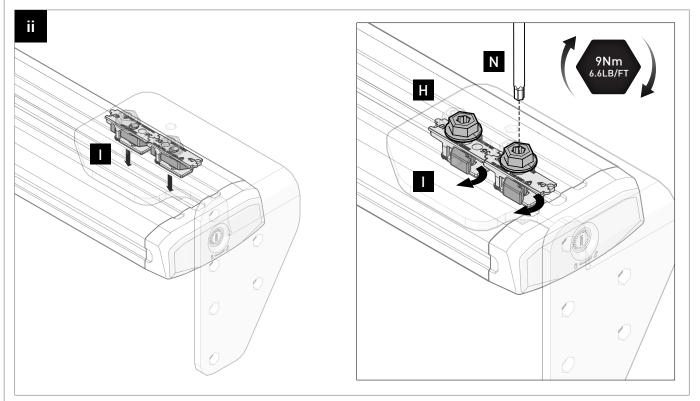



Once completed, skip to Step 8

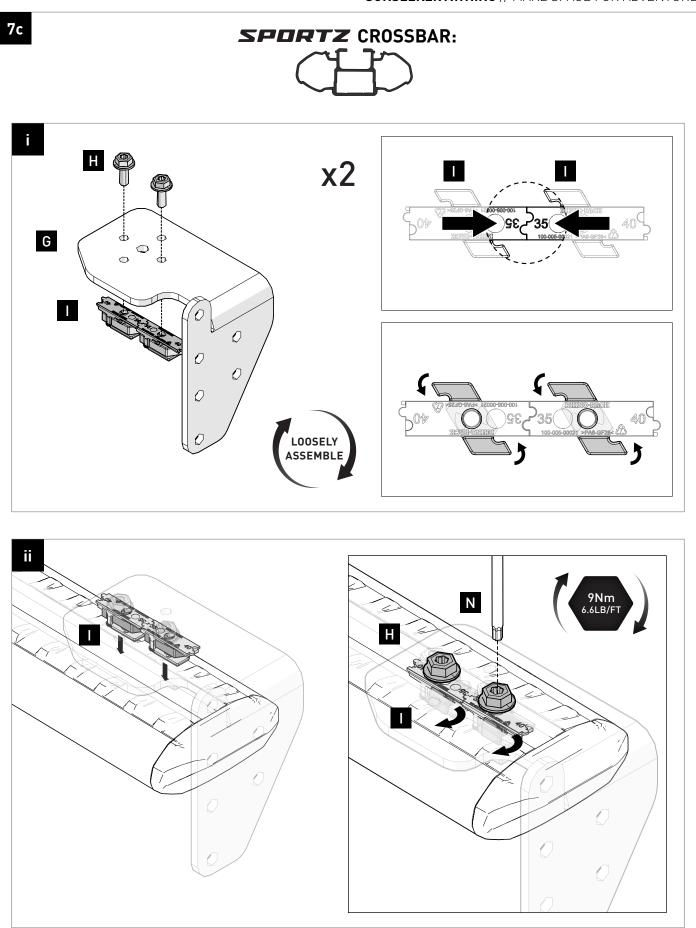


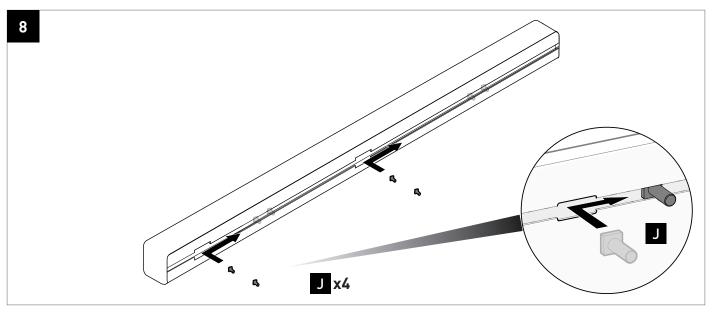

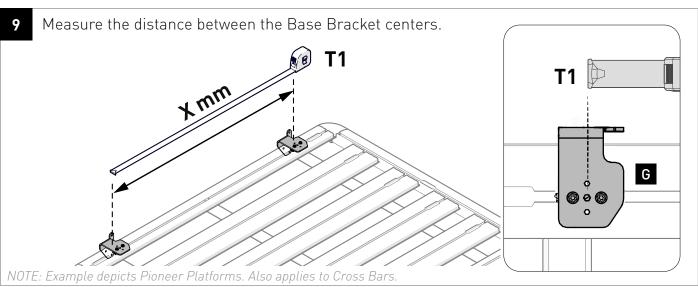


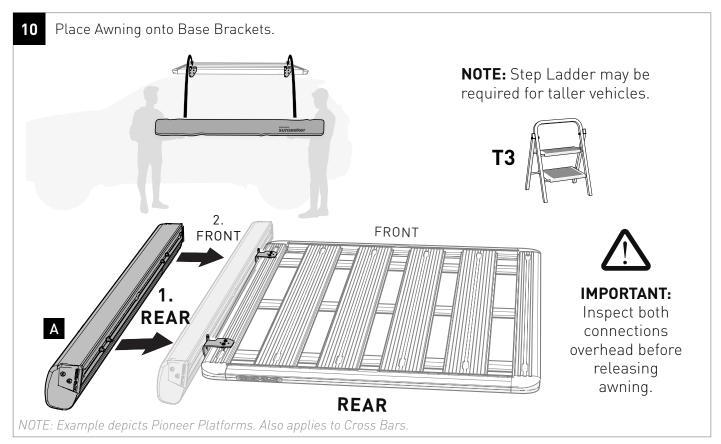


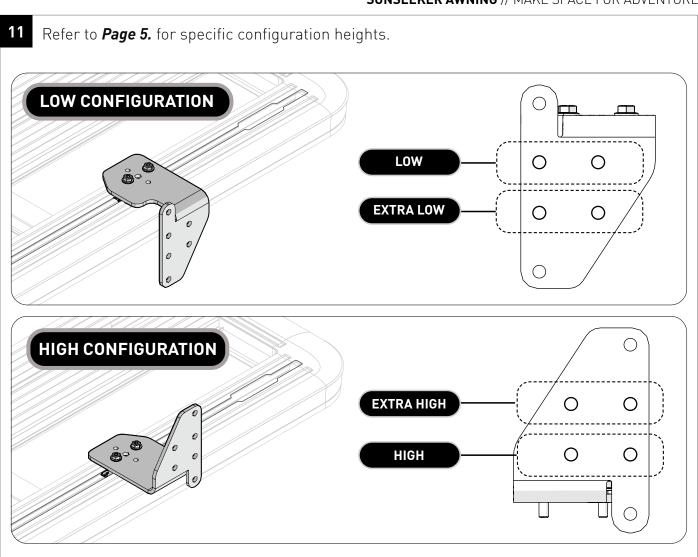


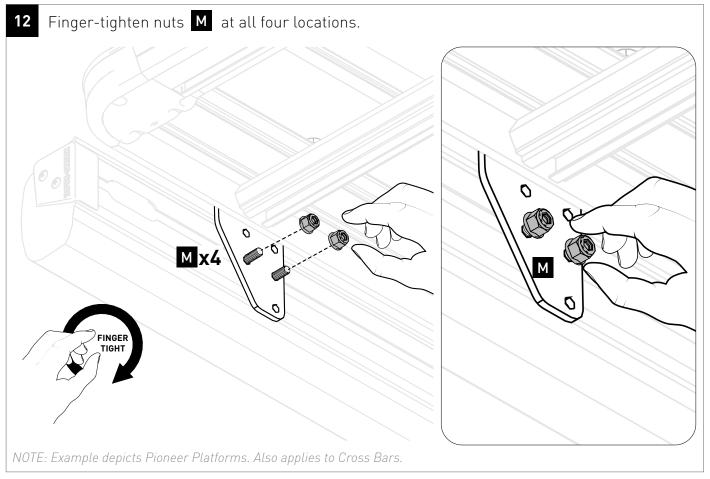


Page 12 of 19

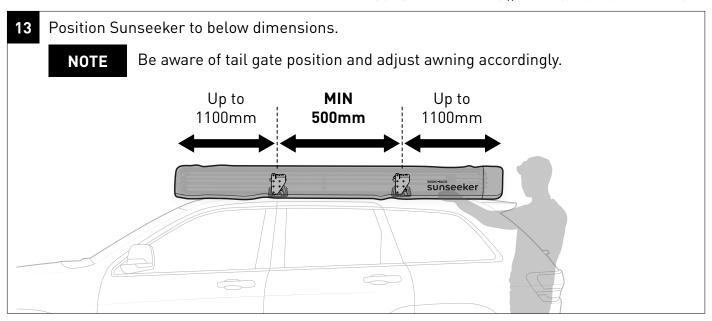


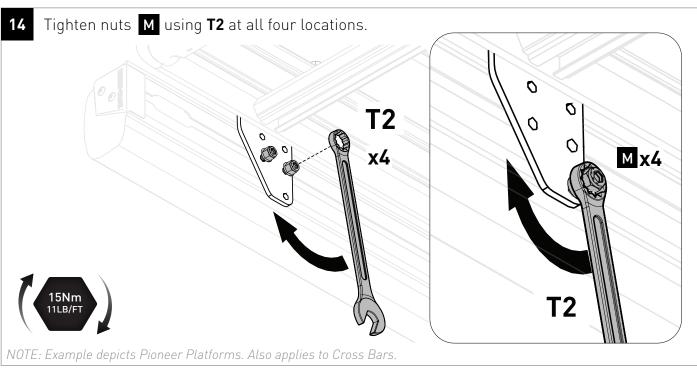


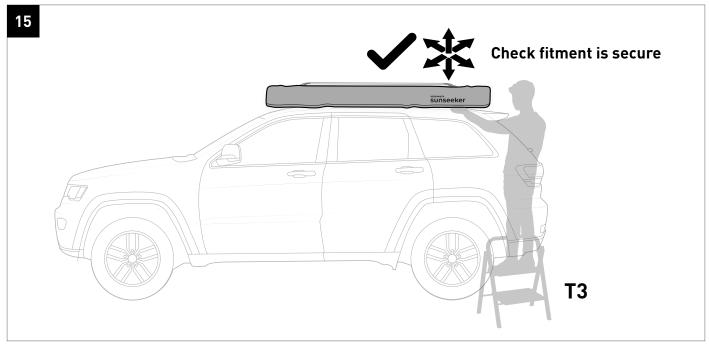


AWNING OPERATION

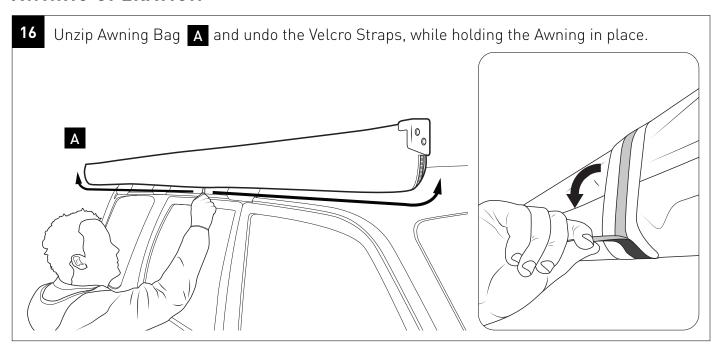


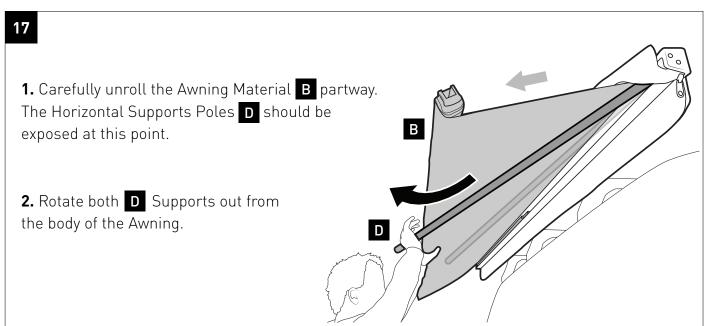


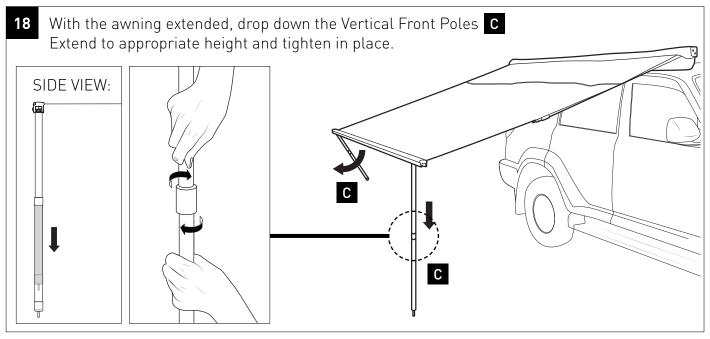


Page 14 of 19

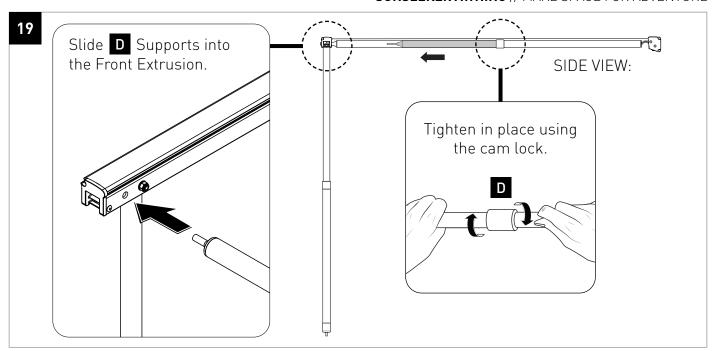

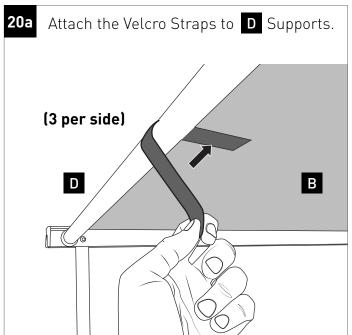


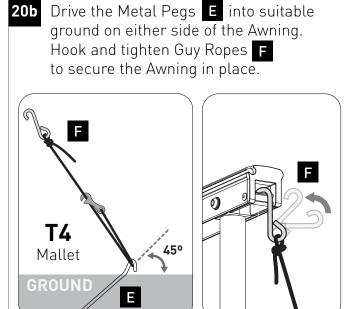


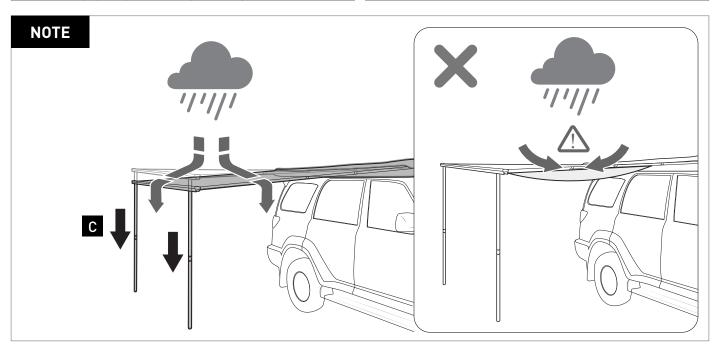



STOWAGE INSTRUCTIONS

(Completion of Steps 16 - 20 in REVERSE order. Use below steps for reference)

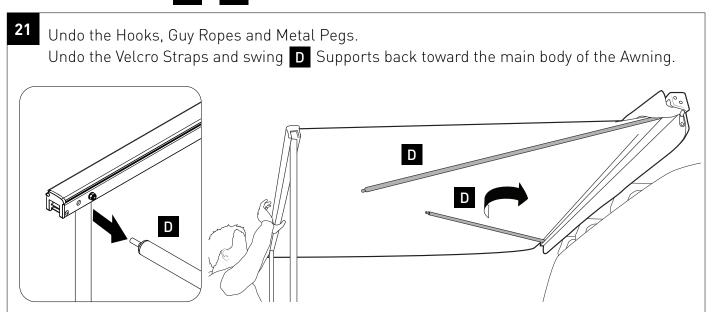

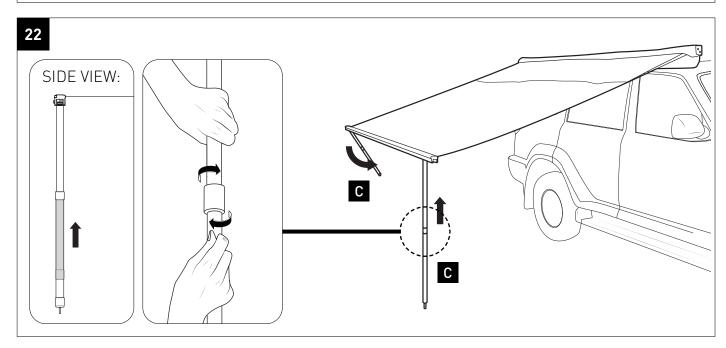

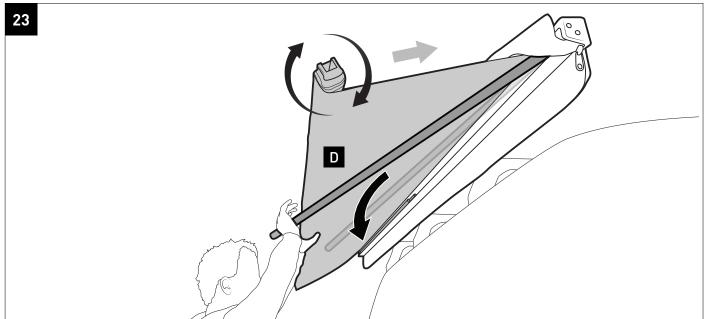

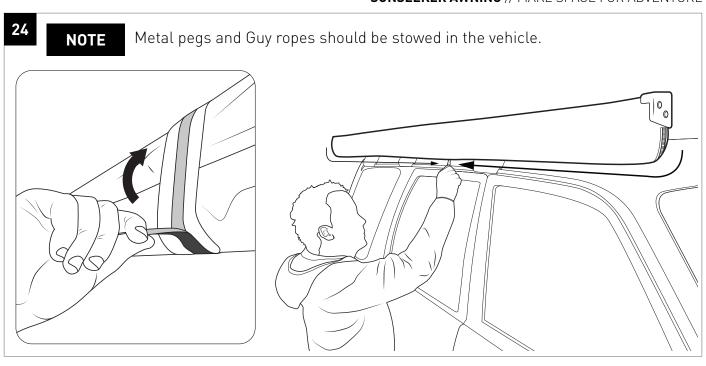

NOTES

NOTES



RHINORACK.COM

Rhino-Rack AUSTRALIA

22A Hanson Place, Eastern Creek, NSW 2766

Rhino-Rack USA

19822 E. 22nd Avenue, Unit B, Aurora, CO 80011