


Batwing 270 Freestanding Awning

32145 (LH) / 32146 (RH)

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 15 mins

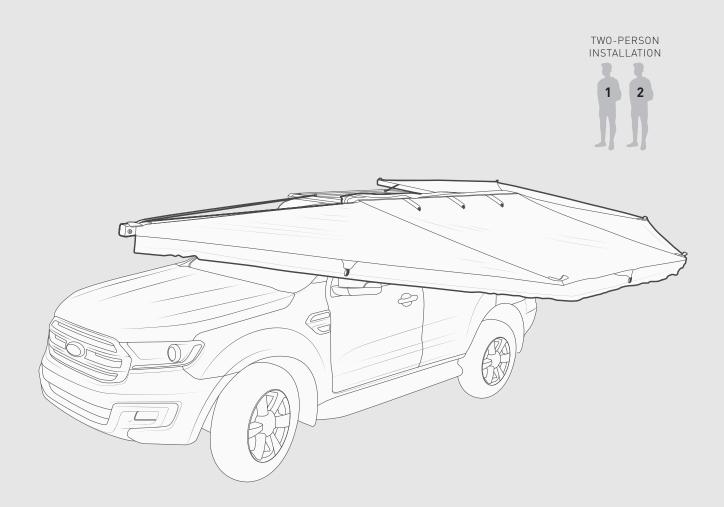

Thank you for choosing Rhino-Rack!



WELCOME TO THE HERD.

For peace of mind register your product by heading to rhinorack.com/register

Rhino-Rack AUSTRALIA


22A Hanson Pl, Eastern Creek, NSW, 2766


Rhino-Rack USA


Unit D, 2450 Airport Blvd, Aurora, CO, 80011


RHINORACK.COM


Document No:520-RFI-00210 Issue No: 01 Issue Date: 10/12/2024

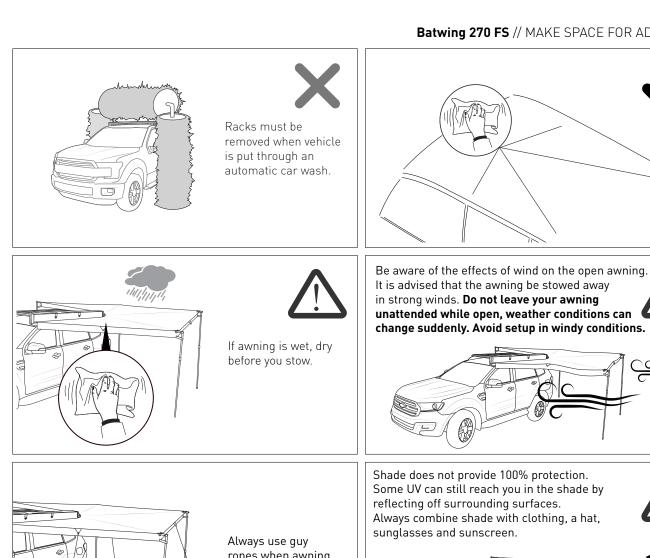


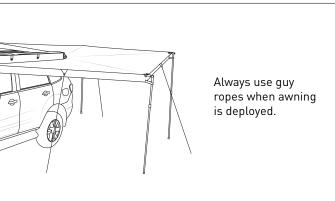


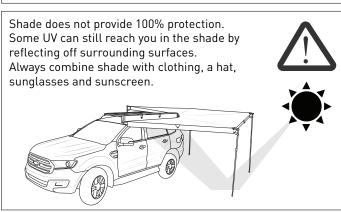

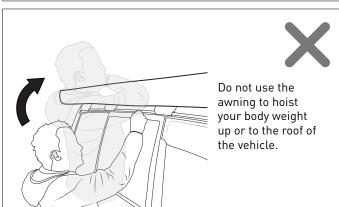

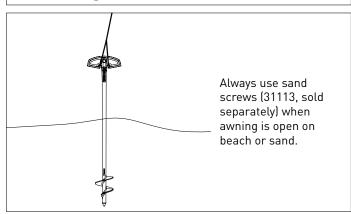

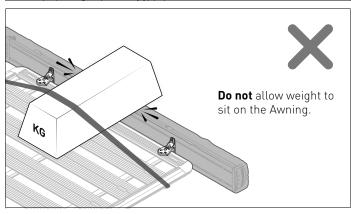

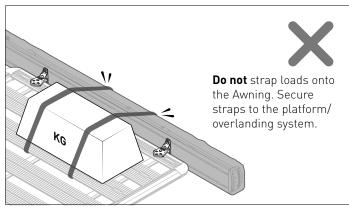

Page 2 of 24

Important Information

Recommendations

Use only non-stretch fastening ropes or straps.

Please remove Batwing Awning and crossbars when putting vehicle through an automatic car wash.

Do not stow away the awning for long periods if it is wet. You must allow the awning material to dry completely before storing for extended periods of time. When rolling up the awning, avoid excessive bunching up of the material before stowing. The awning should be rolled up as neatly as possible following the instruction on page 9.

In service maintenance checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:








Load Ratings

With the addition of the Batwing Awning, the load capacity of your crossbars will have to be adjusted accordingly. The Batwing Awning with mounting brackets weighs approximately 20kg.

Note for Dealers and Fitters

It is your responsibility to ensure this fitting instruction is given to the end user or client It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

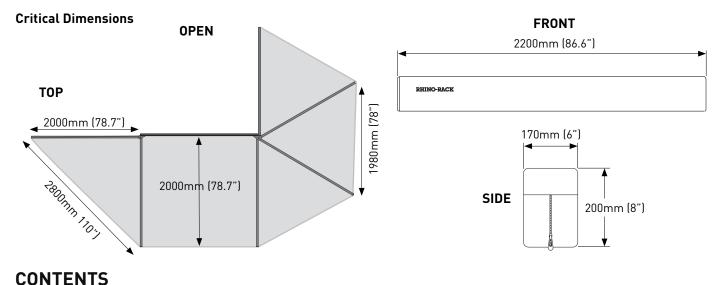

Installation onto:

 Pioneer Platforms
 Steps
 1 - 5 , 10 and 12 - 16

 VA / RD / Sportz Crossbars
 Steps
 6 - 9 and 11 - 16

 Operation
 Steps
 17 - 26


 Storage
 Steps
 27 - 30

 Accessories
 Steps
 31 - 32

For the purpose of this instruction manual, installation is shown with a *right-hand awning*.

The same steps apply for *left-hand awning* installation.

Parts List

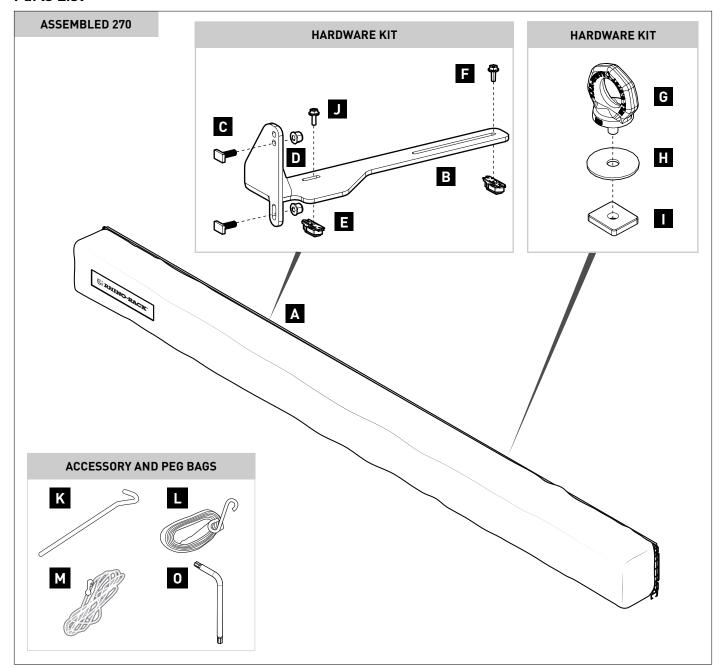

Item	ASSEMBLED 270	Qty
A	270 Awning Main Body	1
Item	HARDWARE KITS	Qty
В	Base Bracket	3
С	M8 T-Bolt	6
D	M8 Flanged Nyloc Nut	6
E	Zwifloc Drop-In Nut	8
F	M6 X 16 Hex Head Flanged Bolt	6
G	Eye Bolt	2
Н	Flat Washer	2
ı	Square Nut	8
J	M6 X 12 Hex Head Flanged Bolt	6

ACCESSORY + PEG BAGS	Qty
Awning Peg	11
Awning Straps (Black)	2
Guy Rope (Blue)	11
Torx Key (<i>T30</i>)	1
	Awning Peg Awning Straps (Black) Guy Rope (Blue)


TOOLS REQUIRED:

T1 -10mm & 13mm Spanner (or Socket Wrench)

T2 - Tape Measure


T3 - Step Ladder


T4 - Hammer/mallet

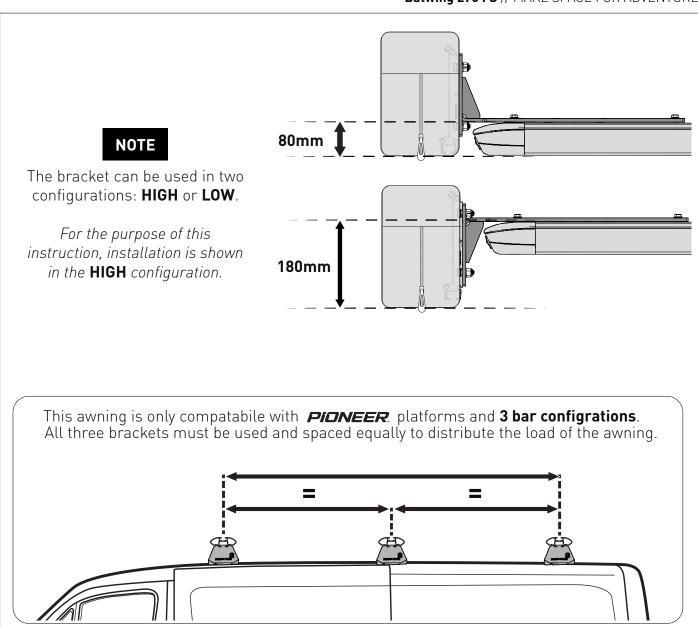


For Installation onto PIONEER PLATFORMS


(For Crossbars, skip to Step 6

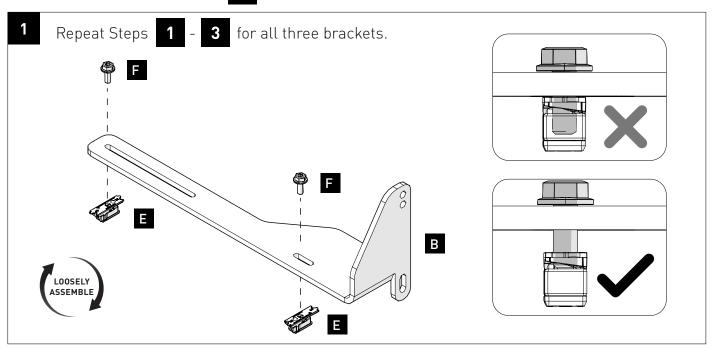


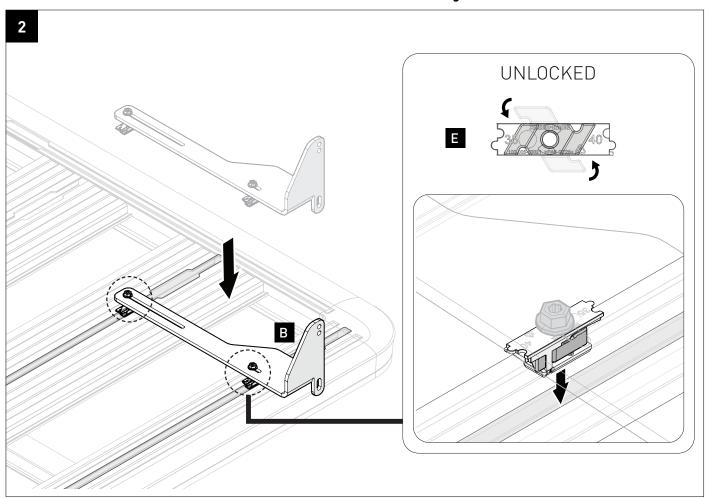


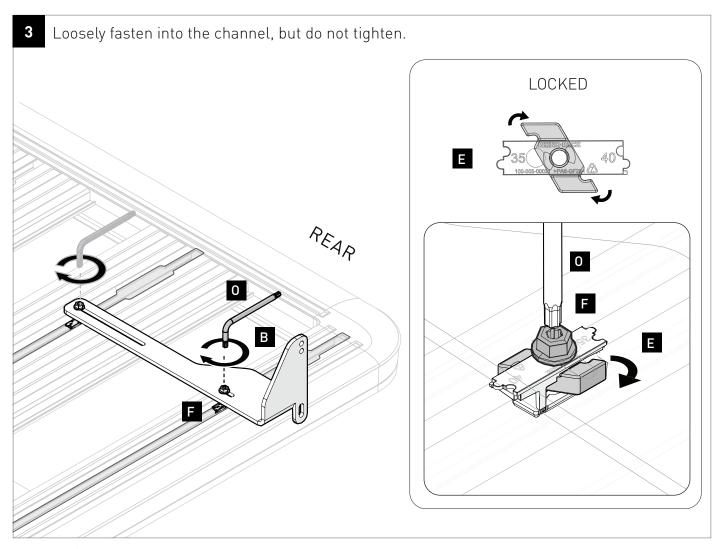


Page 6 of 24

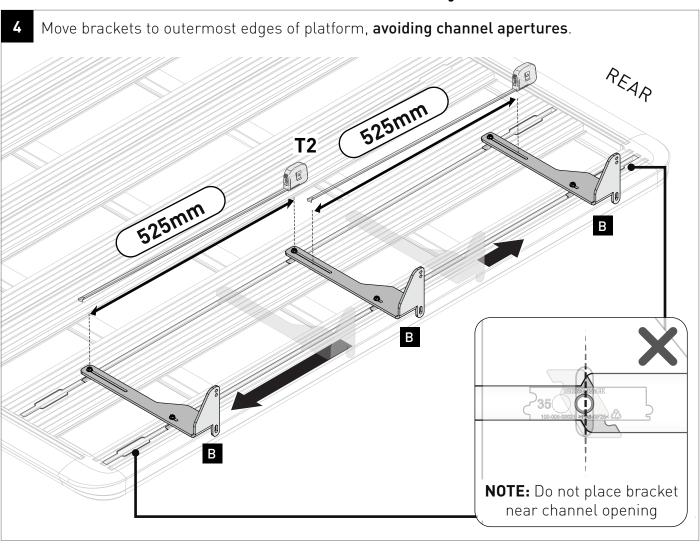


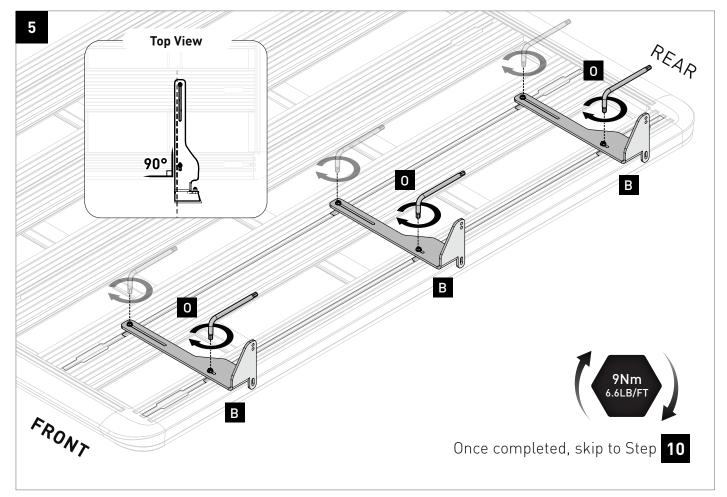

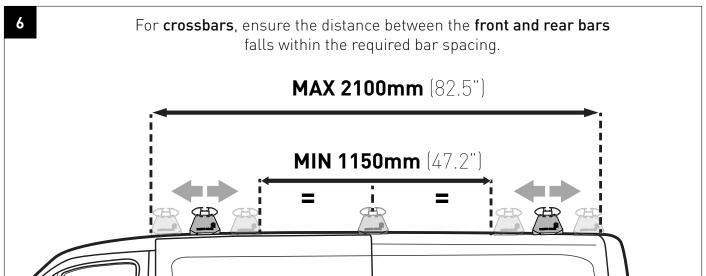


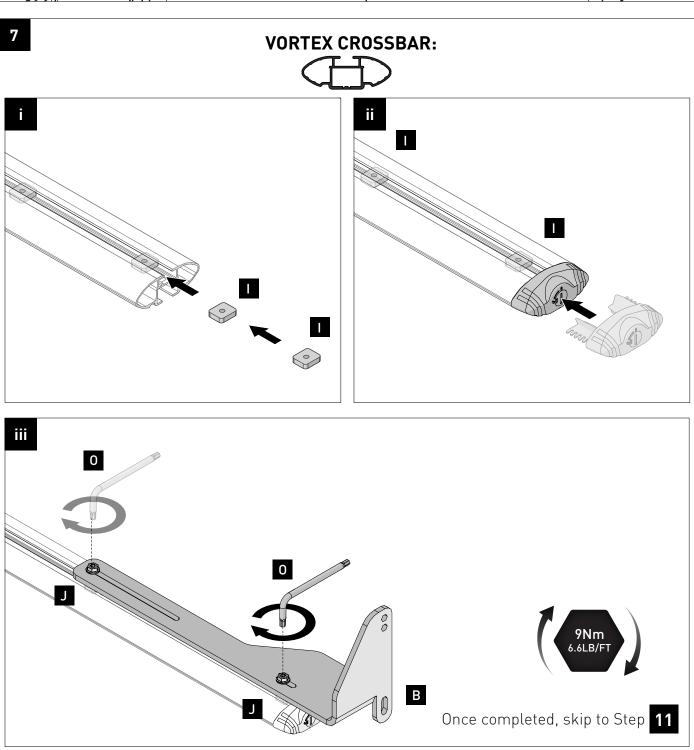

Page 8 of 24

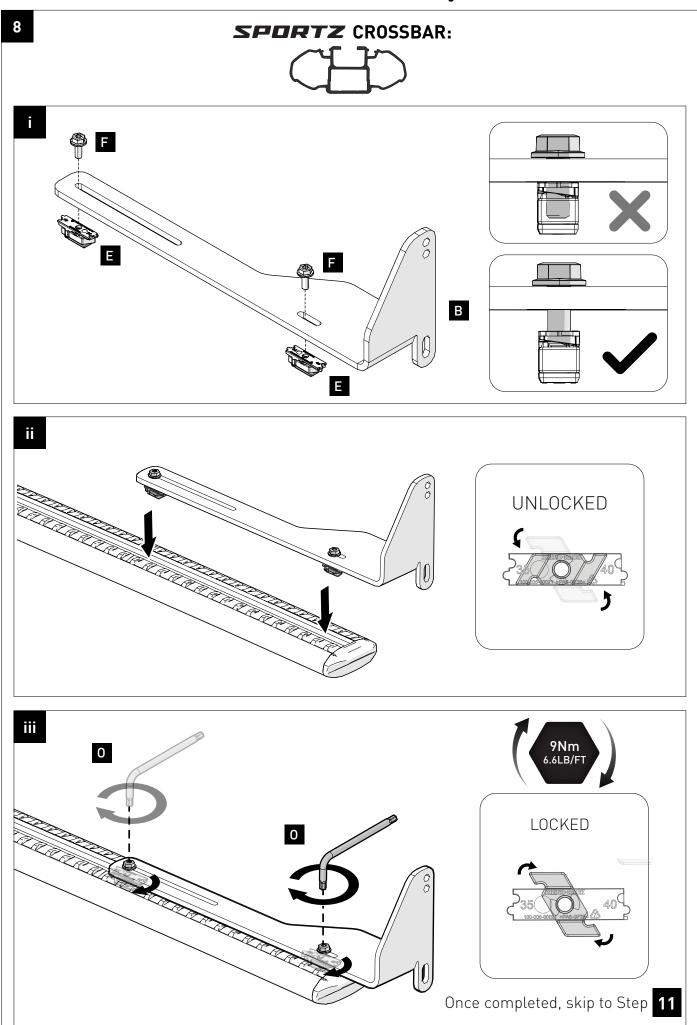

Page 9 of 24

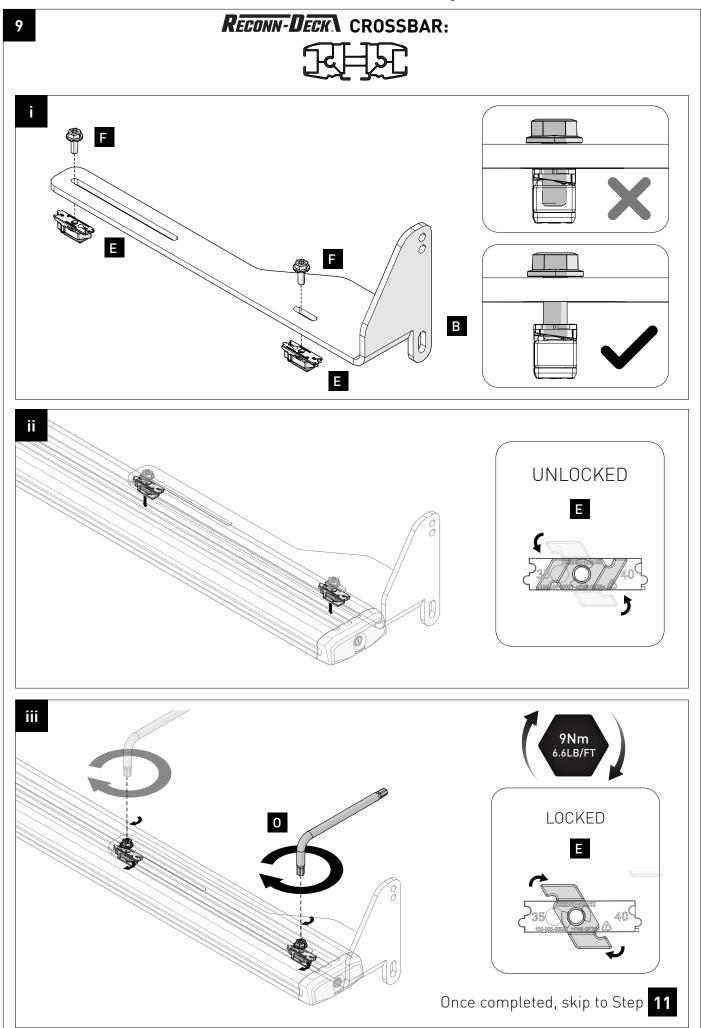


Page 10 of 24

10

NOTE

Eye Bolts will be used as tie-down points for the awning when it is open.

For **RECONN-DECK**\, VORTEX BAR, & **SPORTZ** Skip to next page.

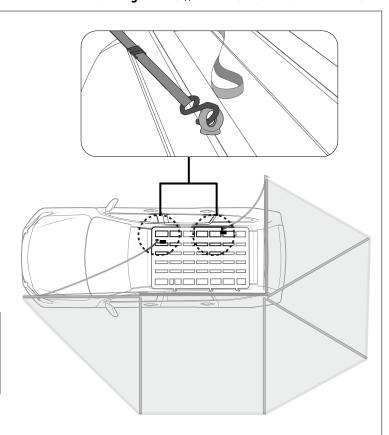



▼ ZWIFLOC_™ Lock Guide


UNLOCKED





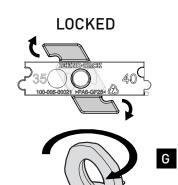

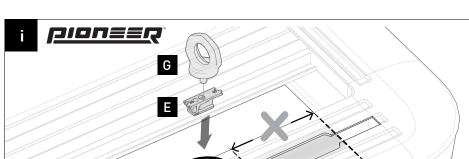

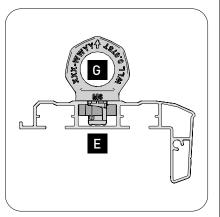



Ε


Once completed, skip to Step 12


NOTE


For **crossbar** configurations, use the **front two bars** on the opposite side of the awning to attach the eyebolts.

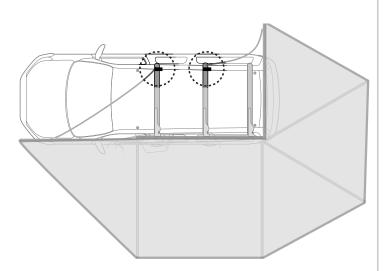


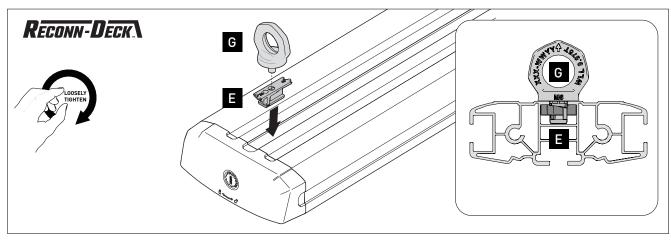

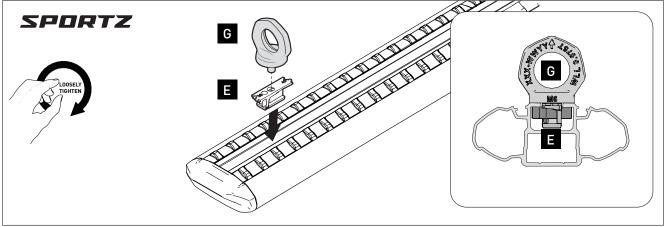


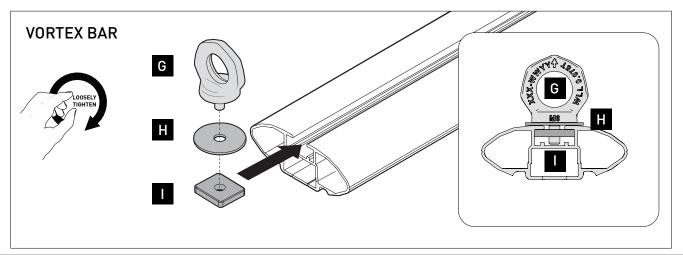


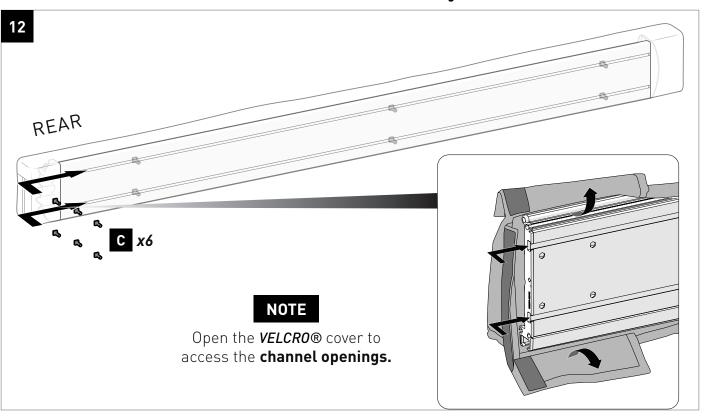


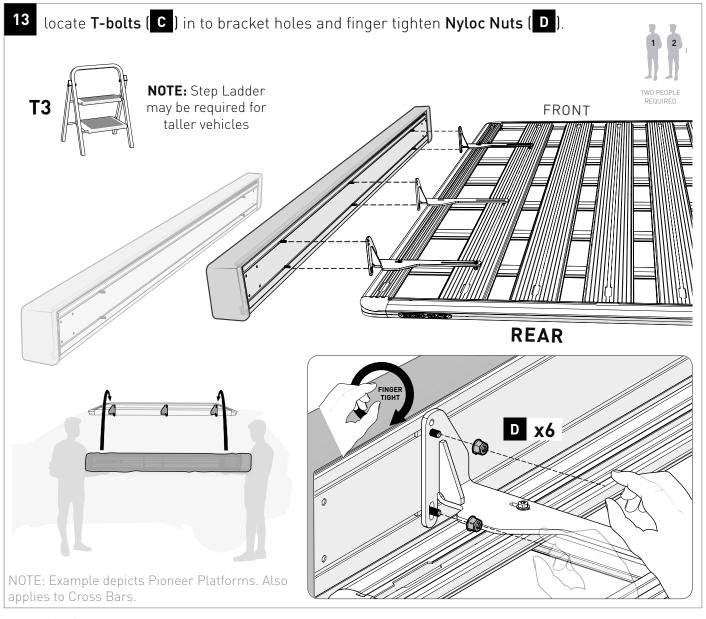


Page 13 of 24

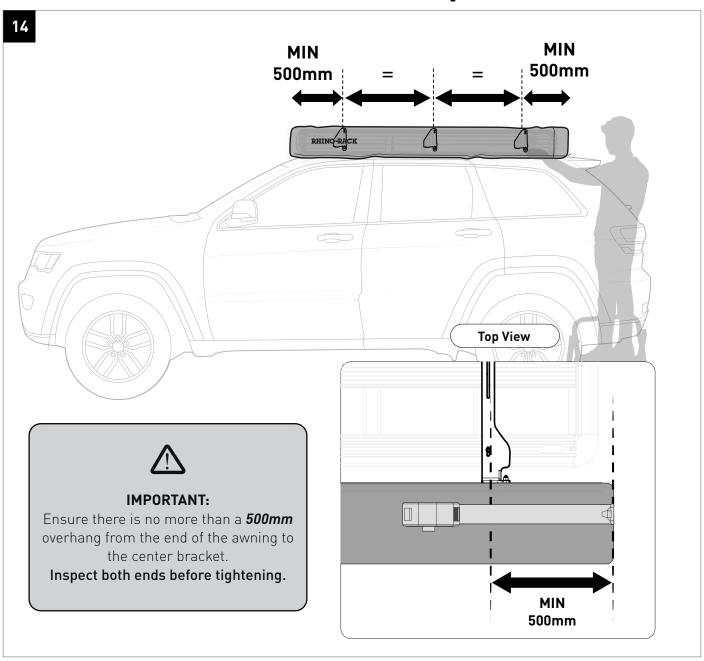

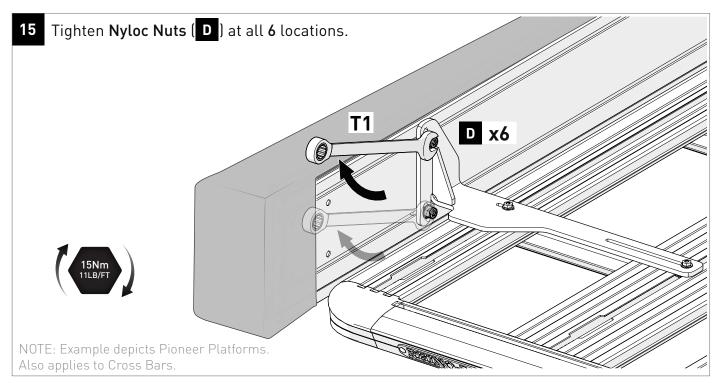


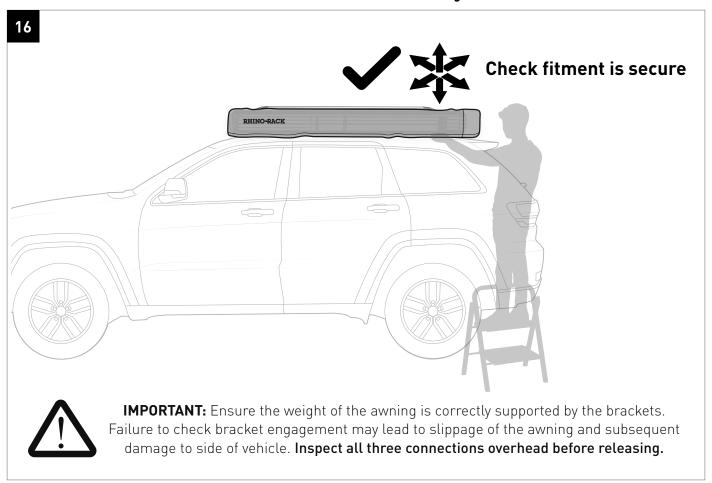



270 AWNING OPERATION

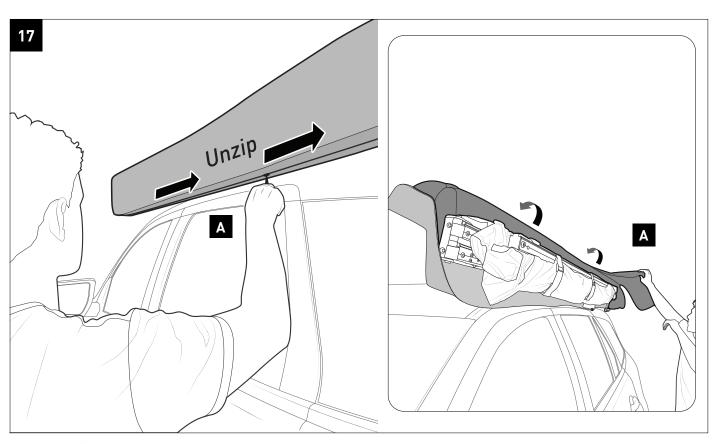


Page 15 of 24

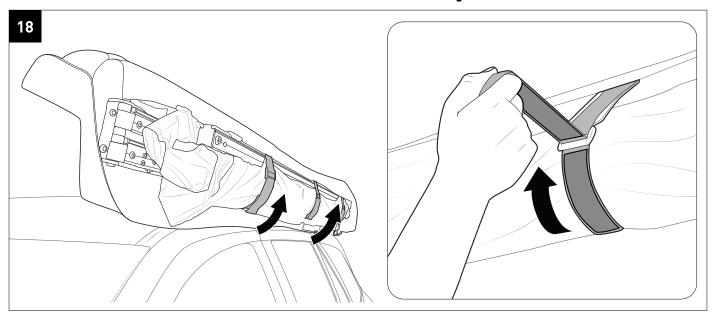


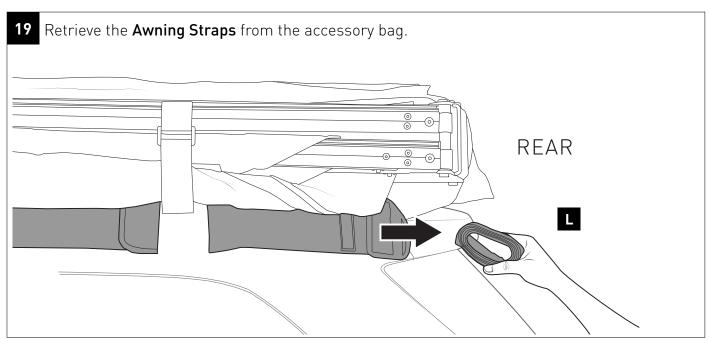


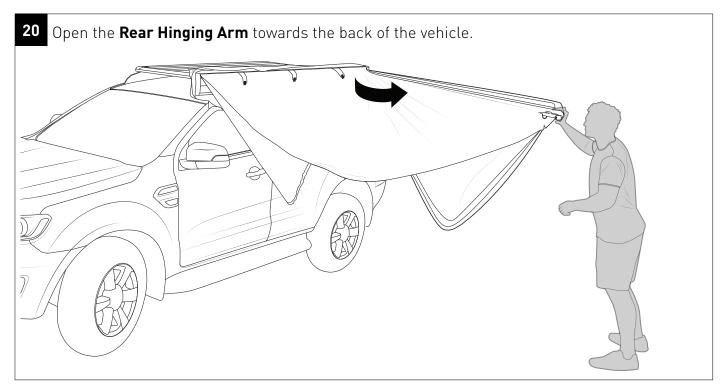


Page 16 of 24

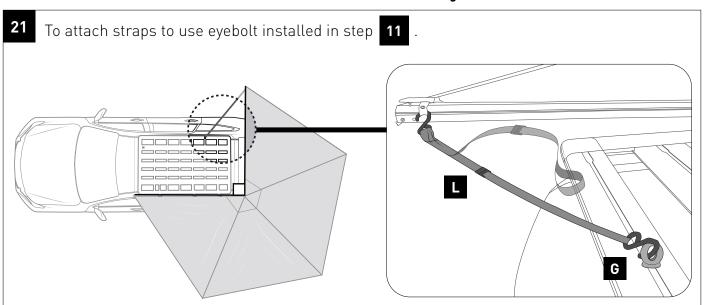


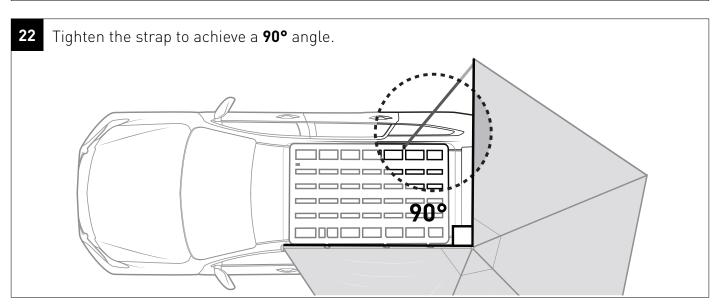


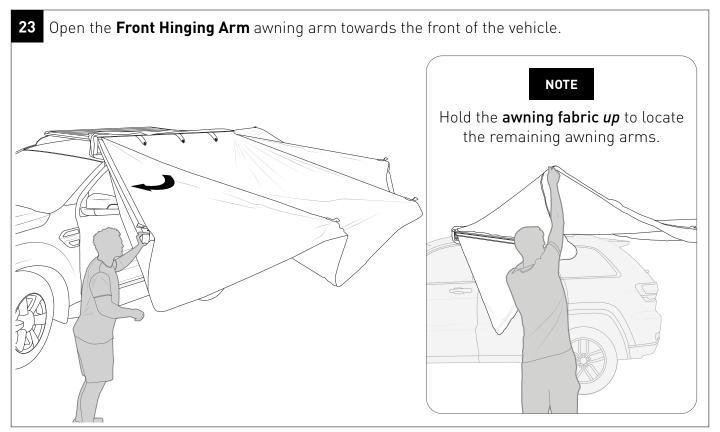

Page 17 of 24

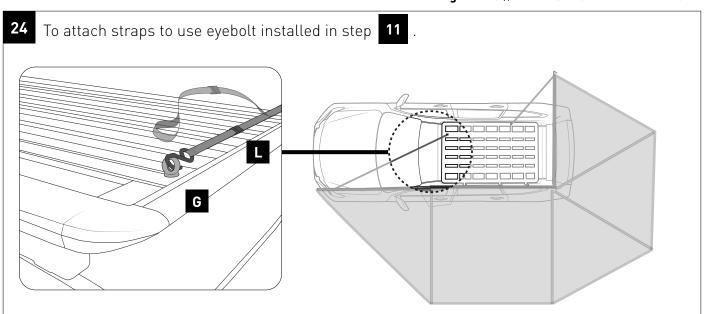

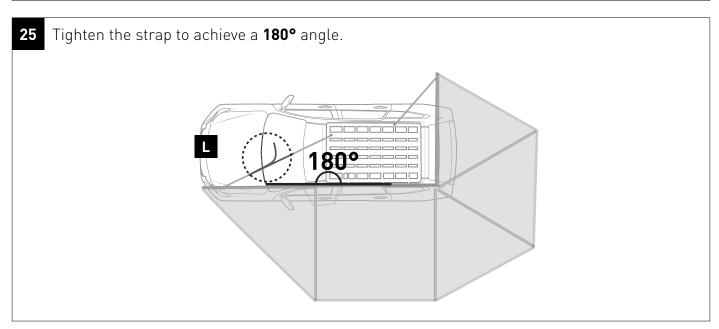


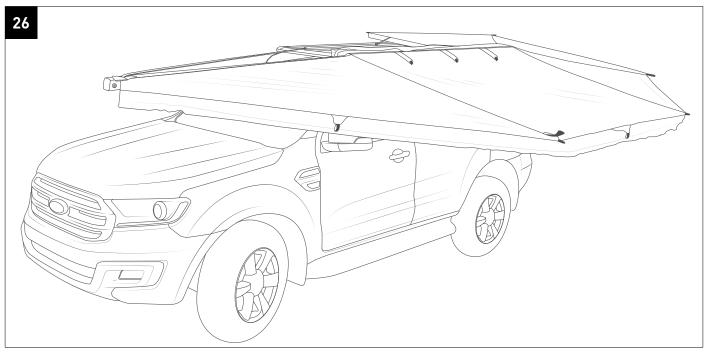



Set up Complete.


Support Pole Deployment (Optional)


(In **windy** or **rainy** conditions, support poles **must** be used to provide stability and prevent damage.)

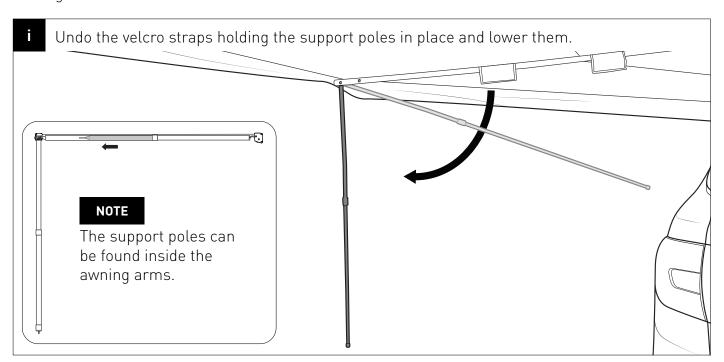

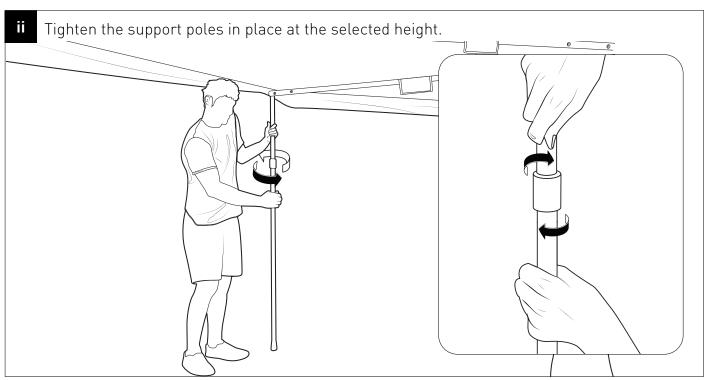

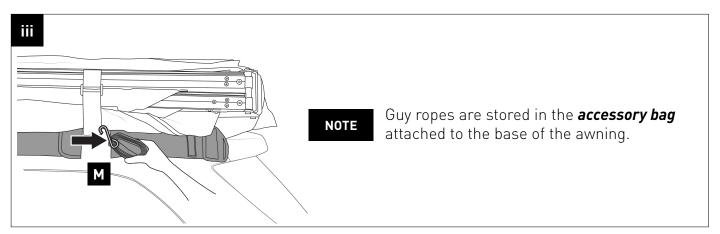


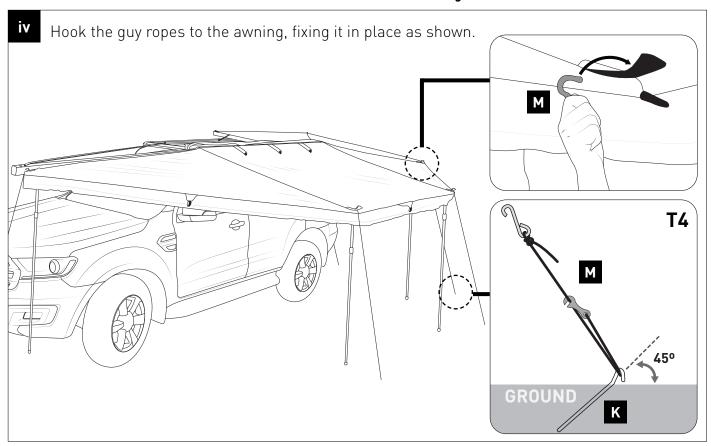


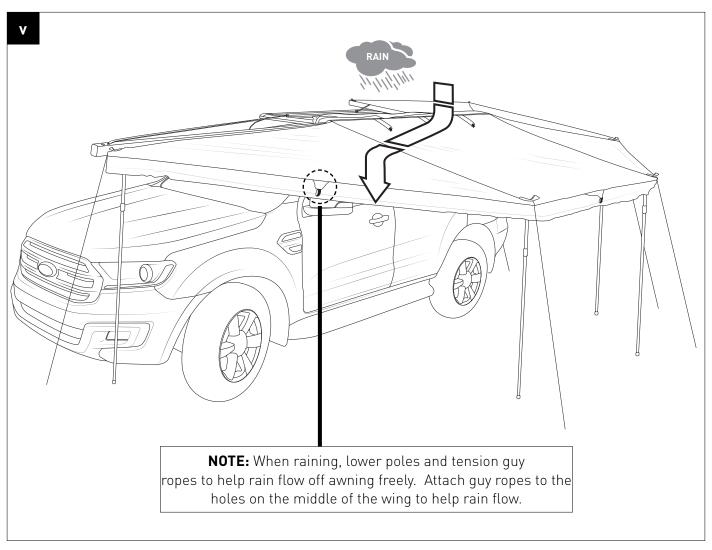

STOWAGE INSTRUCTIONS

(Completion of Steps 17 - 26 in REVERSE order. Use below steps for reference)

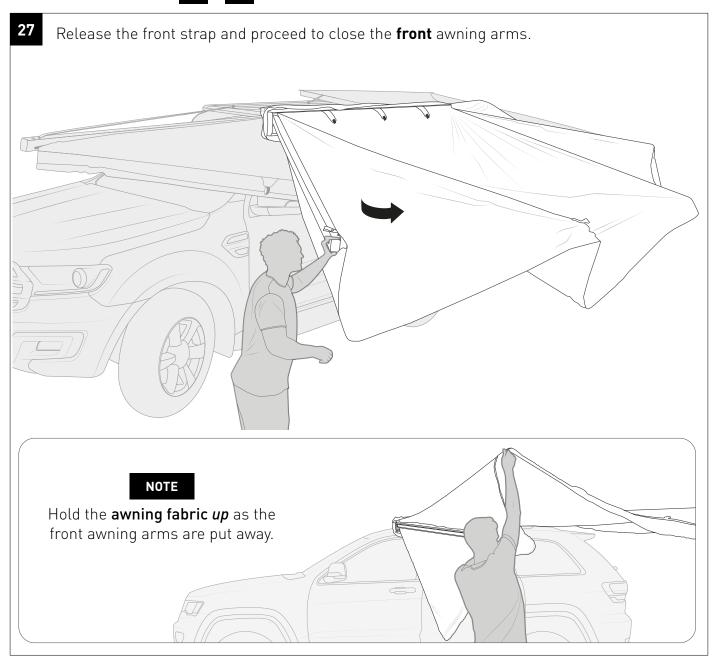


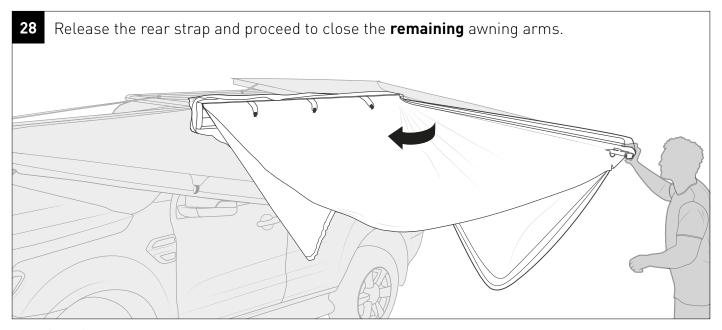



Page 21 of 24


STOWAGE INSTRUCTIONS


(Completion of Steps 17 - 26 in REVERSE order. Use below steps for reference)

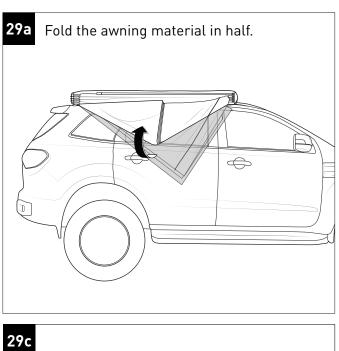

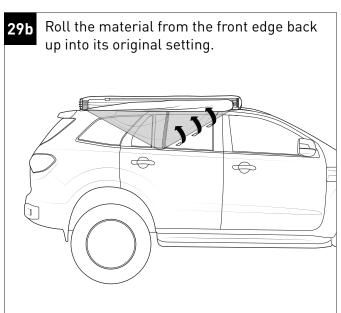

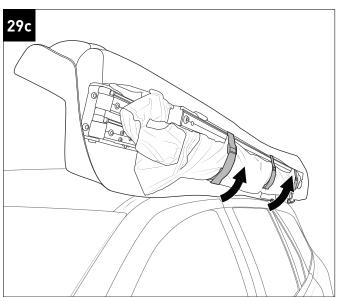


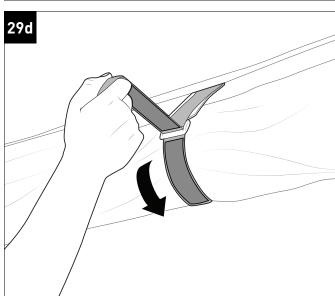


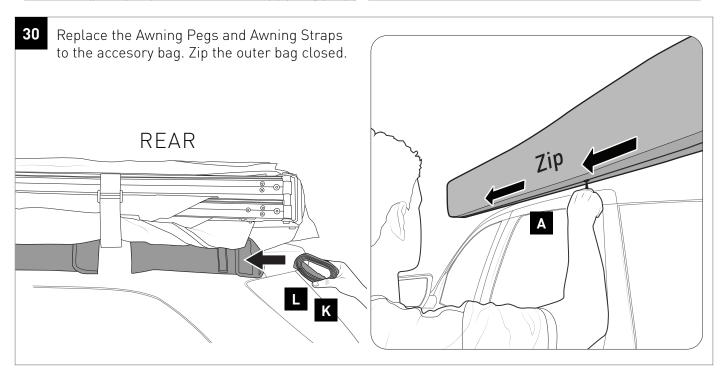

Page 22 of 24

ACCESSORIES

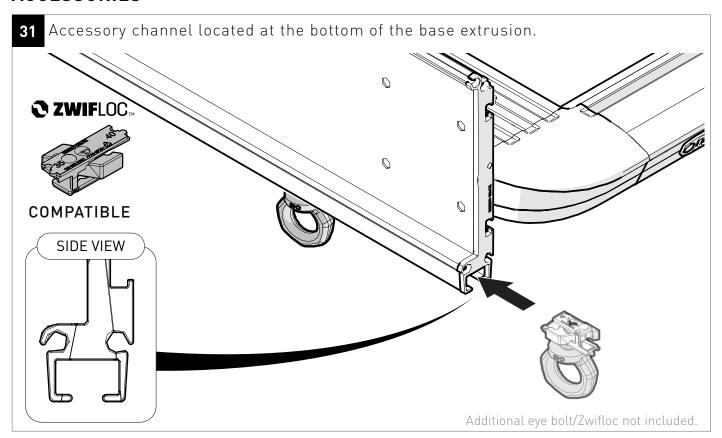

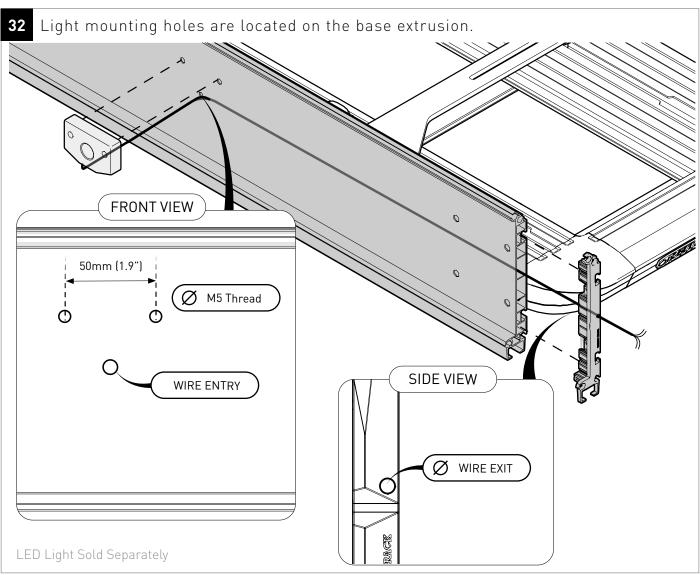

Page 23 of 24



RHINORACK.COM

Rhino-Rack AUSTRALIA

22A Hanson Pl, Eastern Creek, NSW, 2766

Rhino-Rack USA

19822 E 22nd Ave, Aurora, CO, 80011