


Batwing 180 Freestanding Awning 32147

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 15 mins

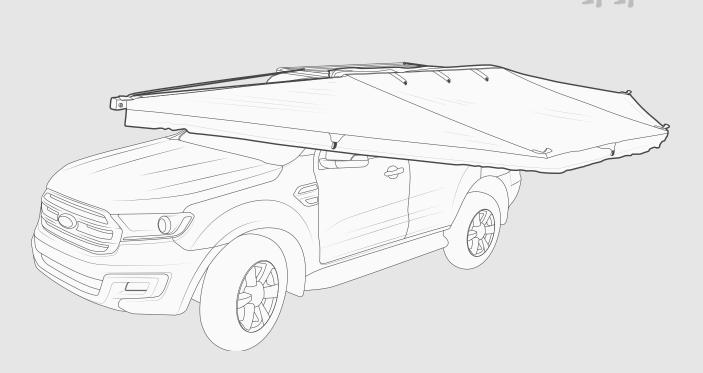

Thank you for choosing Rhino-Rack!



WELCOME TO THE HERD.

For peace of mind register your product by heading to rhinorack.com/register Rhino-Rack AUSTRALIA 22A Hanson Pl, Eastern Creek, NSW, 2766


Rhino-Rack USA Unit D, 2450 Airport Blvd, Aurora, CO, 80011

RHINORACK.COM Document No: 520-RFI-00209 Issue No: 01 Issue Date: 6/12/2024

TWO-PERSON

2

Batwing 180 FS // MAKE SPACE FOR ADVENTURE

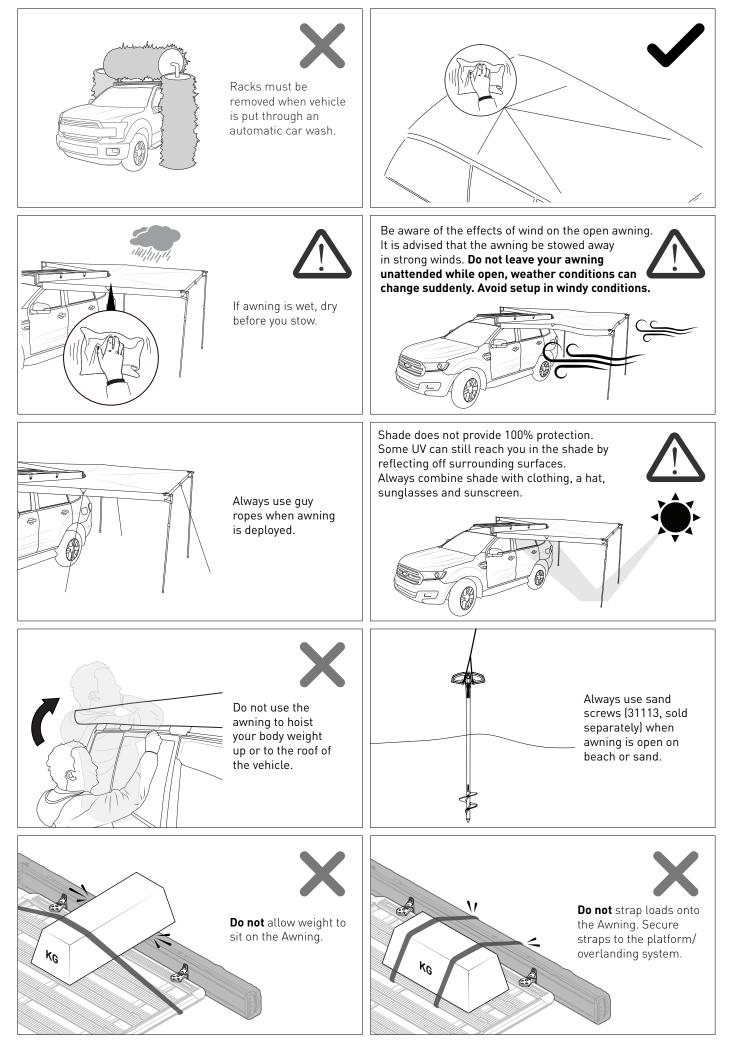

Page 2 of 24

Important Information

Recommendations

Use only non-stretch fastening ropes or straps.

Please remove Batwing Awning and crossbars when putting vehicle through an automatic car wash.

Do not stow away the awning for long periods if it is wet. You must allow the awning material to dry completely before storing for extended periods of time. When rolling up the awning, avoid excessive bunching up of the material before stowing. The awning should be rolled up as neatly as possible following the instruction on page 9.

In service maintenance checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:








Load Ratings

With the addition of the Batwing Awning, the load capacity of your crossbars will have to be adjusted accordingly. The Batwing Awning with mounting brackets weighs approximately 20kg.


Note for Dealers and Fitters

It is your responsibility to ensure this fitting instruction is given to the end user or client It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Critical Dimensions

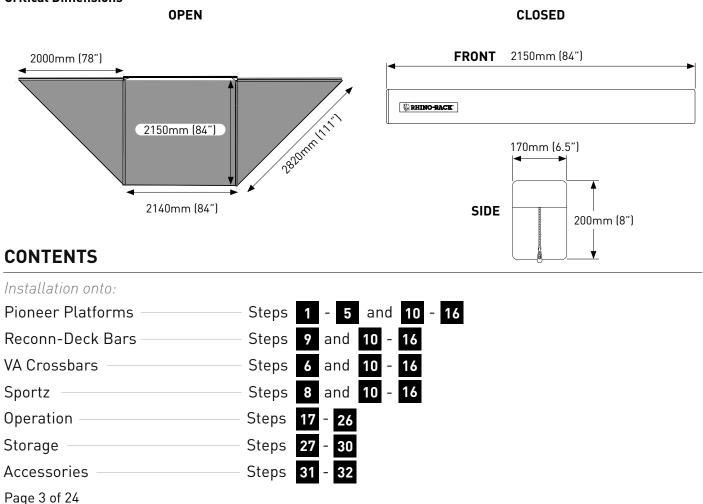

Parts List

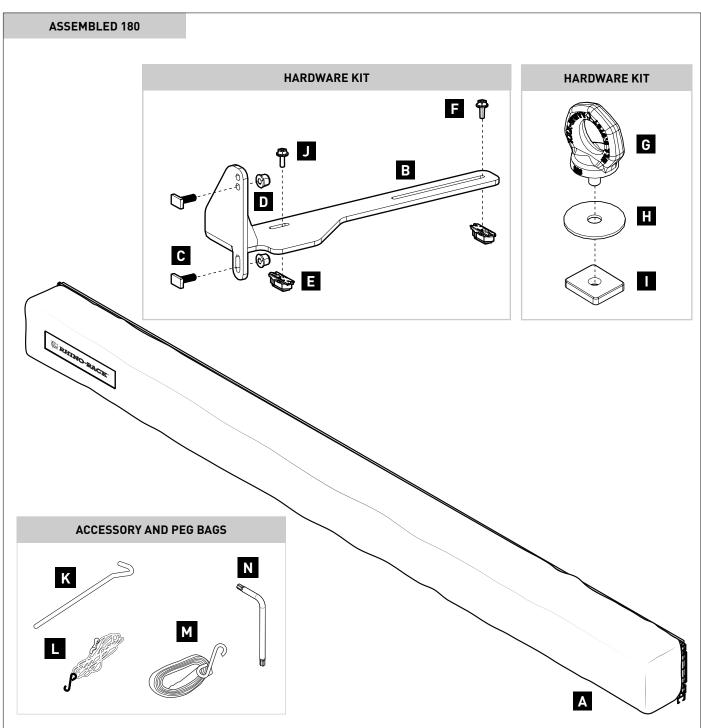


ltem	ASSEMBLED 270	Qty
Α	180 Awning Main Body	1
ltem	HARDWARE KITS	Qty
В	Base Bracket	2
С	M8 T-Bolt	4
D	M8 Flanged Nyloc Nut	4
Е	Zwifloc Drop-In Nut	6
F	M6x16mm Hex Head Flanged Bolt	4
G	Eye Bolt	2
Н	Flat Washer	2
I	Square Nut	6
J	M6 x 12mm Hex Head Flanged Bolt	4

Item	ACCESSORY + PEG BAGS	Qty
Κ	Awning Peg	7
L	Guy Rope (Blue)	7
М	Awning Straps (Black)	2
Ν	Torx Key (<i>T30</i>)	1


TOOLS REQUIRED:


- T1 10mm & 13mm Spanner (or Socket wrench)
- T2 Tape Measure
- **T3** Step Ladder
- **T4** Hammer/mallet

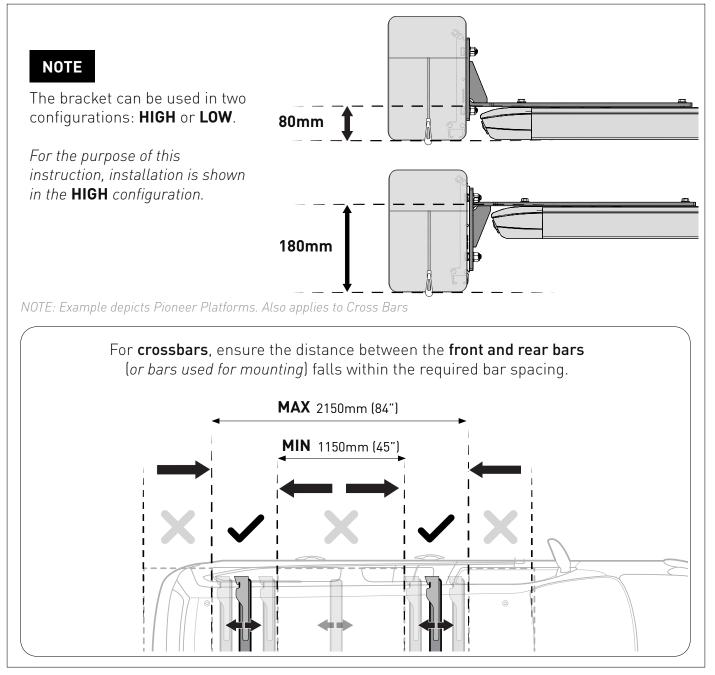


For Installation onto PIONEER PLATFORMS

(For Crossbars, skip to Step 6)

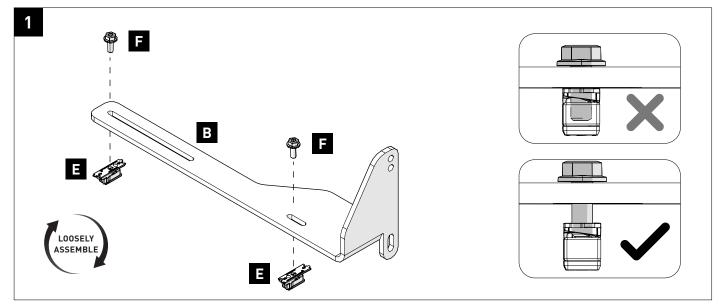


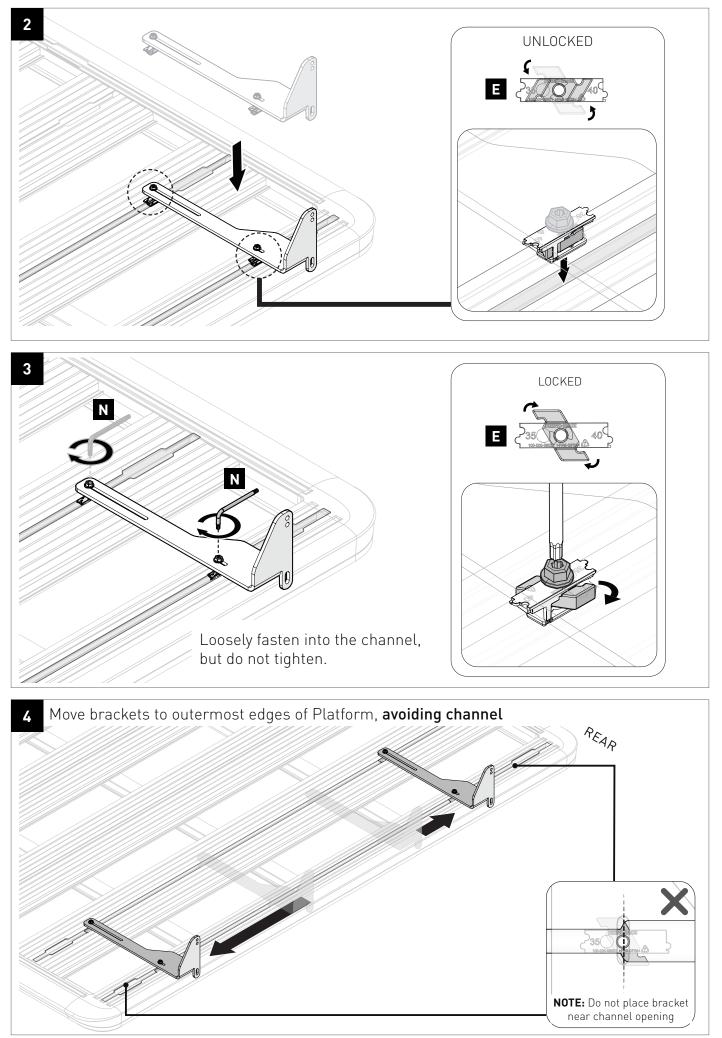


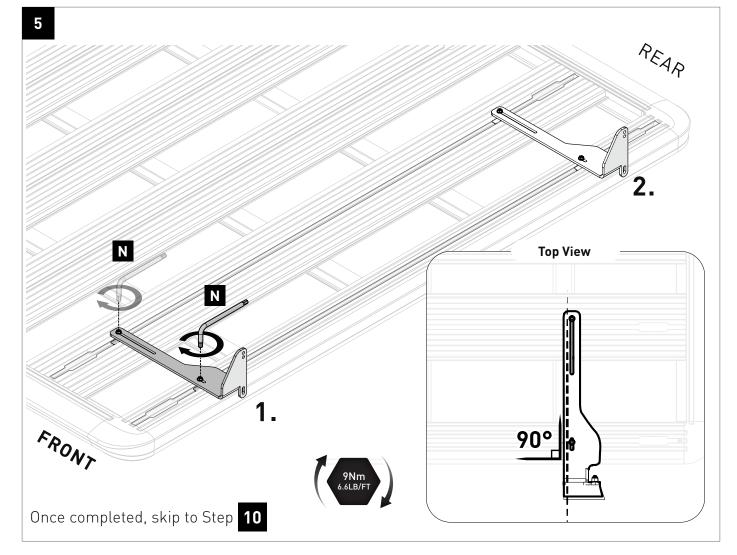



FOR INSTALLATION ONTO CROSSBARS


(For Platforms skip to Step **10**)

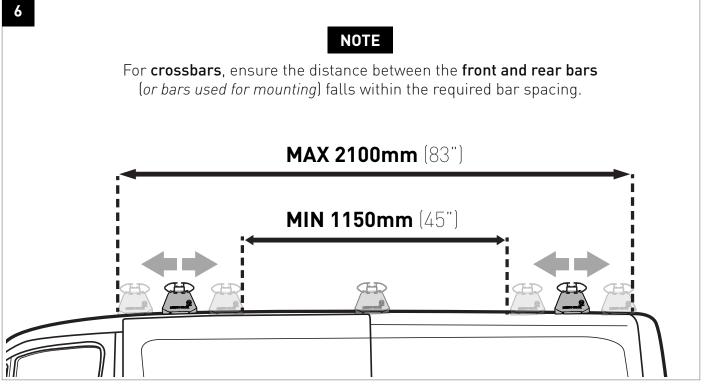

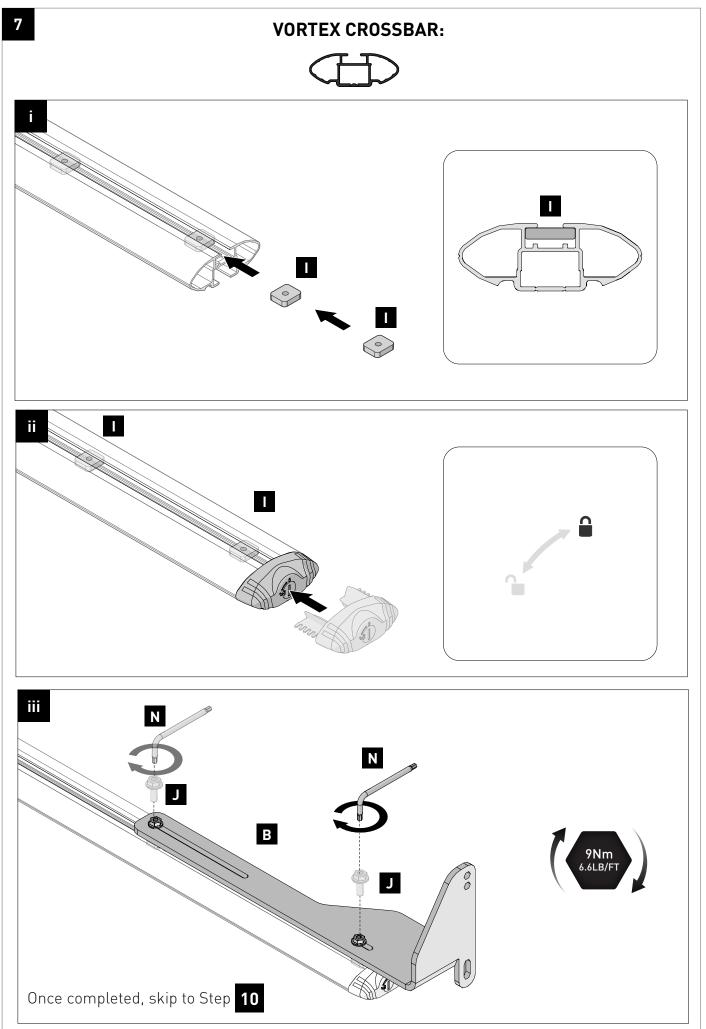

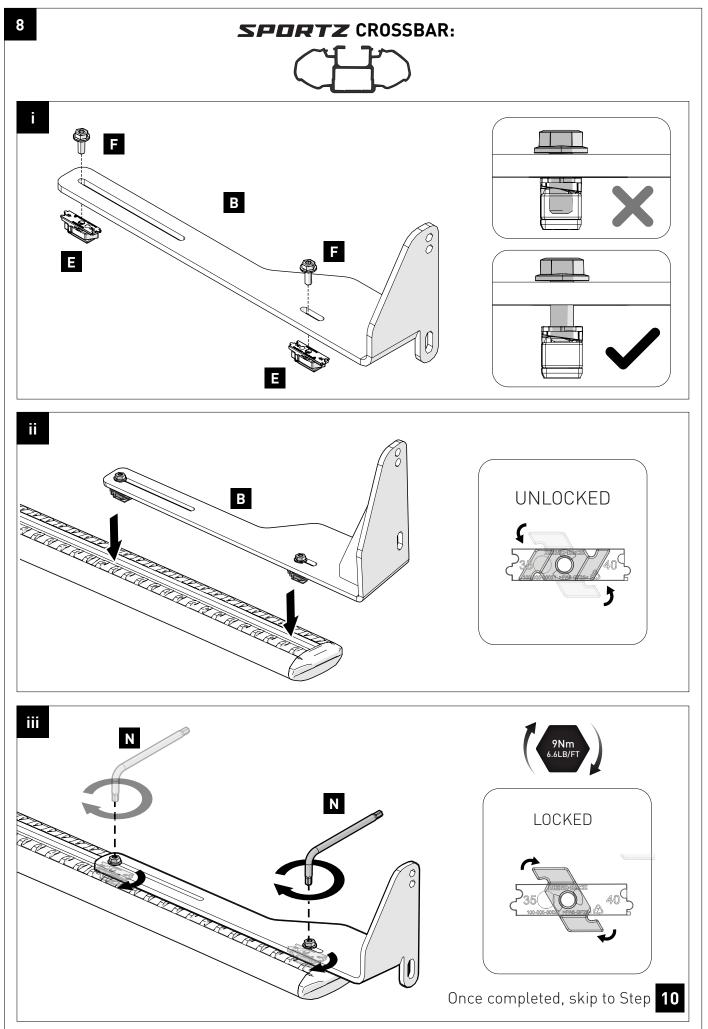


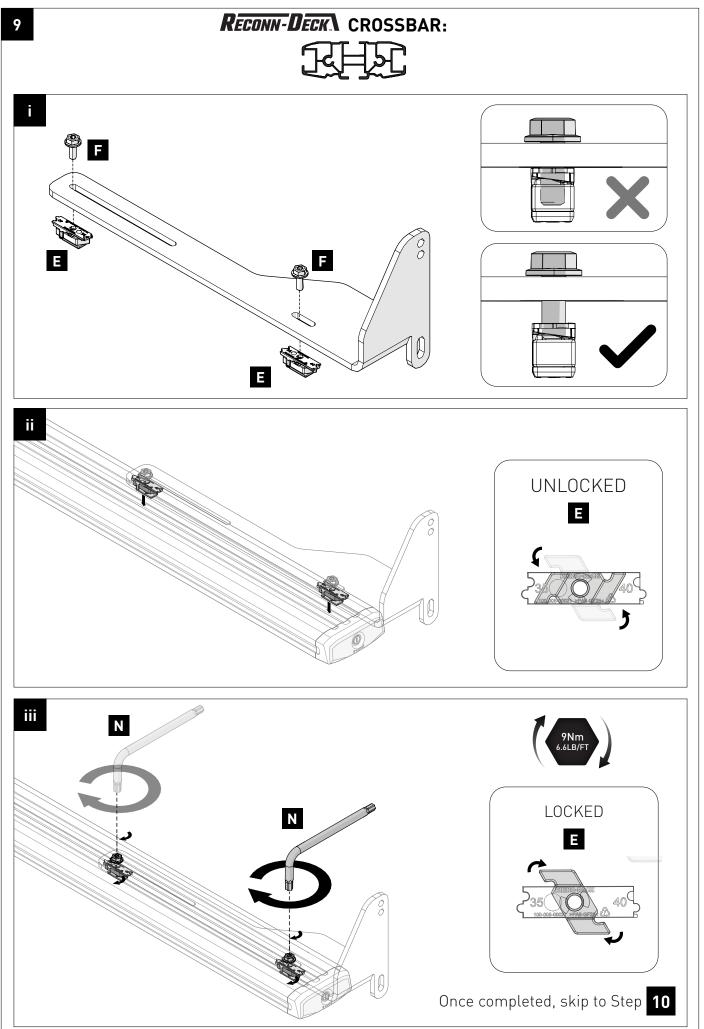


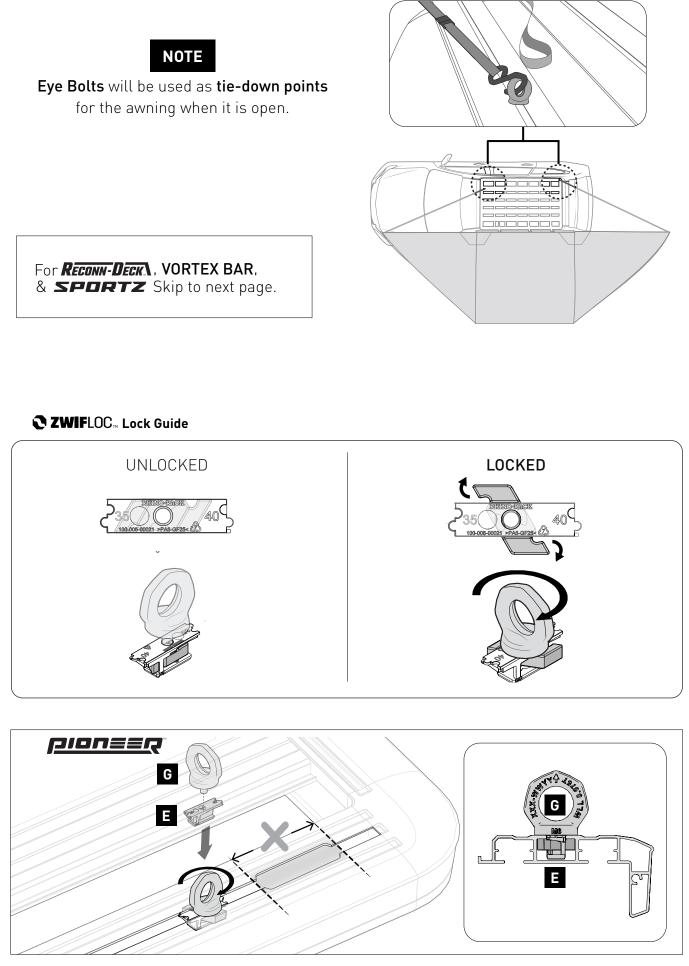


Page 11 of 24


opposite side of the awning to attach the eyebolts.

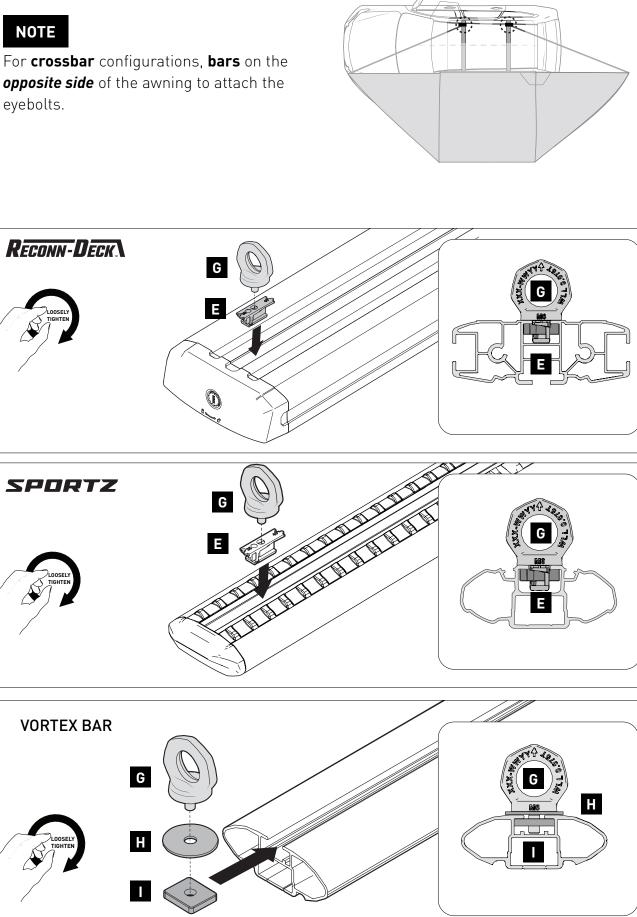

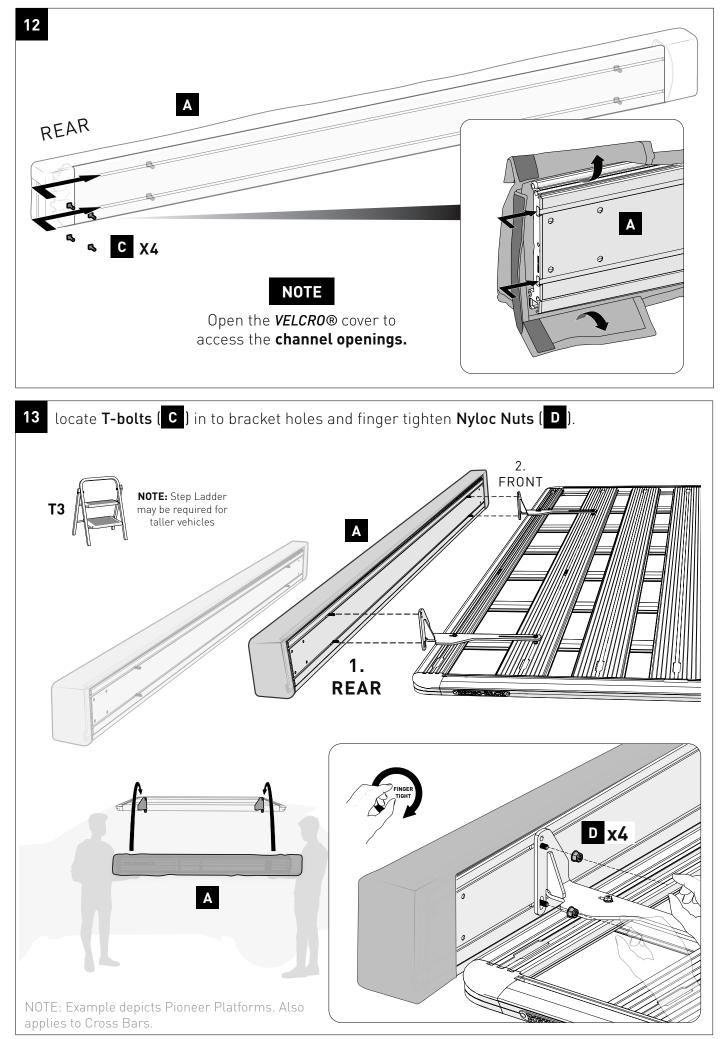

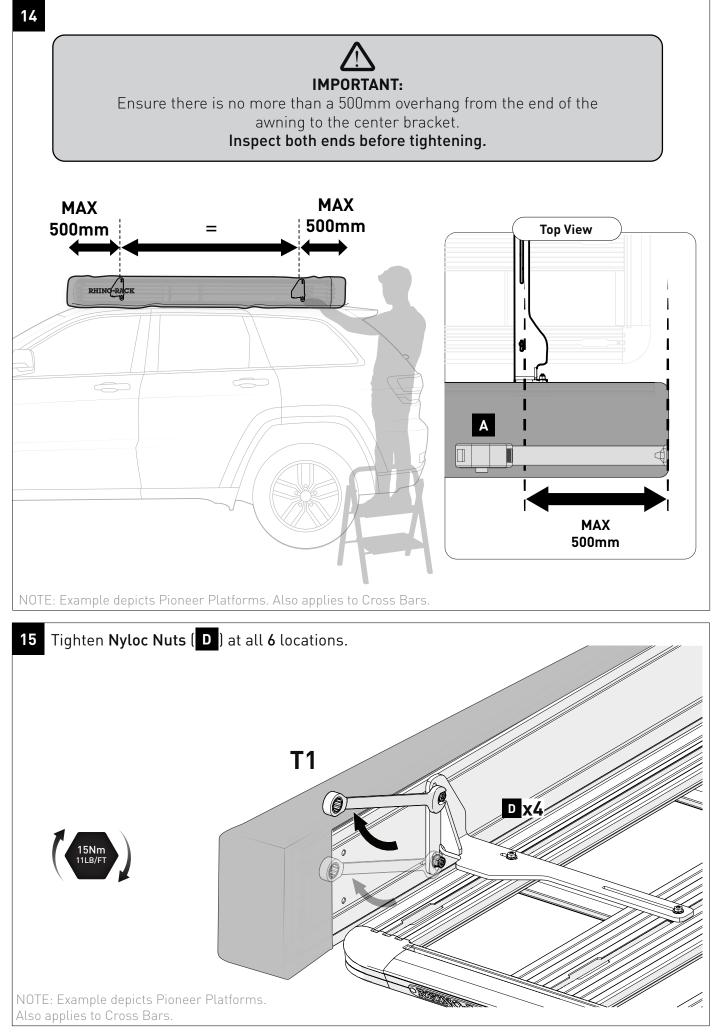


Page 14 of 24

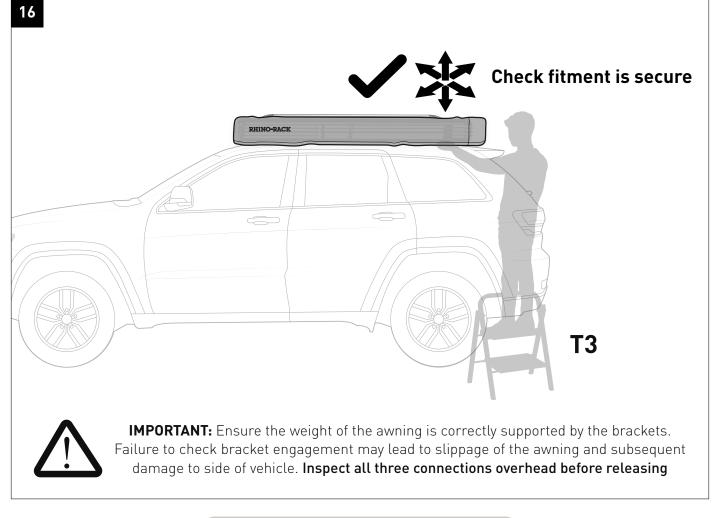


Installation Complete.


EXCE


180 AWNING OPERATION

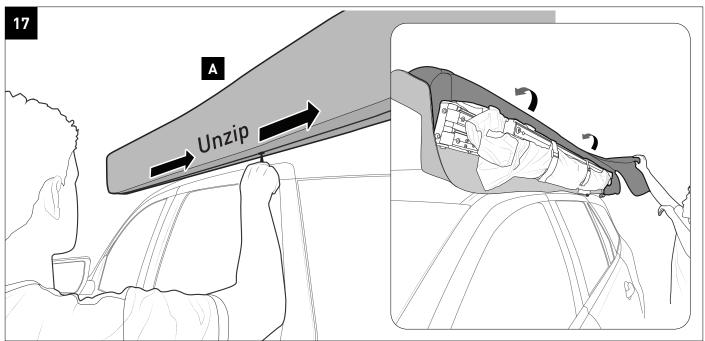


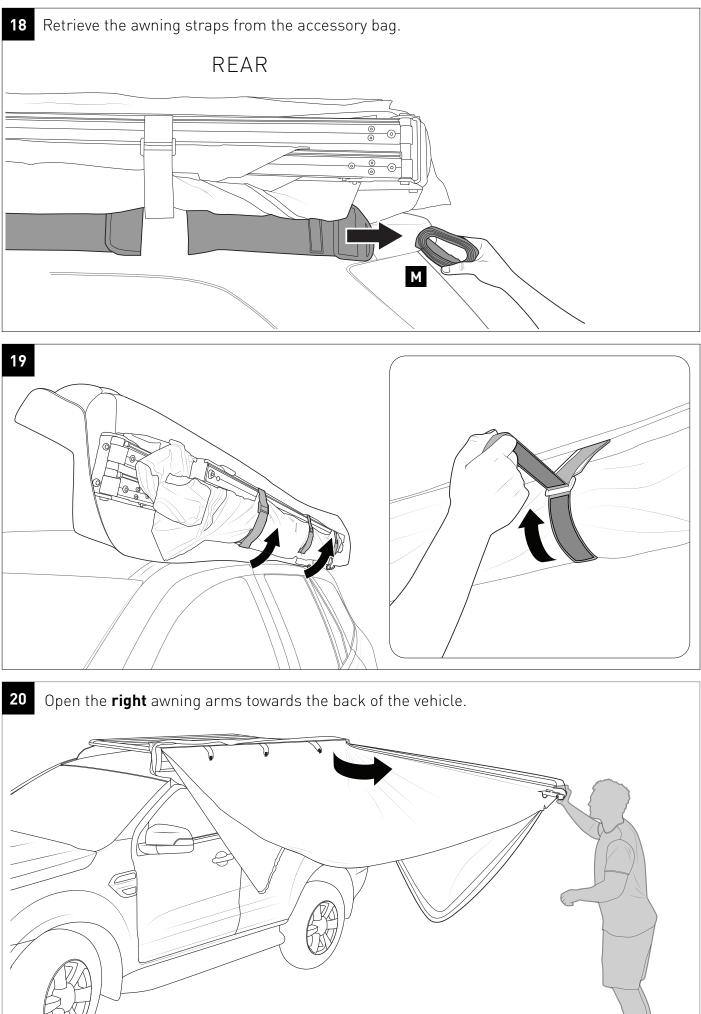


Batwing 180 FS // MAKE SPACE FOR ADVENTURE

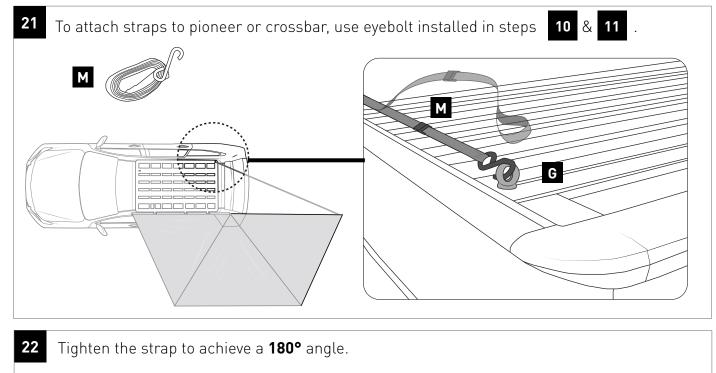

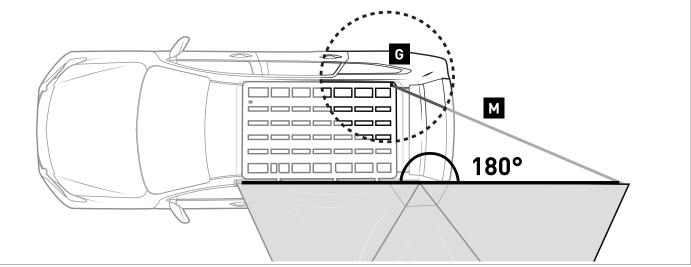


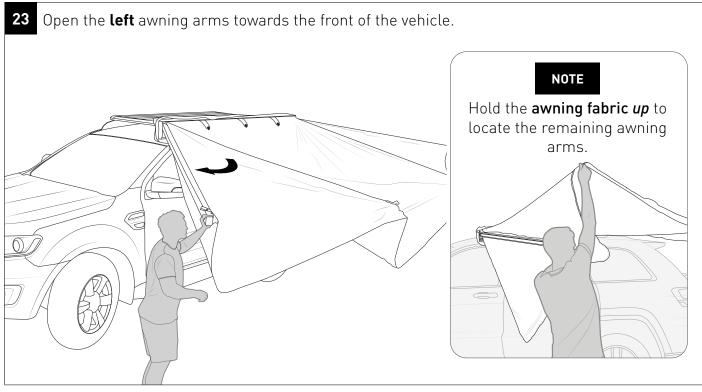

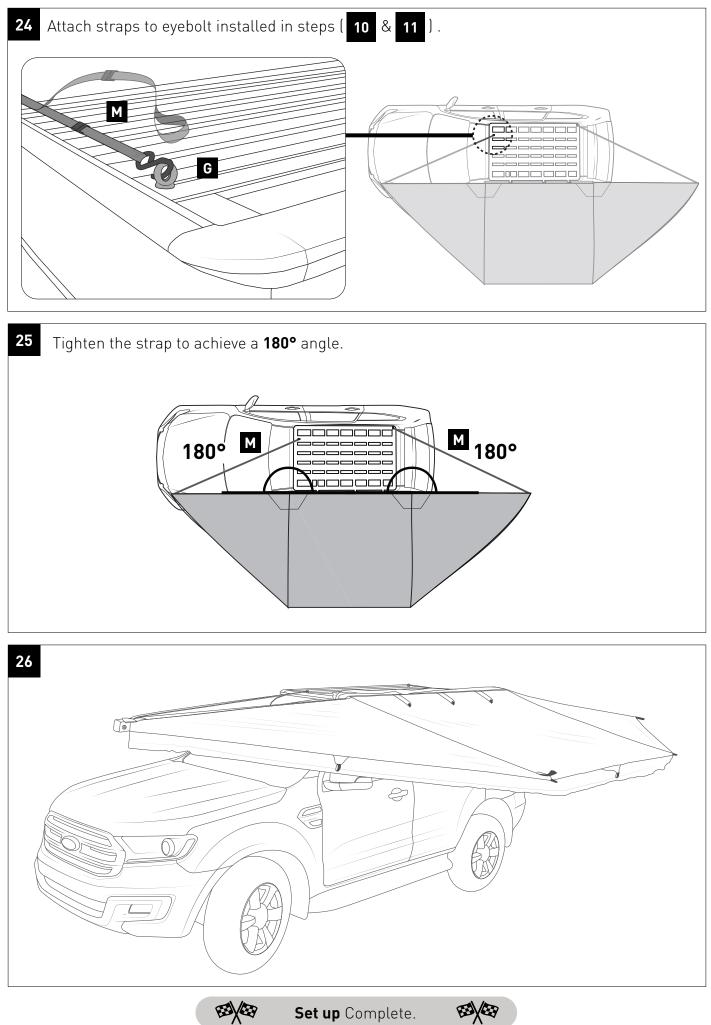


Support Pole Deployment (Optional)

(In **windy** or **rainy** conditions, support poles must be used to provide stability and prevent damage.)

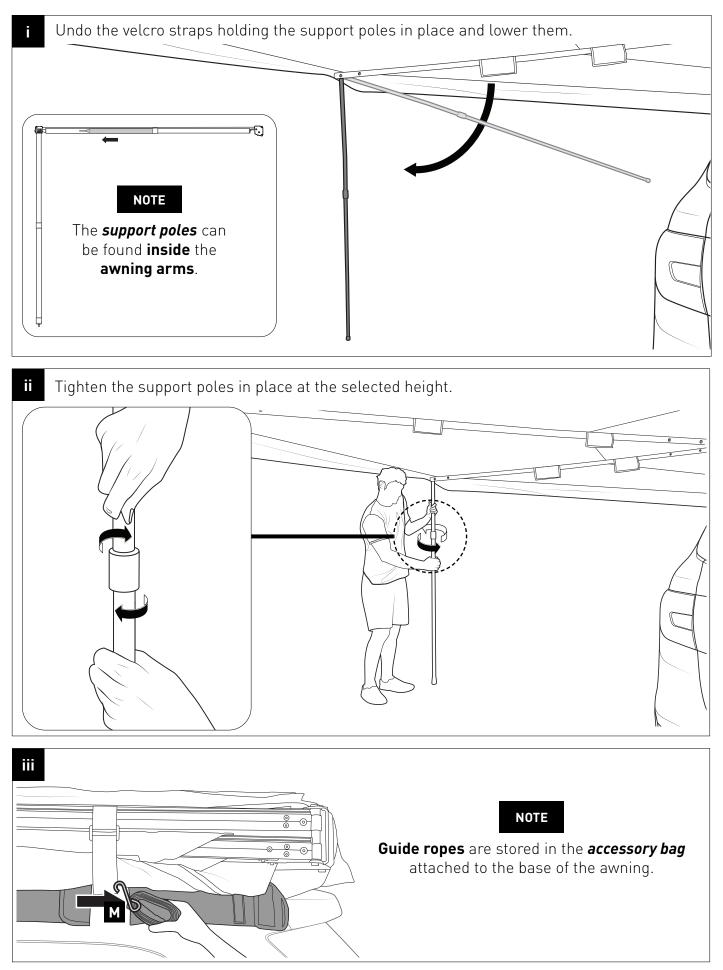


Page 19 of 24

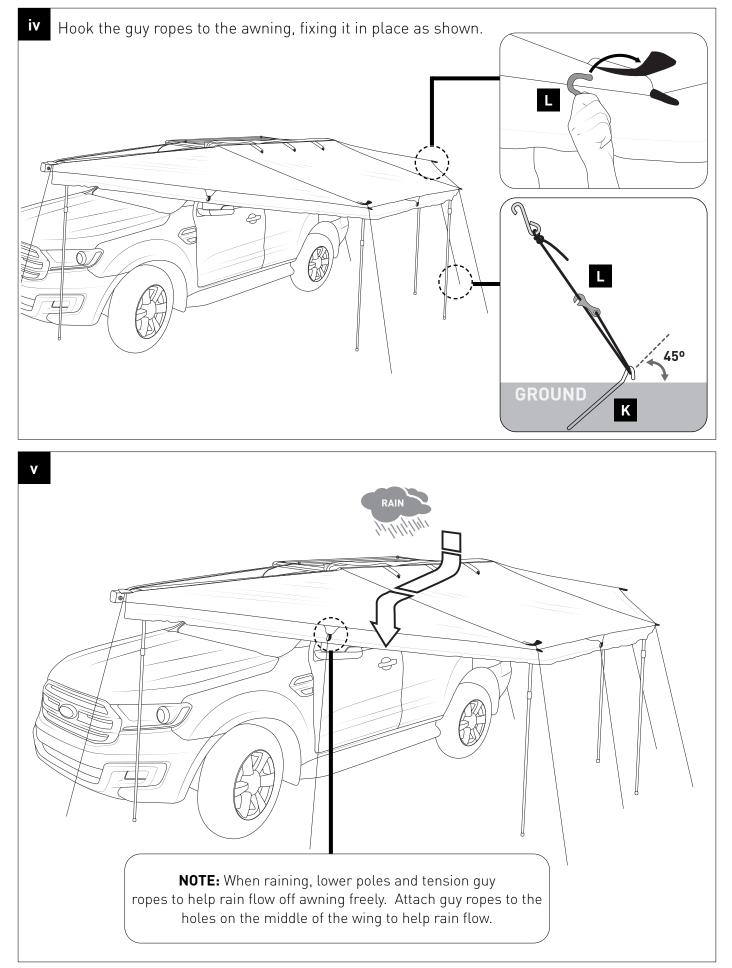


STOWAGE INSTRUCTIONS

(Completion of Steps **17** - **26** in REVERSE order. Use below steps for reference)



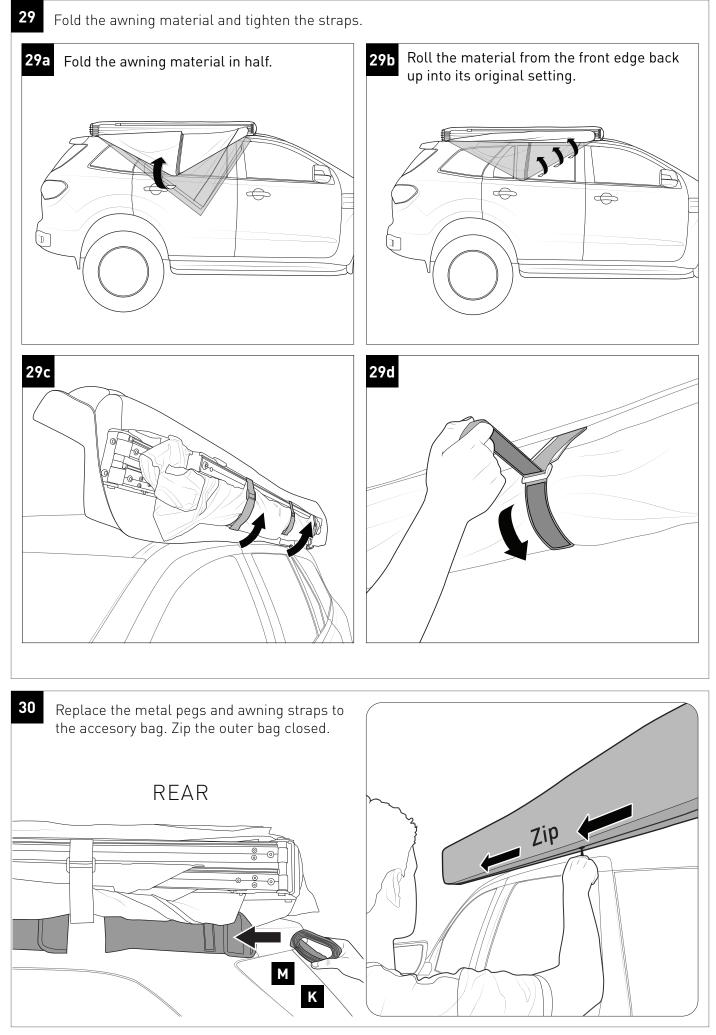

ACCESSORIES

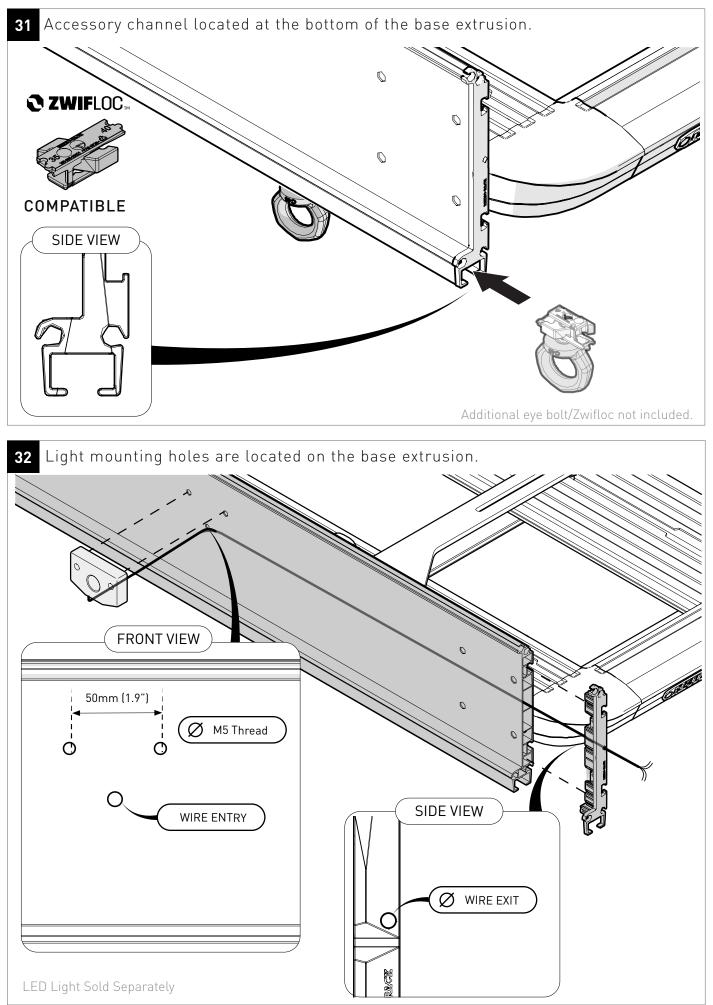



RHINORACK.COM

Rhino-Rack AUSTRALIA 22A Hanson Pl, Eastern Creek, NSW, 2766

Rhino-Rack USA 19822 E 22nd Ave, Aurora, CO, 80011