


Sunseeker Freestanding Awning 2m

32148

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 15 mins

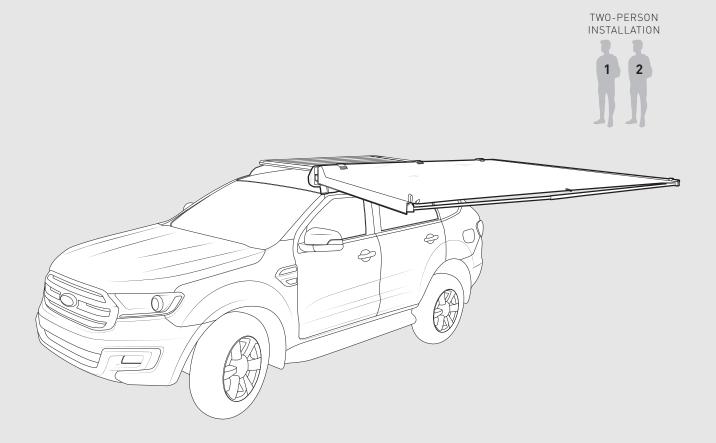

Thank you for choosing Rhino-Rack!



WELCOME TO THE HERD.

For peace of mind register your product by heading to rhinorack.com/register

Rhino-Rack AUSTRALIA


22A Hanson Pl, Eastern Creek, NSW, 2766

Rhino-Rack USA

Unit D, 2450 Airport Blvd, Aurora, CO, 80011


RHINORACK.COM


Document No:520-RFI-00211 Issue No: 03 Issue Date: 01/05/2025

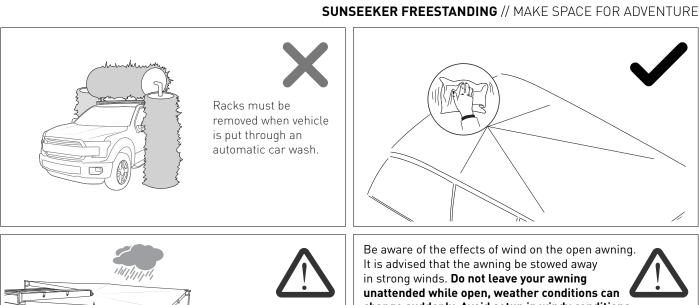








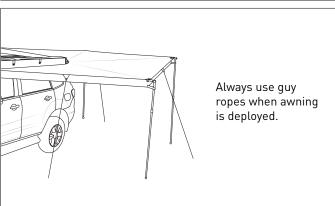


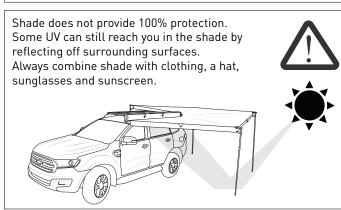

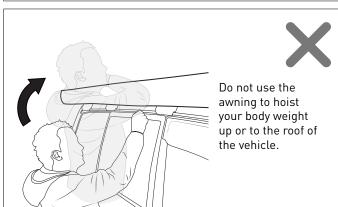

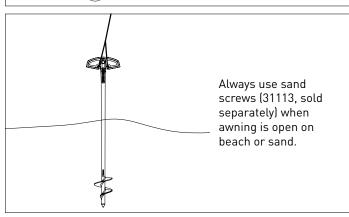

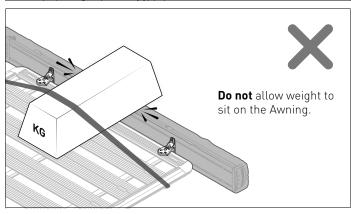

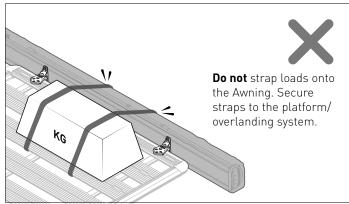

Important Information

Recommendations

Use only non-stretch fastening ropes or straps.

Please remove Sunseeker Freestanding and crossbars when putting vehicle through an automatic car wash.

Do not stow away the awning for long periods if it is wet. You must allow the awning material to dry completely before storing for extended periods of time. When rolling up the awning, avoid excessive bunching up of the material before stowing. The awning should be rolled up as neatly as possible following the stowage instructions.

In service maintenance checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:








Load Ratings

With the addition of the Sunseeker Freestanding, the load capacity of your crossbars will have to be adjusted accordingly. The Batwing Awning with mounting brackets weighs approximately 20kg.

Note for Dealers and Fitters

It is your responsibility to ensure this fitting instruction is given to the end user or client It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Critical Dimensions

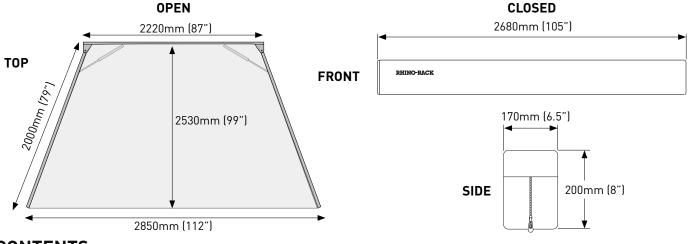


CONTENTS

Installation onto:

Pioneer Platforms ————	Steps	1	-	5	and	10	-	14
Reconn-Deck Bars	Steps	6	,	9	and	10	-	14
VA —	Steps	6	-	7	and	10	-	14
Sportz —	Steps	6	,	8	and	10	-	14
Operation —	Steps	15	-	22				
Storage ————	Steps	23	-	29				
Accessories —————	Steps	30	-	31				

Page 3 of 24

Parts List

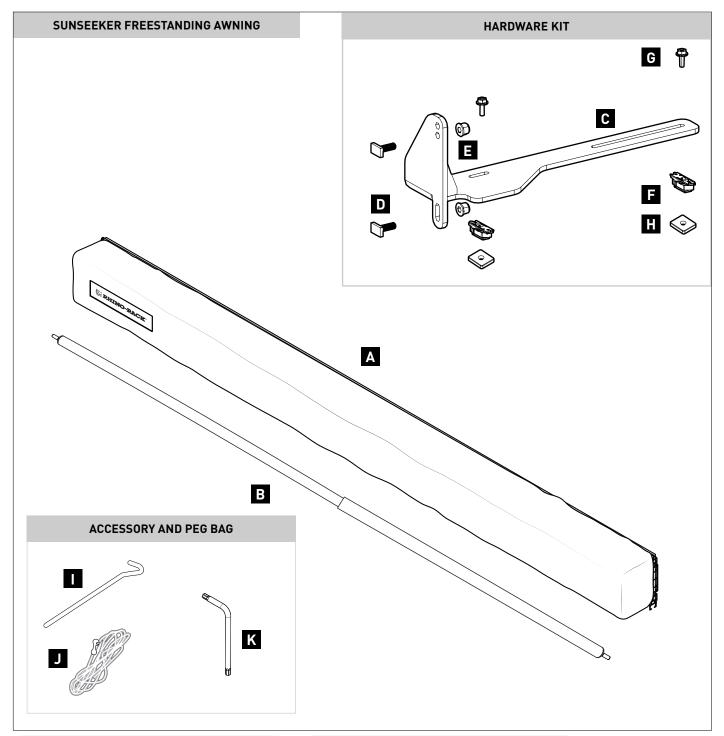

ASSEMBLED SUNSEEKER	Qty
0 Awning Main Body	1
tension Pole	1
	0 Awning Main Body

Item	HARDWARE KITS	Qty
С	Base Bracket	2
D	M8 T-Bolt	4
E	M8 Flanged Nyloc Nut	4
F	Zwifloc Drop-In Nut	4
G	M6 Hex Head Flanged Bolt	4
Н	Square Nut	4


Item	ACCESSORY + PEG BAG	Qty
I	Metal Peg	3
J	Guy Rope	3
K	Torx Key (T30)	1

TOOLS REQUIRED:


T1 - Step Ladder **T2** - Tape Measure

T3 - 10mm & 13mm Spanner

(or Socket wrench)

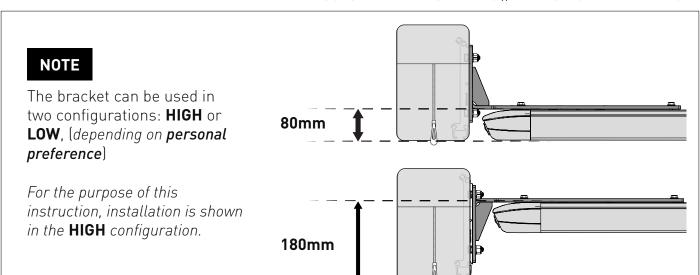



NOTE: Example depicts Pioneer Platforms. Also applies to Cross Bars

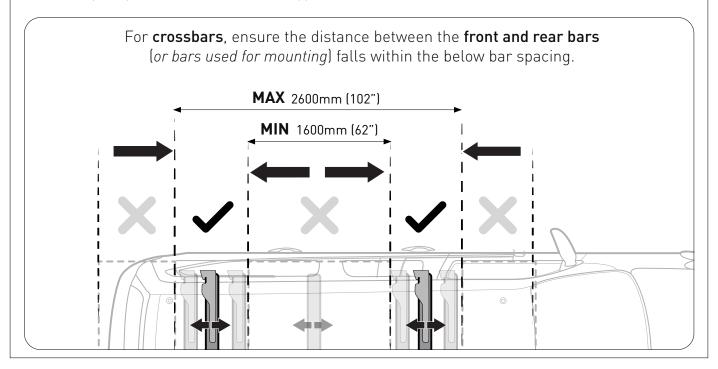



For Installation onto PIONEER PLATFORMS


(For Crossbars, skip to Step 6)

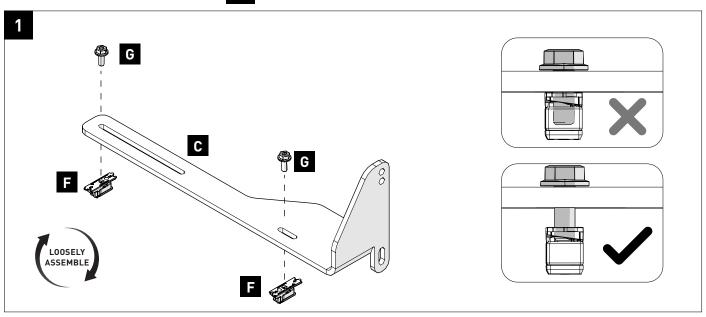

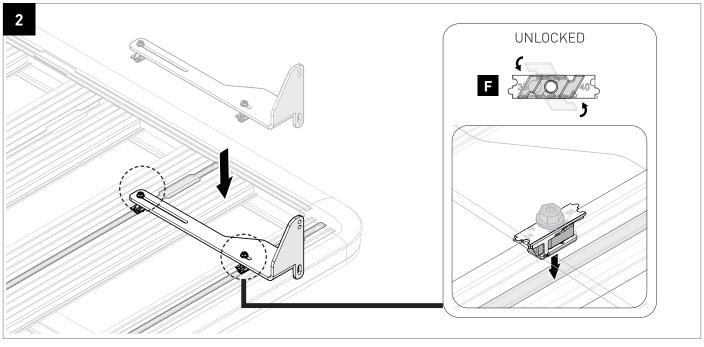

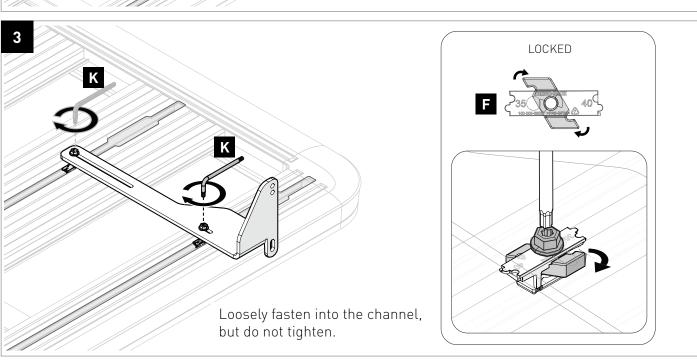


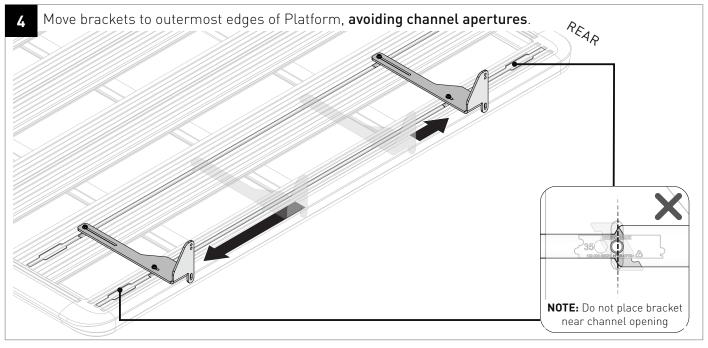

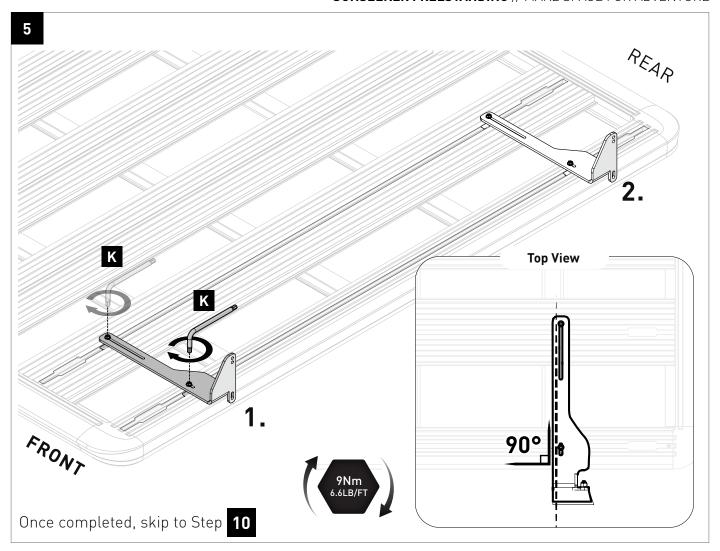


FOR INSTALLATION ONTO CROSSBARS


(For Platforms Skip to Step 10)

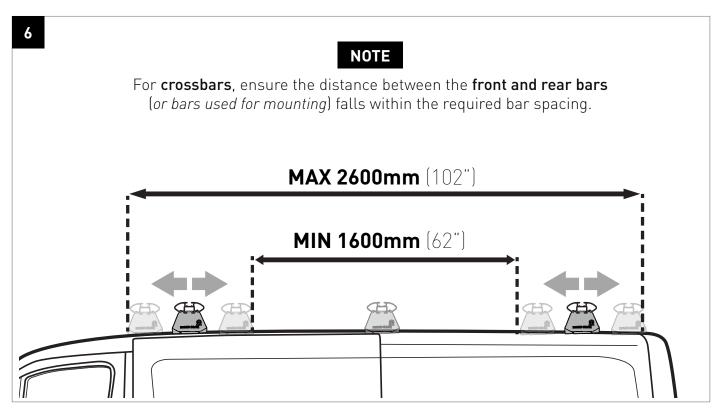


Page 7 of 24

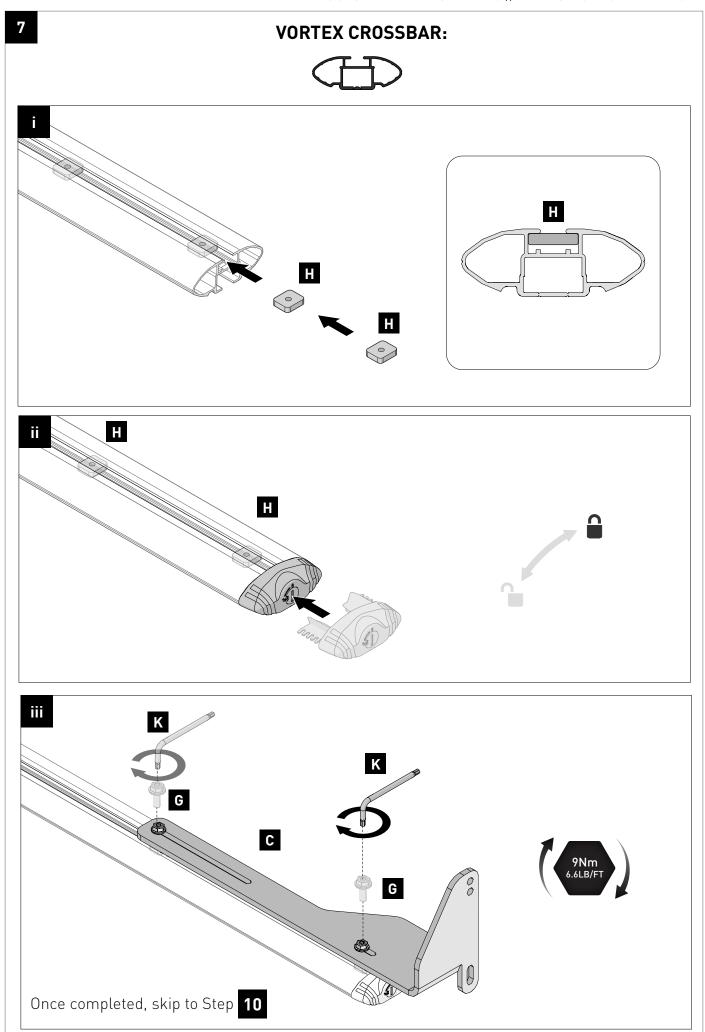


Page 8 of 24

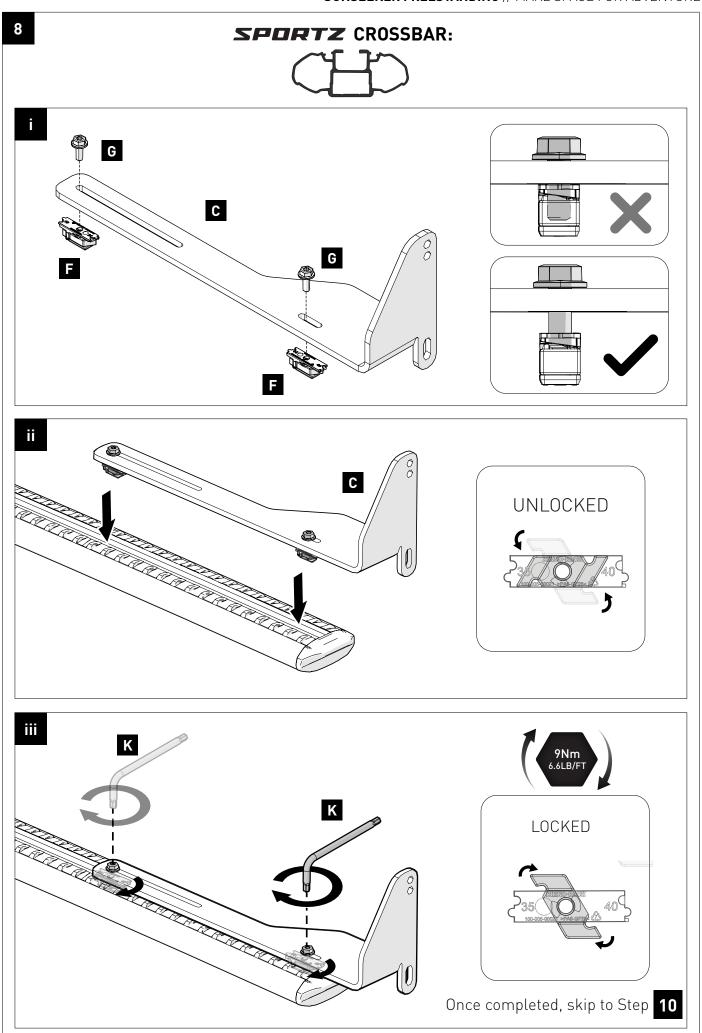


Page 9 of 24

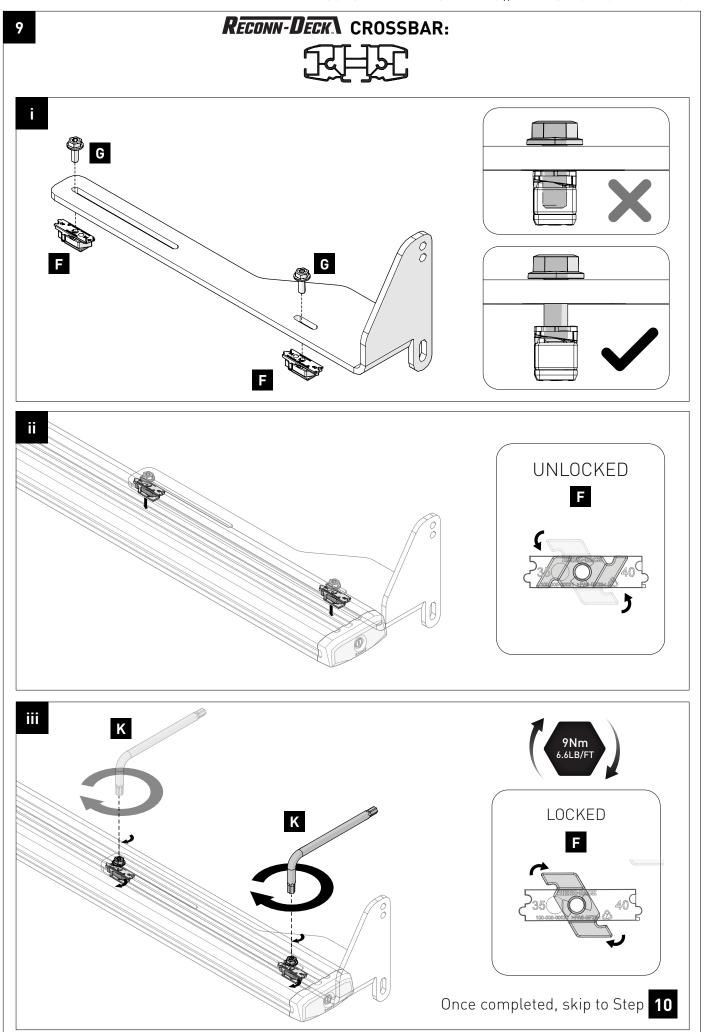

Page 10 of 24

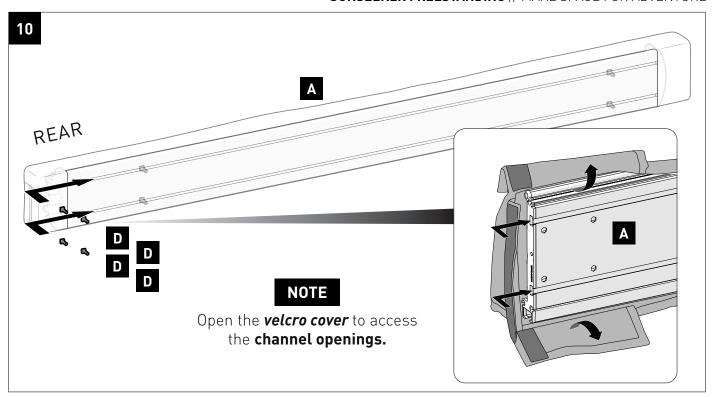

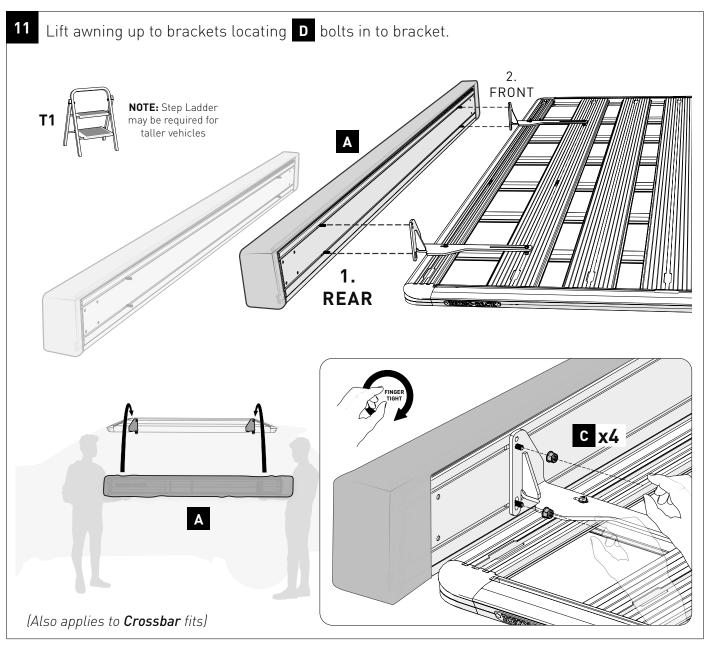

Page 11 of 24





\triangle


IMPORTANT:

Ensure there is no more than a 700mm overhang from the end of the awning to the center bracket.


Inspect both ends before tightening.

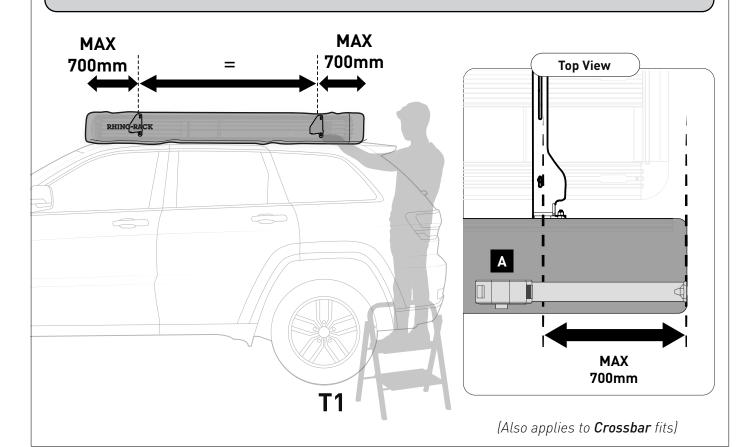

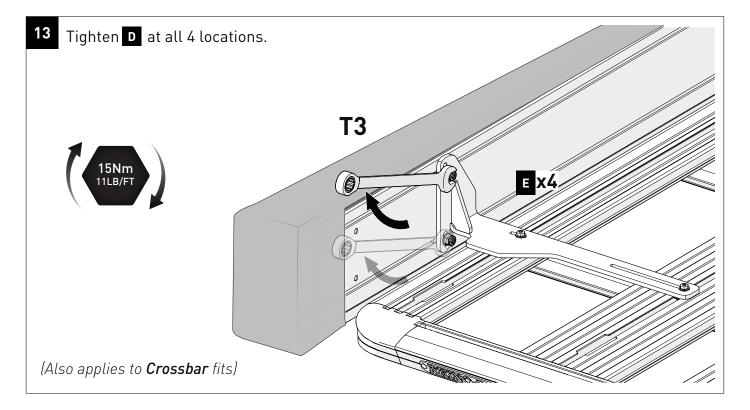


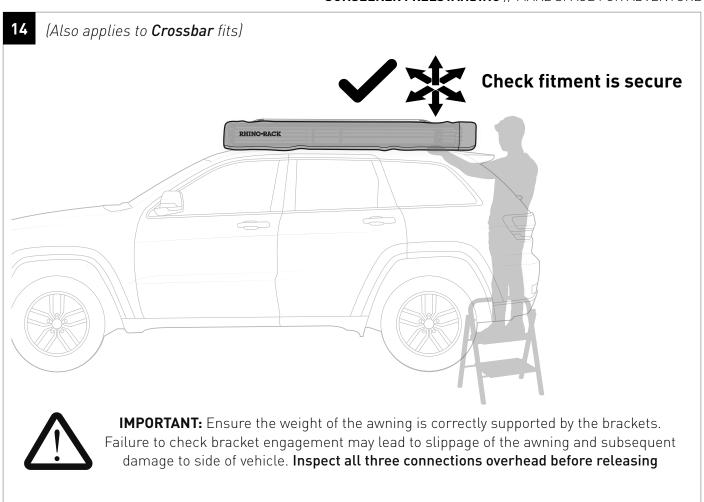



270 AWNING OPERATION

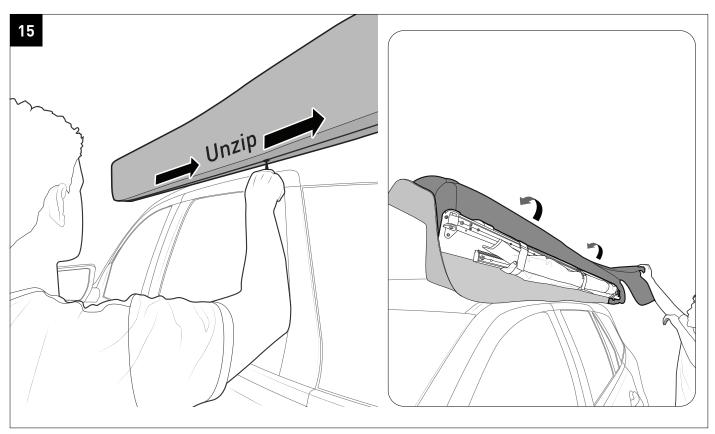


Page 13 of 24

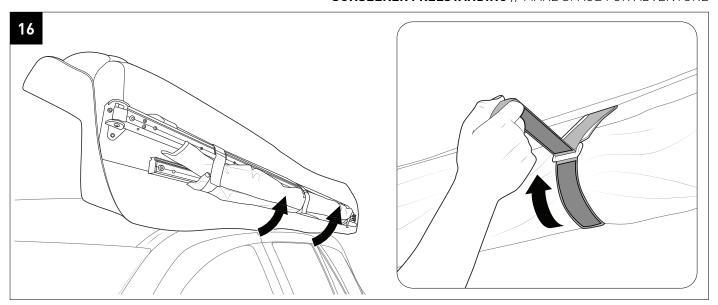


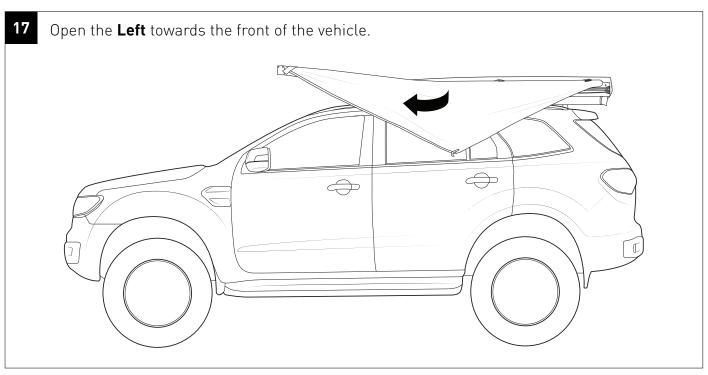


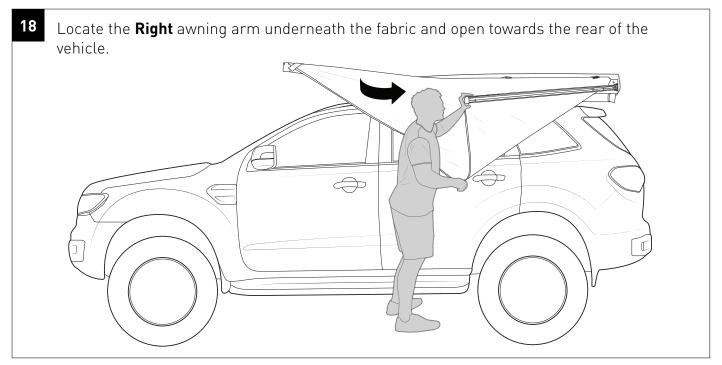


Page 14 of 24

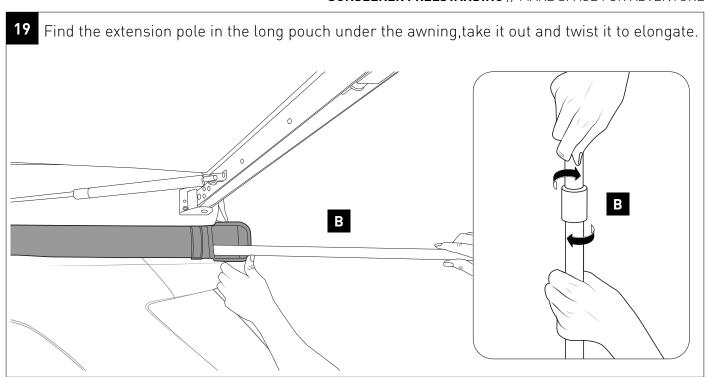

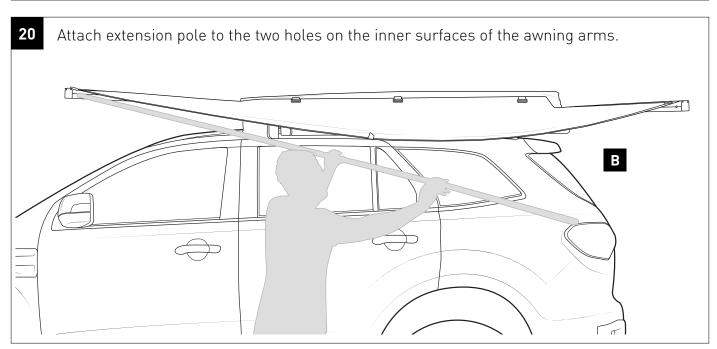

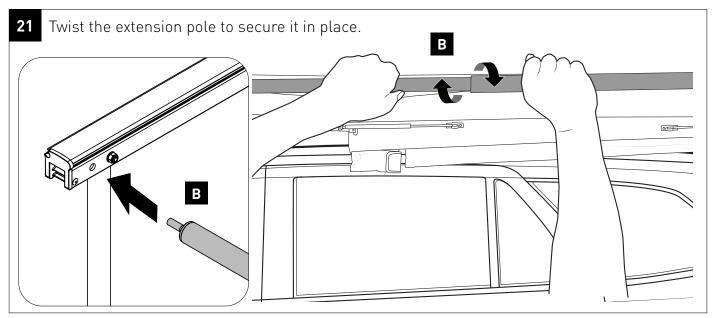



Page 15 of 24

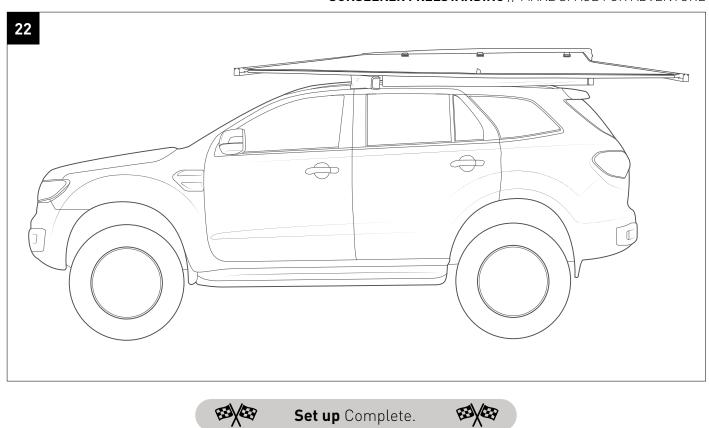



Support Pole Deployment (Optional)

(In **windy** or **rainy** conditions, support poles **must be used** to provide stability and prevent damage.)

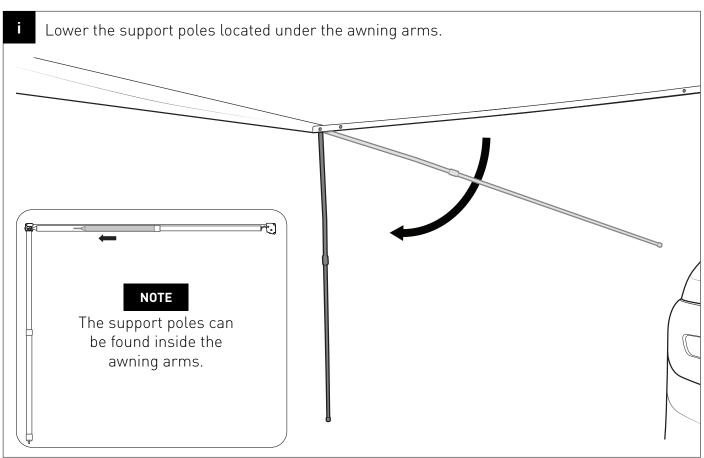


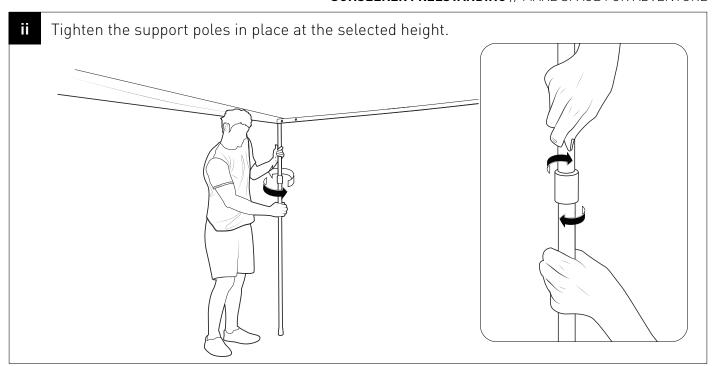

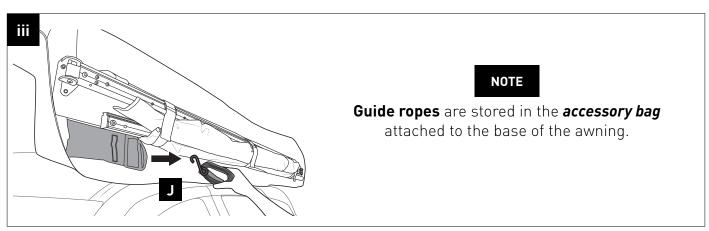

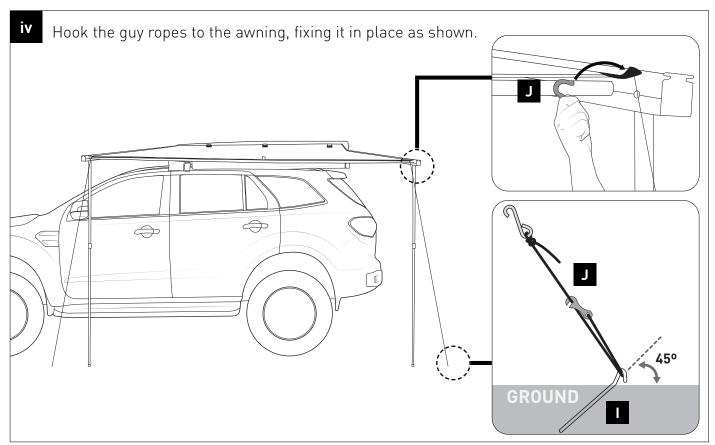



Page 17 of 24

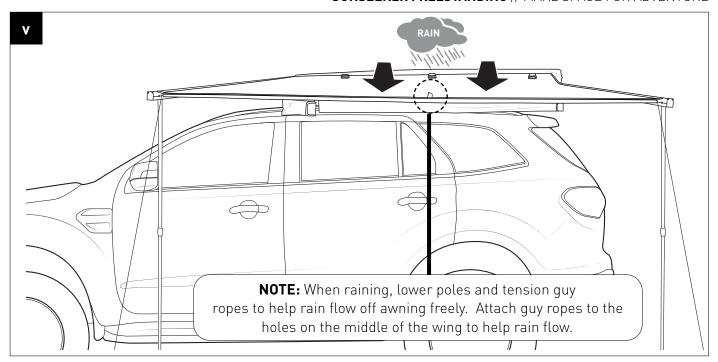



STOWAGE INSTRUCTIONS


(Completion of Steps 15 - 22 in REVERSE order. Use below steps for reference)

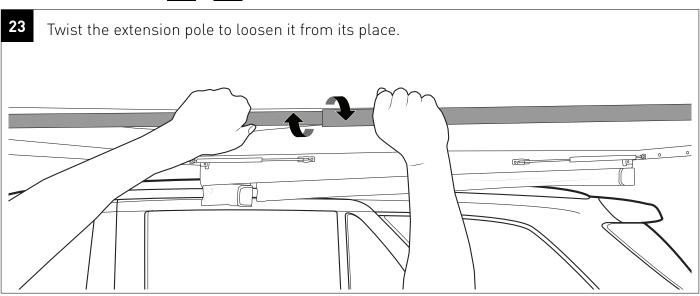

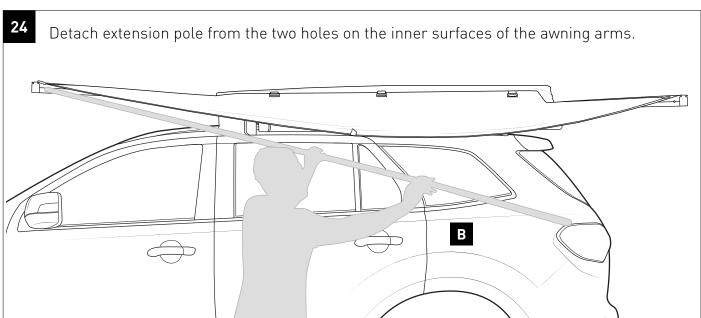


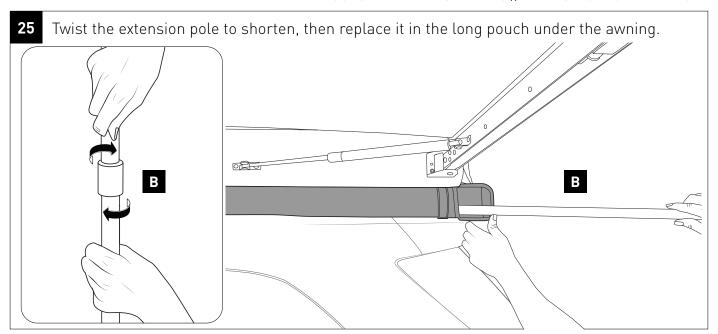


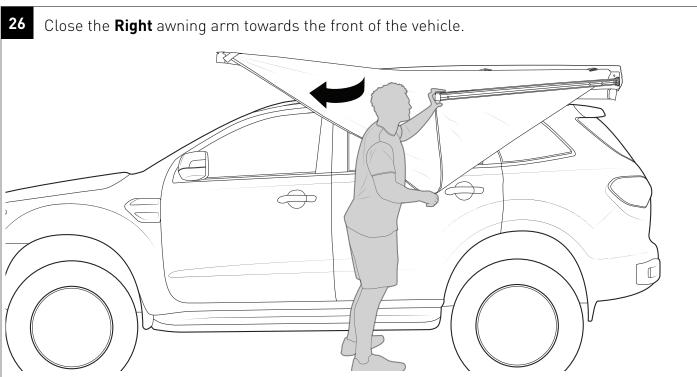


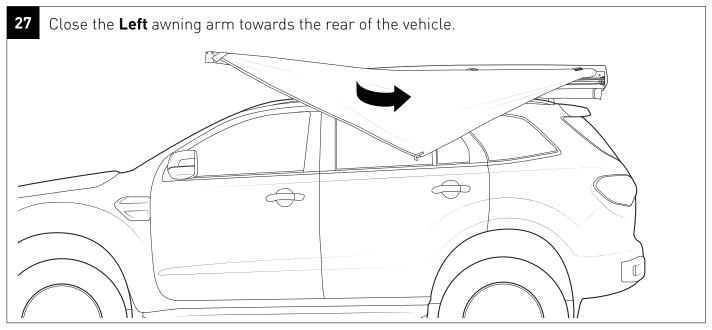



Page 19 of 24

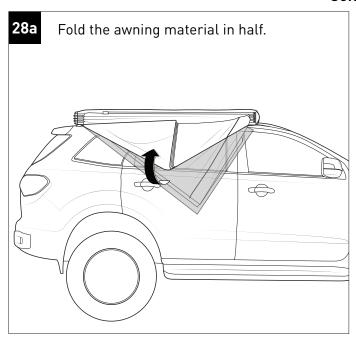

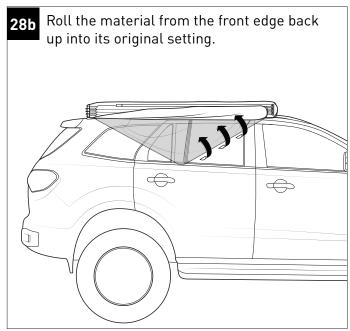


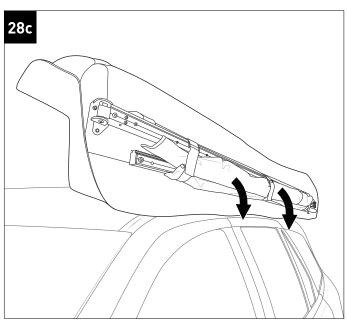


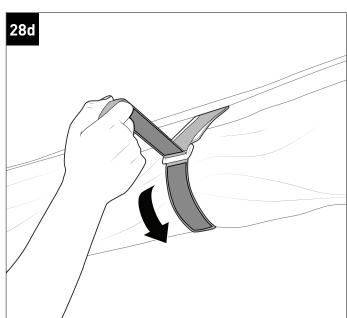

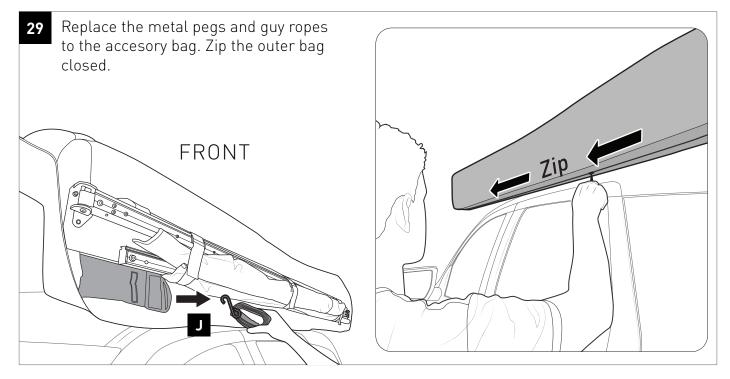

ACCESSORIES

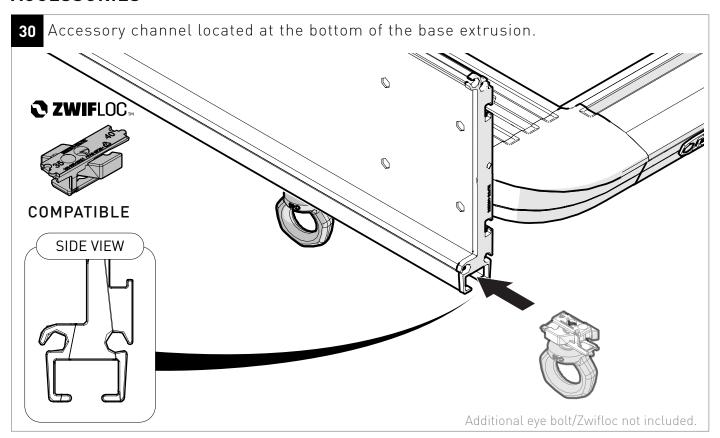

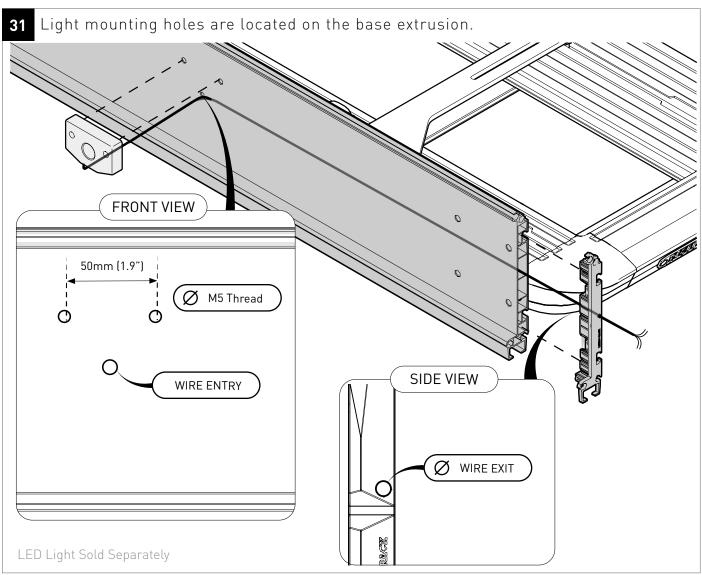

Page 21 of 24

NOTES

NOTES



RHINORACK.COM

Rhino-Rack AUSTRALIA

22A Hanson Pl, Eastern Creek, NSW, 2766

Rhino-Rack USA

19822 E 22nd Ave, Aurora, CO, 80011