


Rhino-Rack Hard Arm Chair (34002)

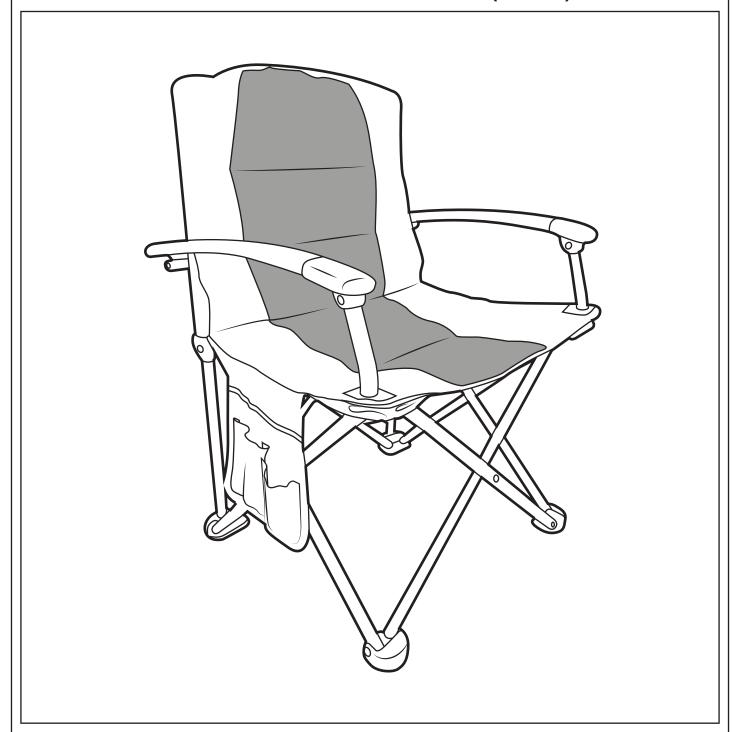

Maximum load capacity: 159kg/350lbs

Rhino-Rack

3 Pike Street, Rydalmere, NSW 2116, Australia. (Ph) (02) 9638 4744 (Fax) (02) 9638 4822

Issue No: R499

Prepared By: Kayle Everett Authorised By: Chris Murty Issue No: 02 Date: 26/02/2015


These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.




Rhino-Rack Hard Arm Chair (34002)

Parts List


Item	Component Name	Qty	Part No.
1	Hard Arm Chair	1	
2	Camping Chair Bag	1	
3	Fitting Instruction	1	R499

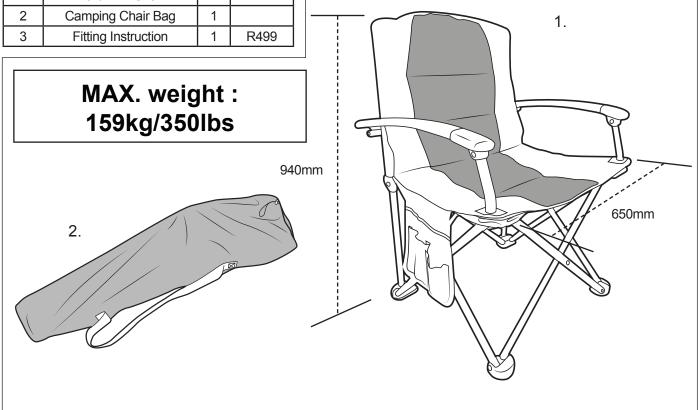

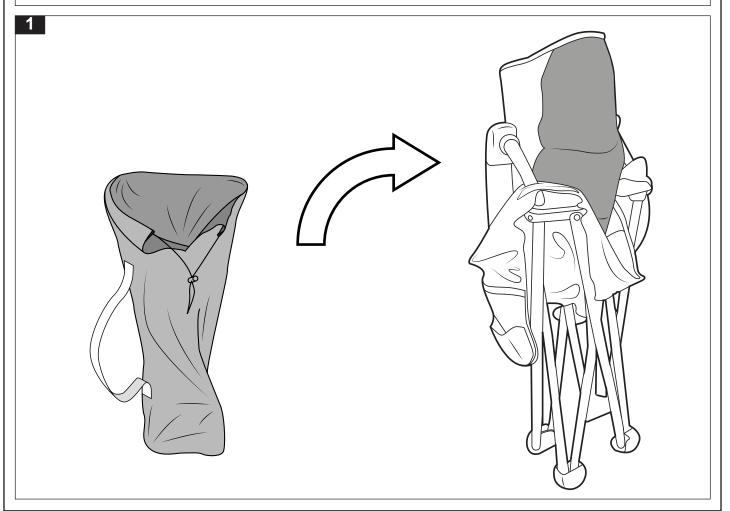



Rhino-Rack Hard Arm Chair (34002)

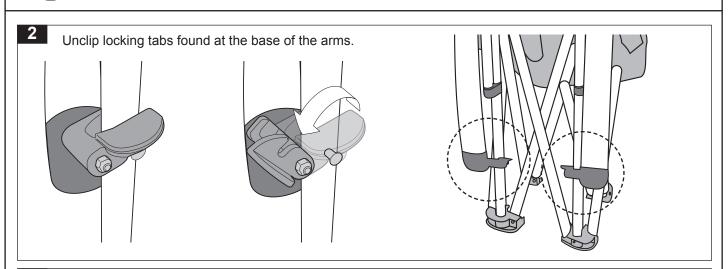

Push the opposing legs away from one another as shown. The arms will slide up so they are parallel with the floor. Clip arm rests to the rear chair legs to fix the chair in position.

