


Leg Instructions

RLKVA (Two Bars) / RLKVAH (One Bar)

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 30 mins

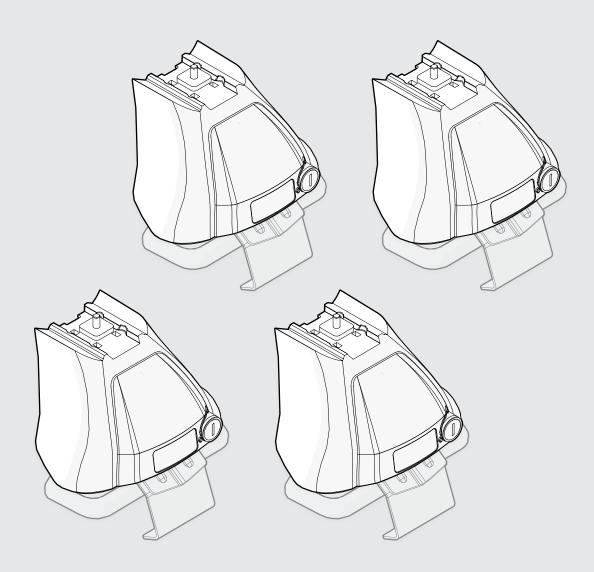

RHINORACK.COM

Document No: 520-RFI-00216


Issue No: 14

Issue Date: 15/01/2025


Carrying Capacity

Check the website and the **vehicle owners hand book** for your vehicle manufacturer's maximum carrying capacity. Load must be evenly distributed over the system.



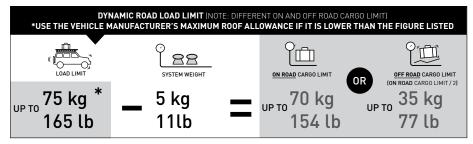



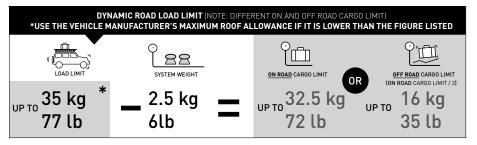



Cargo Load Limit

Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is in motion.



System Weight

Total weight of the roof rack system. (e.g. Crossbars, Backbone, Platform)



Max System Load Capacity

Please ensure you use the vehicle manufacturer's maximum roof allowance if it is lower than the figure listed in the fitting chart/supplement.



Vehicle Manufacturer's Load Limit

Total permissible weight attached to the roof of the car. This is inclusive of the weight of the roof rack system.

In service maintenance checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:







Note for Dealers and Fitters


It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.




Exercise extreme care when transporting wind-resistant loads. Special consideration must be taken when cornering and braking.



Off-road conditions can be much more rigorous. Extreme care must be taken on any driven path that does not contain a surface protection layer (tar/bitumen).

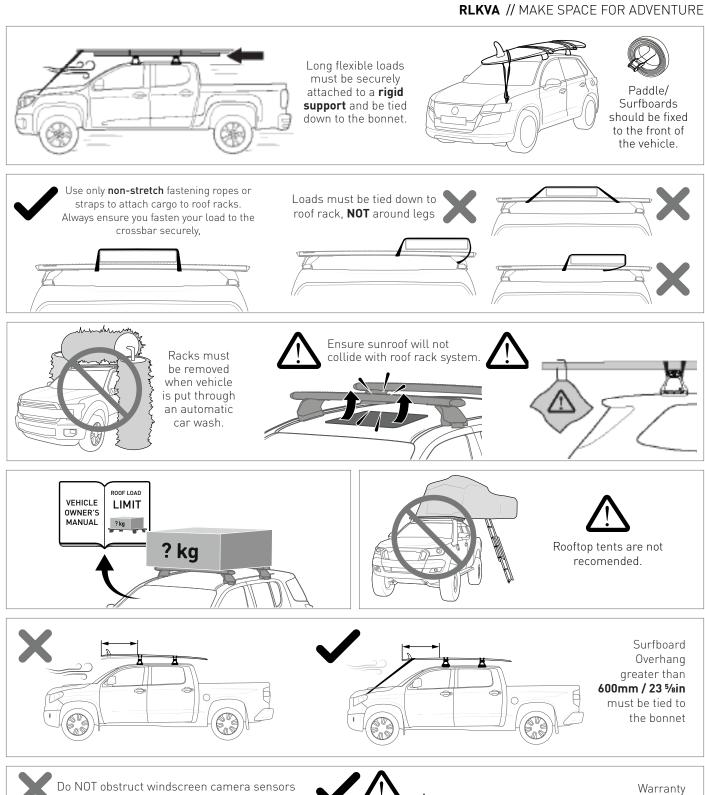


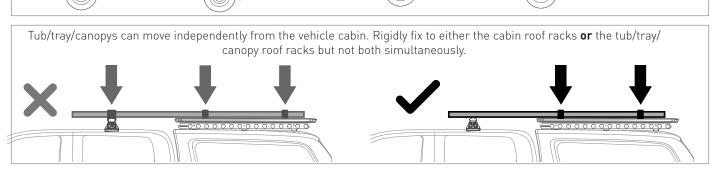

for roof rack system will be void if the front of the kayak is not secured to the bonnet

System Components


To complete the installation ensure you have **Base Kit**, **Legs** and **Crossbars**.

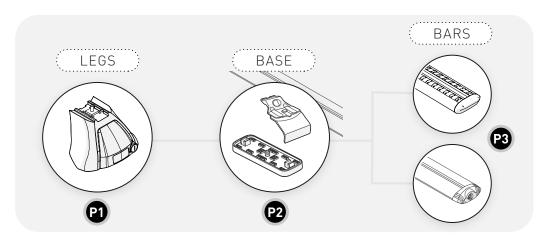



TOOLS REQUIRED:


- T1 Scissors / Cutters
- **T2** Measuring Tape


P1 RLKVA Parts List

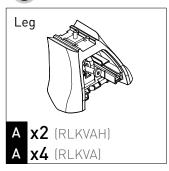


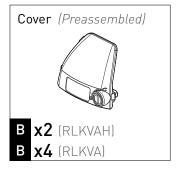


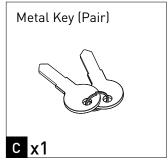


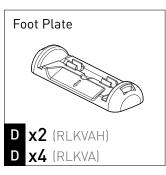

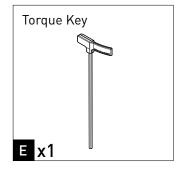


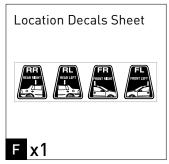

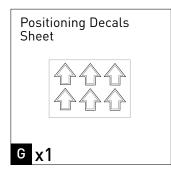


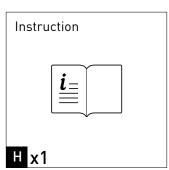





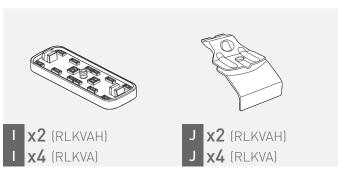



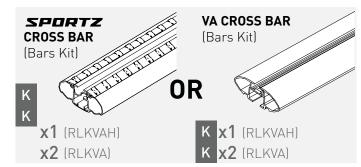


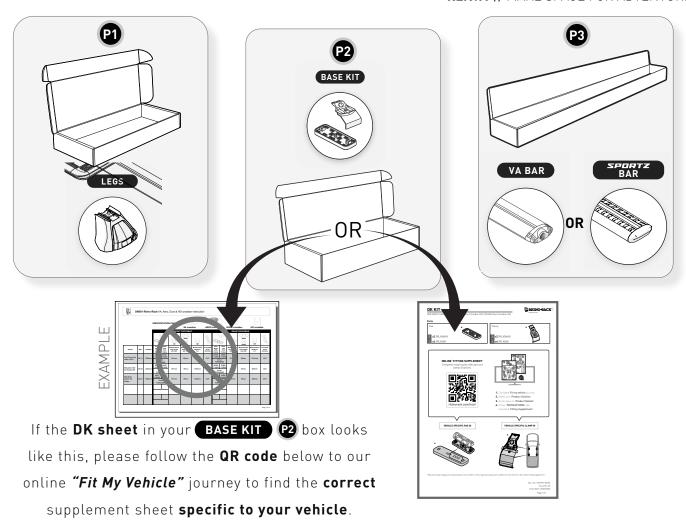


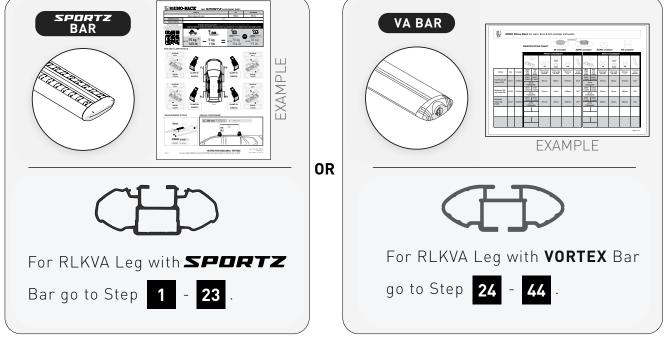



FOR SPORTZ BAR INSTALLATION


(For VORTEX Bar, skip to Step **24**)

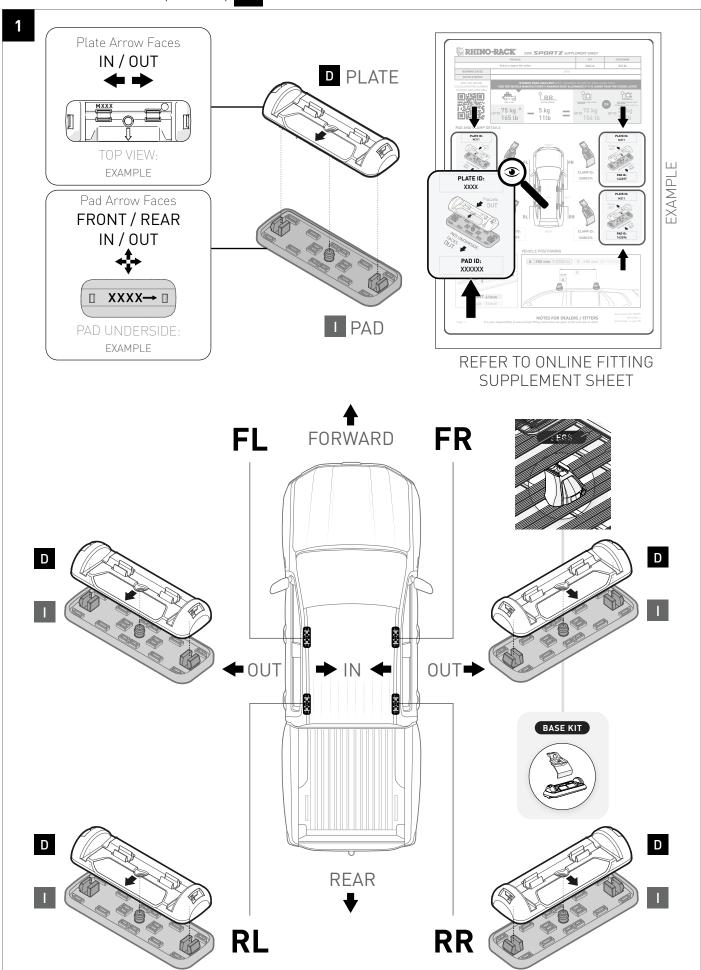


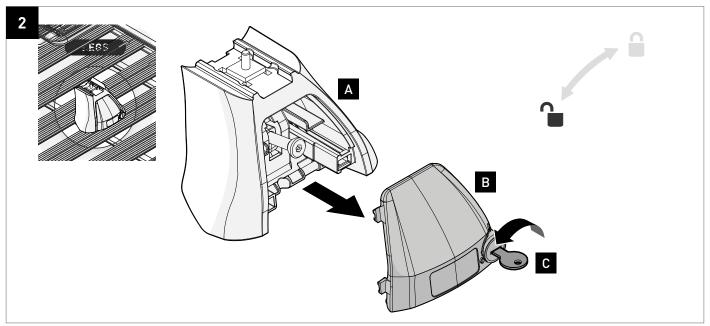


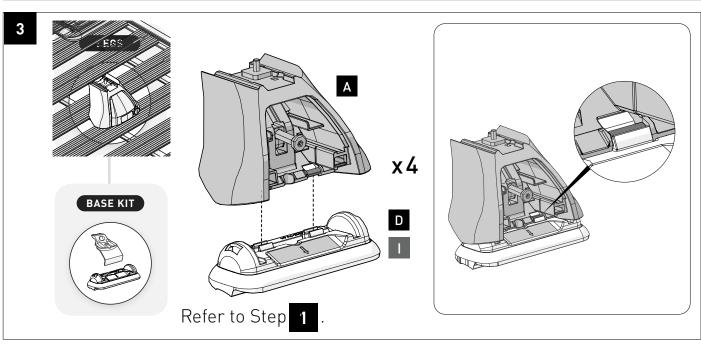


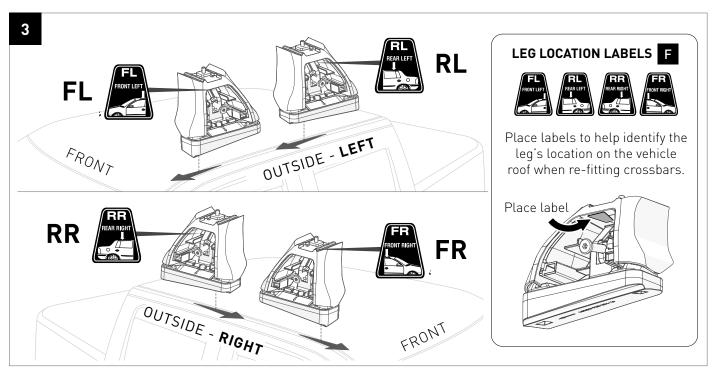


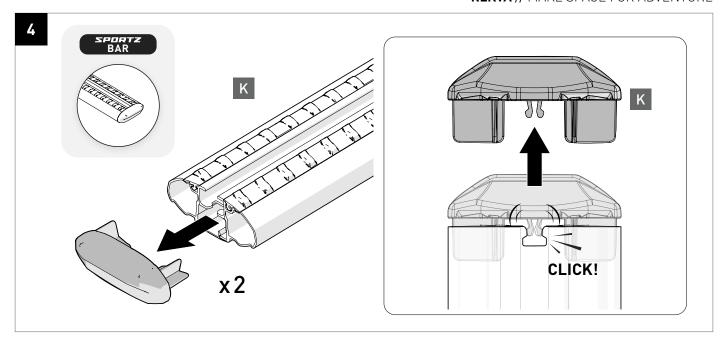


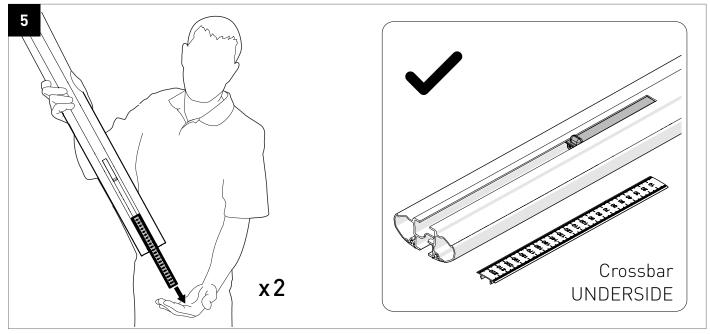


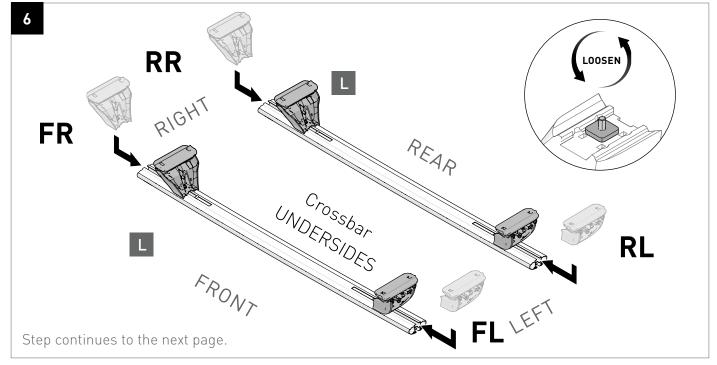


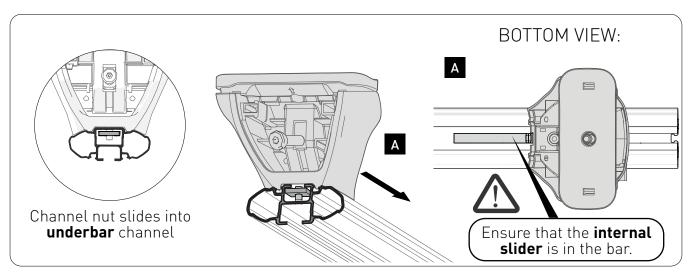


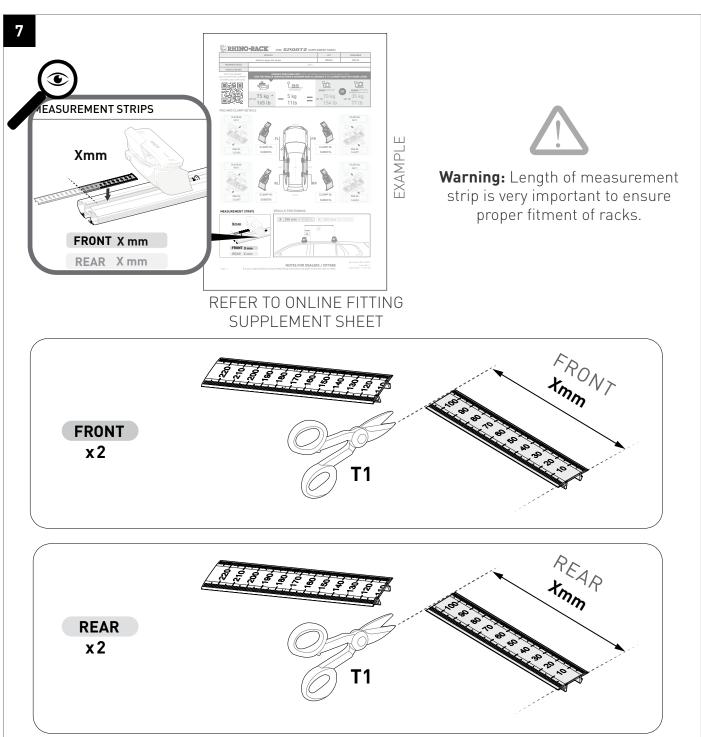


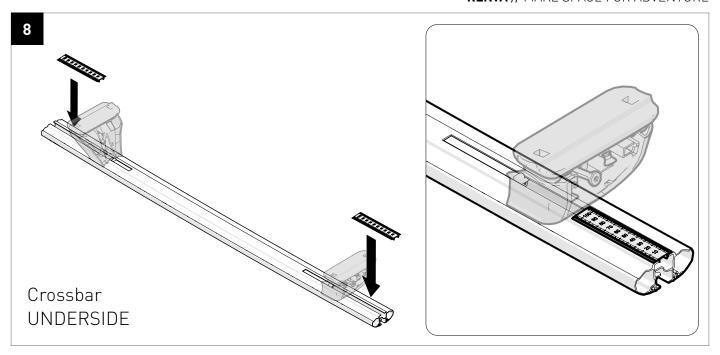


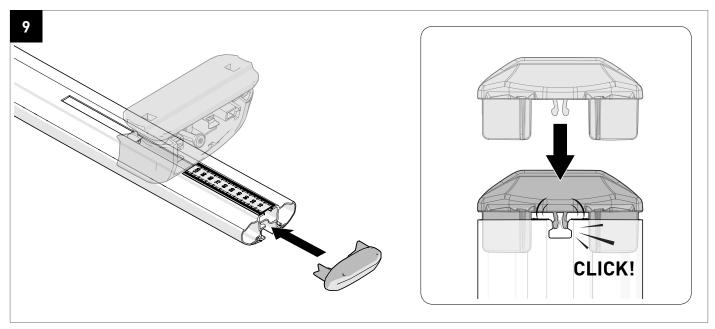


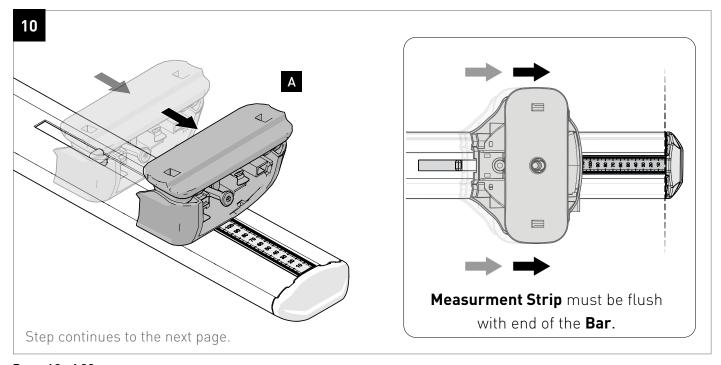


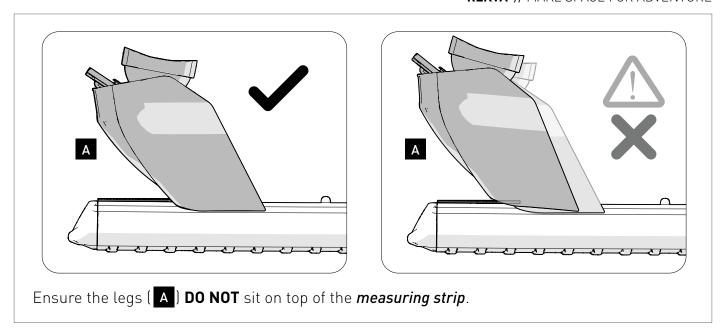


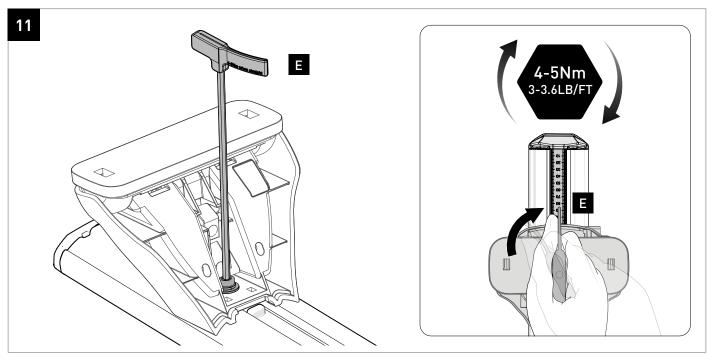


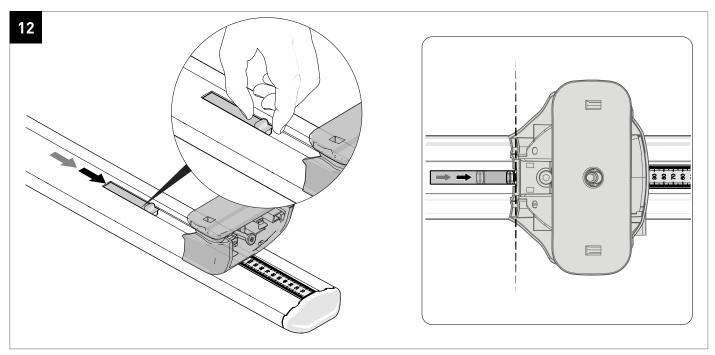


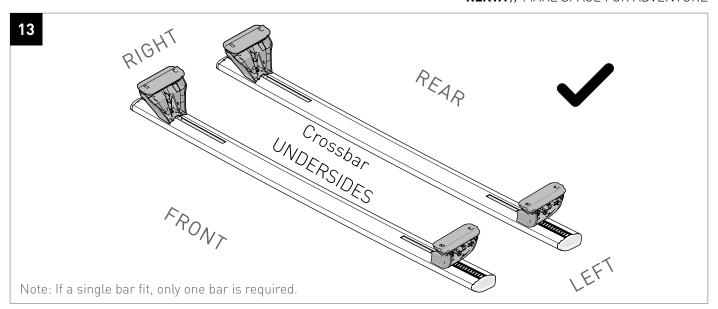


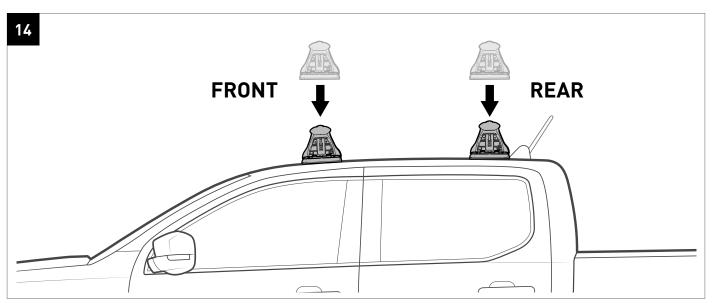


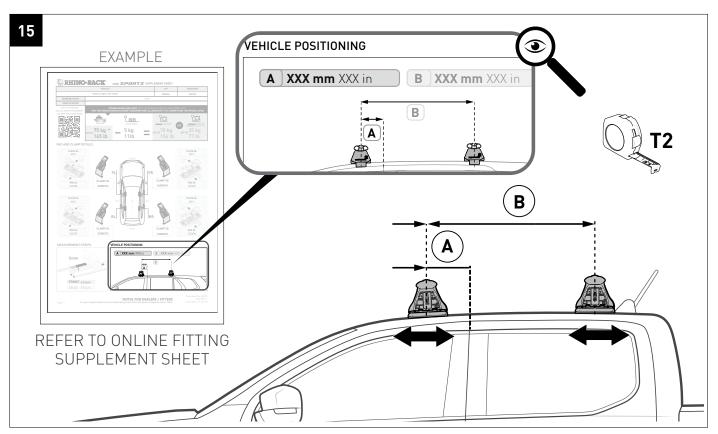


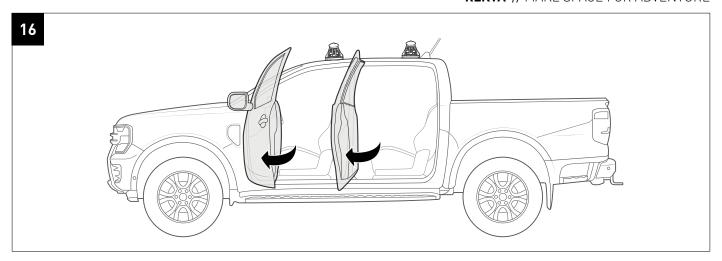

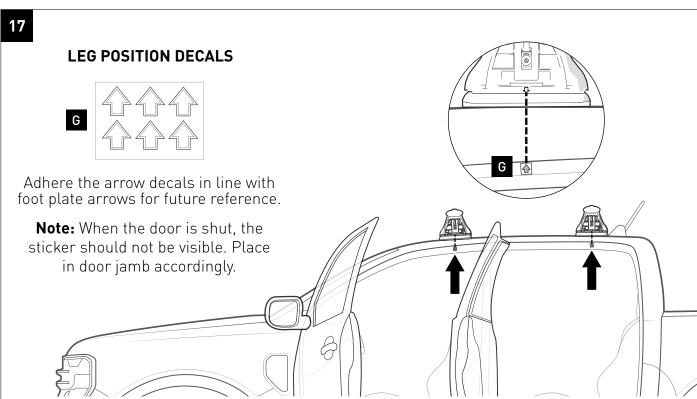

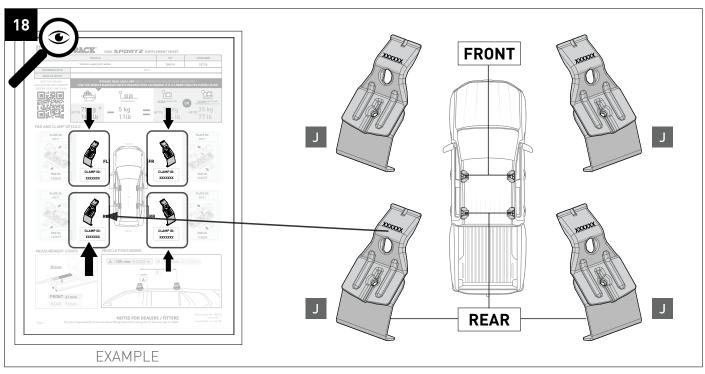

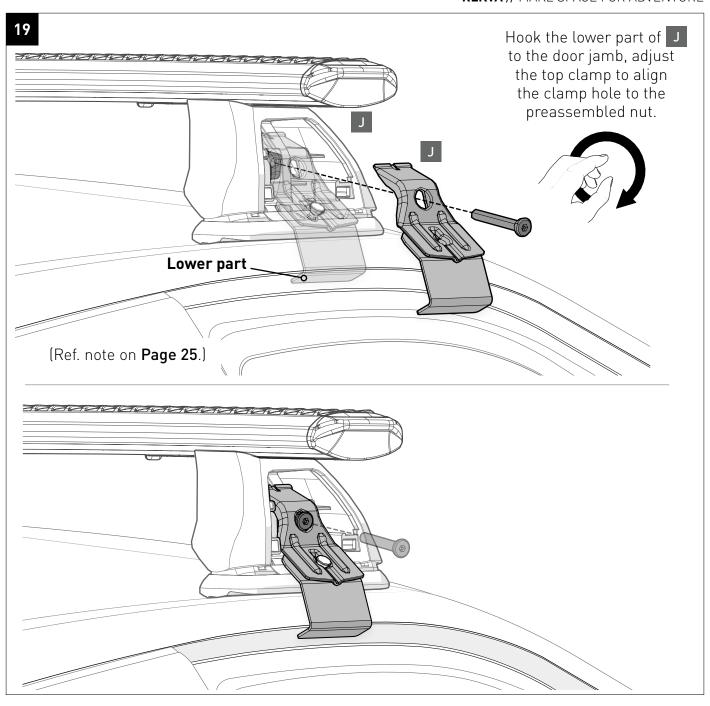

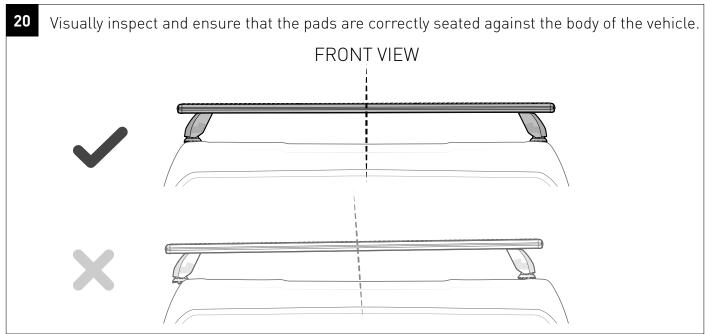



Tighten bolts incrementally and evenly on each side of the vehicle to avoid pulling the rack to one side.

SIDE VIEW
The clamp must have full contact along its face.


Clamp


Vehicle

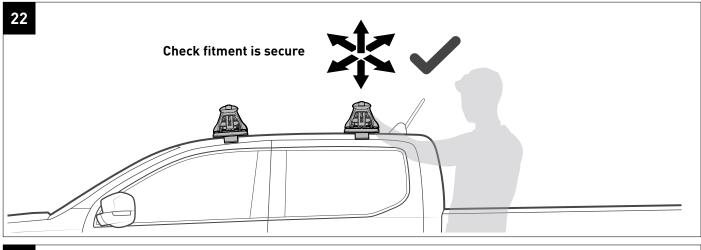


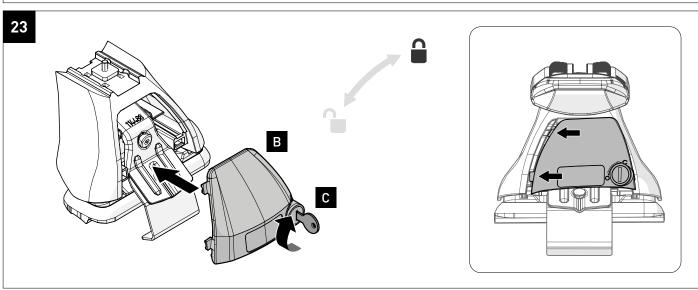



FOR VORTEX BAR INSTALLATION

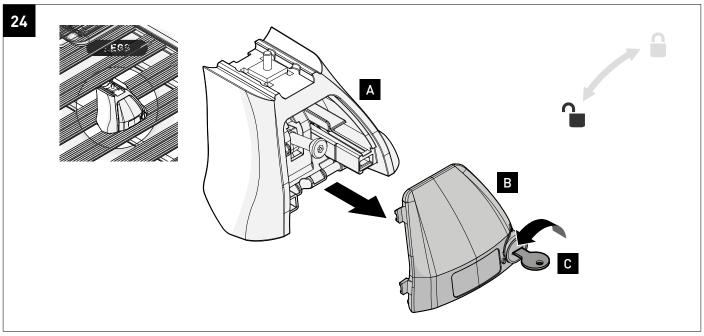


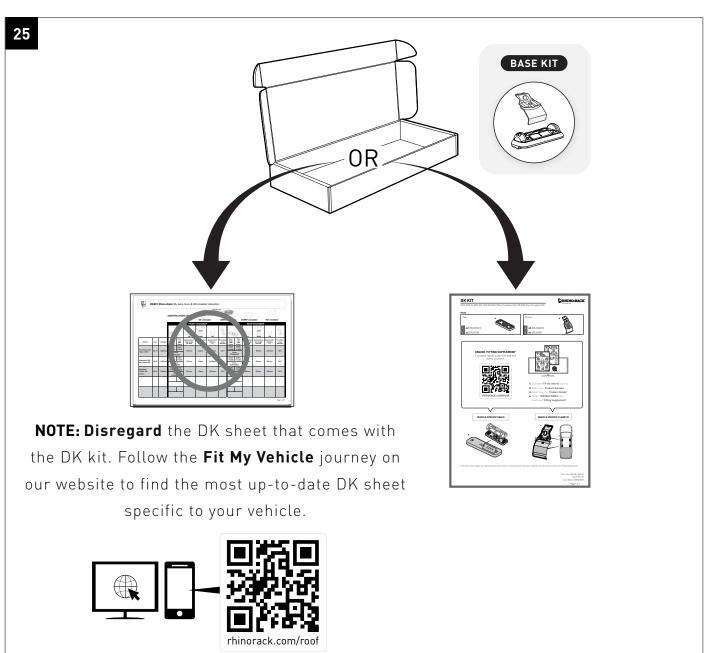


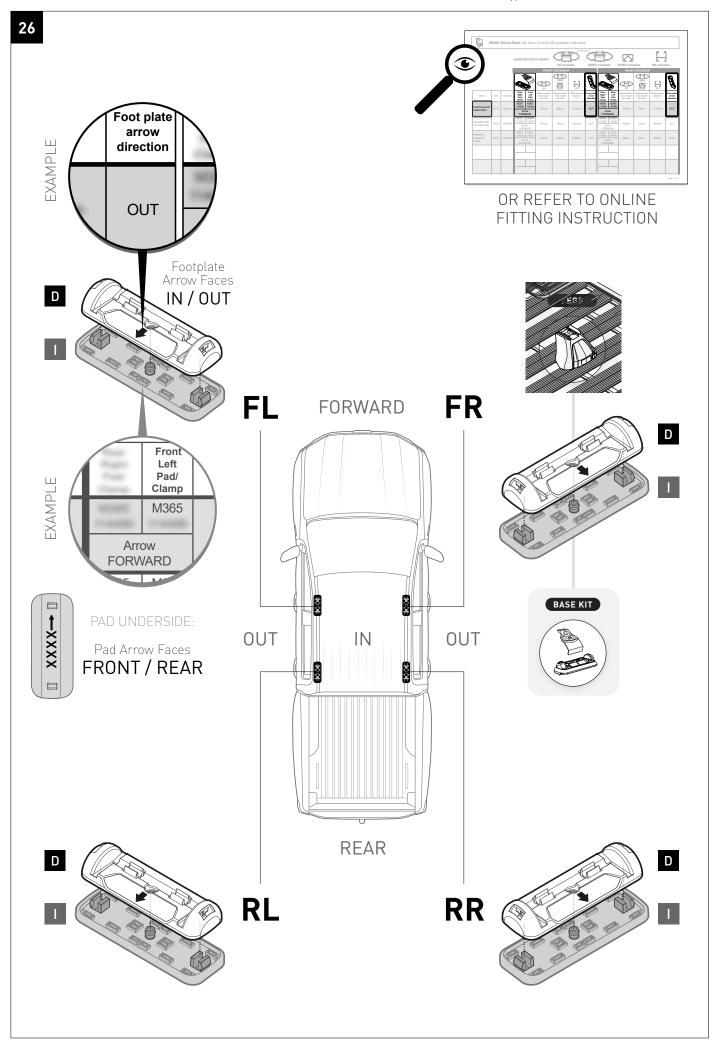

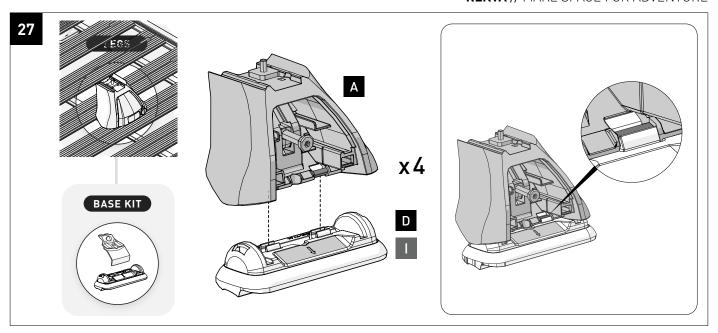


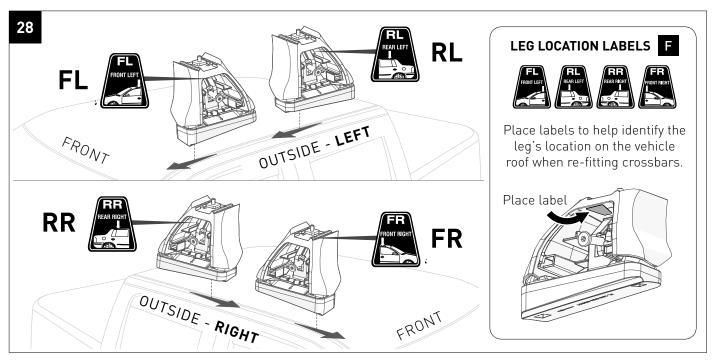


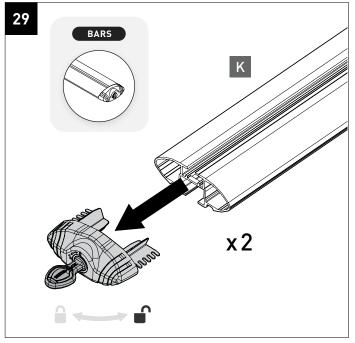


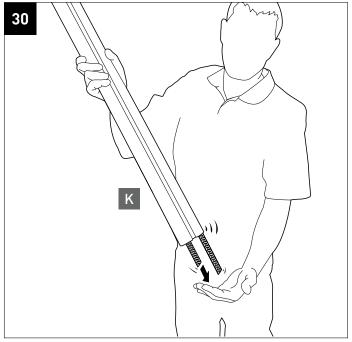



Page 18 of 28

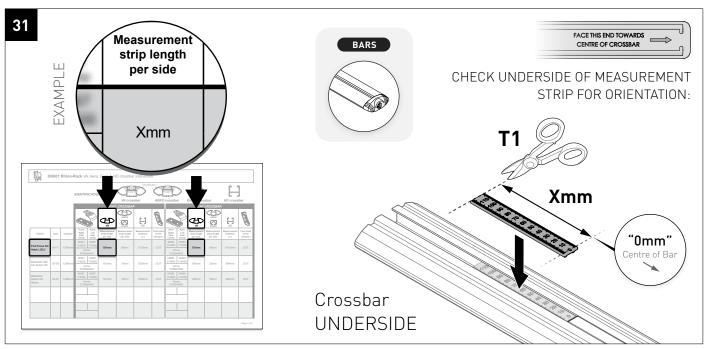


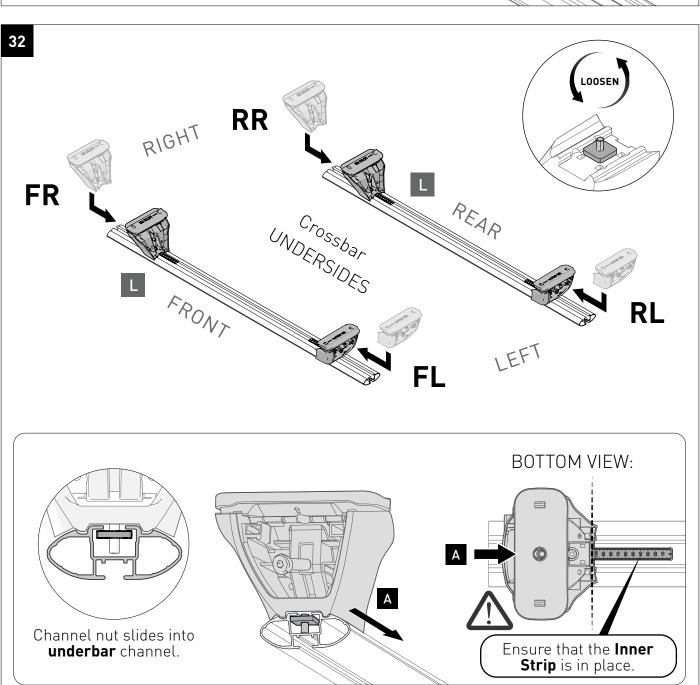


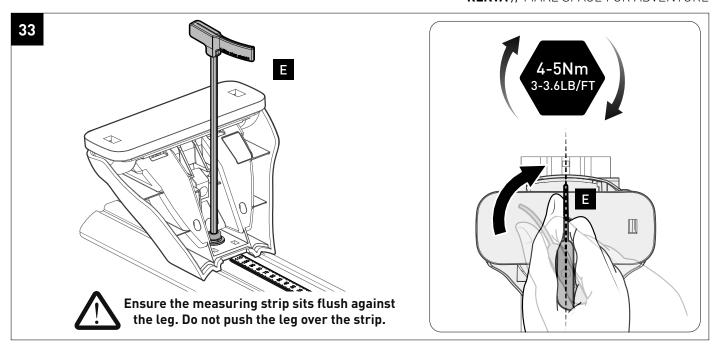


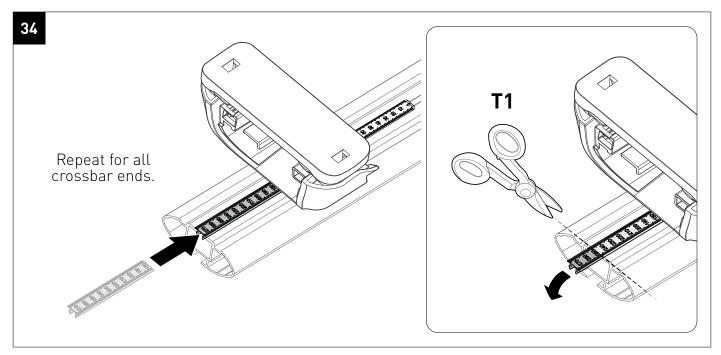


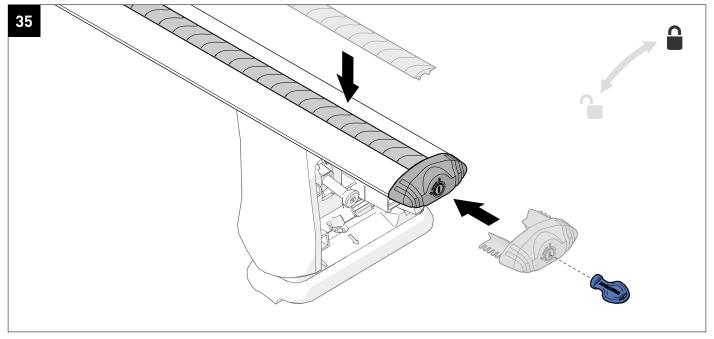


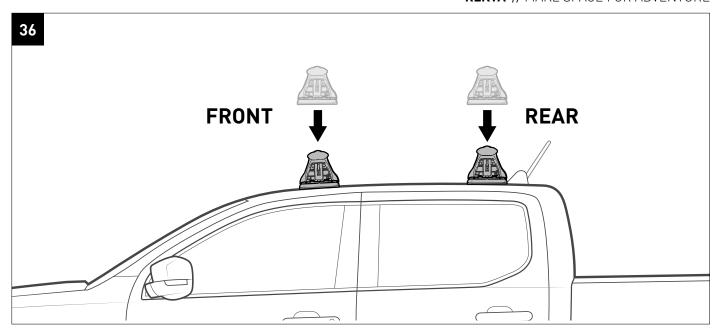

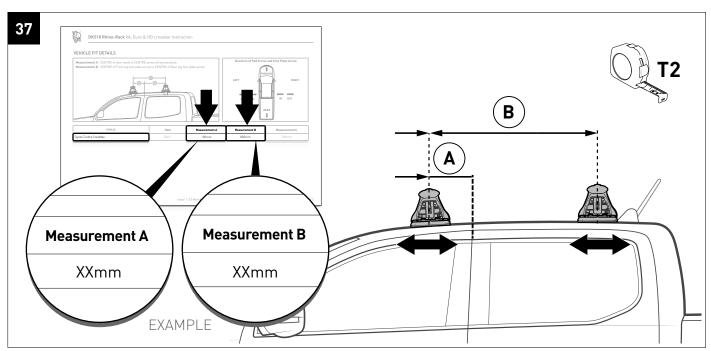


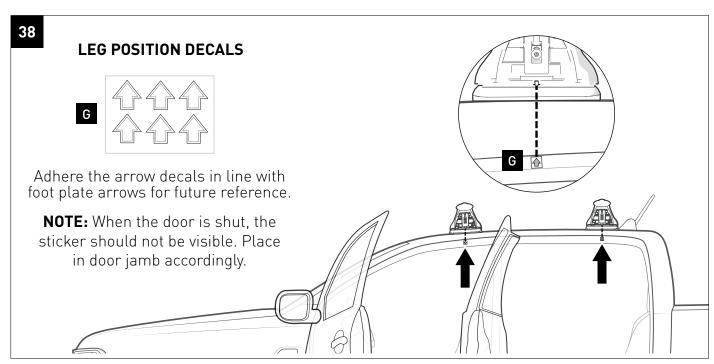

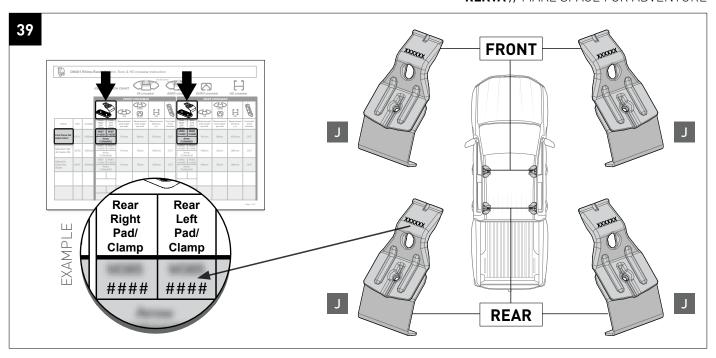


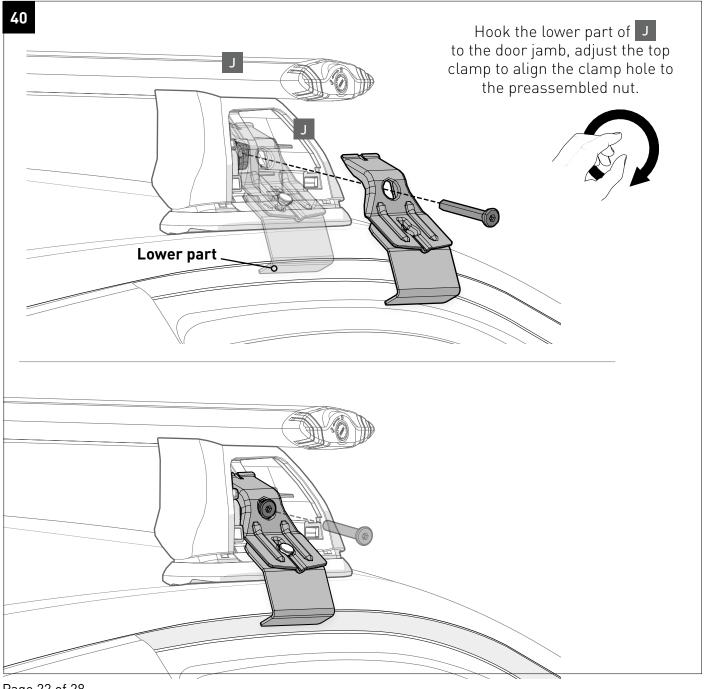



Page 22 of 28

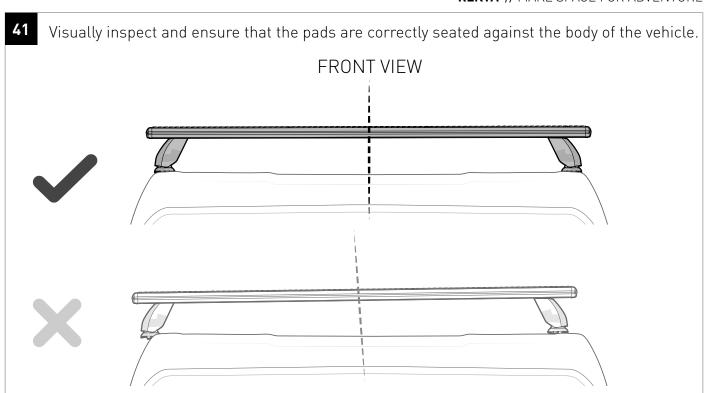



Tighten bolts **incrementally** and **evenly** on each side of the vehicle to avoid pulling the rack to one side.

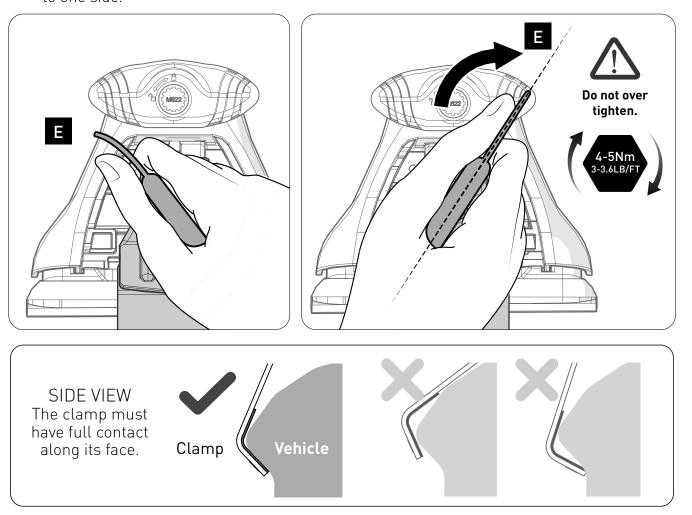

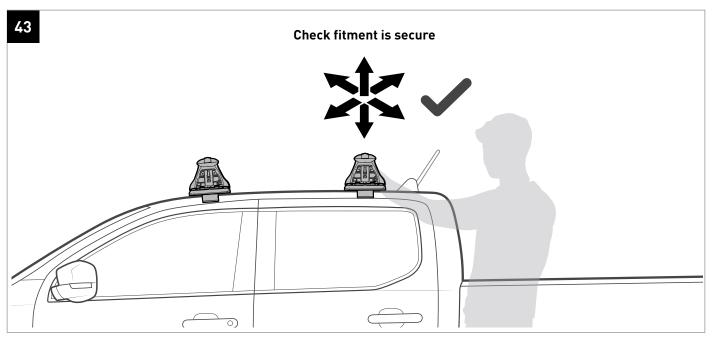

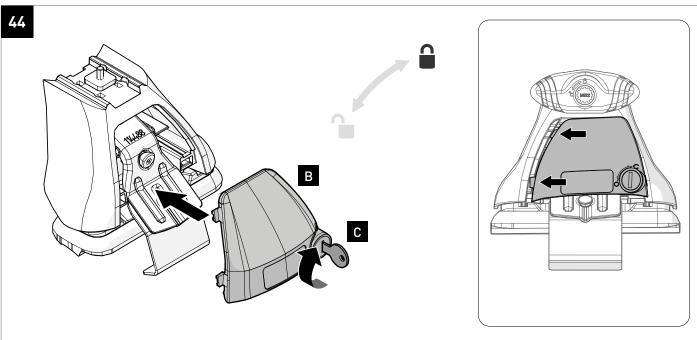

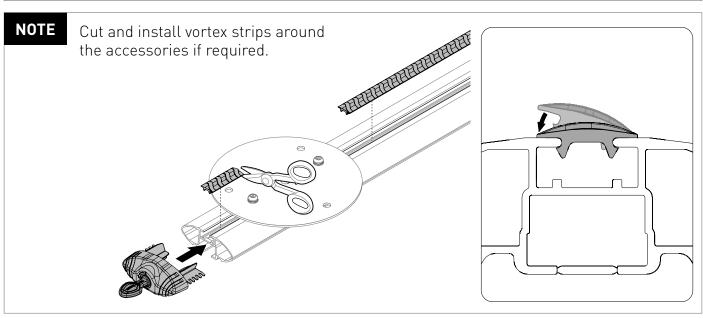

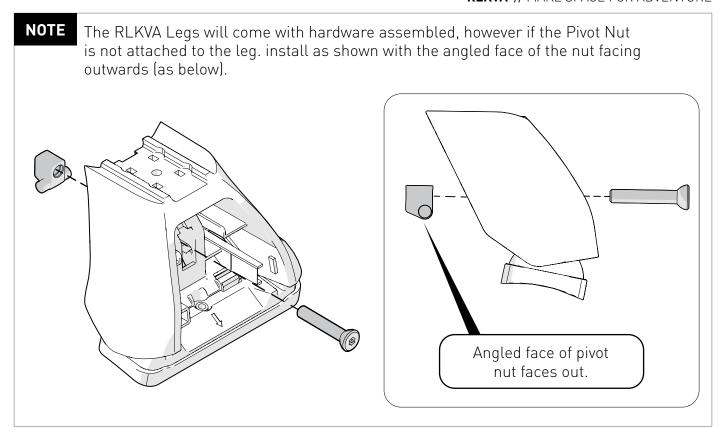

NOTES

NOTES



RHINORACK.COM

Rhino-Rack AUSTRALIA

22A Hanson Pl, Eastern Creek, NSW, 2766

Rhino-Rack USA

19822 E 22nd Ave, Aurora, CO, 80011