

RHINO-RACK

GENERIC CANOPY PIONEER FIT

Important:



1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
2. Please refer to your fitting instruction/supplements to ensure that the roof racks are installed in the correct locations.
3. Check the contents of kit before commencing fitment and report any discrepancies.
4. Place these instructions in the vehicle's glove box after installation is complete.
5. These instructions must be be followed for warranty to be upheld.

Canopy Roof Load Limit - Up to 80kg. Check your canopy manufacturers roof allowance and use the lower of the two figures

Fit Time: 1 hour


1

- Rhino track.
- Pista de rinoceronte.
- Piste Rhino.

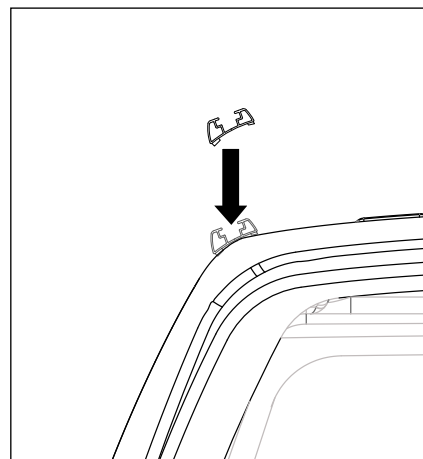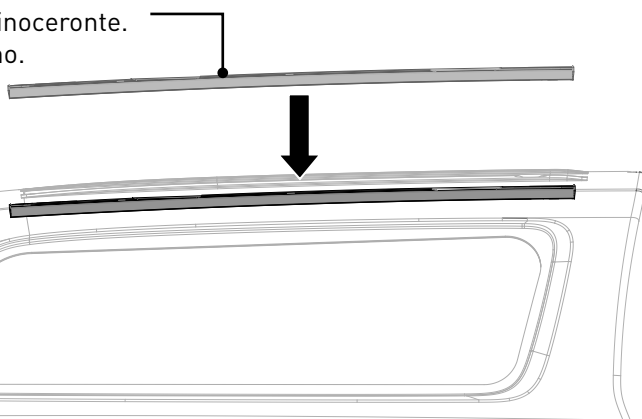


2

- (X) { - Position appropriately.
- Posición apropiada.
- Position appropriée.

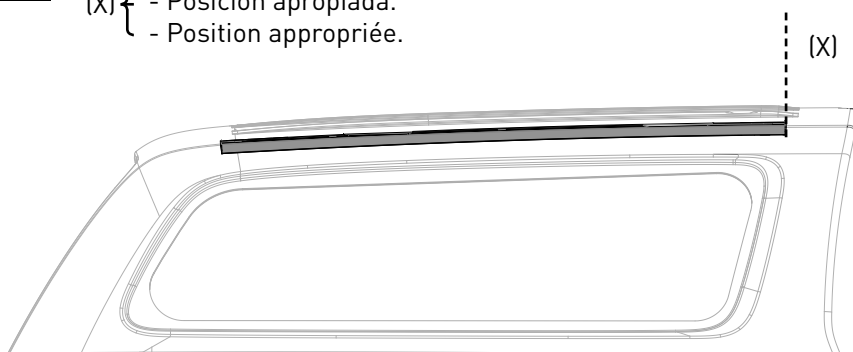


- Towards curvature.
- Hacia la curvatura.
- Vers la courbure.

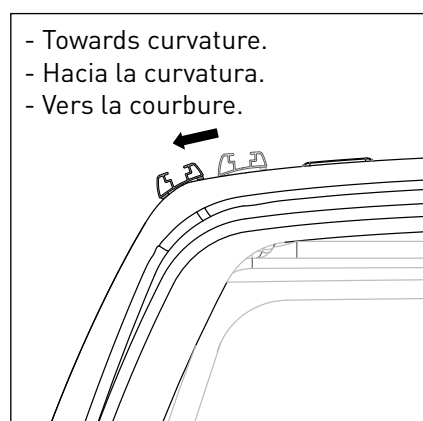



3

- Leg + base kit.
- Kit de pierna + base.
- Kit jambe + base.

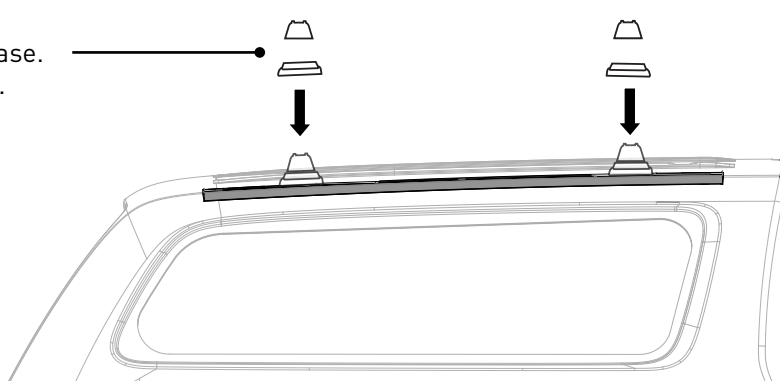


Instructions

4

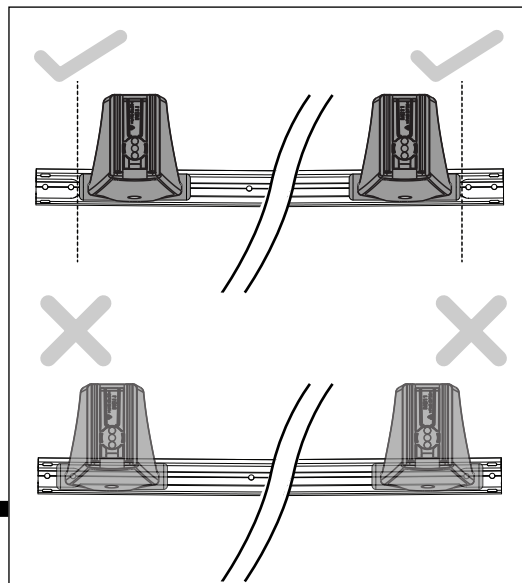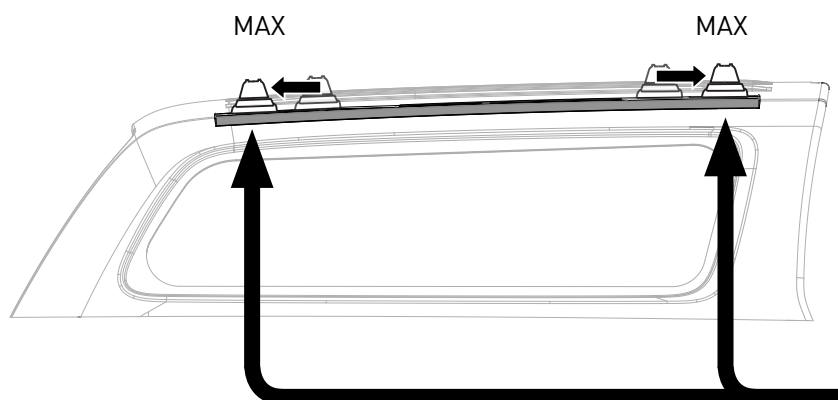


5

Adjust Pioneer underbars to suit leg positions

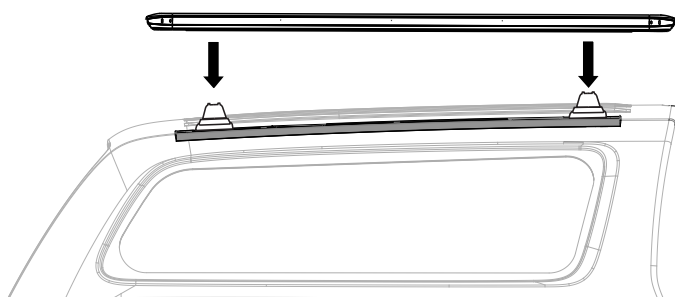


Align the front of the Pioneer with the front edge of the canopy.

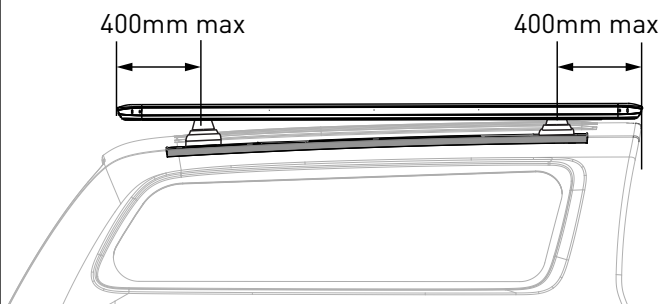


NOTE: For 4XXXX series Pioneers, additional Ø8.5mm holes may need to be drilled into the side extrusion to allow pioneer underbars to align with the legs

Note

- Do not exceed the rear bumper.
- No exceda el parachoques trasero.

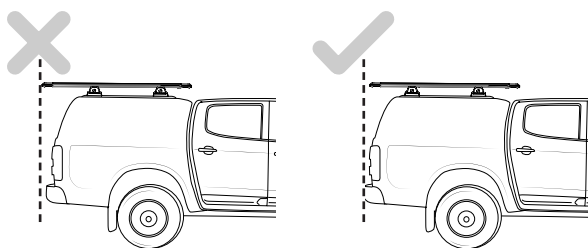

- Spacers/Wedges may be required.
- Pueden requerirse espaciadores.
- Des entretoises peuvent être nécessaires.

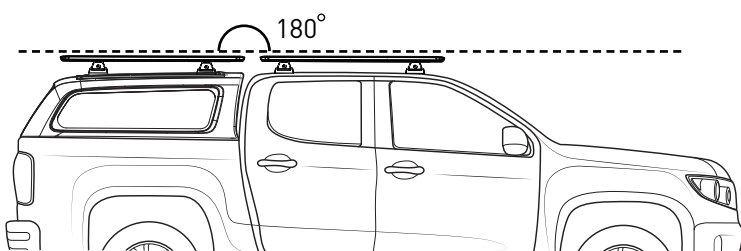

Example:

VA-FK1

SUB0671

QMVA05-QMVA25

QMW05

Rhino-Rack, 22a Hanson Pl, Eastern Creek

NSW 2766, Australia

(02) 8846 1900

rhinorack.com

Document No: R2515

Issue No: 02

Issue Date: 24/12/2020

Page 2 of 2