


FORD Everest U704 Gen3 RFEB2

Important:


- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the accessory is installed in the correctly.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 150mins

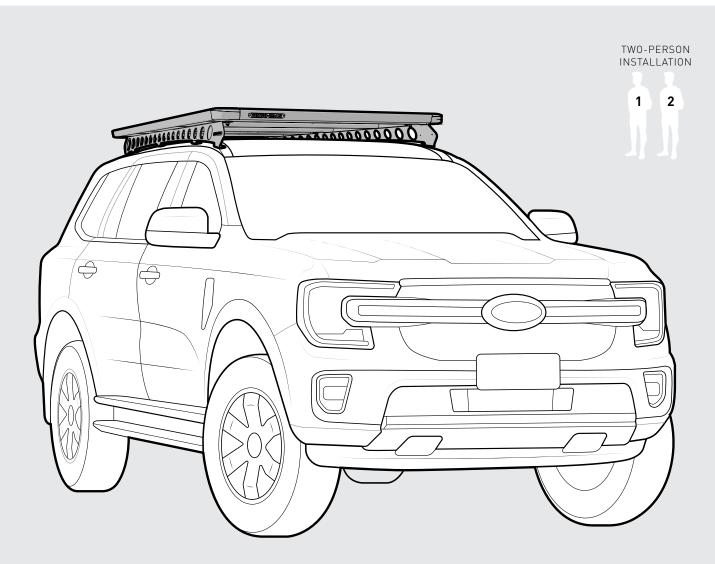

RHINORACK.COM Document No: 520-RFI-00125 Issue No: 01 Issue Date: 18/05/2023

RFEB2 // MAKE SPACE FOR ADVENTURE

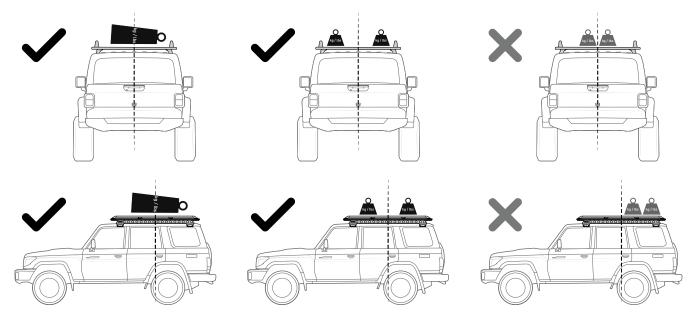


Distribute loads evenly and longitudinally as low as possible over the span.


Avoid point loads concentrated at the front or rear.


Exercise extreme care when transporting wind-resistant loads. Special consideration must be taken when cornering and braking.

Off-road conditions can be much more rigorous. Extreme care must be taken on any driven path that does not contain a surface protection layer (tar/bitumen).

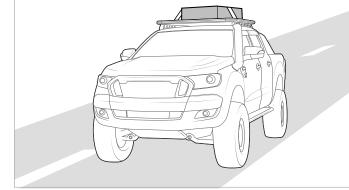




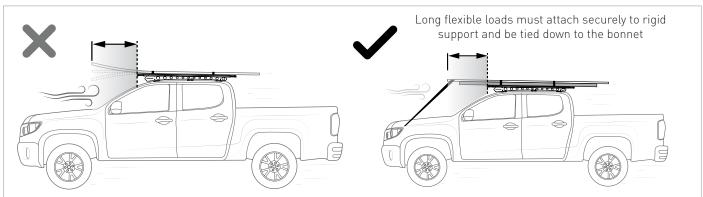

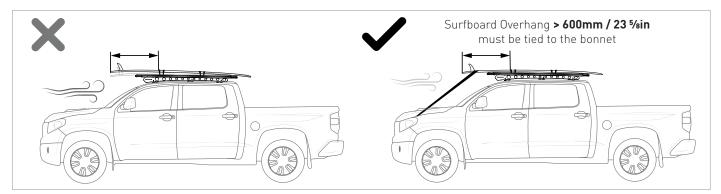

RFEB2 // MAKE SPACE FOR ADVENTURE

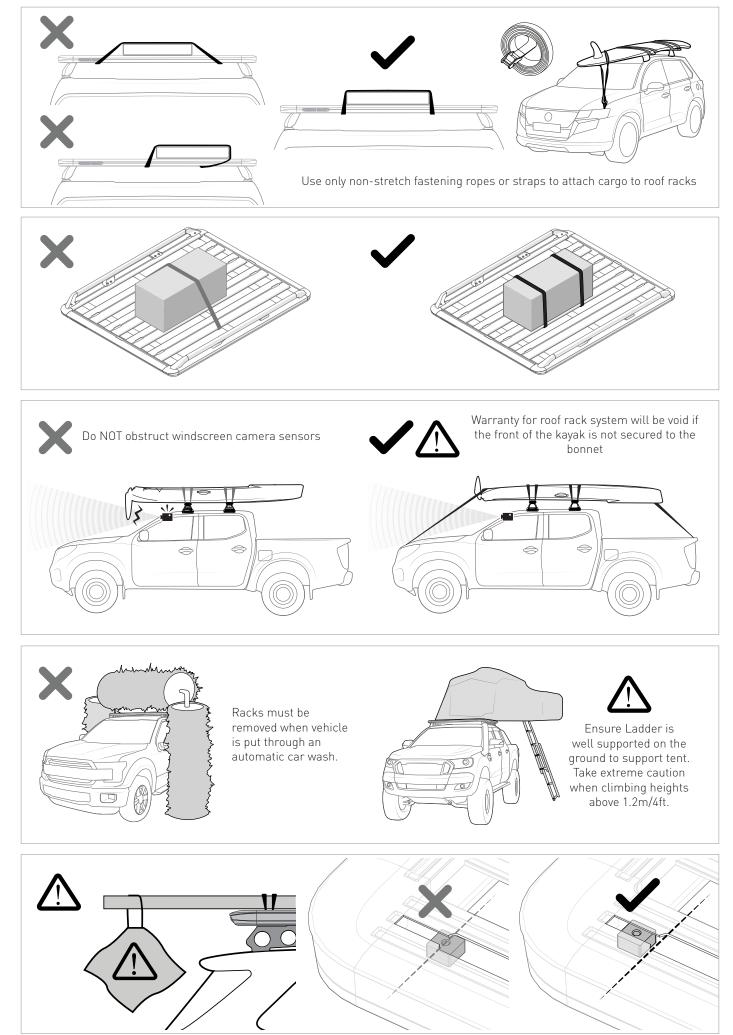



Carrying Capacity

Check the website and the vehicle owners hand book for your vehicle manufacturer's maximum carrying capacity. Load must be evenly distributed over the system.



rhinorack.com/ load-rating-calculator



1

Please ensure you use the vehicle manufacturer's maximum roof allowance if it is lower than the figure listed in the fitting chart/





Cargo Load Limit

Total permissible weight allowed on top, and attached to the rack whilst the vehicle is in motion.

Total weight of the rack system. (e.g. Crossbars, Backbone, Platform)

System Weight



Max System Load Capacity

supplement.

Vehicle Manufacturer's Load Limit

Total permissible weight attached to the rack. This is inclusive of the weight of the rack system.

In service maintenance checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:




Note for Dealers and Fitters

It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Warranty

We love creating our products for you and hope you love using them too. For complete peace of mind, register your product at www.rhinorack.com/warranty. This way, we can quickly help you with any future approved fitment warranty claims.

And remember – never to forget to Make Space For Adventure!

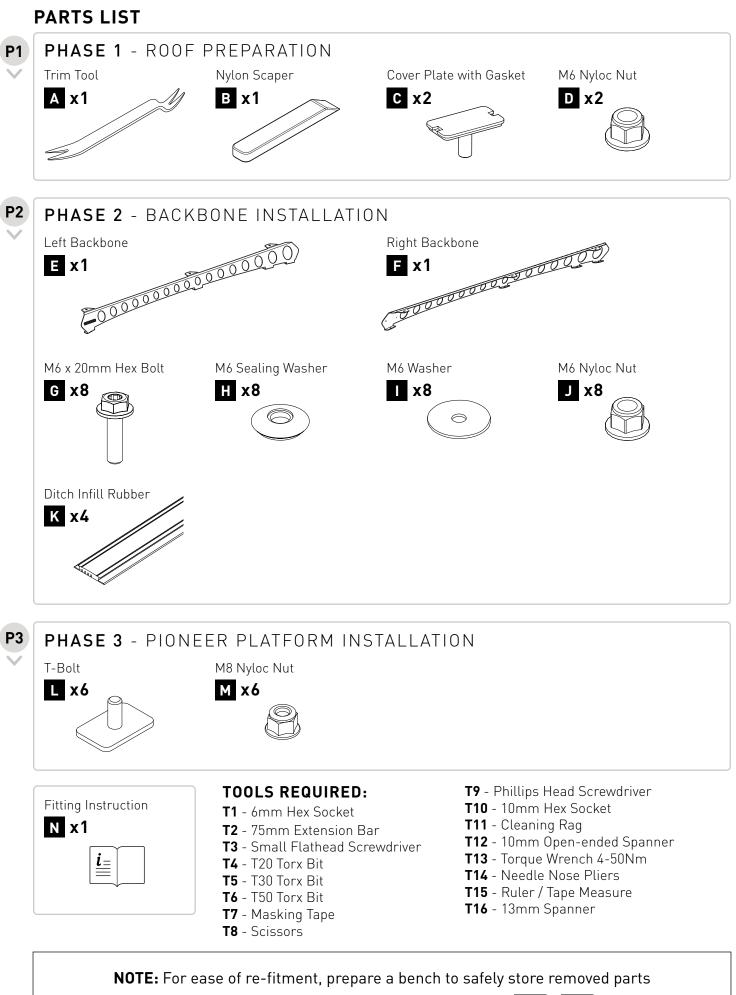

while lowering the roof lining between Step


31


INTERNAL ROOF LINING DROP - For All Variants


P1


1


Remove all A and B-pillar grab handles by first removing end caps then bolts. **NOTE:** Store all internal trimming and hardware in a safe location, for ease of re-fitment.

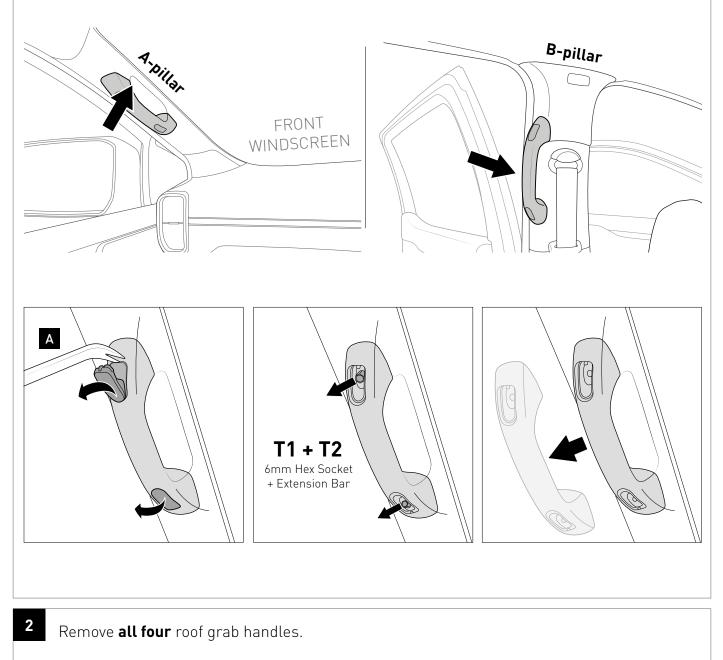


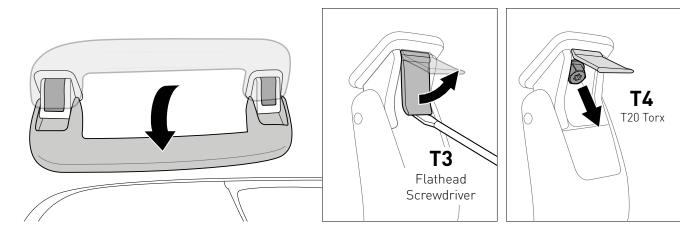

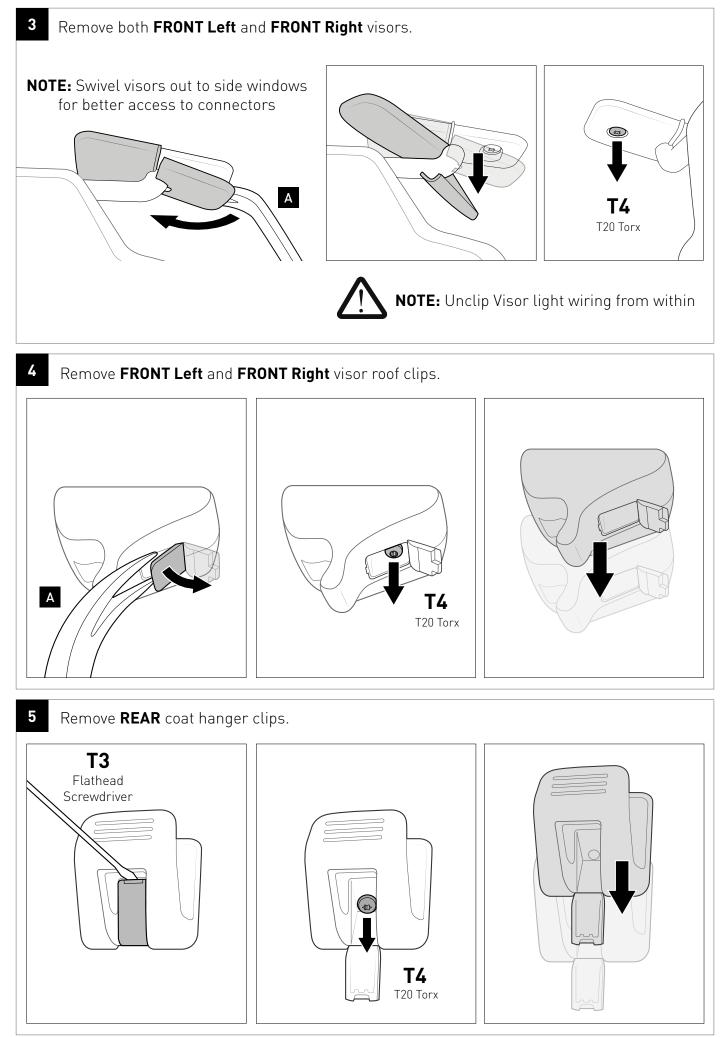


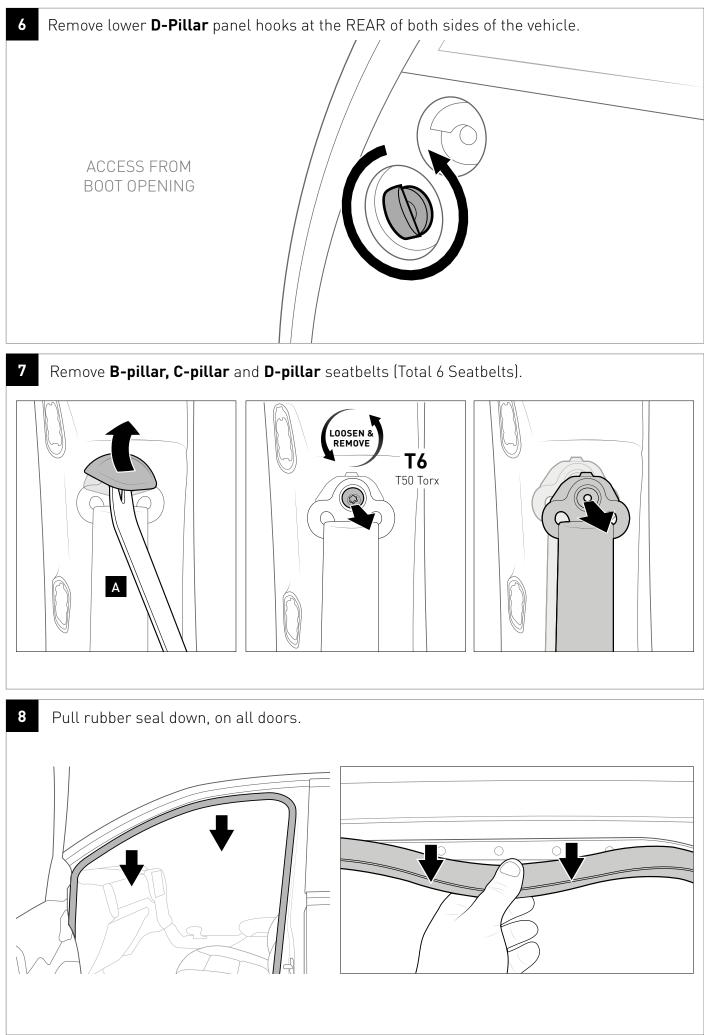

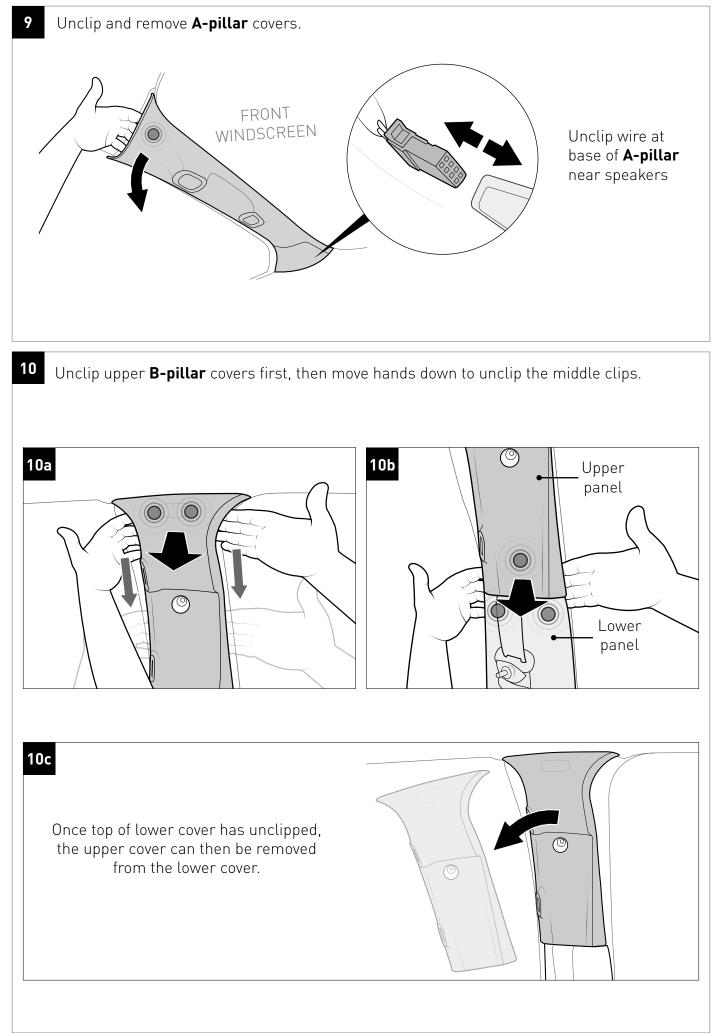


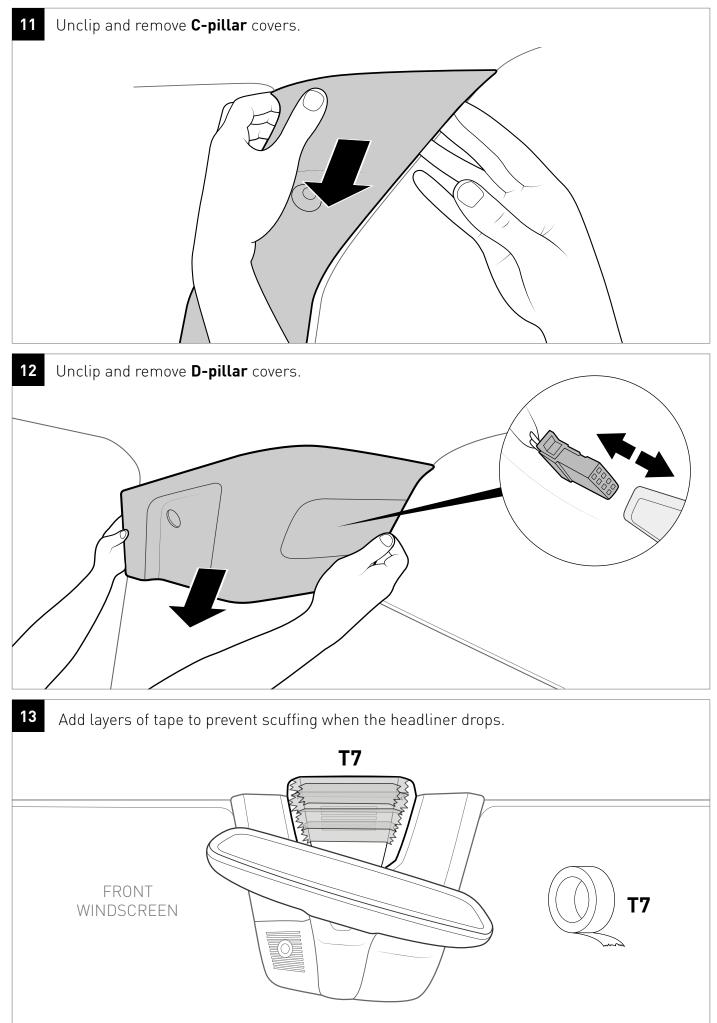





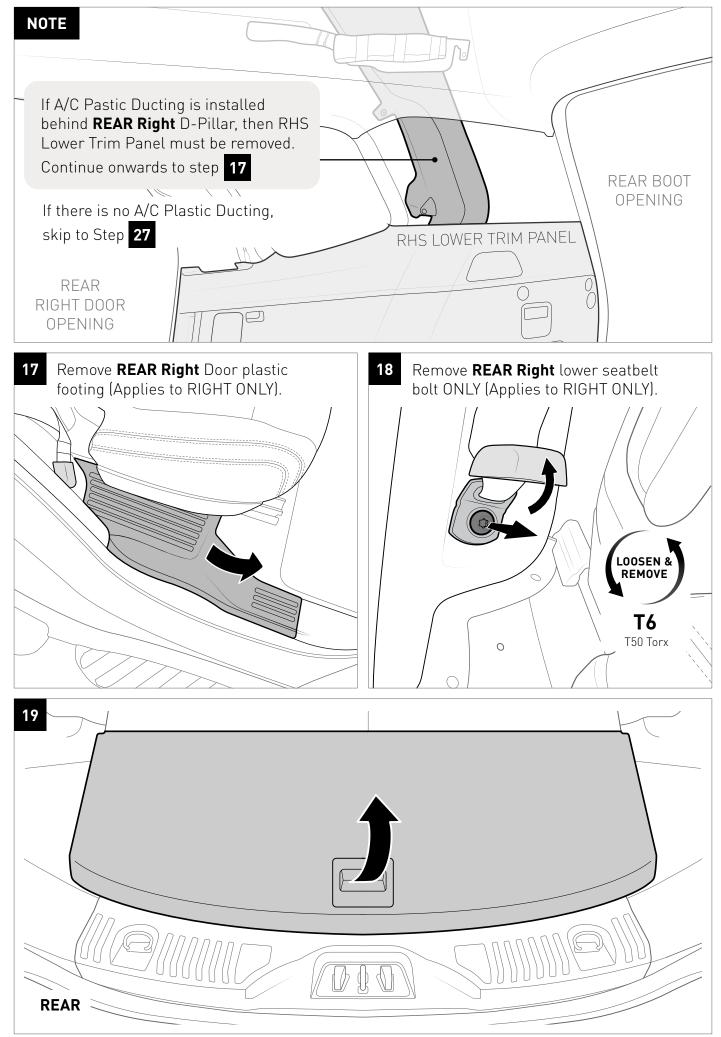



RFEB2 // MAKE SPACE FOR ADVENTURE

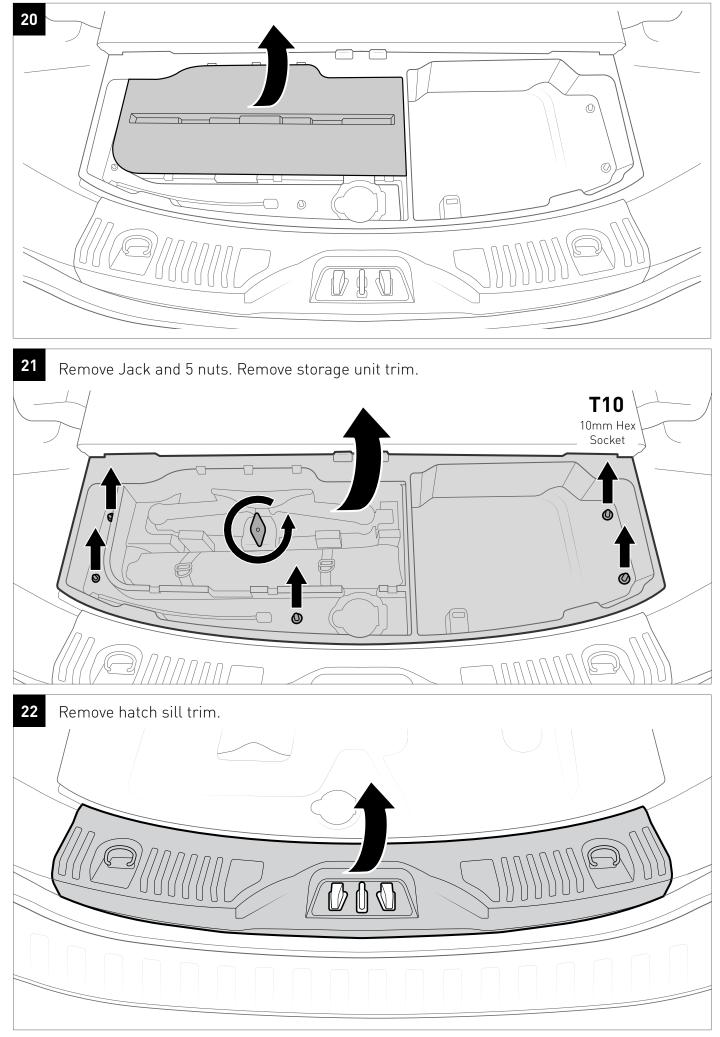


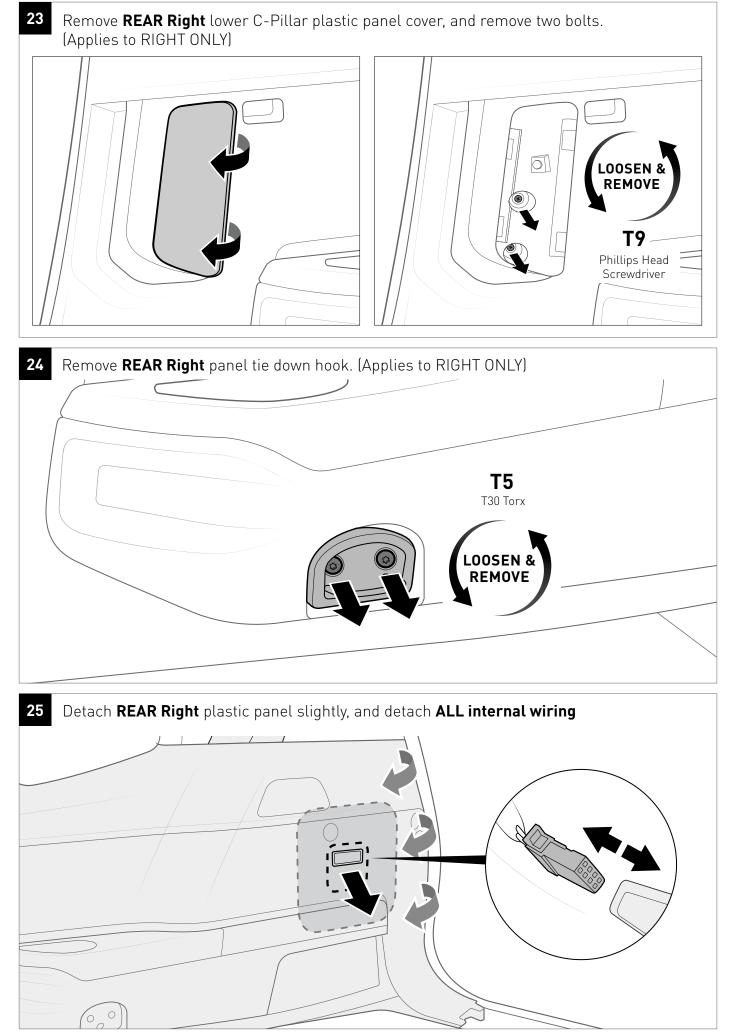

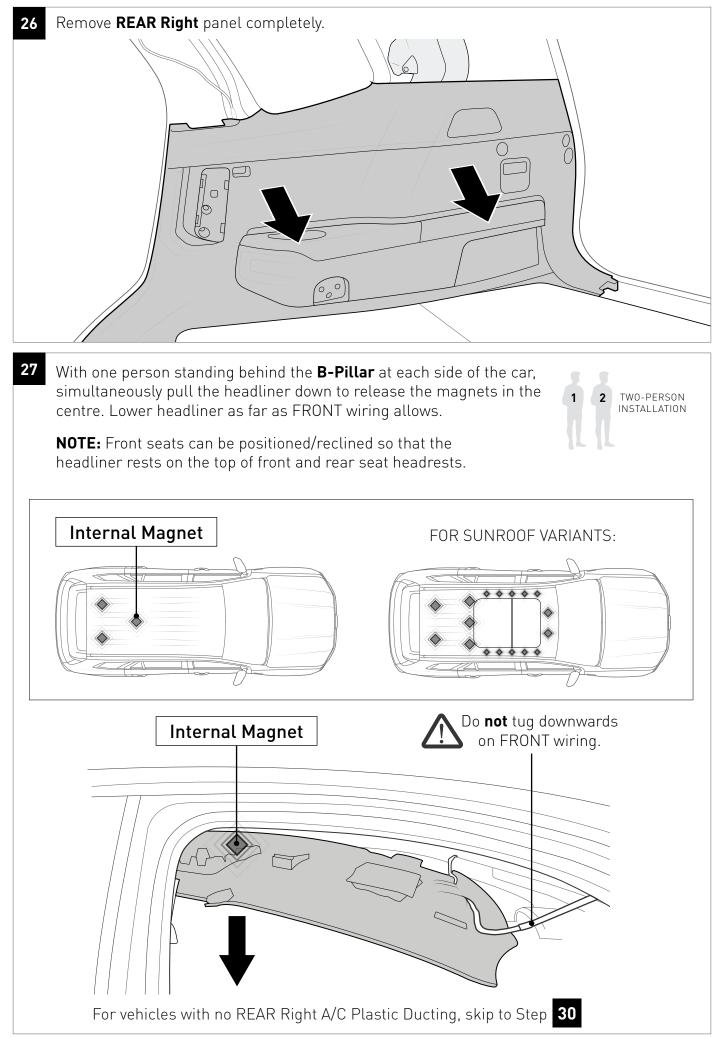


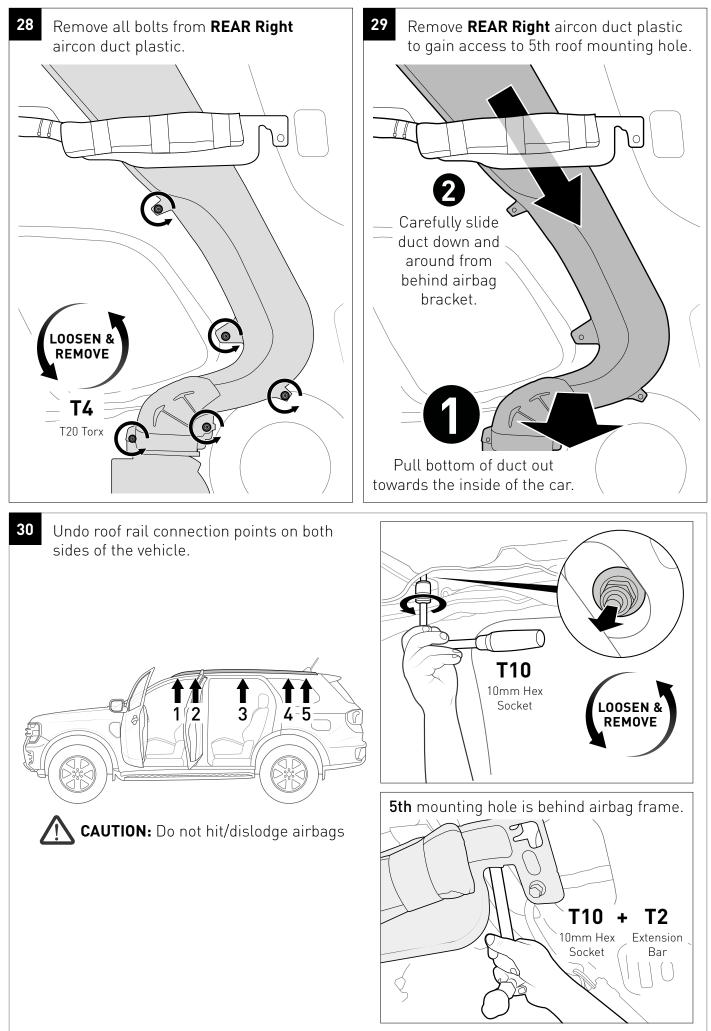


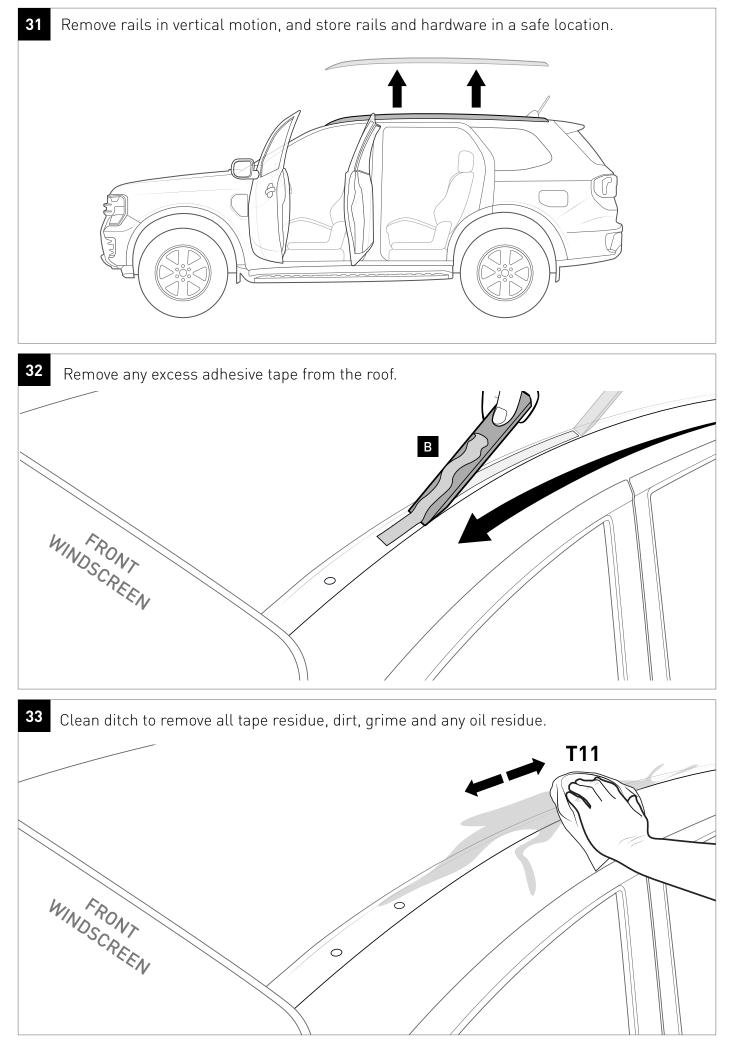


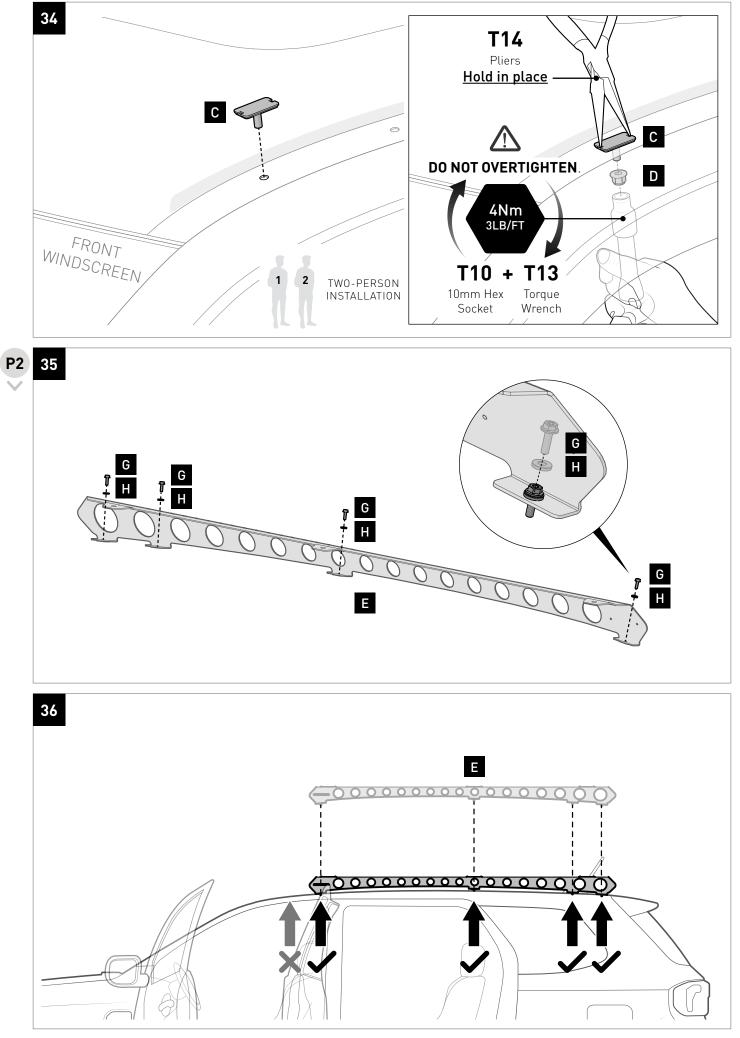


37 Finger tighten hardware onto **G** and **H** from underneath roof, completing **FRONT** first, carefully holding washer and nut at the same time.

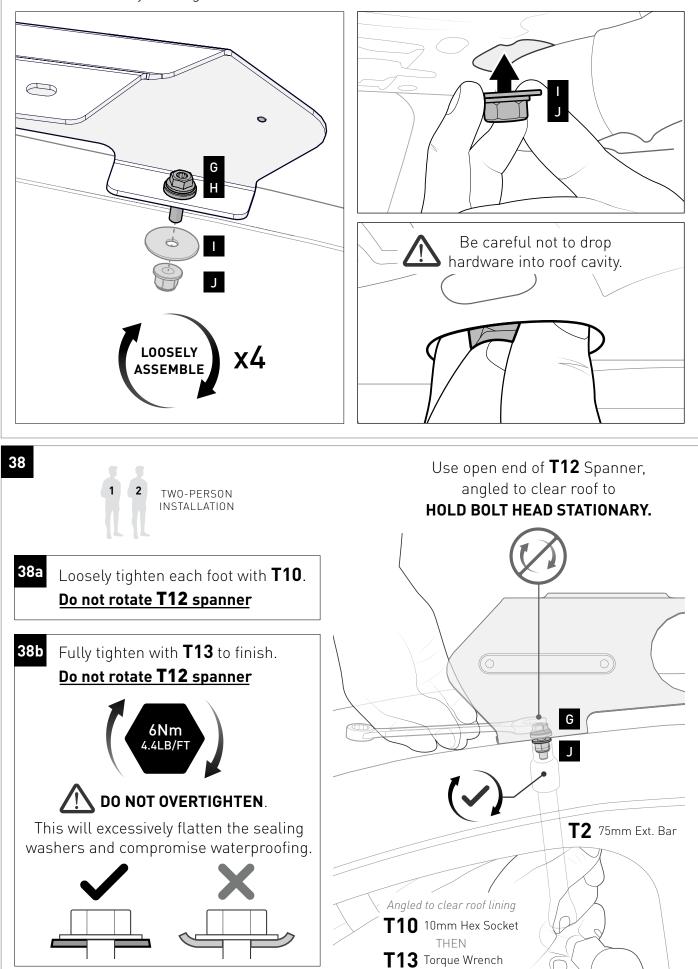

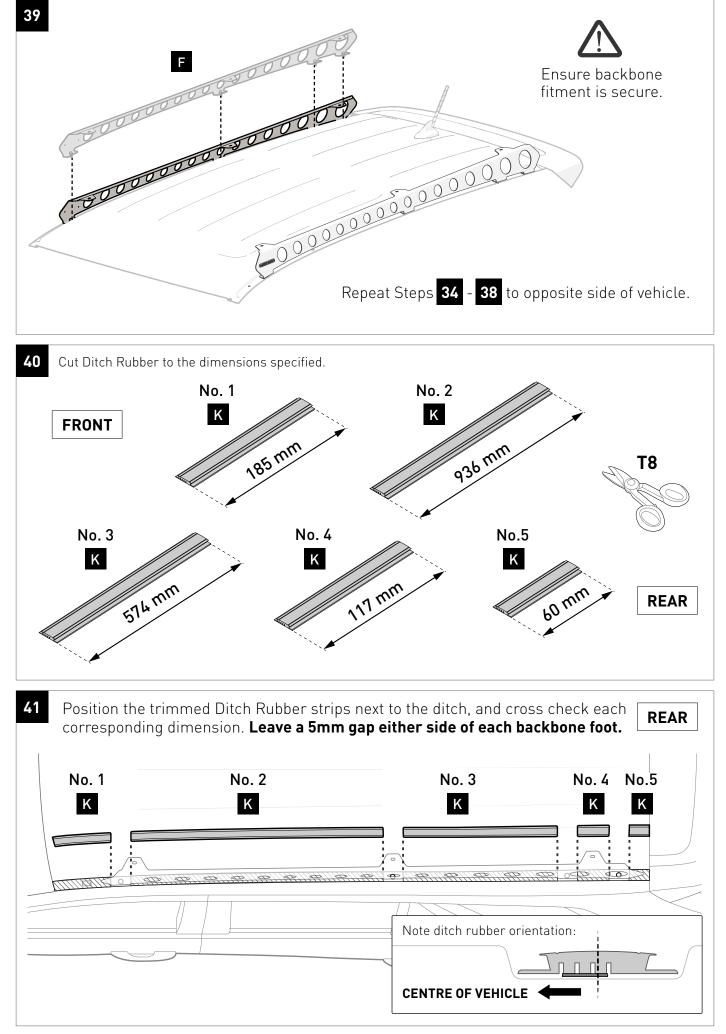

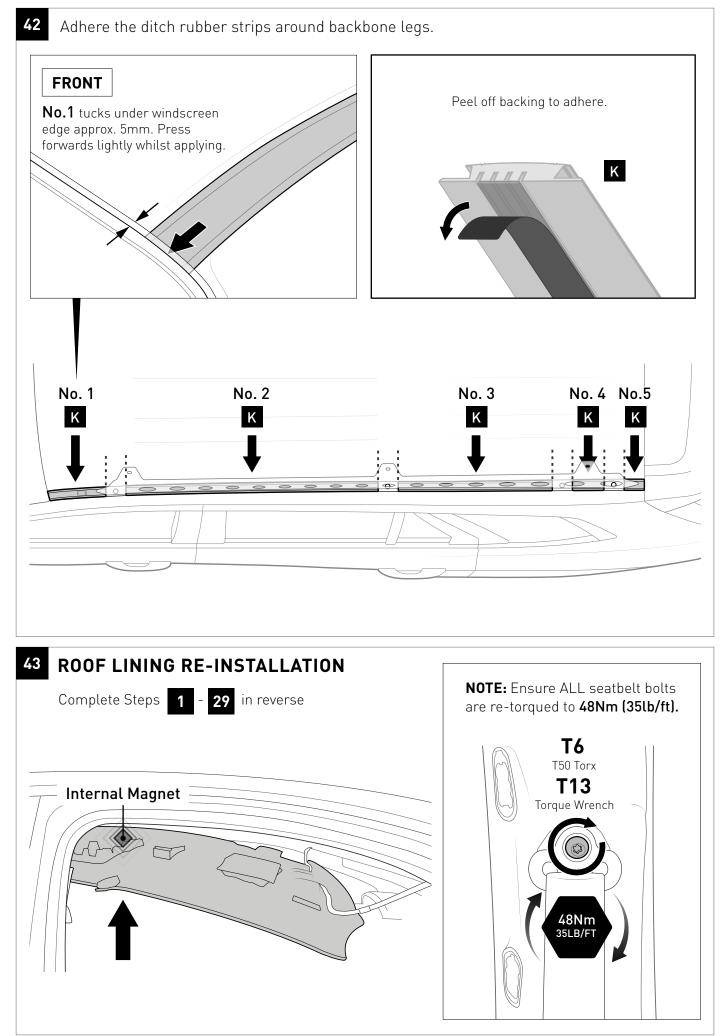

PLATFORM INSTALLATION

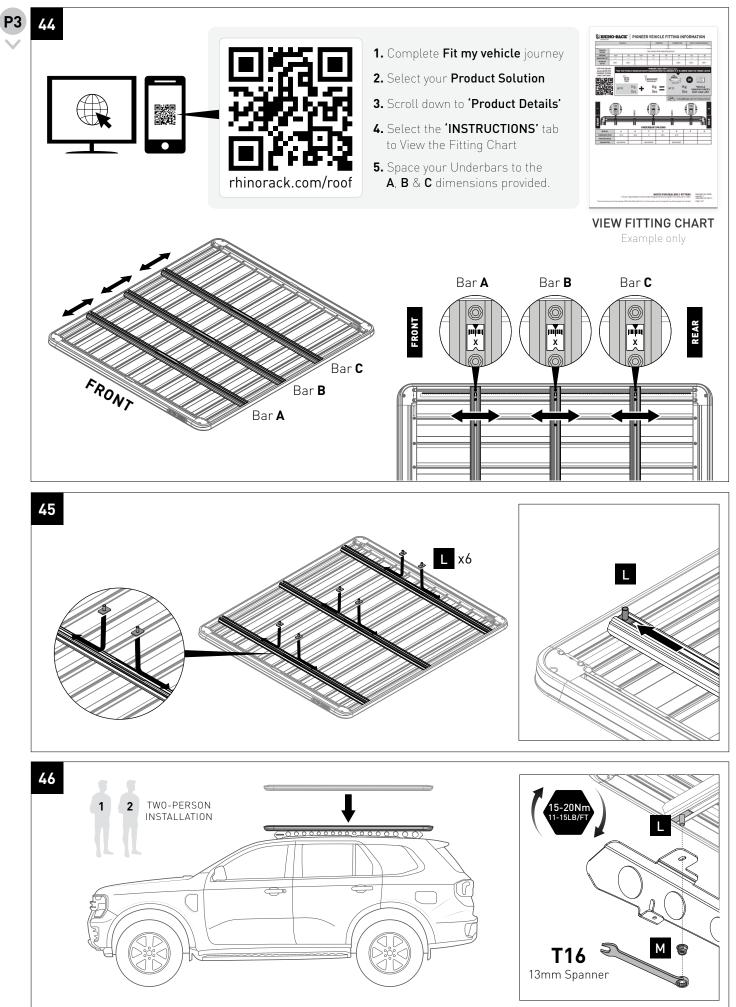

NOTES



RHINORACK.COM

Rhino-Rack AUSTRALIA 22A Hanson Pl, Eastern Creek, NSW, 2766

Rhino-Rack USA Unit D, 2450 Airport Blvd, Aurora, CO, 80011