


TOYOTA Landcruiser 300 Backbone - for Dual Cab ConversionsRTLB6


Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 2 hours

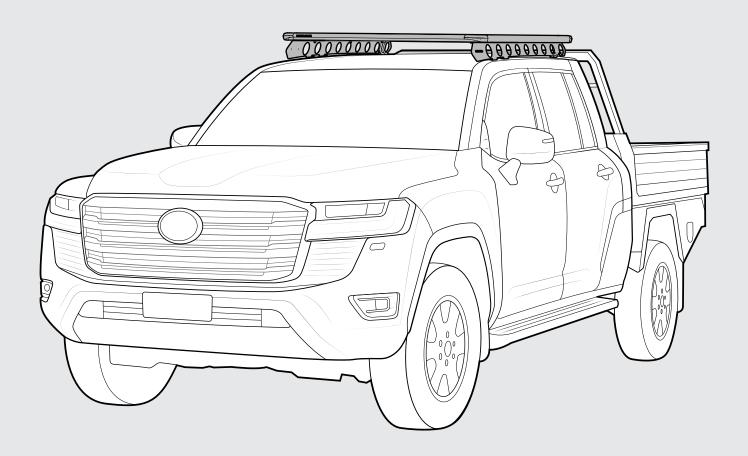

Document No: 520-RFI-00073 Issue No: 01 Issue Date: 11/01/2024

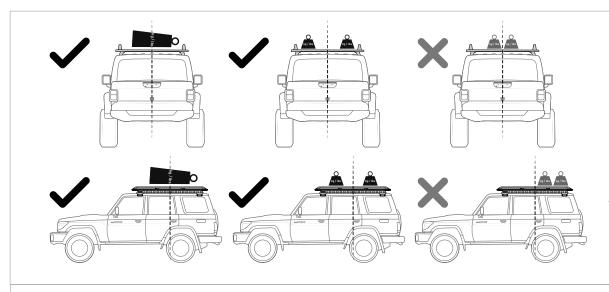

Distribute loads evenly and longitudinally as low as possible over the span.


Avoid point loads concentrated at the front or rear.




Exercise extreme care when transporting wind-resistant loads. Special consideration must be taken when cornering and braking.



Off-road conditions can be much more rigorous. Extreme care must be taken on any driven path that does not contain a surface protection layer (tar/bitumen).

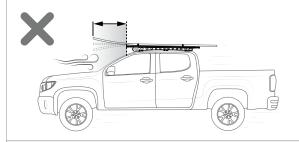

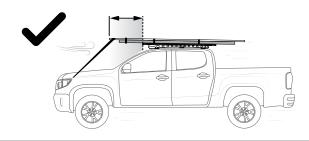


Long flexible loads must attach securely to rigid support and be tied down to the bonnet.






Surfboard Overhang greater than 600mm / 23 1/sin must be tied to the bonnet



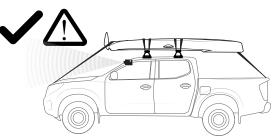



Warranty for roof rack system will be void if the front of the kayak is not secured to the bonnet

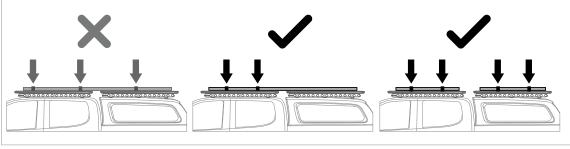

Tub/tray/canopys can move independently from the vehicle cabin.

Rigidly fix to either the cabin roof racks **or** the tub/tray/canopy roof racks but not both simultaneously.

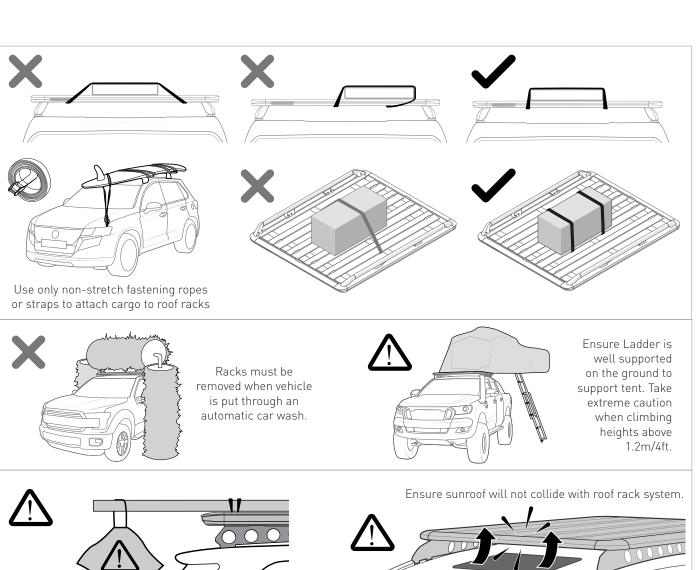

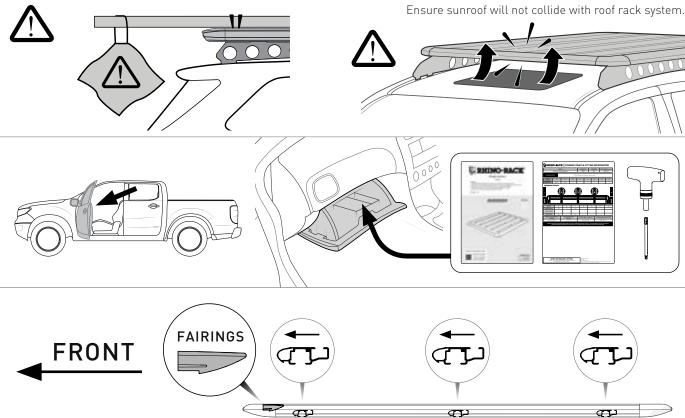



Youtube.com/Rhinorackaustralia

Carrying Capacity

Check the website and the vehicle owners hand book for your vehicle manufacturer's maximum carrying capacity. Load must be evenly distributed over the system.





Cargo Load Limit

Total permissible weight allowed on top, and attached to the rack whilst the vehicle is in motion.



System Weight

Total weight of the rack system. (e.g. Crossbars, Backbone, Platform)



Max System Load Capacity

Please ensure you use the vehicle manufacturer's maximum roof allowance if it is lower than the figure listed in the fitting chart/ supplement.



Vehicle Manufacturer's Load Limit

Total permissible weight attached to the rack. This is inclusive of the weight of the rack system.

Warning

- Check part number or kit is correct for use with your vehicle.
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.
- Off-road conditions can be much more rigorous. Extreme care must be taken on any driven path that does not contain a surface protection layer (tar/bitumen).
- Racks must be removed when vehicle is put through an automatic car wash.
- With utility/pick up vehicles, the cabin and the utility tray/truck bed move independently. Racks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and utility tray/truck bed. Instead, rigidly fix to either the utility tray/bed racks or the canopy roof racks.
- Always ensure you fasten your load securely.
- Use only non-stretch fastening ropes or straps to attach cargo to your load.

In Service Maintenance Checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:







Note for Dealers and Fitters


It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Warranty

We love creating our products for you and hope you love using them too. For complete peace of mind, register your product at www.rhinorack.com/warranty.
This way, we can quickly help you with any future approved fitment warranty claims.


And remember – never to forget to Make Space For Adventure!

Parts List

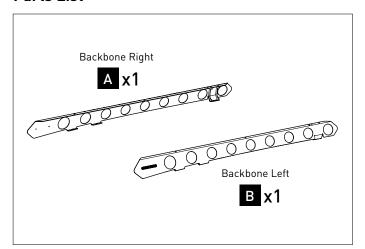



TOOLS REQUIRED:


- T1 Pointed Trim Tool
- T2 Trim Tool
- T3 12mm Socket Wrench / Spanner
- **T4** 13mm Socket Wrench + Torque Wrench
- T5 Cleaning Rag

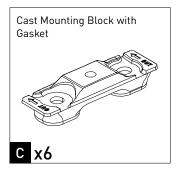




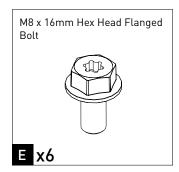

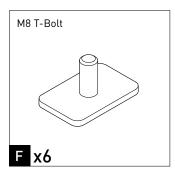

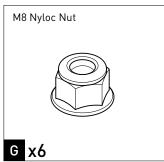

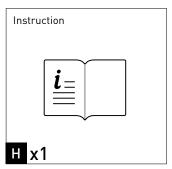



CONTENTS:


For **Factory Rail Variants**, complete Steps 1 - 4 and 7 - 13


For Bare Roof Variant, complete Steps 5 - 13

FACTORY RAIL REMOVAL (For Bare Roof Variant, skip to Step 5)

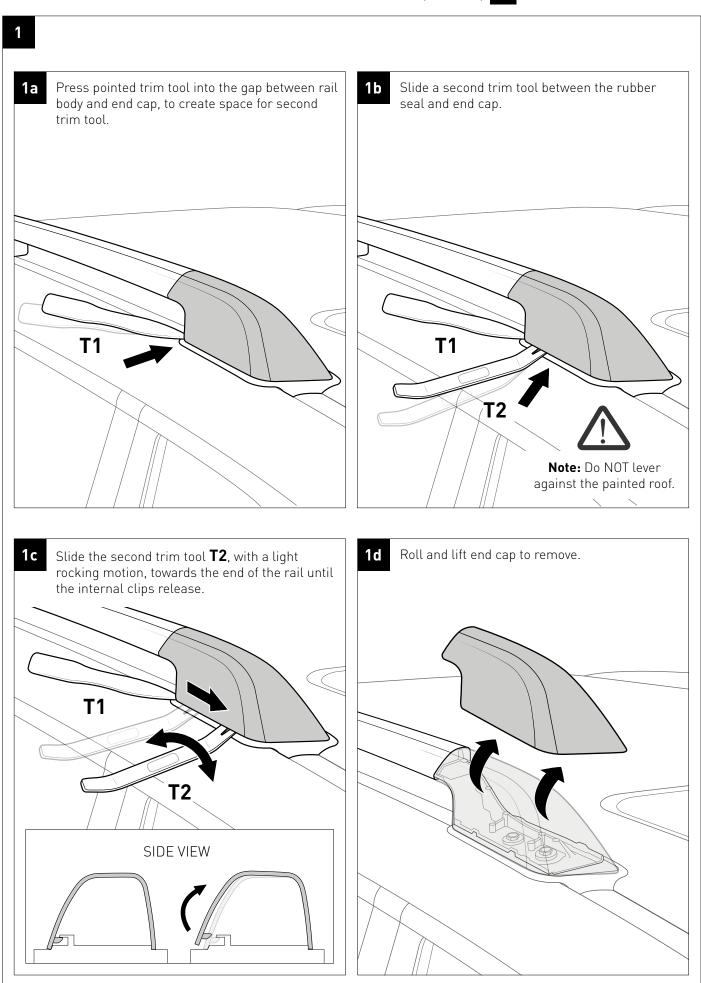


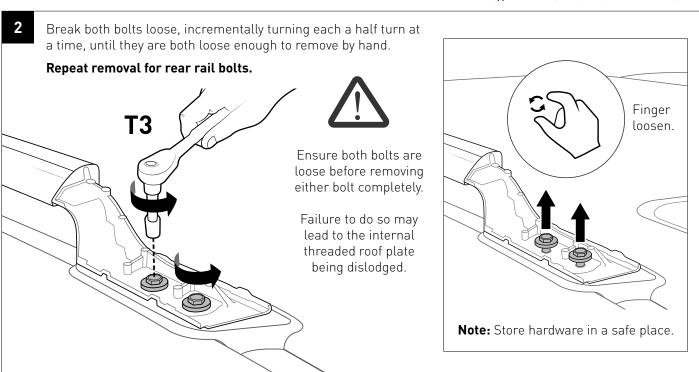


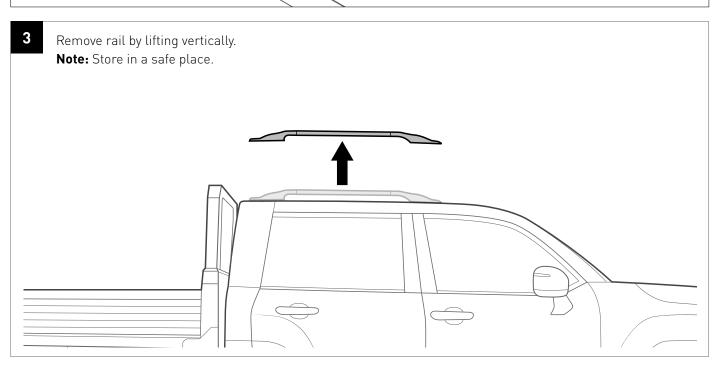


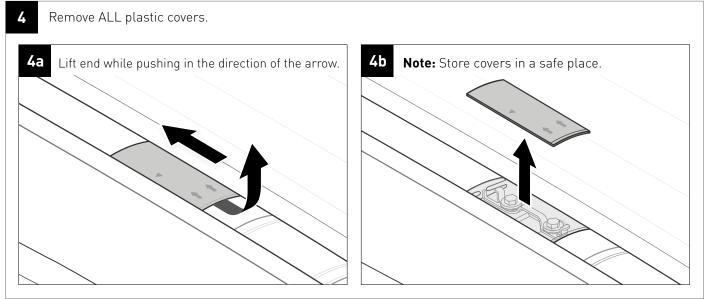



BARE ROOF MOUNTING POINTS (For Factory Rail Variant, skip to Step 6)

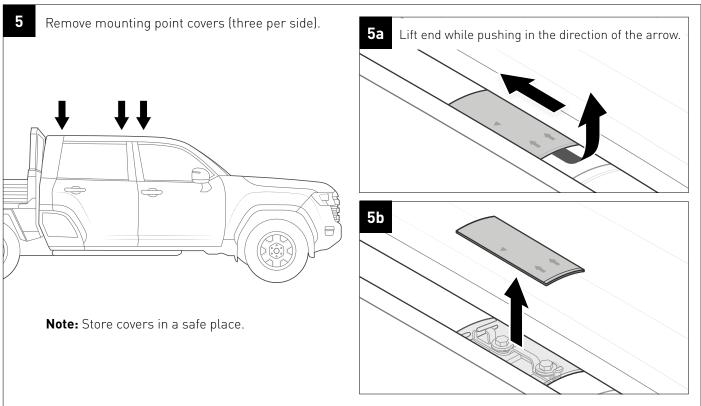


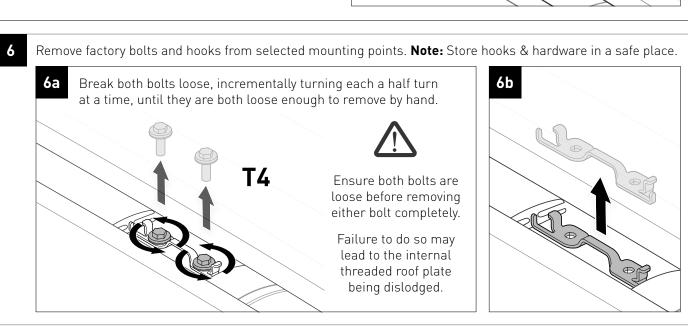

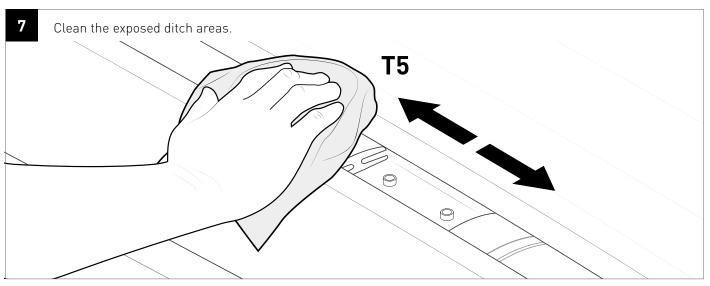


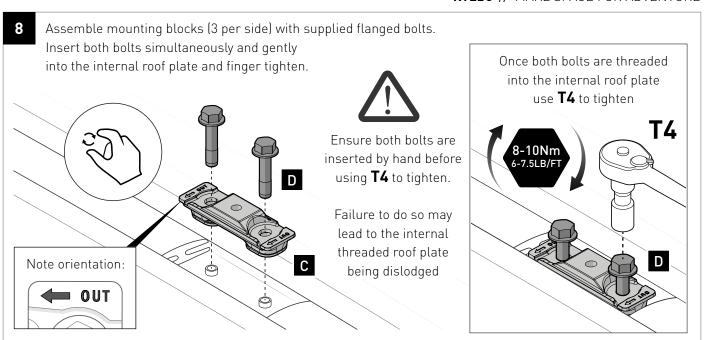


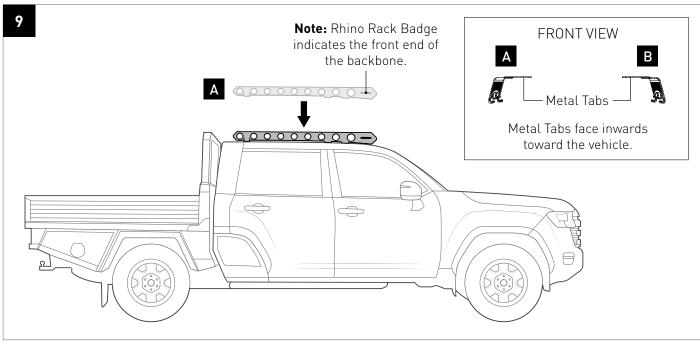


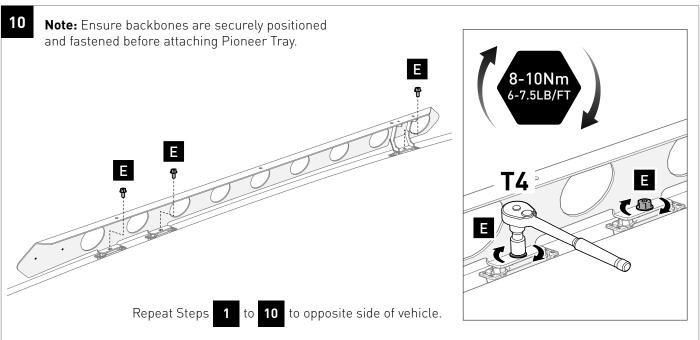



PIONEER PLATFORM INSTALLATION Refer to Pioneer Instructions

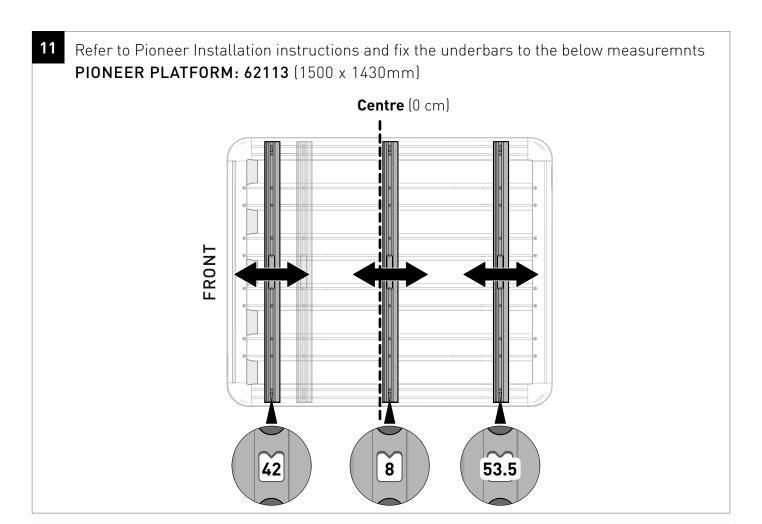

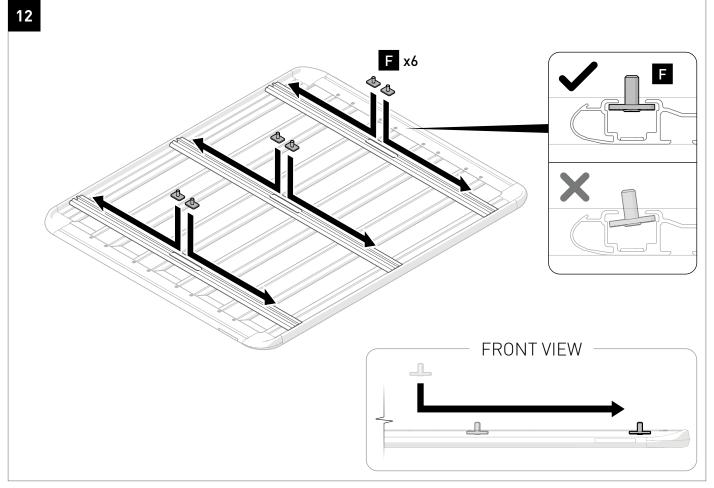

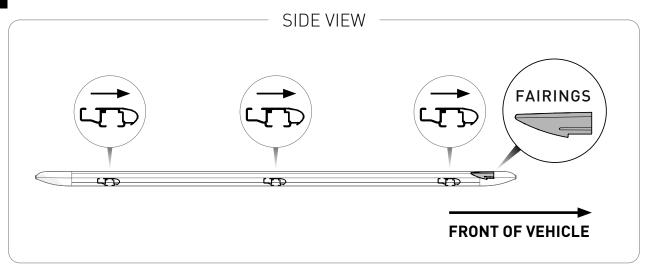

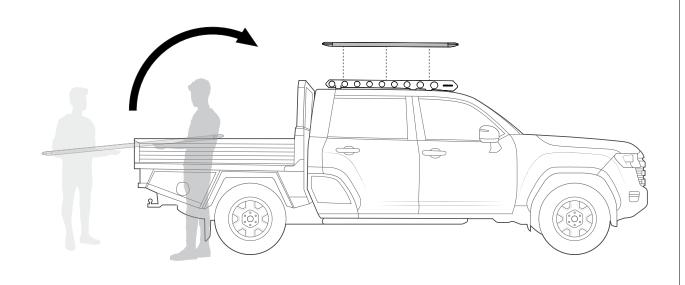

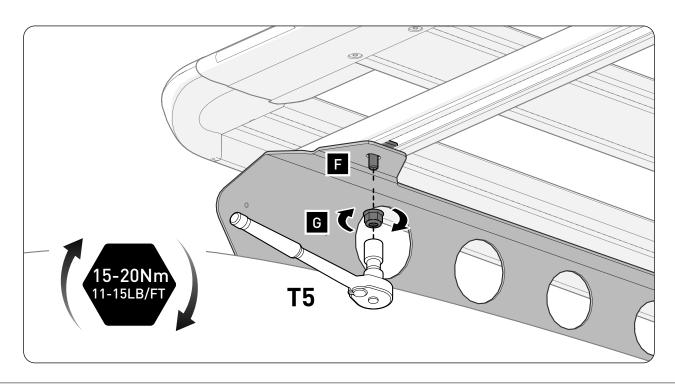



RHINORACK.COM

Rhino-Rack AUSTRALIA

22A Hanson Pl, Eastern Creek, NSW, 2766

Rhino-Rack USA

19822 E 22nd Ave, Aurora, CO, 80011