



RHINO-RACK®

RCP95-BK Leg Supplement

Renault Kangoo Gen3 SWB, Mercedes-Benz W420 SWB Citan & SWB T-Class, Nissan Townstar Gen1 SWB

Carrying Capacity

Check your vehicle owners hand book for vehicle maximum carrying capacity. Please ensure you use the vehicle manufacturer's maximum roof allowance if it is lower than the figure listed in this instruction.

Load must be evenly distributed over the system.

For your vehicle specific fitment rating, refer to the Rhino Rack online load rating calculator.

For Pioneer Load Ratings, refer to the Pioneer Fitting Chart found in Step **4**.

VISIT THE ONLINE CALCULATOR FOR CURRENT SYSTEM LOAD LIMIT DATA



DYNAMIC 3 CROSS BAR LOAD LIMIT (ON AND OFF ROAD):
***USE THE VEHICLE MANUFACTURER'S MAXIMUM ROOF ALLOWANCE IF IT IS LOWER THAN THE FIGURE LISTED**

			OR	
UP TO 92.5 KG 204 lbs	+ 7.5 KG 16.5 lbs	= UP TO 100 KG 220 lbs		*VEHICLE MANUFACTURER'S ROOF LOAD LIMIT



1




Crossbars & Pioneer fits:


For 3-bar fit and Pioneer, remove **all** factory plugs.

T40

Torx

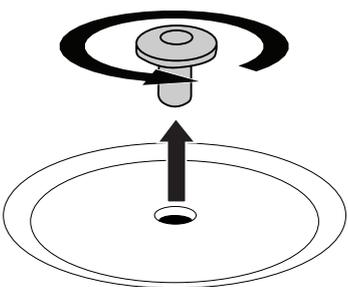


NOTE: Store factory plugs in safe place.

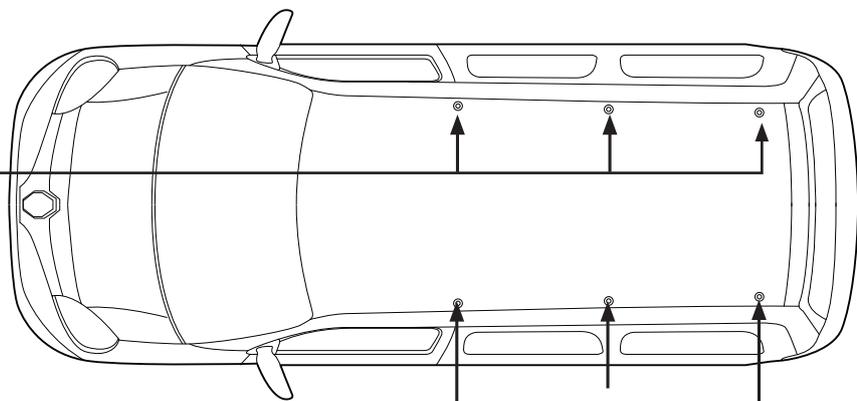


Front Bar PLUS Middle Bar OR Rear Bar


2

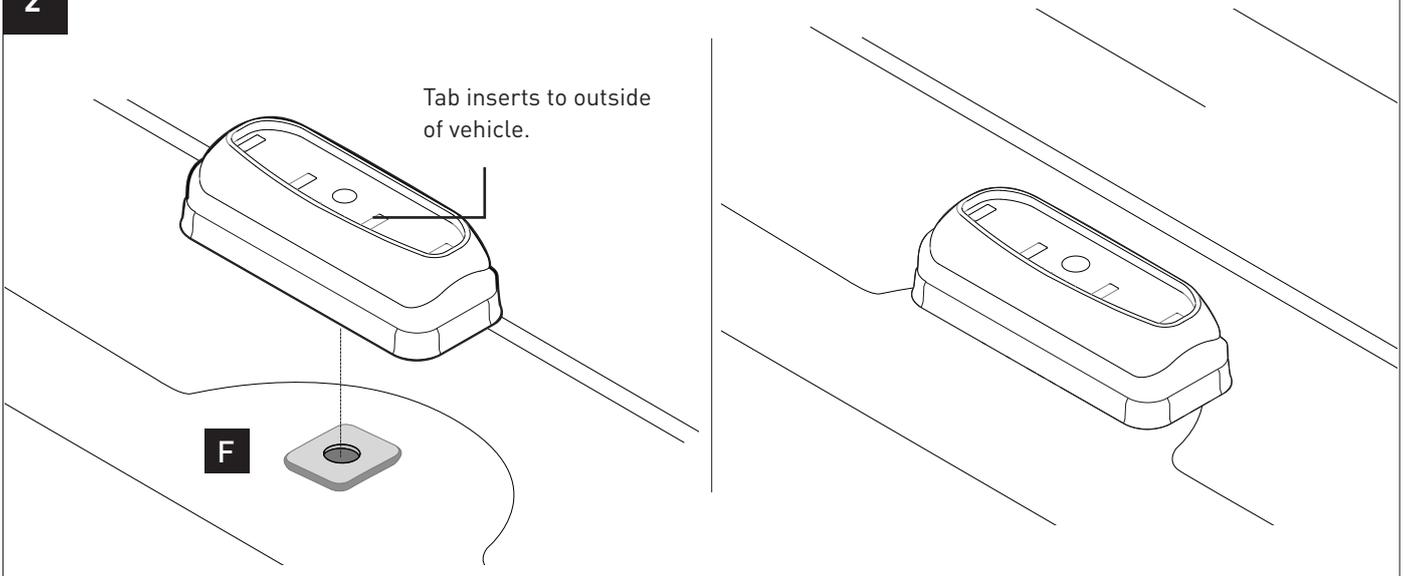


3 Loosely attach legs with spacers, as detailed below, to the Crossbars or Platform before bolting the **RCHT6** legs to the vehicle.

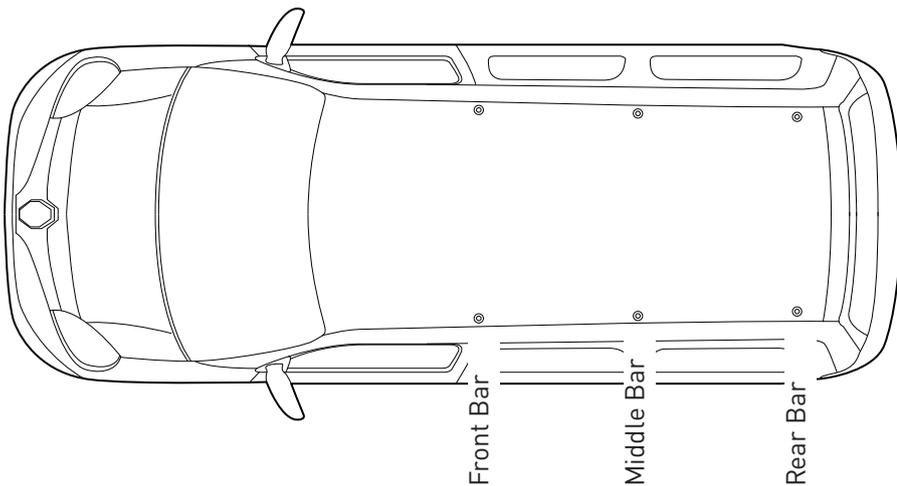


Front Bar

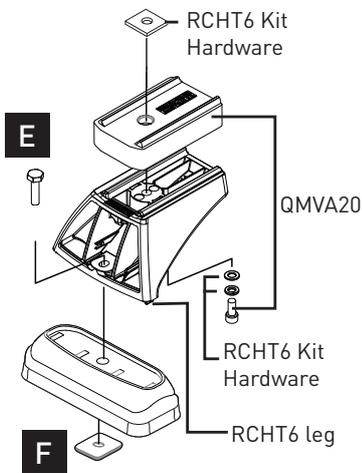

Middle Bar

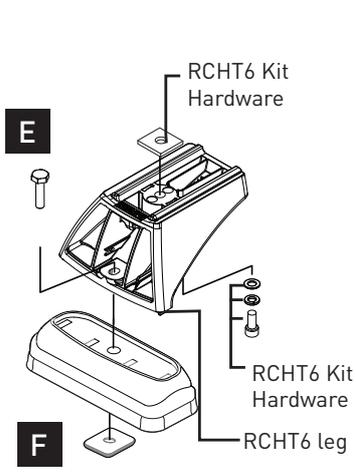

Rear Bar

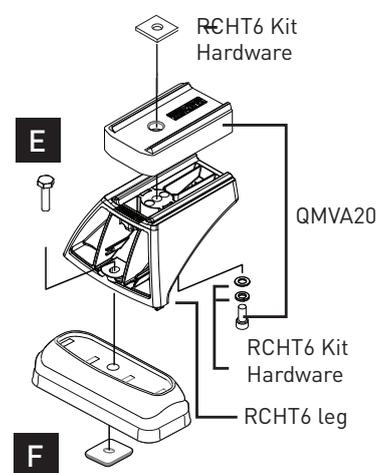

NOTE: When using the **QMVA20** spacer, use the hardware provided in the spacer kit.

Components **E** & **F** can be found in the RCP-95 kit.




PLATFORM INSTALLATION

4



rhinorack.com/roof

1. Complete **Fit my vehicle** journey
2. Select your **Product Solution**
3. Scroll down to **'Product Details'**
4. Select the **'INSTRUCTIONS'** tab to View the Fitting Chart
5. Space your Underbars to the **A, B & C** dimensions provided.

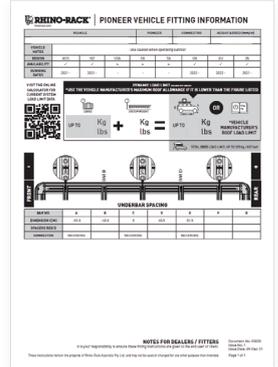

VIEW FITTING CHART
Example only

