





RCP28-BK NISSAN PATROL Y62


			<u> </u>	arts
ltem	RCP28-BK	Qty	Part No.	
1	Base pad FR (includes M6 Finloc)	1	M615	
2	Base pad FL (includes M6 Finloc)	1	M614	
3	Base pad MR (includes M6 Finloc)	1	M617	
4	Base pad ML (includes M6 Finloc)	1	M616	
5	Base pad RR (includes M6 Finloc)	1	M619	
6	Base pad RL (includes M6 Finloc)	1	M618	
7	Right skirt	3	M621	
8	Left skirt	3	M620	
9	M6 x 25mm Hex Setscrew	6	B001	
10	M6 Spring Washer	6	W004	
11	M6 x 16mm Flat Washer	6	W031	
12	M8 x 40mm Socket Head Screw	4	B162	
13	M8 x 50mm Socket Head Screw	4	B192	
14	M8 x 60mm Socket Head Screw	4	B198	
15	O-Ring	12	C299	
16	Sealing Plate	12	C588	Т
17	M8 x 19mm Flat Washer	12	W043	
18	M8 Spring Washer	12	W019	A
19	Cover Plate	6	M126	F
20	6mm Allen Key	1	H009	1
21	M6 Washer (used on cover plate)	6	W003	
22	Instructions	1	R1334	
	-		·1	

rts List				
14.	1. 🥸 🥙 2.			
130 120	5. 🥙 🍋 6.			
9	3. 🛞 🚱 4.			
19.	7. 6 8 .			
20.				
© 21.	10. 🔘 😅 18.			
	11. 🥥 🕥 17.			
	15 16.			
Tools required:				
Allen key (provided)				

Allen key (provided) Flat head screwdriver. 10mm socket wrench

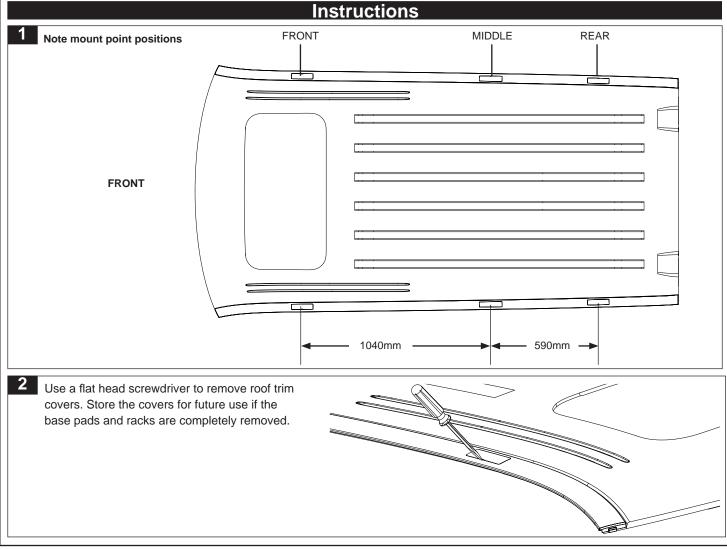

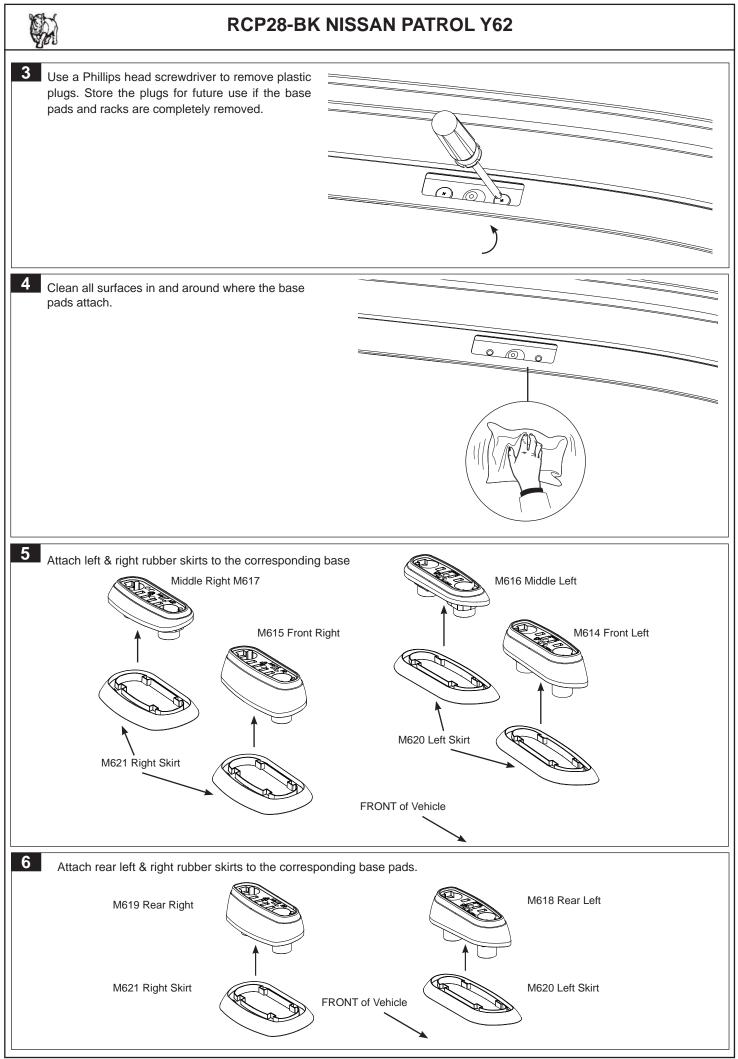

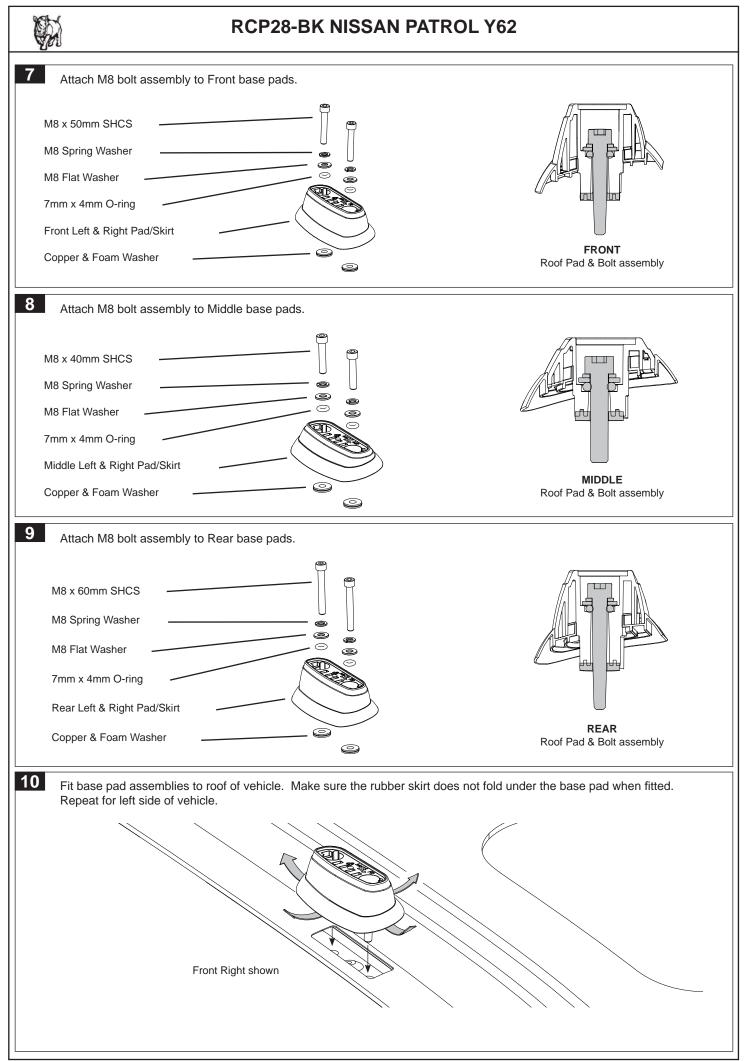

Ş	RCP28-B	K NISSAN PATROL Y62
11	Fasten the M8 bolts of all base pads with the supplied 6mm allen key. Recommended torque 8-9 Nm (6-7 lb/ft).	
		Front Right shown
12	When Crossbars are removed	
	Removal of crossbars is the reverse of instal- lation. There is no need to remove the base pads. They should remain on the vehicle to maintain	M6 x 25mm Hex
	the sealing of the copper & foam washers. Fit the base pad cover plates to prevent excessive amounts of dirt from contaminating.	M6 flat washer Base pad cover plate
	Fasten screws 3-4 Nm (2-3 lb/ft).	