
		8			CONTR	OLLED
		RHI RCP4		<b>-RA</b> ase Kit	CK	
Imp	ortant:	Please read these instruction Please refer to your fitting ins correct locations. Check the contents of kit before	struction to er	nsure that the roof racks		
				and report a		
Note: Crossbars and legs sold as separate. Suitable for both RVL , RVH, RCL and RCH legs and bars.						
Important Information						
1. 🗆	Check Pa	rt No./Kit is correct	3.□	Fit roof rack accesso	Dry	
2. Read through instruction before installing 4. Check and recheck all fasteners are secure Maximum carrying capacity: 75kg (165lbs) evenly distributed over crossbars when mounted on the strongest section of the roof. Please refer to your vehicle manufacturers handbook for maximum roof loading. Always use the lower of the two figures. Note: Be sure to check the Rhino-Rack website to see if you have the latest version of instructions before beginning.						
Advisory: It is essential that all bolt connections be checked after 48hrs from when you first install your crossbars. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are refitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.						
Use only non-	-stretch fast	ening ropes or straps.				
Load Ratings When these roof racks are to be used on a vehicle that is driven off sealed roads, the manufacturer maximum roof load rating (to be found in the vehicle's User Manual) should be divided by a safety factor of <b>2</b> . For example, if the vehicle's maximum roof load rating is 75kgs\165lbs, these racks, when fitted to this vehicle should have no more than 37.5kgs/82lbs loaded on them.						
<b>Caution:</b> The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking. <b>Please remove crossbars when putting vehicle through an automatic car wash.</b>						
Note for Deale	ers and Fitte	ers: It is your responsibility to e	ensure instru	ctions are given to the e	nd user or client.	
Rhino-Rack 3 Pike Street, Ry NSW 2116, Aust (Ph) (02) 9638 4 (Fax) (02) 9638 5	ydalmere, ralia. 744 4822	Docun Prepai Author	nent No: R132 red By: Kayle I rised By: Chris	7 Everett Murty	Fit Time: 30min Issue No: 01 Issue Date: 10/04/20	
I hese instructi	ons remain th	e property of Rhino-Rack Australia	Pty. Ltd. and	may not be used or change	ed for any other purpose than i	ntended.

Page 1 of 3



## **RCP49-BK Base Kit**

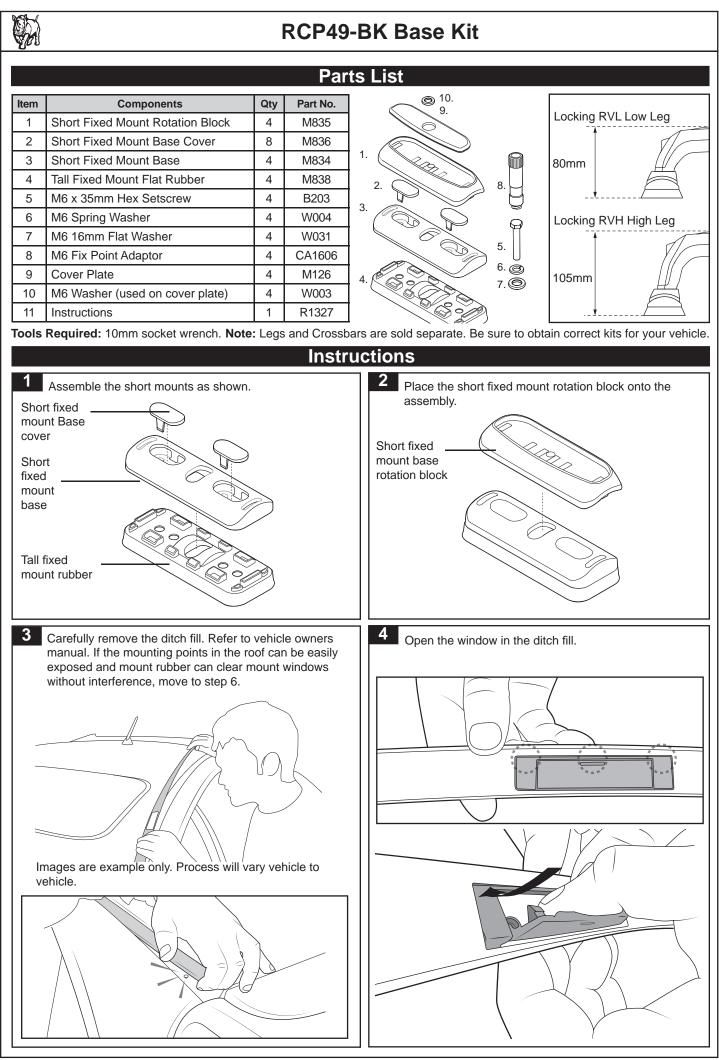