# RCP59-BK Base Kit


Important:

Please read these instructions carefully prior to installation.

Please refer to your fitting instruction to ensure that the roof racks are installed in the

correct locations.

Check the contents of kit before commencing fitment and report any discrepancies

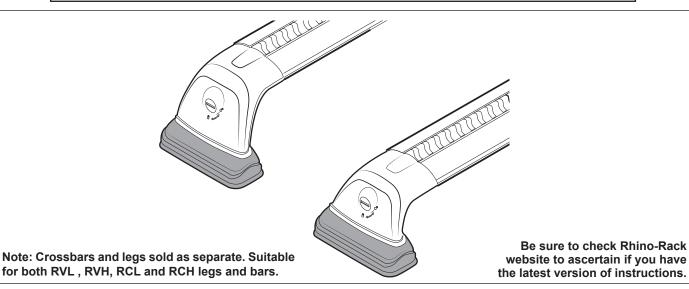

## **Important Information**

#### Maximum carrying capacity:

On Road Cargo Allowance	Unsealed Road Cargo Allowance	Roof Allowance	Rack Weight
70kg / 154lb	50kg / 110lb	75kg / 165lb	5kg / 11lb

Roof Allowance:

Total permissible weight attached to the roof of the car. This is inclusive of the weight of the roof rack system

Cargo Allowance: Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is in motion

Please refer to your vehicle manufacturers handbook for maximum carrying capacity. Always use the lower of the two figures. Load must be evenly distributed over the entire Pioneer. Weight of roof rack accessories is to be included in cargo allowance.

### **Torque settings**

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings -

M6: 4-5Nm (3-4lbs/ft), M8: 8-10Nm (6-7.5lbs/ft) and M10: 16-18Nm (12-13lbs/ft).

### Warning:

- Check Part No. and/ or Kit is correct for use with your vehicle
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.
- Use only non-stretch fastening ropes or straps.
- The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.
- Although the system is tested and approved to AS1235-2000 / ISO 11154, off-road conditions can be much more rigorous. Extreme care
  must be taken in off road conditions

### Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please also ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible and must be entirely contained within the extents of the roof racks.

### **Note for Dealers and Fitters:**

It is your responsibility to ensure these fitting instructions are given to the end user or client

Rhino-Rack, 22 Hanson St, Eastern Creek NSW 2766, Australia

(02) 8846 1900 rhinorack.com.au Document No: R1448
Prepared By: Kayle Everett
Authorised By: Rod Renkin

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.


Issue No: 02 Issue Date: 26/09/2018



# **RCP59-BK Base Kit**

# **Parts List**

Item	Components	Qty	Part No.
1	Short Fixed Mount Rotation Block	4	M835
2	Short Fixed Mount Base	4	M834
3	Short Fixed Mount Flat Rubber	4	M837
4	M6 x 20mm Socket Screw	8	B054
5	M6 Spring Washer	12	W004
6	M6 x 16mm Flat Washer	4	W031
7	M6 Curved Cast Nut	4	N060
8	M6 x 12.5mm Flat Washer	8	W003
9	Front LH Wedge	1	M827
10	Front RH Wedge	1	M828
11	M6 x 30mm Hex Bolt	2	B202
12	M6 x 35mm Hex Bolt	2	B203
13	QMFK Bracket	4	CA1506
14	Butyl Patch	12	CA1397
15	Rivet	12	H008
16	Allen Key	1	H021
17	Instructions	1	R1448

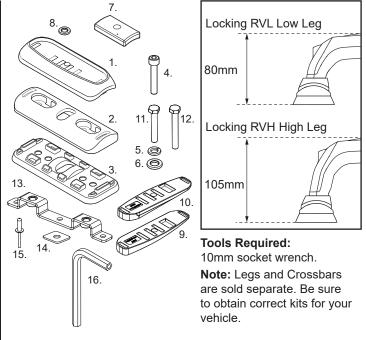

# Instructions

