
RCP63-BK Base Kit

Important:	1. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.	
	2. Check the contents of kit before commencing fitment and report any discrepancies.	
	☐ 3. Place these instructions in the vehicle's glove box after installation is complete.	
	4. These instructions must be followed for warranty to be upheld.	

Note: Crossbars and legs sold as separate. Suitable for both RVL, RVH, RCL and RCH legs and bars.

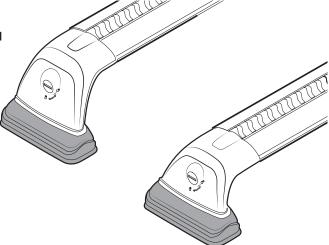

Maximum carrying capacity: 80kg (176lbs) evenly distributed over crossbars.

On Road Cargo Allowance	Off Road Cargo Allowance	Roof Allowance	Rack Weight
70kg / 165lb	37.5kg / 82lbs	75kg / 165lbs	5kg / 11lb

Maximum carrying capacity: 75kg (165lbs) evenly distributed over crossbars when mounted on the strongest section of the roof. Please refer to your vehicle manufacturers handbook for maximum roof loading. Always use the lower of the two figures. Note: Be sure to check the Rhino-Rack website to see if you have the latest version of instructions before beginning.

Advisory:

It is essential that all bolt connections be checked after 48hrs from when you first install your crossbars. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are refitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.

Use only non-stretch fastening ropes or straps.

Load Ratings

When these roof racks are to be used on a vehicle that is driven off sealed roads, the manufacturer maximum roof load rating (to be found in the vehicle's User Manual) should be divided by a safety factor of 2. For example, if the vehicle's maximum roof load rating is 75kgs\165lbs, these racks, when fitted to this vehicle should have no more than 37.5kgs/82lbs loaded on them.

Caution:

The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking. Please remove crossbars when putting vehicle through an automatic car wash.

Note for Dealers and Fitters: It is your responsibility to ensure instructions are given to the end user or client.

Rhino-Rack 3 Pike Street, Rydalmere, NSW 2116, Australia. (Ph) (02) 9638 4744 (Fax) (02) 9638 4822

Document No: R1587 Prepared By: Kayle Everett Authorised By: Chris Murty

Fit Time: 30min Issue No: 01

Issue Date: 06/10/2017


These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.



RCP63-BK Base Kit


Parts List


Item	Components	Qty	Part No.
1	Short Fixed Mount Rotation Block	2	M835
2	Short Fixed Mount Base Cover	4	M836
3	Short Fixed Mount Base	2	M834
4	Short Fixed Mount Flat Rubber	2	M837
5	Nutsert	4	H059
6	M6 x 30mm Hex Hex Setscrew	2	B202
7	M6 x 25mm Torx Screw	4	B244
8	M6 Curved Nut	2	N060
9	M6 Spring Washer	6	W004
10	M6 x 12.5 Flat Washer	4	W003
11	M6 x 16mm Flat Washer	2	W031
12	T27 Torx Key	1	H054
13	Instructions	1	R1587

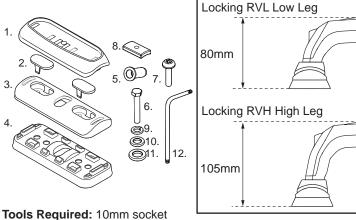



wrench. Masking tape. Drill with 9mm/6.5mm drill but. Nutsert tool. Butyl mastic. **Note:** Legs and Crossbars are sold separate. Be sure to obtain correct kits for your vehicle.


Instructions

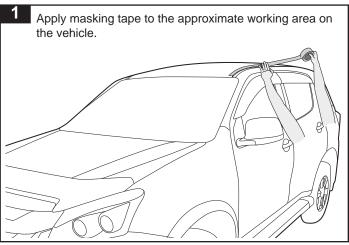


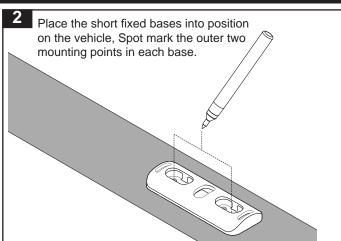

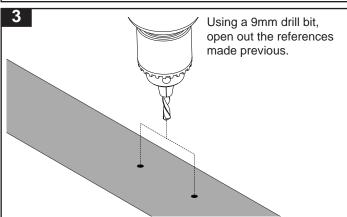

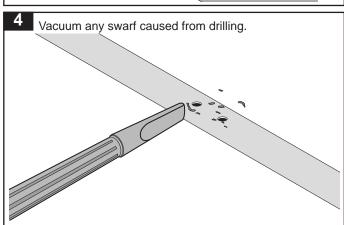

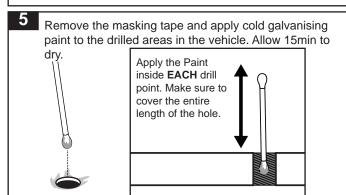

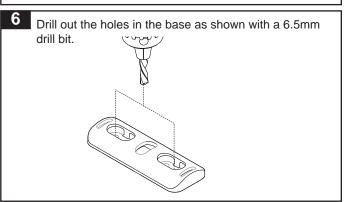



RCP63-BK Base Kit

