


# RLCP08 / RLCP08H

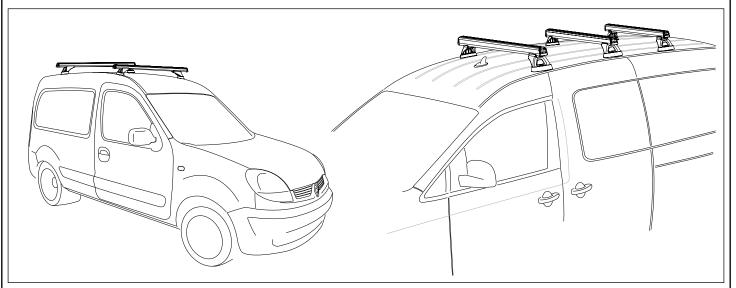

## Important Information

Max: 100kg/220lbs. Please refer to your vehicle owners manual for maximum roof loading. Always use lower of the two figures.

### **Recommendations:**

It is essential that all bolt connections be checked after driving a short distance when you first install your crossbars. Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are refitted. Make sure to fasten your load securely with tie down straps or non stretch ropes. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.

### Please remove crossbars when putting vehicle through an automatic car wash.

#### Load Ratings:

Maximum permissible load is **100kg/220lbs** for Two, Three or Four crossbars including the weight of the crossbars, Two crossbars = 5kg/11lbs. When crossbars are to be used in off-road conditions, please build a safety factor of 1.5 into this load limit for off-road use. **66kg/145lbs** for off-road use. Although the crossbars are tested and approved to AS1235-2000, off-road conditions can be much more rigorous. However, increasing the number of crossbars does not increase the vehicles maximum permissible roof loading.

### Note for Dealers and Fitters:


It is your responsibility to ensure instructions are given to the end user or client.

Rhino-Rack 3 Pike Street, Rydalmere, NSW 2116, Australia. (Ph) (02) 9638 4744 (Fax) (02) 9638 4822

Document No: RR129 Prepared By: Craig Jones Authorised By: Chris Murty

Issue No: 07 Issue Date: 31/03/2015


These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

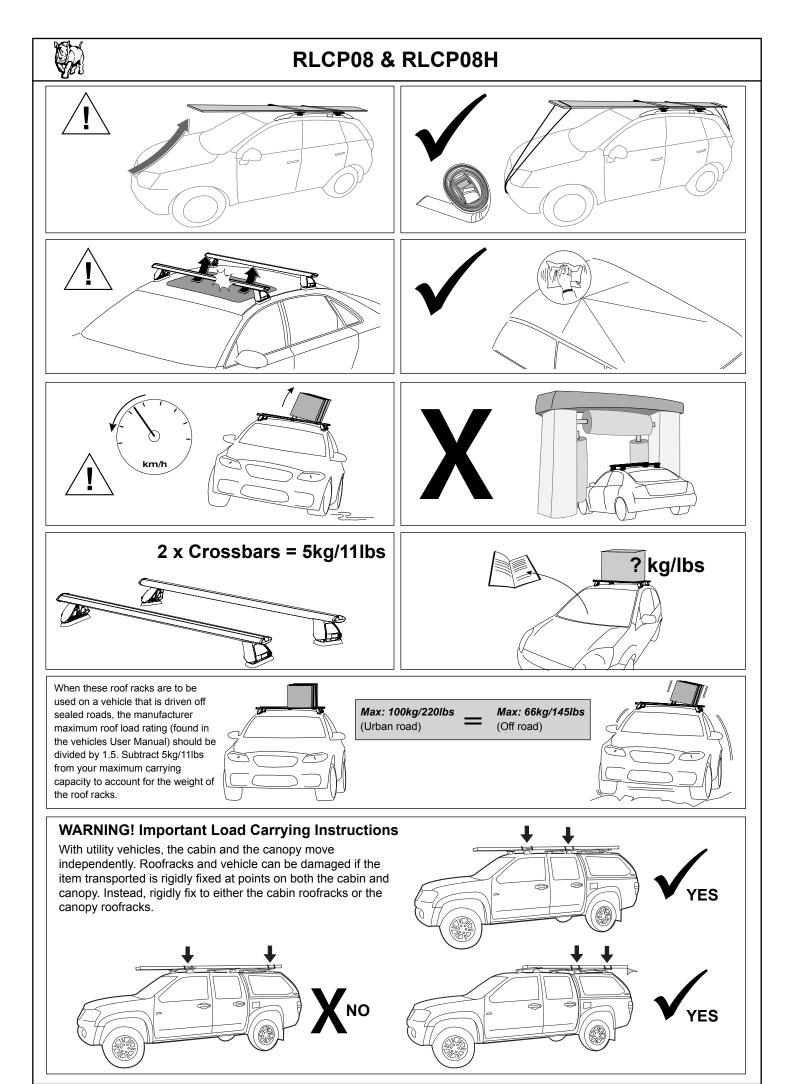



# **RLCP08 & RLCP08H**

# Parts List

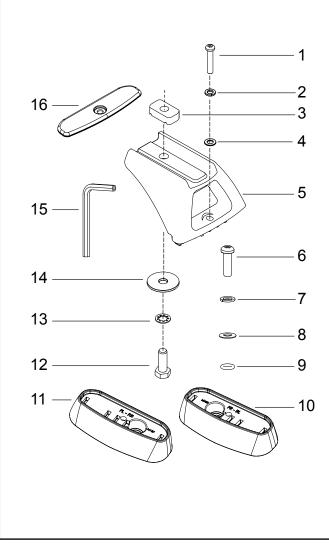



Crossbars sold individually	Part No.	
1250mm Heavy Duty Crossbar SILVER	RB1250S	
1250mm Heavy Duty Crossbar BLACK	RB1250B	
1260mm Vortex Crossbar SILVER	VA126S	
1260mm Vortex Crossbar BLACK	VA126B	
1375mm Heavy Duty Crossbar SILVER	RB1375S	
1375mm Heavy Duty Crossbar BLACK	RB1375B	
1375mm Vortex Crossbar SILVER	VA137S	
1375mm Vortex Crossbar BLACK	VA137B	

Heavy Duty crossbar


Vortex crossbar

Item	Component Name	Qty RLCP08	Qty RLCP08H	Part No.
1	M6 x 27mm Security Screw	4	2	B063
2	M6 Spring Washer	4	2	W004
3	M10 Channel Nut	4	2	N024
4	M6 Flat Washer	4	2	W003
5	Leg	4	2	M123
6	M8 x 25mm Button Head Screw	4	2	B140
7	M8 Spring Washer	4	2	W019
8	M8 Flat Washer	4	2	W030
9	O-ring	4	2	C299
10	Roof Pad FR/RL	2	1	M188
11	Roof Pad FL/RR	2	1	M187
12	M10 x 20mm Set Screw	4	2	B003
13	M10 Shake Proof Washer	4	2	W021
14	M10 Flat Washer	4	2	W022
15	5mm Security Allen Key	1	1	H021
16	Roof Pad Cover Plate	4	2	M126
17	Fitting Instruction	1	1	R129

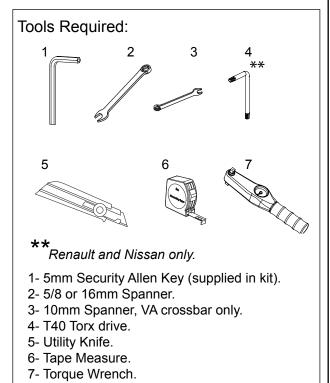


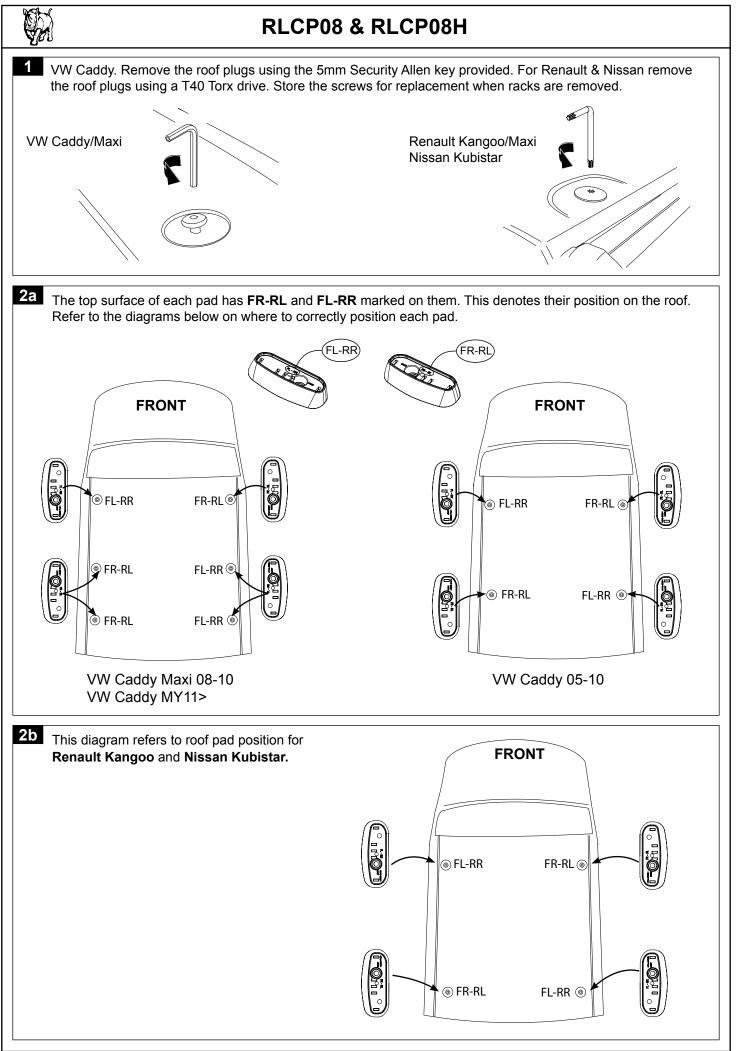




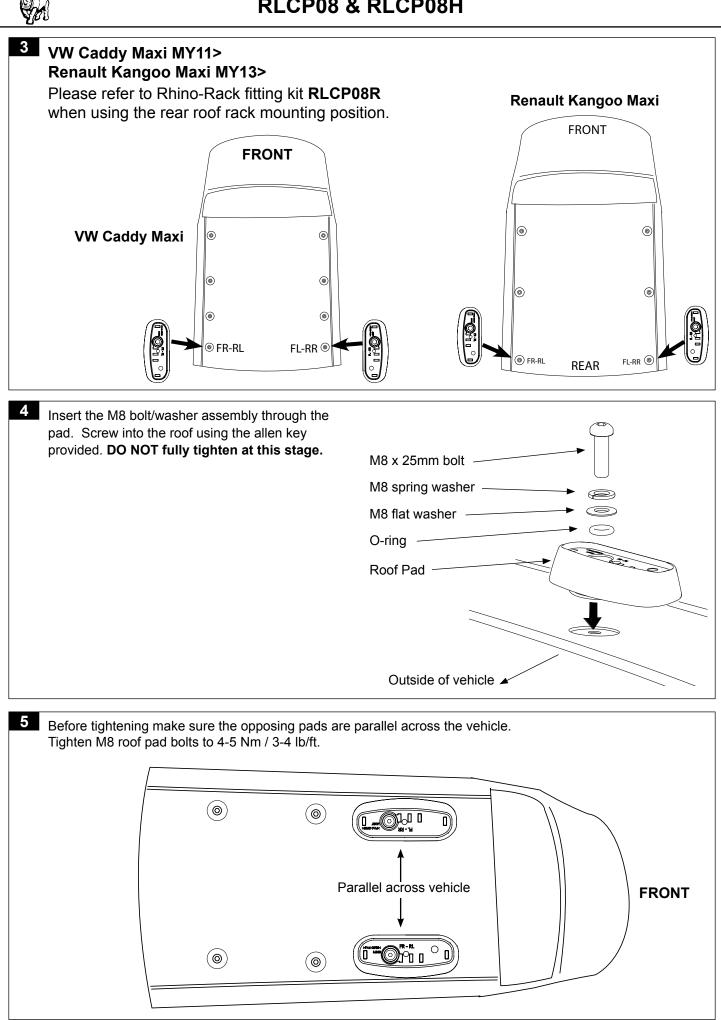


# RLCP08 & RLCP08H

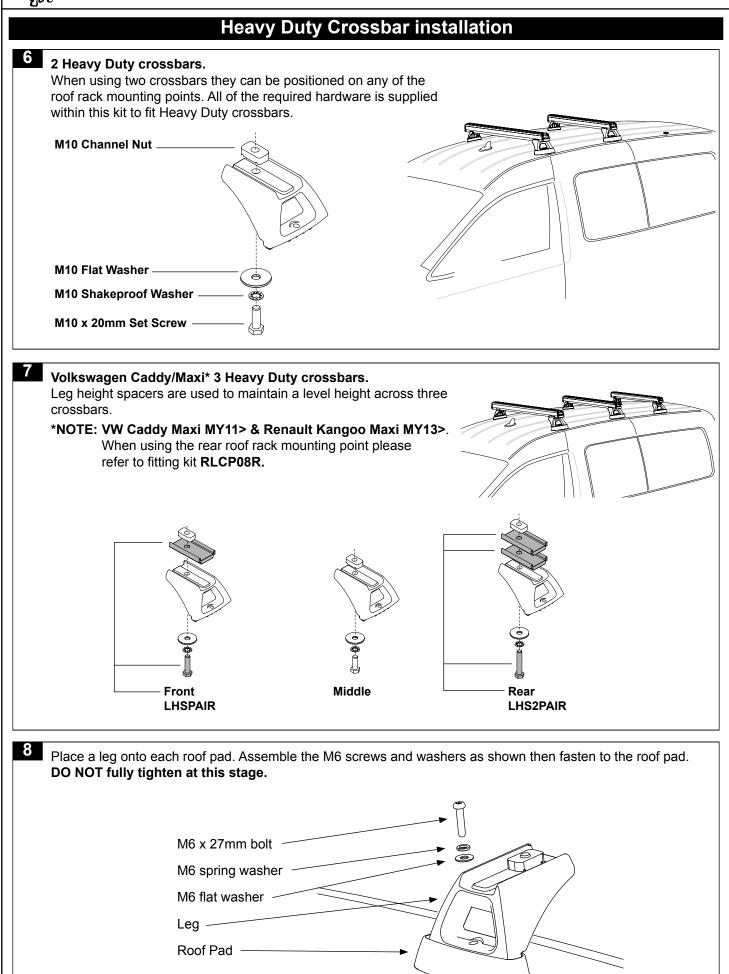

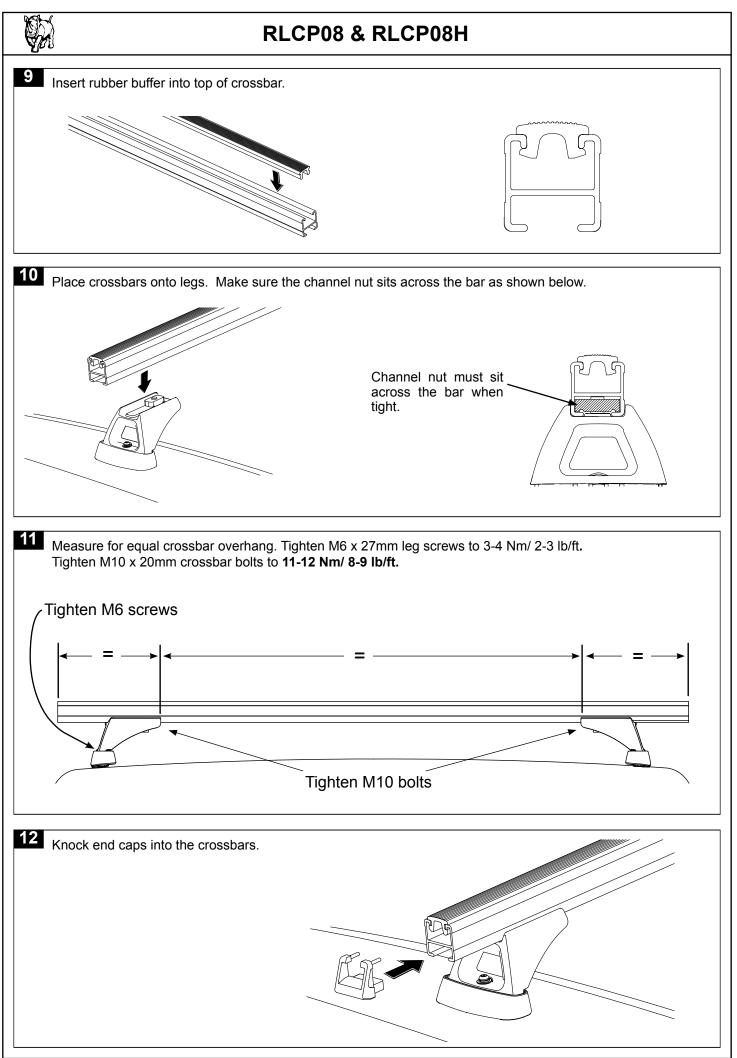



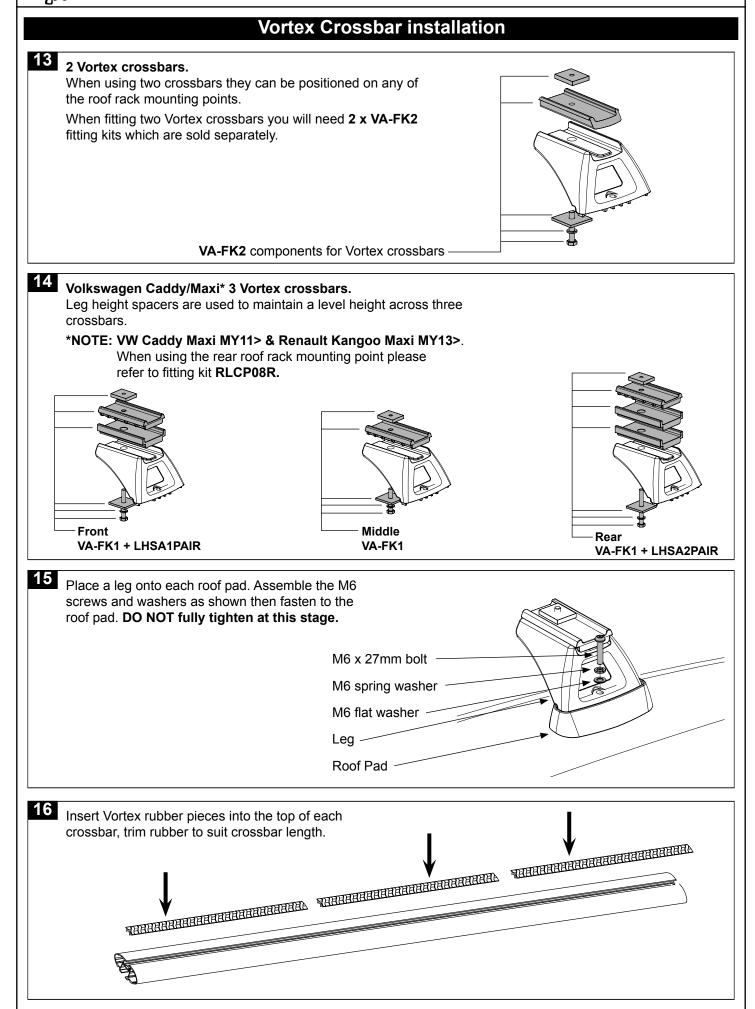

Ę.	RLCP08 & RLCP08H			
17	Insert legs into the Vortex crossbars, leave the M6 crossbar screws loose at this stage.			
	Measure each side to achieve equal crossbar ov Tighten the M6 leg screws to <b>3-4 Nm/ 2-3 lb/ft</b> .	verhang. Tighten the M6 crossbar screws to <b>4-5 Nm/ 3-4 lb/ft</b> .		
19 Measure the underbar slot length each side of the leg then cut the bar measurement strips to these lengths. Clip each piece into the underbar slots of the crossbar. Filling these slots helps to reduce or eliminate wind noise.				
20	SECURE CORE LOCKING END CAP Using the Secure Core Key unlock the end cap the key 90° clockwise to lock the end cap in pla Part No's VA-SEC2, Two end caps. VA-SEC4, Four end caps. UNLOCKED			