


Important: Please read these instructions carefully prior to installation.

Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.

Check the contents of kit before commencing fitment and report any discrepancies.

Place these instructions in the vehicle's glove box after installation is complete.

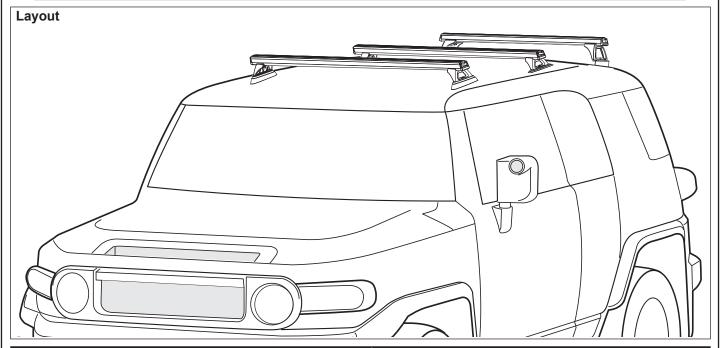

Important Information

Maximum carrying capacity: 68kg (150lbs) (with additional 2 crossbar system)

Please refer to your vehicle manufacturers handbook for maximum carrying capacity of your roof racks. Always use the lower of the two figures. Load must be evenly distributed over the crossbars.

Warning: Do not attempt to fit the roof racks to your vehicle unless you fully understand this fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks was purchased. Use only non-stretch fastening ropes or straps.

Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please also ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible. Long loads (e.g. canoes and kayaks) must be secured front and rear with non-stretch fastening ropes or straps.

Roof racks must be removed when putting vehicle through an automatic car wash.

Caution: The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.

Note for Dealers and Fitters:

It is your responsibility to ensure these fitting instructions are given to the end user or client.

Rhino-Rack

3 Pike Street, Rydalmere,

NSW 2116, Australia. (Ph) (02) 9638 4744

(Fax) (02) 9638 4822


Document No: R181 Prepared By: Andy Wana Authorised By: Chris Murty

Issue No: 01

Issue Date: 23/02/2012


These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.



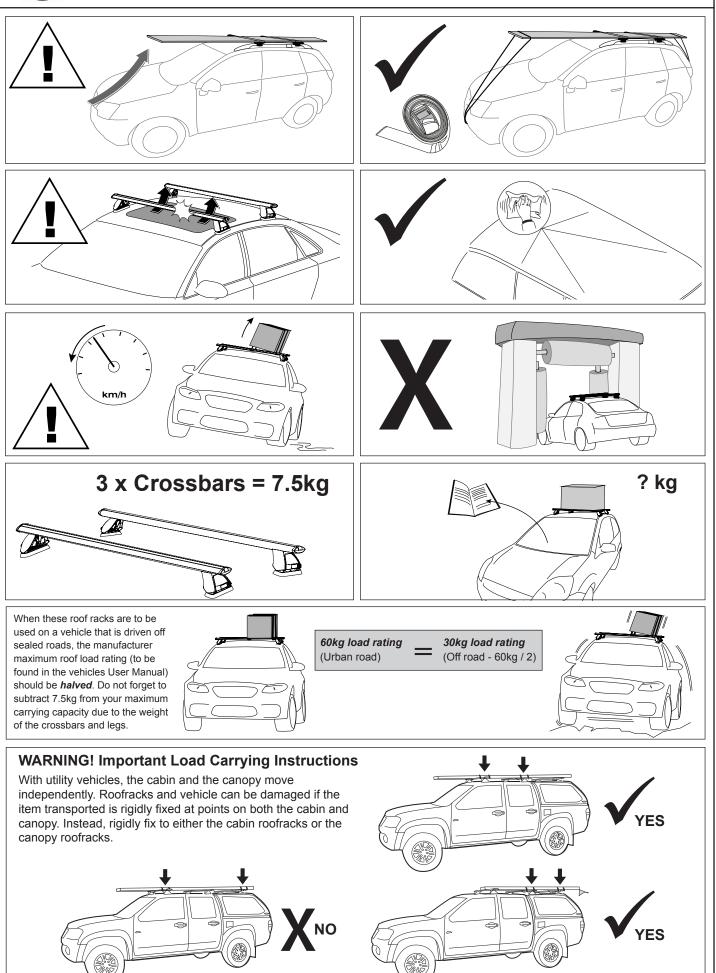



Item	Component Name	Qty
1	1375mm HD Bar (sold separately)	1
2	HD Bar Rubber (sold separately)	1
3	End Cap	2
4	RLCP Leg (High)	2
5	M6 x 20mm Security Bolt	2
6	M6 Spring Washer	2
7	M6 Flat Washer	2
8	RLCP-R Bracket	2
9	M8 Washer (waterproof)	4
10	M10 Channel Nut	2
11	M10 Flat Washer	2
12	M10 Shakeproof Washer	2
13	M10 x 20mm Bolt	2
14	M8 x 40mm Bolt	4
15	M8 Spring Washer	4
16	M8 Flat Washer	4
17	5mm Allen Key	1
18	Fitting Instruction	1

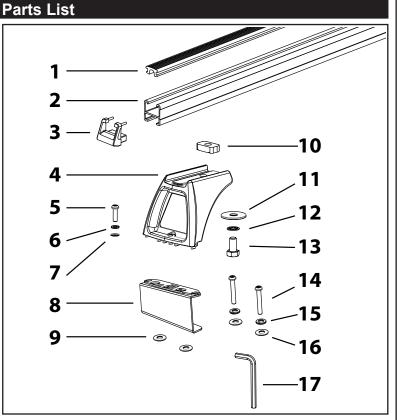

Tools needed: Flat blade screwdriver, Phillips head screwdriver, Rubber mallet, Socket wrench & 13mm socket.

Fitting Instructions


1

Carefully remove the roof trim covers using a flat blade screwdriver.

Remove all brackets, bolts and washers using a 13mm socket.

Store the covers and attachment hardware for future use if needed.

NOTE: The existing bolts and washers are not used to fit the roof rack mounting pads.

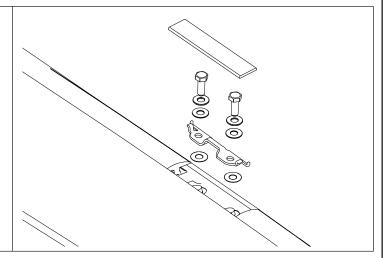

2

Place the foam covered copper washers over the plastic tubes in the roof channel. Make sure they are fitted neatly around the plastic tubes.

NOTE: Failure to fit the foam covered copper washers will result in water leaks.

