
Leg Instructions

RX200

Important:


- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. These instructions must be followed for warranty to be upheld.


Fit Time: 15 mins

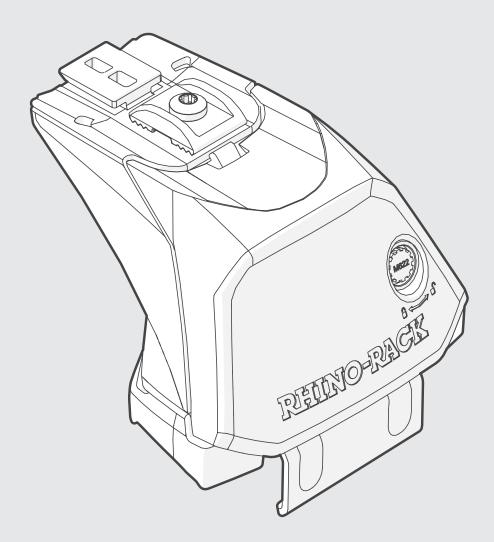


RHINORACK.COM


Doc. No: 520-RFI-00127 Issue No: 03 Issue Date: 02/02/2024

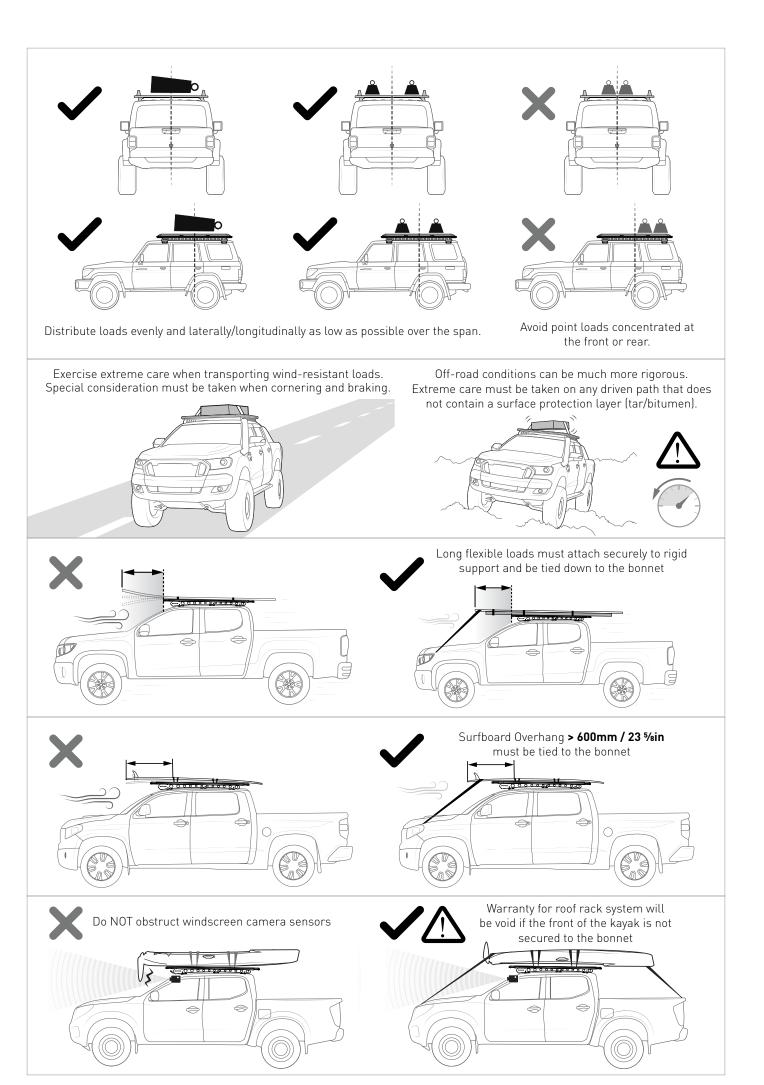

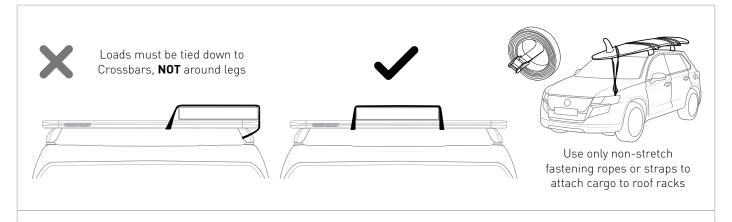

Tub/tray/canopys can move independently from the vehicle cabin. Rigidly fix to either the cabin roof racks **or** the tub/tray/canopy roof racks but not both simultaneously.

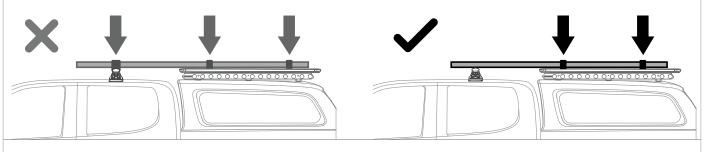

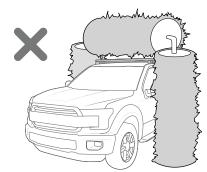


Racks must be removed when vehicle is put through an automatic car wash.



Ensure Ladder is well supported on the ground to support tent. Take extreme caution when climbing heights

above 1.2m / 4ft.

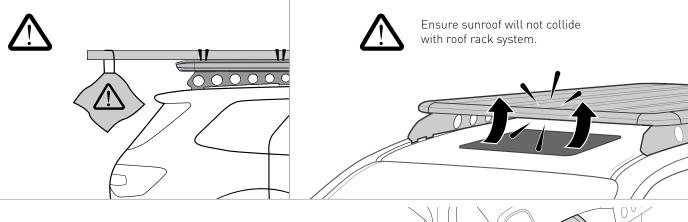



Youtube.com/Rhinorackaustralia



Place these instructions in the glove box once installation is complete

1.

Check your vehicle owners hand book for vehicle maximum carrying capacity and VISIT THE ONLINE CALCULATOR FOR CURRENT SYSTEM LOAD LIMIT DATA.



2.

Please ensure you use the vehicle manufacturer's maximum roof allowance **if it is <u>lower</u> than the figure listed in supplement.**



- 1. Complete Fit my vehicle journey
- 2. Select your **Product Solution**
- 3. Scroll down to 'Product Details'
- **4.** Download intructions under the **'INSTRUCTIONS'** tab





Cargo Load Limit

Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is in motion.



System Weight

Total weight of the roof rack system. (Crossbars, Backbone, Platform)



Max System Load Capacity

Please ensure you use the vehicle manufacturer's maximum roof allowance if it is lower than the figure listed in the fitting chart.



Vehicle Manufacturer's Load Limit

Total permissible weight attached to the roof of the car. This is inclusive of the weight of the roof rack system.

In service maintenance checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).


Note for Dealers and Fitters

It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.


Warranty


We love creating our products for you and hope you love using them too. For complete peace of mind, register your product at www.rhinorack.com/warranty. This way, we can quickly help you with any future warranty claims.

And remember – never to forget to Make Space For Adventure!

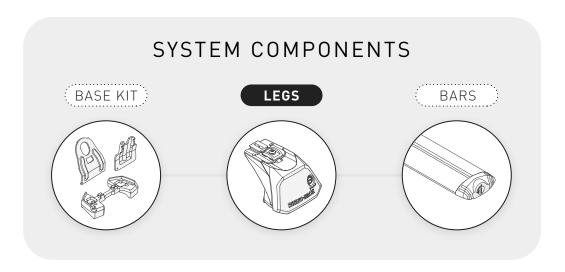



Parts List

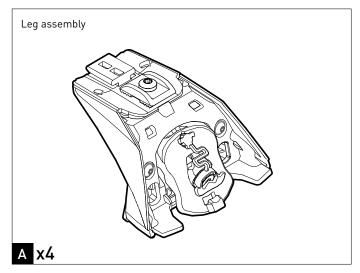

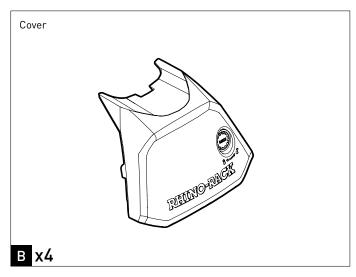




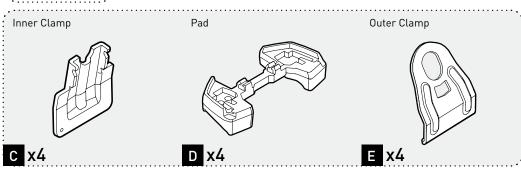

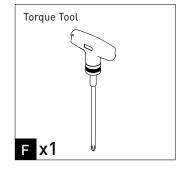



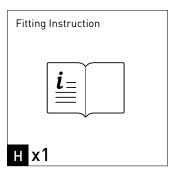



TOOLS REQUIRED:


T1 - Tape Measure


T2 - Scissors


1. Complete Fit my vehicle journey
2. Select your Product Solution
3. Scroll down to 'Product Details'
4. Download intructions under the 'INSTRUCTIONS' tab

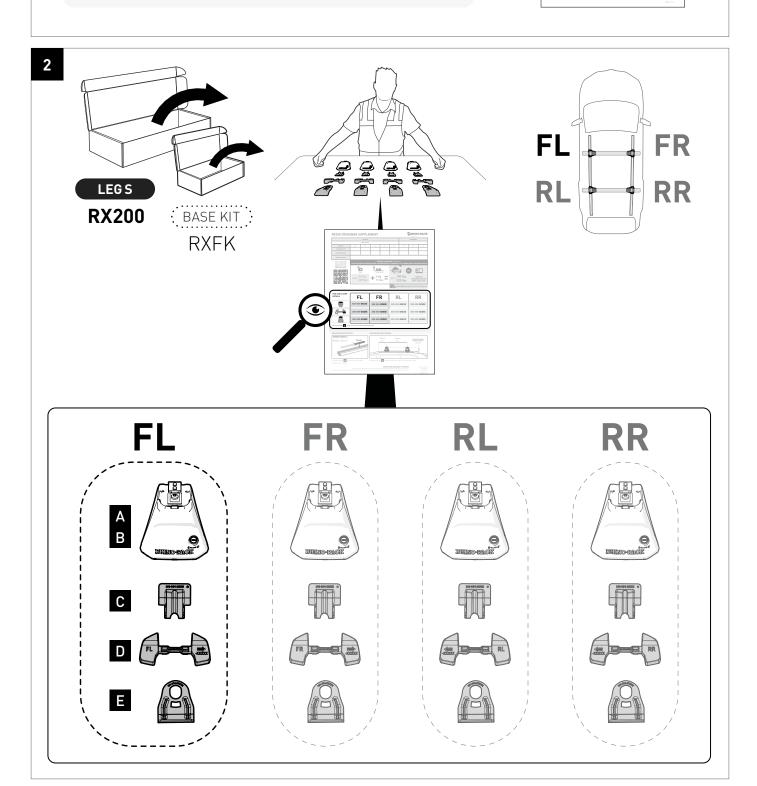


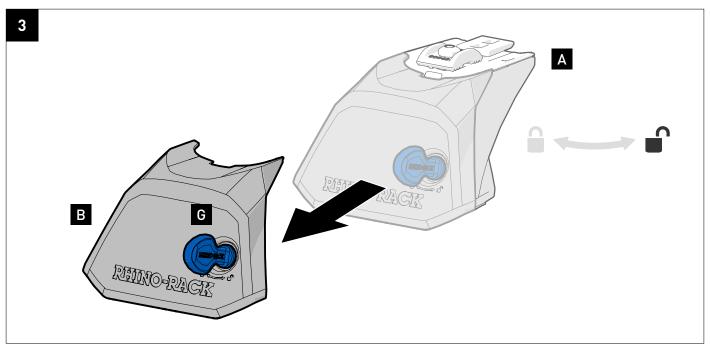


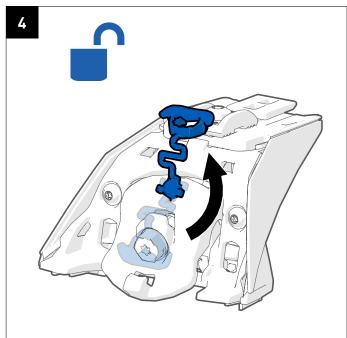


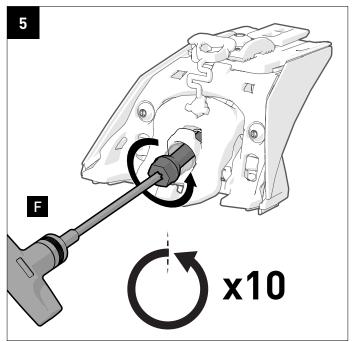


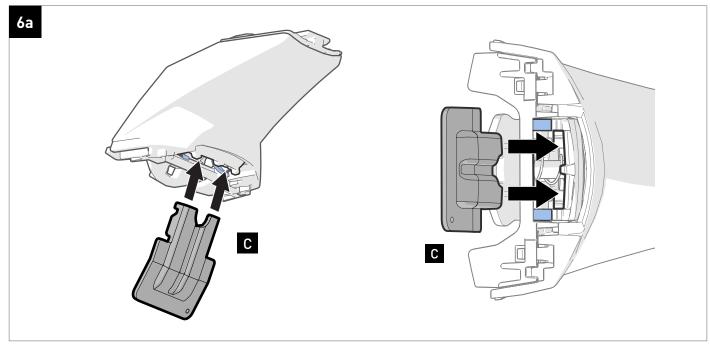

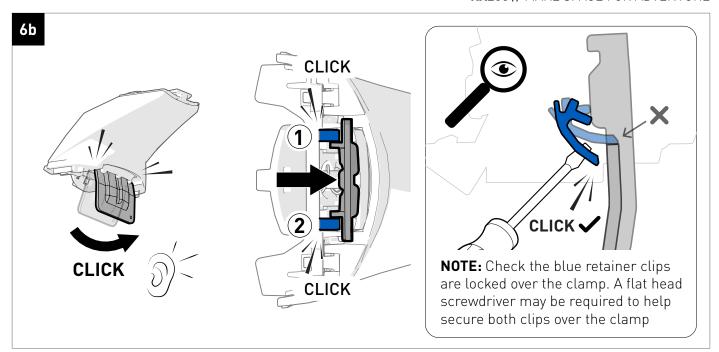


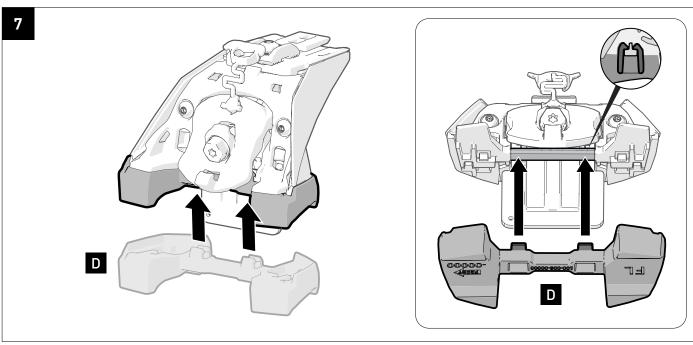


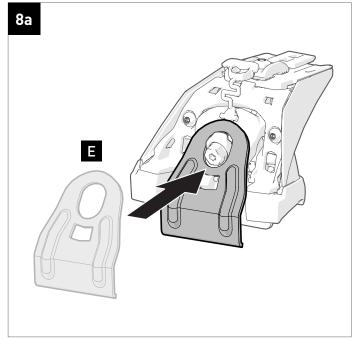

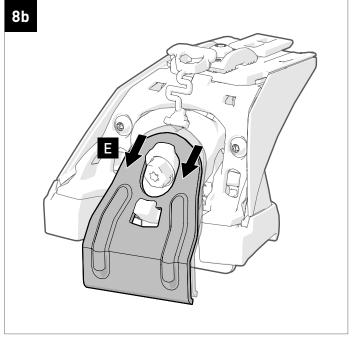


Page 8 of 15

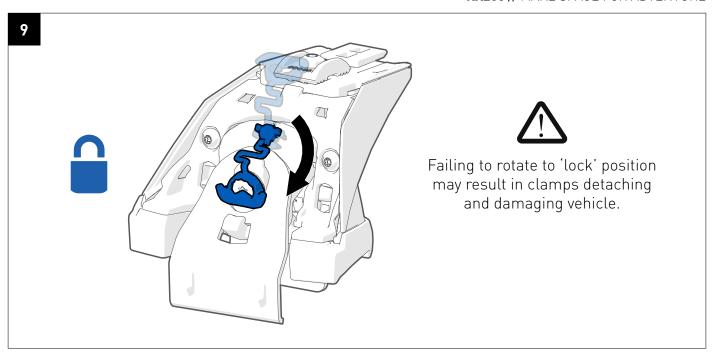


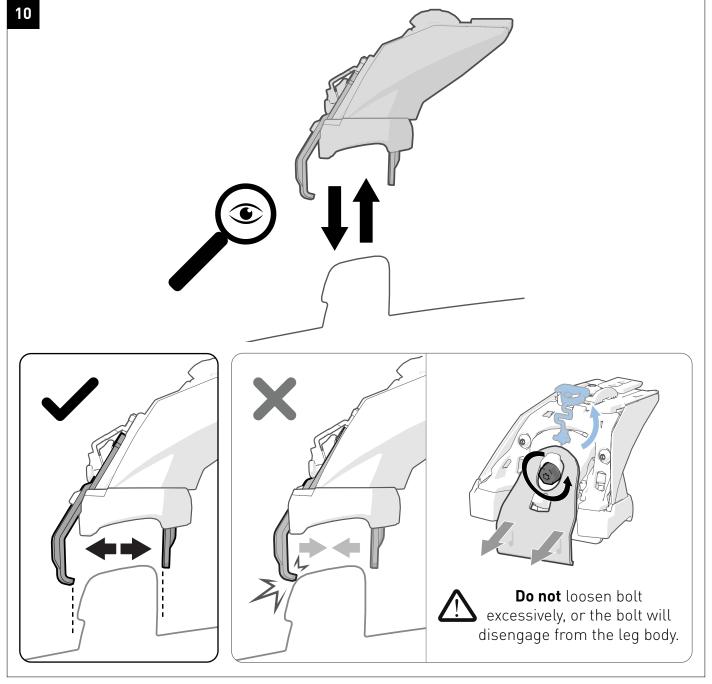


11 FOR VORTEX BARS:

Refer to RX200 CROSSBAR SUPPLEMENT. Once completed, proceed to Step 12

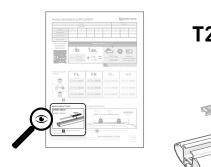

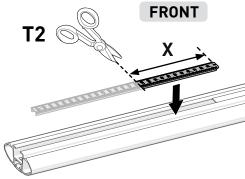


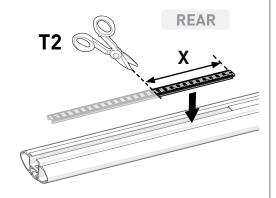



FOR PIONEER PLATFORMS:


Proceed to <u>PIONEER INSTRUCTION</u> and <u>PIONEER FITTING CHART</u> to adjust Platform underbars.




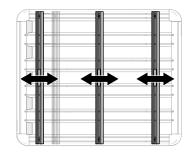


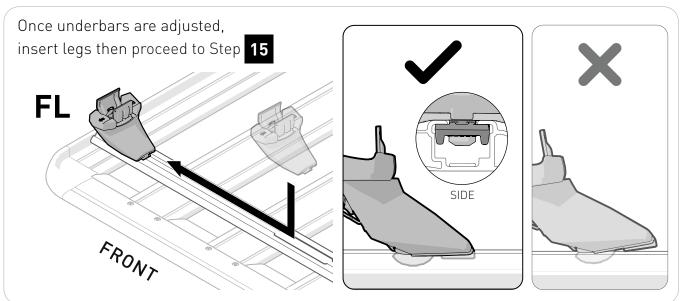


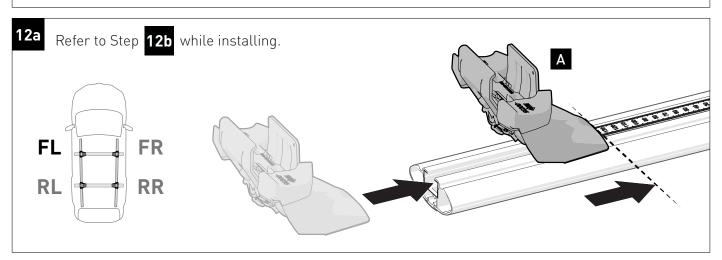


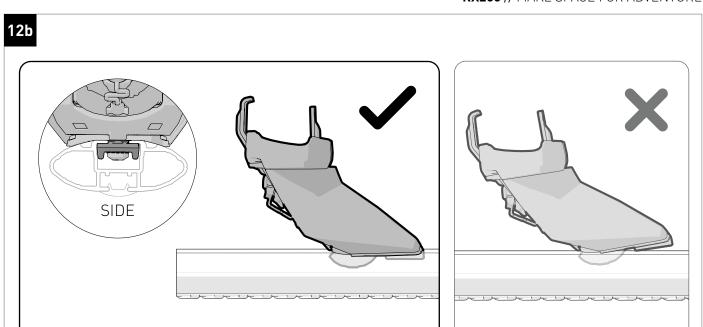

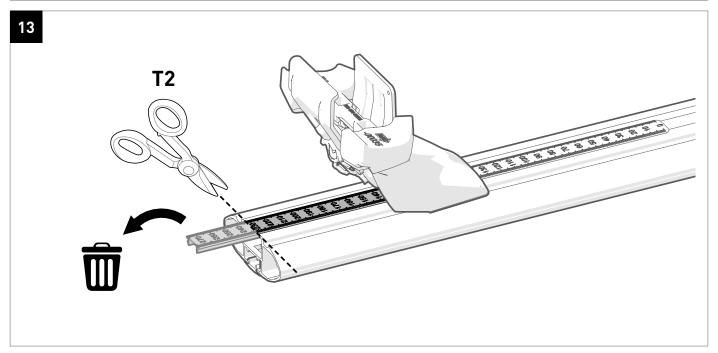


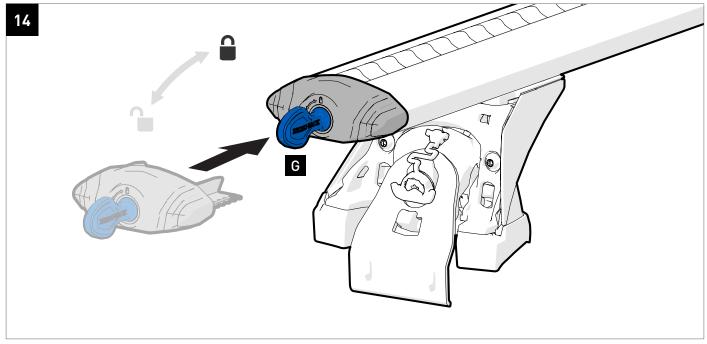


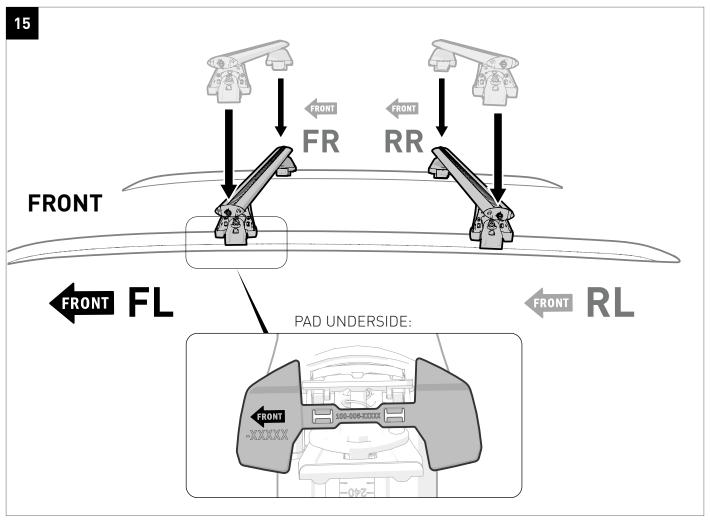

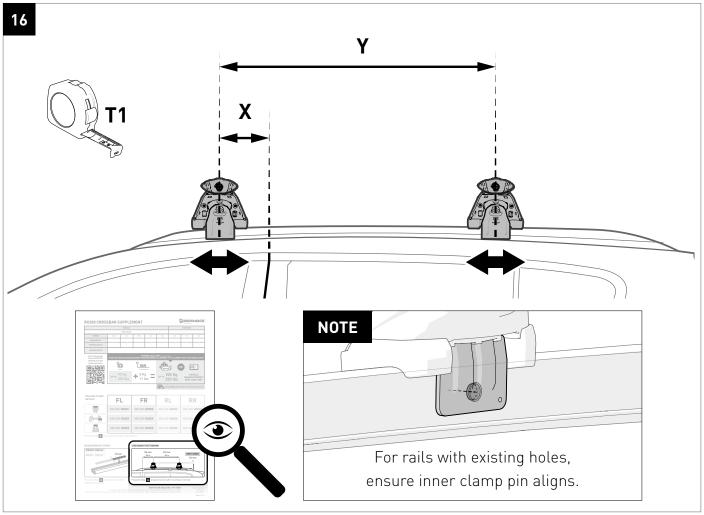

Page 12 of 15

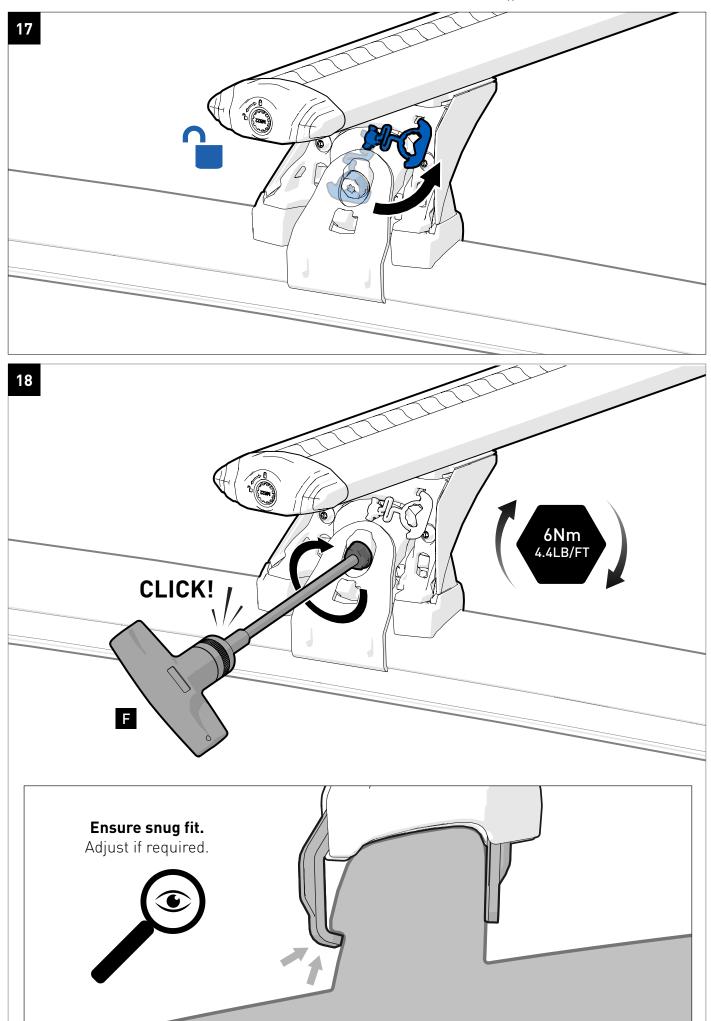

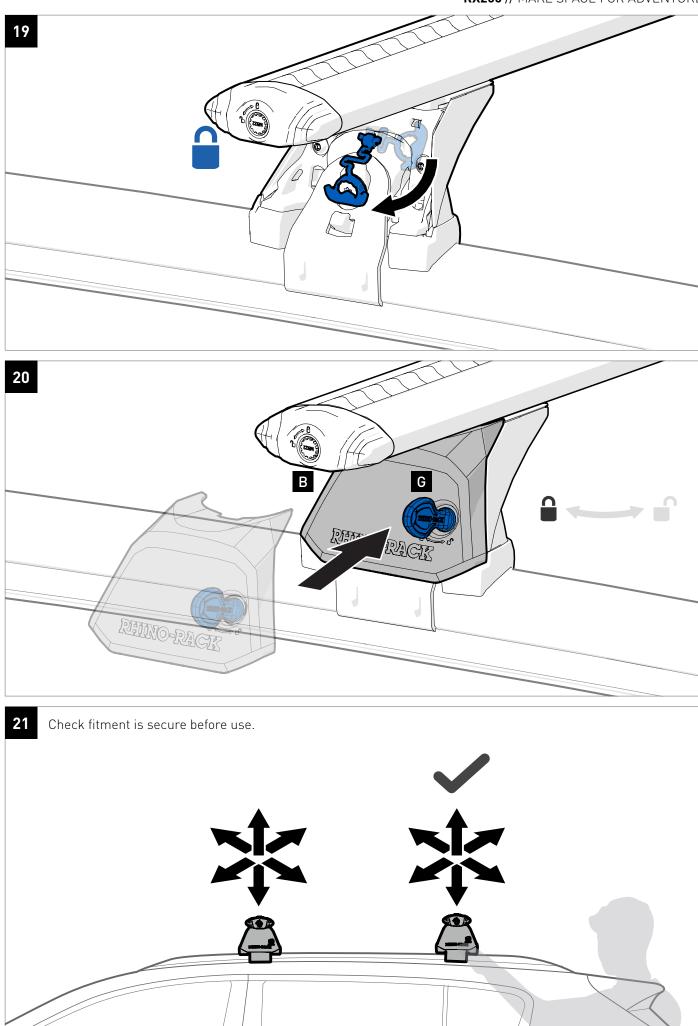

Page 14 of 15

NOTES



RHINORACK.COM

Rhino-Rack AUSTRALIA

22A Hanson Pl, Eastern Creek, NSW, 2766

Rhino-Rack USA

19822 East 22nd Ave, Aurora, CO, 80011