


Important:	1. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
	2. Check the contents of kit before commencing fitment and report any discrepancies.
	3. Place these instructions in the vehicle's glove box after installation is complete.
	4. These instructions must be followed for warranty to be upheld.

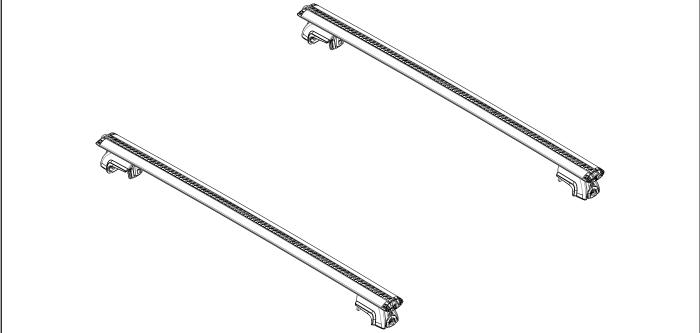

Maximum carrying capacity: 80kg (176lbs) evenly distributed over crossbars.

On Road Cargo Allowance	Off Road Cargo Allowance	Roof Allowance	Rack Weight
75kg / 165lb	50kg / 110lbs	80kg / 176lbs	5kg / 11lb

Advisory:

It is essential that all bolt connections be checked after 48hrs from when you first install your crossbars. Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are refitted. Make sure to fasten your load securely (see page 2 for advisory diagrams). Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.

Caution:


- The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking. Please remove crossbars when putting vehicle through an automatic car wash.
- In heavy winds and high vehicle speeds, increased wind noise may be experienced within the cabin. Roof racks are designed to be quickly and easily removed should the noise level become annoying.
- When fitting to vehicle with moonroof, the roof bars have approximately 10mm clearance. After loading up your roof bars always check the moonroof has clearance during operation. If not, remove crossbars.


Note for Dealers and Fitters:It is your responsibility to ensure instructions are given to the end user or client. Rhino-Rack 3 Pike Street, Rydalmere, Document No: R1476 Fit Time: 25min NSW 2116, Australia. Prepared By: Kayle Everett Issue No: 01 (Ph) (02) (02) 8846 1900 Authorised By: Chris Murty Issue Date: 21/09/2017

(Fax) (02) 9638 4822


These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.



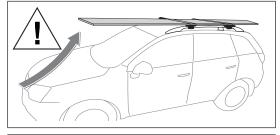


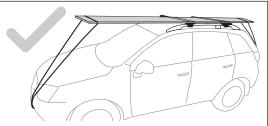

 


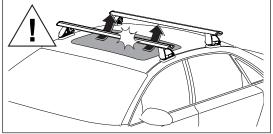




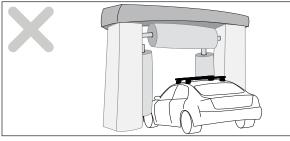







Crossbar System.

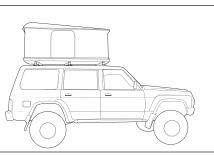


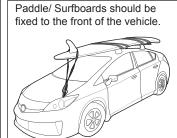


WARNING! Important Load Carrying Instructions

    
With utility vehicles, the cabin and the canopy move independently. Roofracks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roofracks or the canopy roofracks.














   Kayaks should use additional straps to secure the load at the front and rear of the vehicle where possible. Always use Kayak Carrier Cradles when transporting Kayaks on the roof.










Optimal Setup:


The Kayak should be housed in Cradles and held in place with tension straps.

The front and rear of the Kayak should be fixed to the front and rear of the vehicle. A Nose Tie Down (RBAS1) should be used to secure the front of the Kayak.

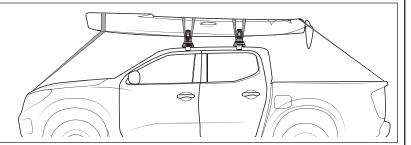



Parts Required

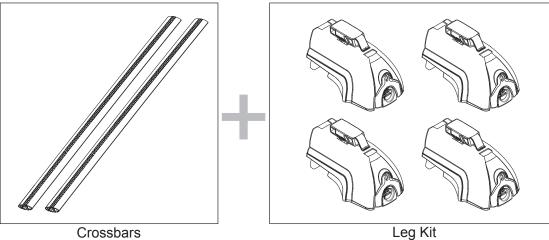


Crossbars (VA126S, VA126B Sold as separate)

Parts List

Item	Component Name	Qty	Part No.
1	Leg Unit (CA1817)	4	M712
2	Rubber Insert	4	M817
3	Clamp Assembly	4	CA1579
4	Rubber Boot	4	M816
5	Outer Clamp	4	CA1574
6	Dowel Nut	4	-
7	Adjustment Rod	4	SP222
8	Metal Key	2	-
9	Instructions	1	R1476


Tools Required:


Tape measure. Scissors. Knife.

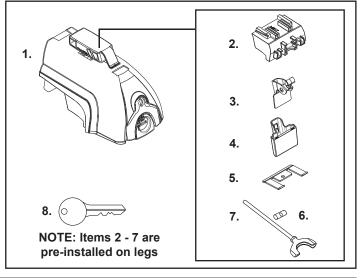


Instructions

Open the Crossbar box and remove the contents. Shake the crossbar up and down to remove measurement strips and rubber buffer strips. Crossbars sold separate.

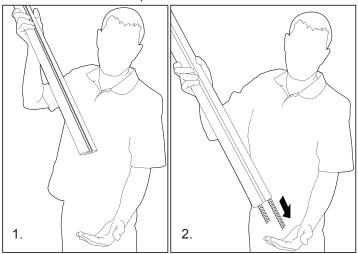


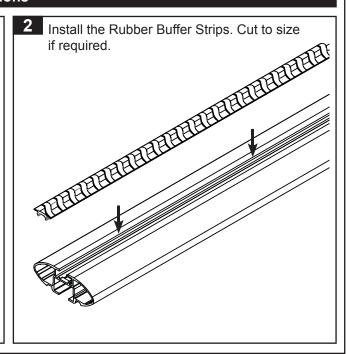




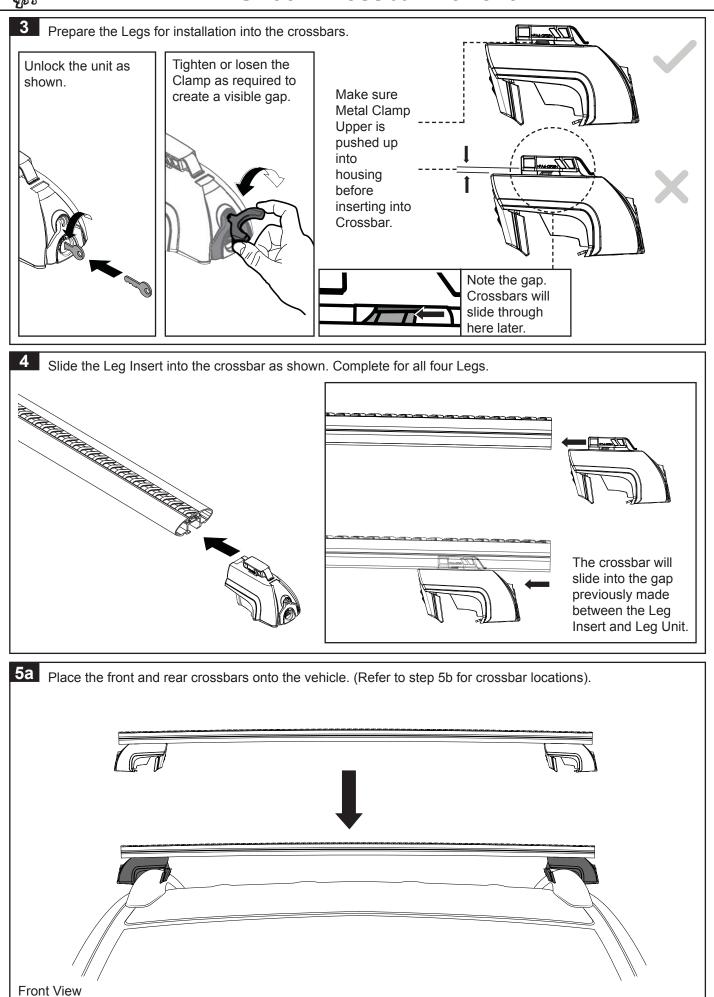




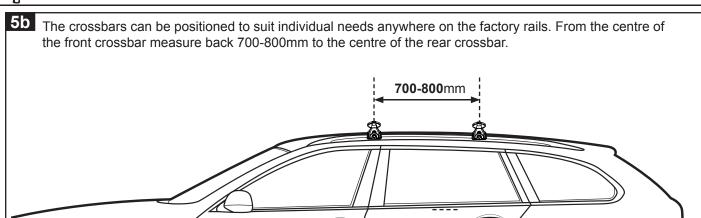


Be sure the Leg is sitting snug with the factory rail as shown. The Rubber Insert must be in contact with the rail completely along its surface. The Outer Clamp must be gripping on the underside of the rail and the Clamp Assembly should be gripping the rear of the rail as shown.

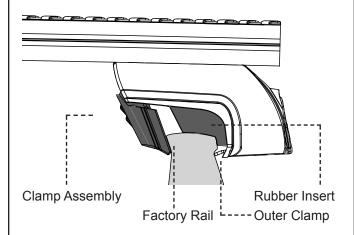


Measure from the end of the crossbar to the rear of the Leg on both sides. Adjust so both measurements are even.

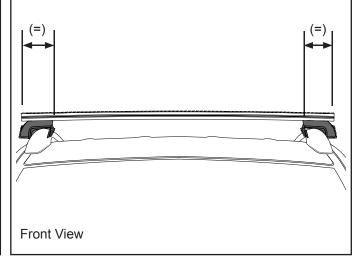


7 Tighten the Legs to 5Nm in place. Lock the Leg with Metal Key provided.

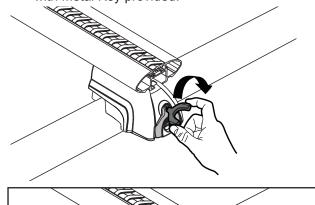

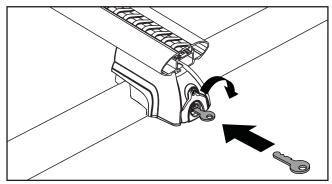

Measure the gap on the underside of the Crossbars. Accurately cut the underbar strips to match.

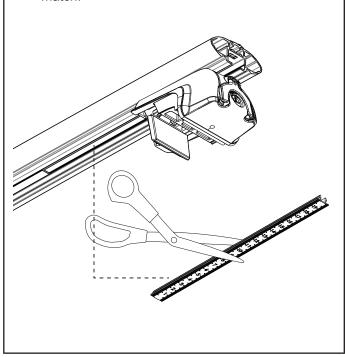



With the Underbar Strips cut to the required lengths, install them into the Crossbars. 1: Slide one end into the place behind the Leg. 2: Push the Underbar Strip up and into place along its length. 3: Be sure Strip is secure. Note: The Underbar Strips will ensure the Crossbars do not create a 'whistling' noise at speed.

