

6 Series Pioneer Platform


62100 - 62105, 62107 - 62113

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 30 mins



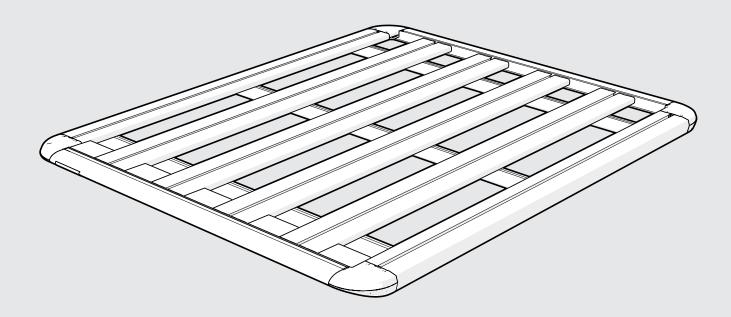

Thank you for choosing Rhino-Rack!




WELCOME TO THE HERD.


For peace of mind register your product by heading to rhinorack.com/register



RHINORACK.COM

Doc. No: 520-RFI-00132 Issue No: 05 Issue Date: 20/06/2025

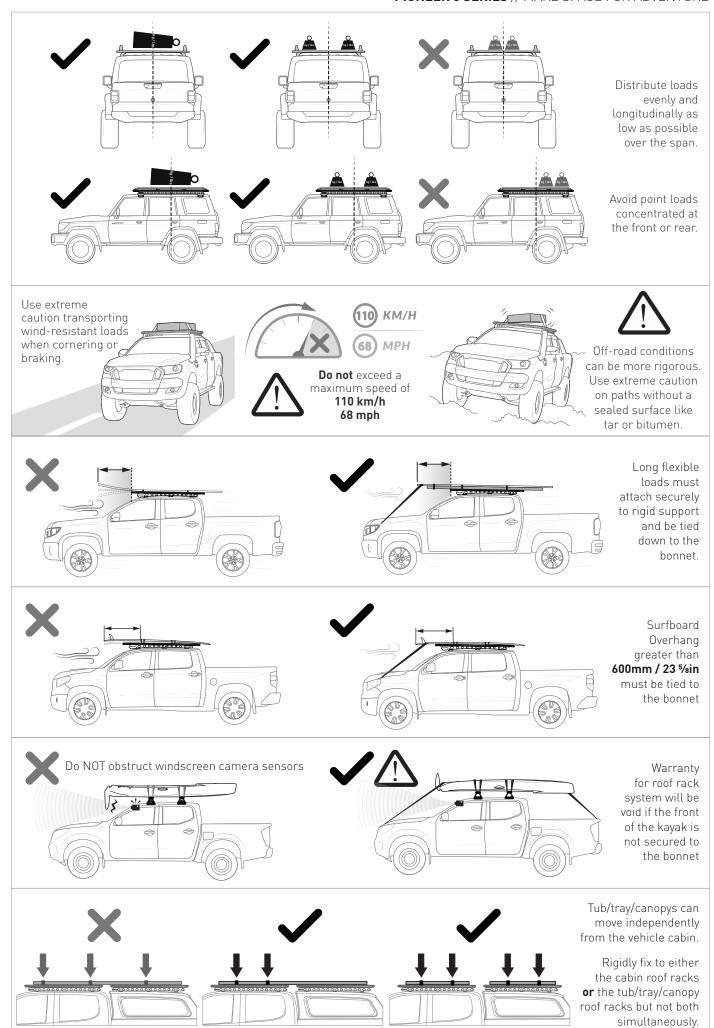

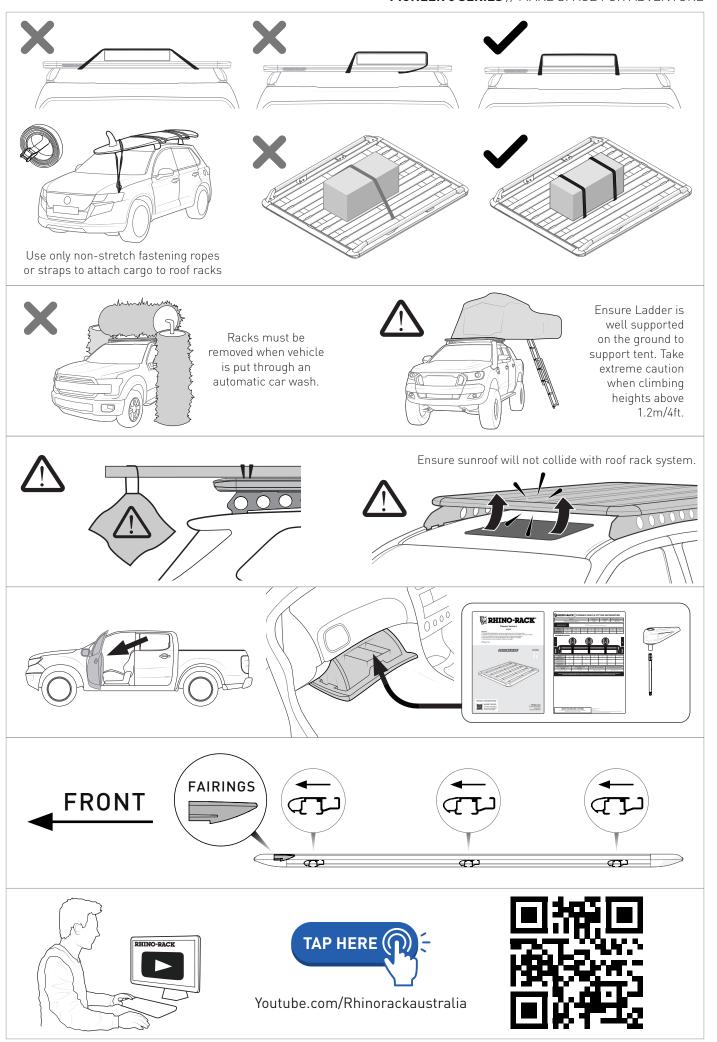

Carrying Capacity

Check the website and the vehicle owners hand book for your vehicle manufacturer's maximum carrying capacity. Load must be evenly distributed over the system.





Cargo Load Limit

Total permissible weight allowed on top, and attached to the rack whilst the vehicle is in motion.



System Weight

Total weight of the rack system. (e.g. Crossbars, Backbone, Platform)



Max System Load Capacity

Please ensure you use the vehicle manufacturer's maximum roof allowance if it is lower than the figure listed in the fitting chart/supplement.



Vehicle Manufacturer's Load Limit

Total permissible weight attached to the rack. This is inclusive of the weight of the rack system.

In Service Maintenance Checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:







Note for Dealers and Fitters

It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Warranty


We love creating our products for you and hope you love using them too. For complete peace of mind, register your product at www.rhinorack.com/warranty. This way, we can quickly help you with any future approved fitment warranty claims.

And remember – never to forget to **Make Space For Adventure!**




 


Parts List

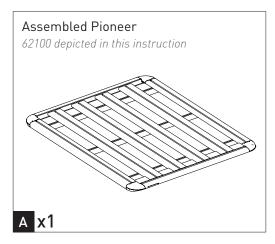

 


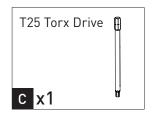










TOOLS REQUIRED:

- **T1** Measuring Tape
- T2 Pencil / Marker
- T3 Tin Snips / Cutters
- **T4** 13mm Socket Wrench / Spanner (for Backbone fitments)
- **T5** Flathead screwdriver (for FRONT mounted Accessories)


Platform Sizes

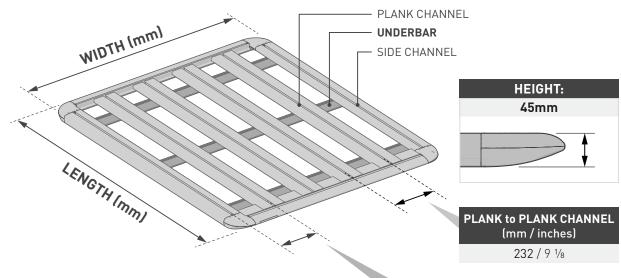


MODEL	LENGTH (mm / inches)	WIDTH (mm / inches)	PLANKS	UNDERBARS	SIDE to PLANK CHANNEL (mm / inches)	APPROX. WEIGHT (kg / lbs)	
62112	900 / 35 7/16	1430 / 56 5/16	5	2	193 / 7 %	12.5 / 27.6	
62115*	1100 / 43 5/16	1430 / 56 5/16	5	3	193 / 7 %	15.6 / 34.4	
62109	1300 / 51 ³ / ₁₆	1240 / 48 ¹³ / ₁₆	4	3	214 / 8 7/16	14.8 / 32.6	
62110	1300 / 51 ³ / ₁₆	1380 / 54 5/16	5	3	168 / 6 %	16.9 / 37.3	
62111	1300 / 51 ³ / ₁₆	1430 / 56 5/16	5	3	193 / 7 %	17.1 / 37.7	
62100	1500 / 59 1/16	1240 / 48 13/16	4	3	214 / 8 7/16	16.2 / 35.7	
62101	1500 / 59 1/16	1380 / 54 5/16	5	3	168 / 6 %	18.6 / 41.0	
62113	1500 / 59 1/16	1430 / 56 5/16	5	3	193 / 7 %	18.8 / 41.4	
62114*	1500 / 59 1/16	1580 / 62 ³ / ₁₆	5	3	268 / 10 %16	19.6 / 43.2	
62108	1800 / 70 1/8	1430 / 56 5/16	5	5	193 / 7 %	23.9 / 52.7	
62102	1900 / 74 ¹³ / ₁₆	1240 / 48 ¹³ / ₁₆	4	5	214 / 8 7/16	21.4 / 47.2	
62103	1900 / 74 ¹³ / ₁₆	1380 / 54 5/16	5	5	168 / 6 %	24.5 / 54.0	
62107	2100 / 82 11/16	1240 / 48 ¹³ / ₁₆	4	5	214 / 8 7/16	22.8 / 50.3	
62104	2100 / 82 11/16	1430 / 56 5/16	5	5	193 / 7 %	26.5 / 58.4	
62106*	2500 / 98 7/16	1580 / 62 ³ / ₁₆	5	6	268 / 10 %16	32.5 / 71.7	
62105	2700 / 106 ⁵ /16	1472 / 57 ¹⁵ / ₁₆	5	7	214 / 8 7/16	34.4 / 75.8	

Compatibility


COMPLETE BACKBONE / RD TOWER INSTRUCTIONS FIRST BEFORE COMMENCING PLATFORM INSTALLATION

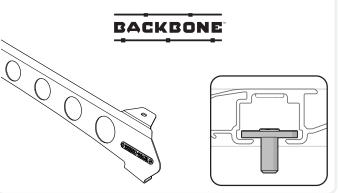


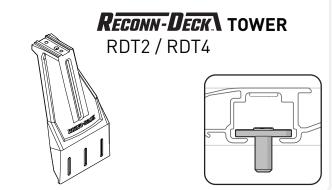


COMPLETE PLATFORM UNDERBAR SETUP BEFORE INSTALLING LEGS TO PLATFORM

  
LEGS

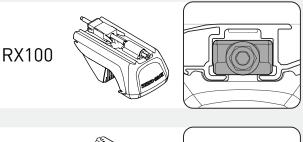

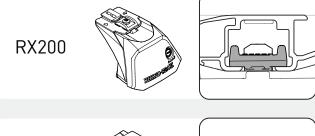

 




 















IMPORTANT NOTE:

Compatibility of the above components is vehicle dependant. Please check viable fitments for your vehicle by following the "Fit My Vehicle" journey online.




If fitting **RX100 LEG** and drilling is required, refer to **NOTE 1** on **Page 14**

 
Applies to limited fitments



 
to FRONT channels, refer to NOTE 2 on Page 14




If fitting an ACCESSORY without ZWIFLOC, hardware, refer to NOTE 3 on Page 16

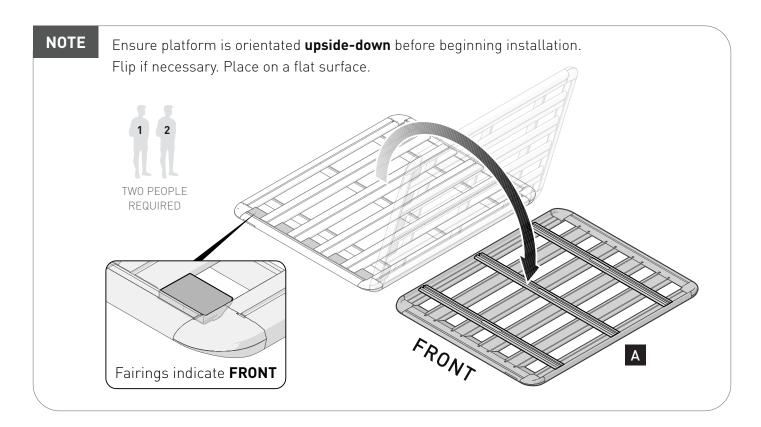


BEGIN INSTALLATION

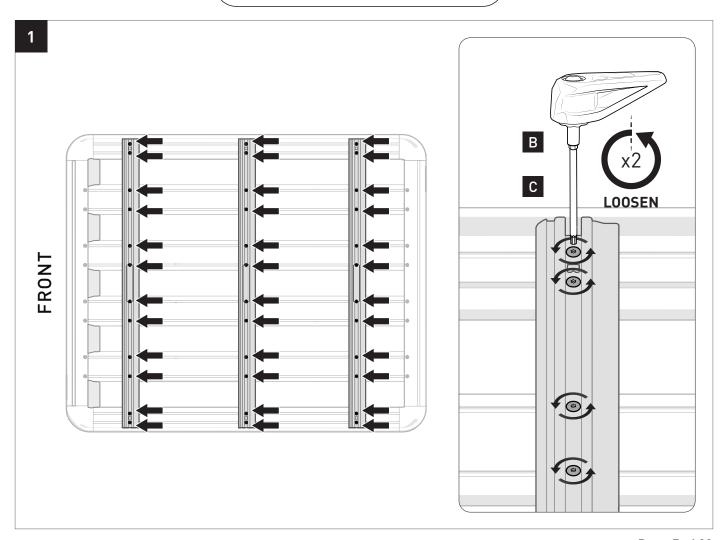

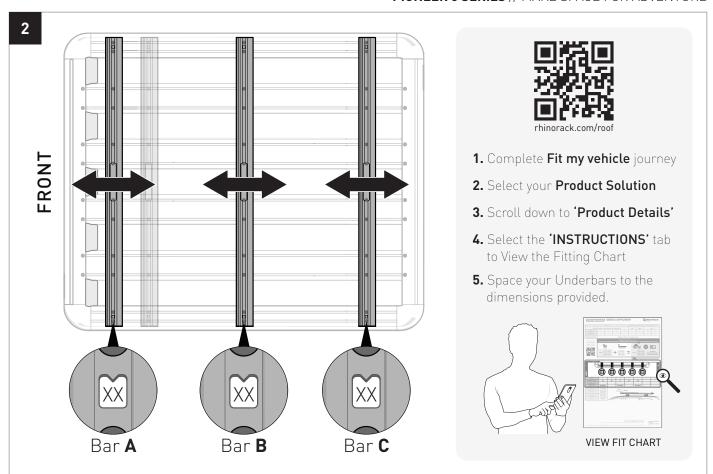


NOTE: Refer to your *Vehicle Specific Pioneer Fit Chart* for your underbar position. The number of underbars varies between platforms.

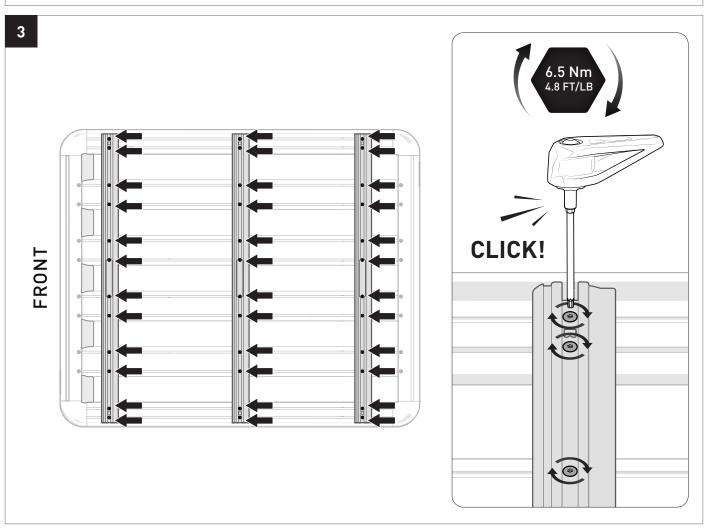



PAGE 6 for possible leg fitments


PIONEER 6 SERIES // MAKE SPACE FOR ADVENTURE FOR INSTALLATION WITH **LEGS**: **RL** RR FL **FR** FRONT INSTALL ACCORDING TO <u>LEG</u> INSTRUCTIONS **FRONT VIFW** AND PIONEER FITTING CHART NOTE: Refer to COMPATIBILITY Section on




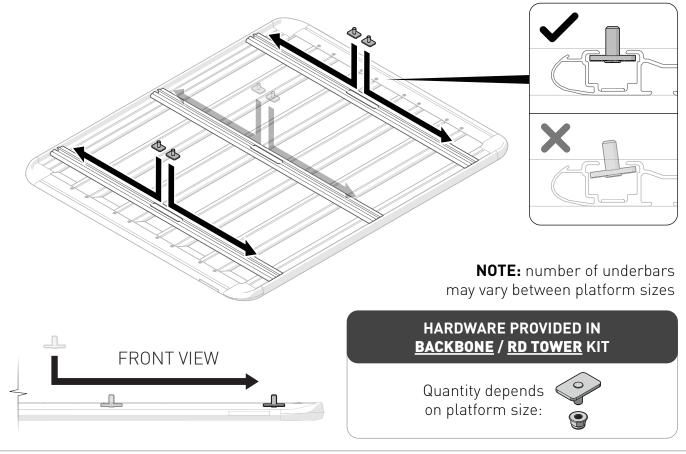


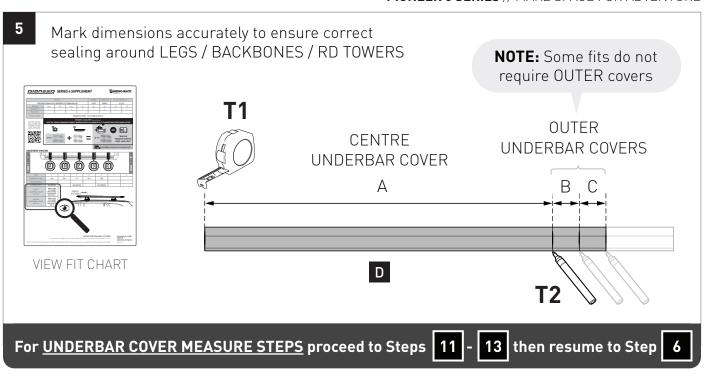

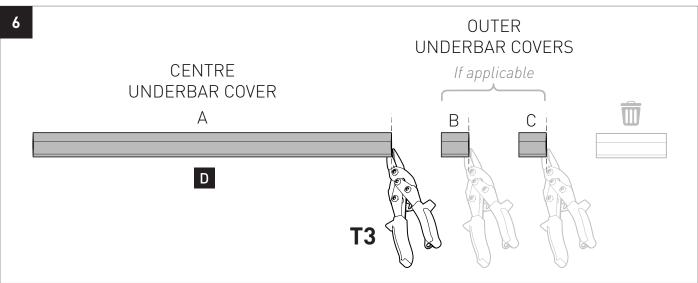

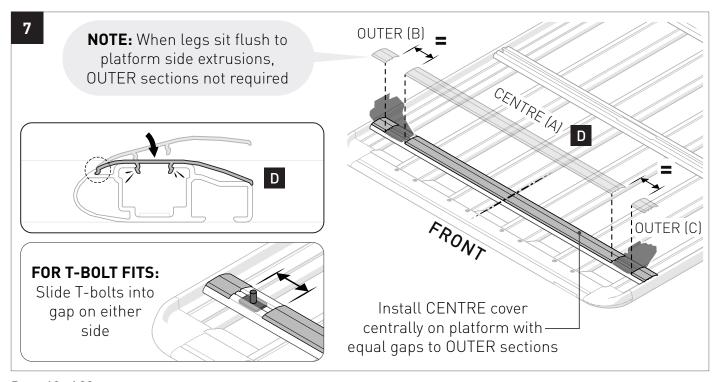


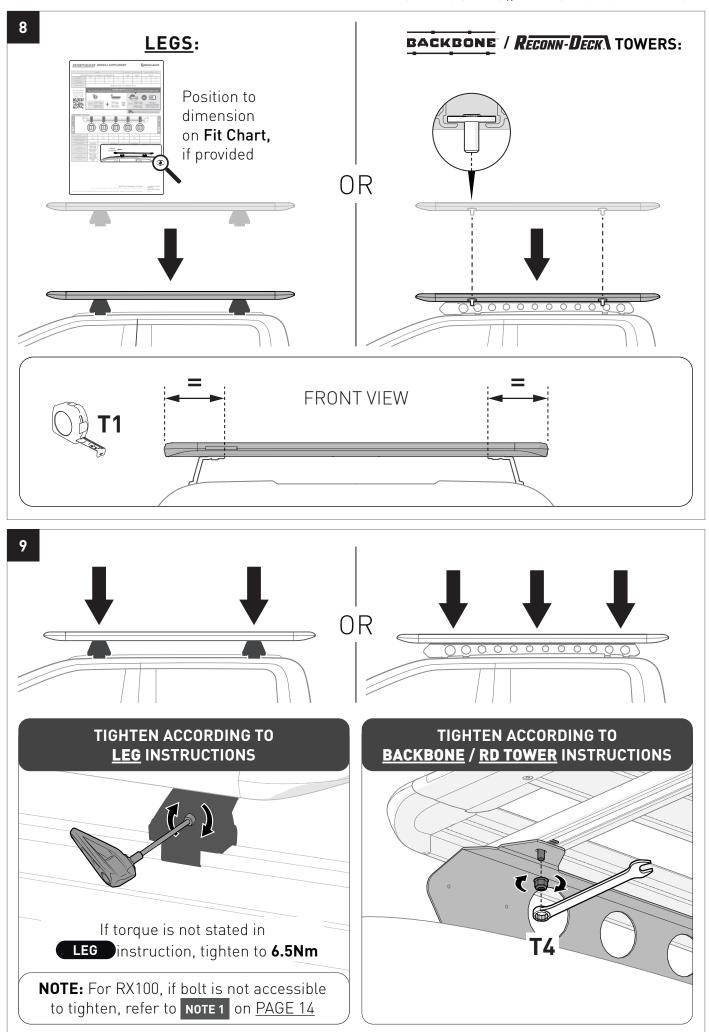


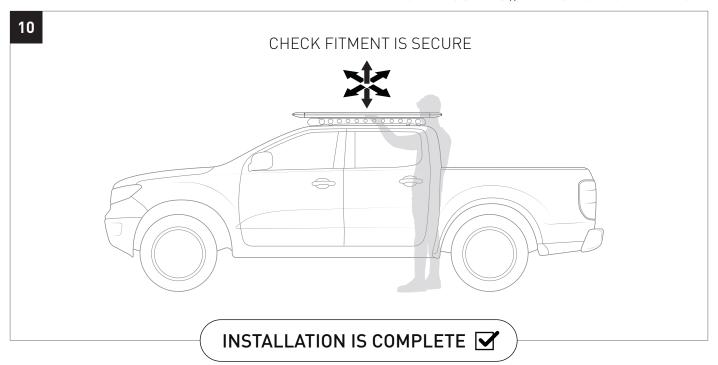


UNDERBAR COVER MEASURE STEPS


Complete Steps 11 - 13 then resume to Step

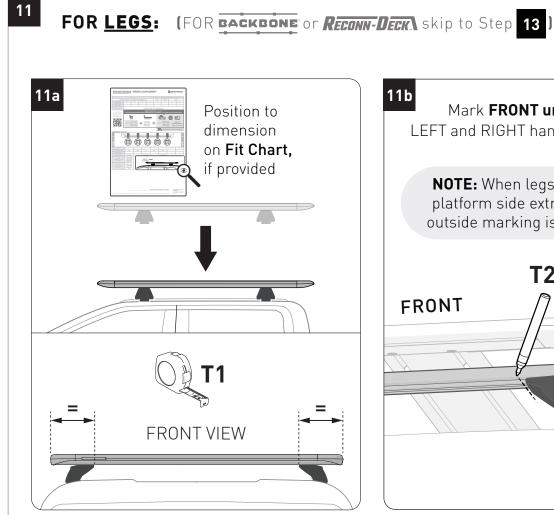


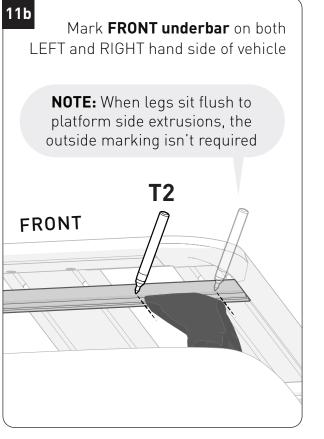


Page 12 of 20

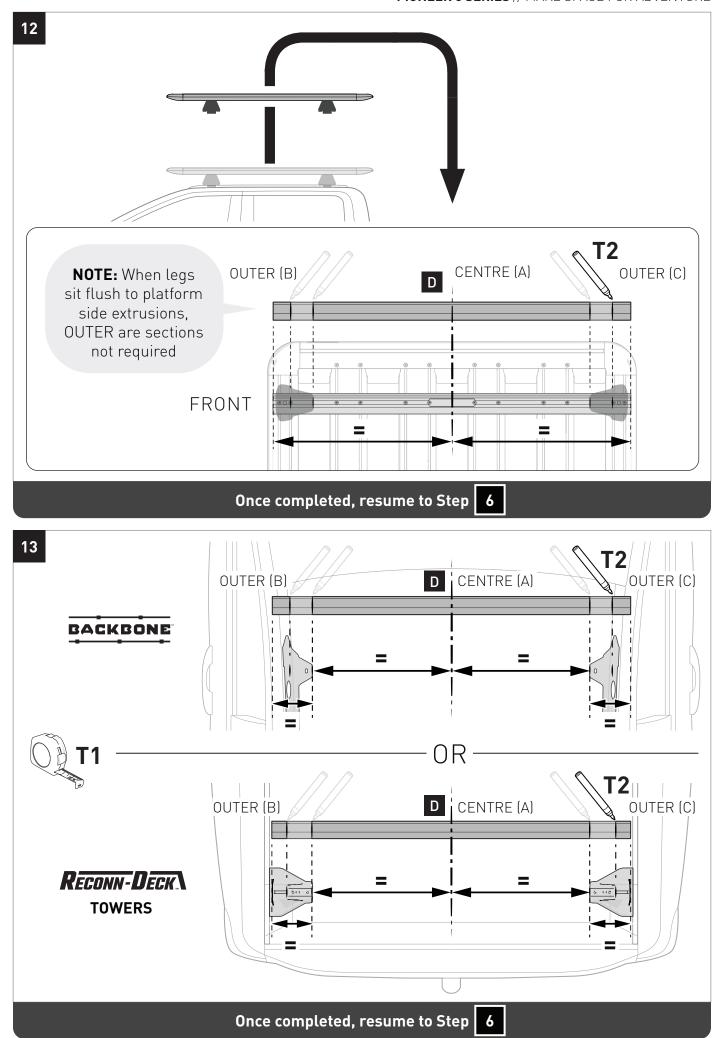

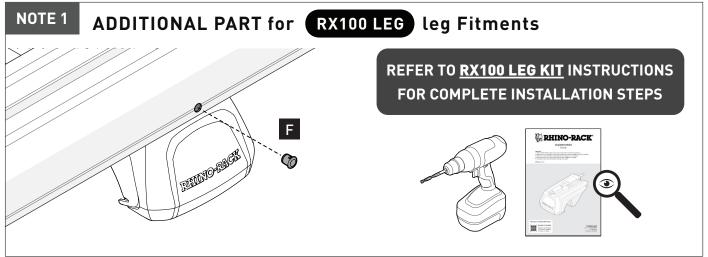


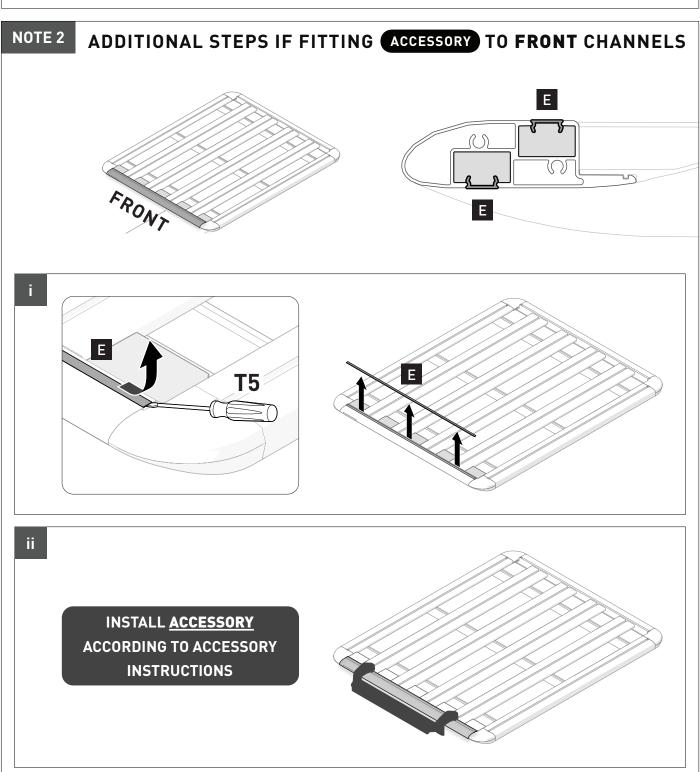

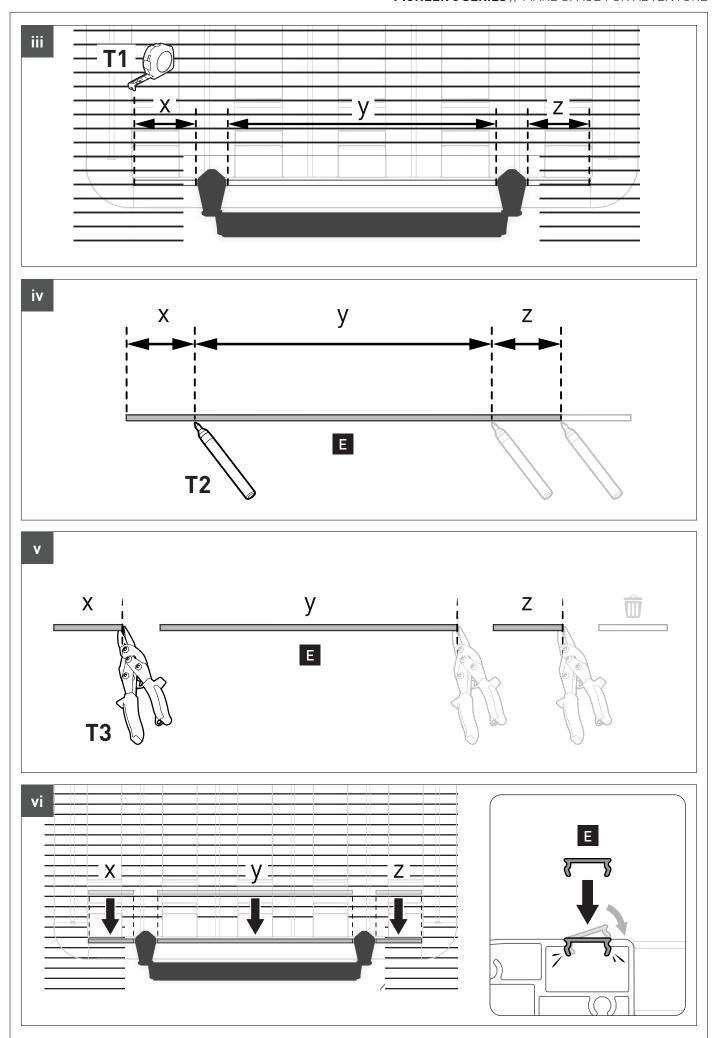


NOTE 3 ADDITIONAL STEPS IF FITTING ACCESSORY WITHOUT ZWIFLOC...


Non-Zwifloc hardware cannot be placed into channels directly.

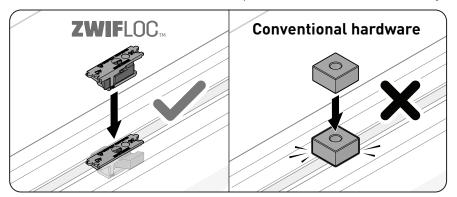



Perimeter channel openings can be accessed via platform corners

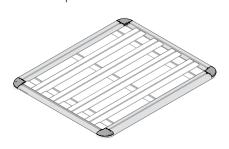

TO GAIN ACCESS TO CHANNEL OPENINGS:

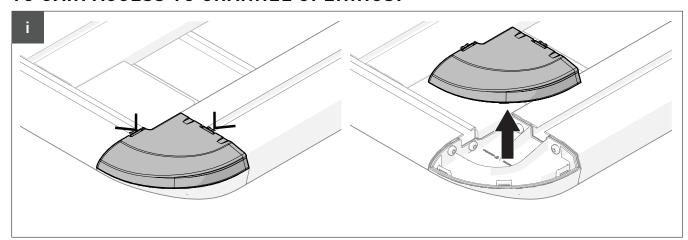

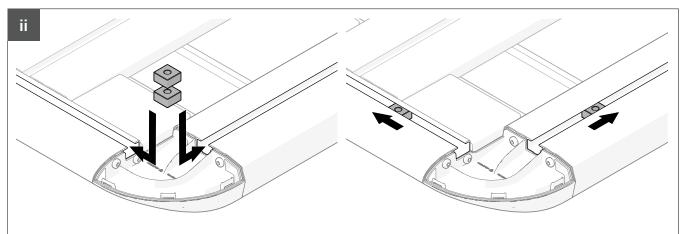

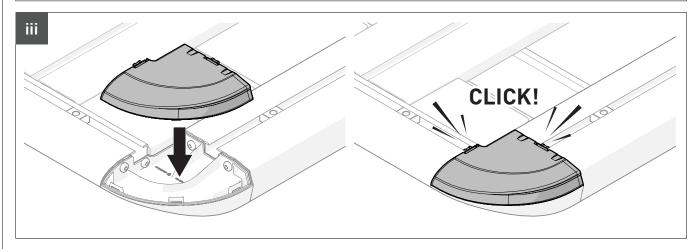

NOTES

NOTES

NOTES



RHINORACK.COM

Rhino-Rack AUSTRALIA

22A Hanson Place, Eastern Creek, NSW, 2766

Rhino-Rack USA

19822 E. 22nd Avenue, Unit B, Aurora, CO 80011