

6 Series Pioneer Platform (FLAT PACK)


62100F - 62115F

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 30 mins



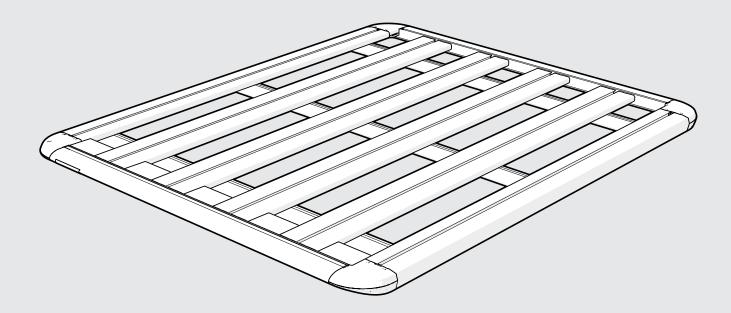

Thank you for choosing Rhino-Rack!



WELCOME TO THE HERD.

For peace of mind register your product by heading to rhinorack.com/register





RHINORACK.COM

Doc. No: 520-RFI-00159 Issue No: 06 Issue Date: 20/06/2025

CONTENTS

3	Important Usage Notes And Warnings
5	Carrying Capacity
5	In Service Maintenance Checks
5	Warranty
6	Leg Compatibility
7	Parts
7	Tool Required
8	Variable Parts Table
8	Platform Sizes
9	Platform Assembly (Steps A1- A21)
16	Platform Installation (Steps 1-13)
18	Leg Installation
21	Underbar Cover Measurement Steps
23	RX100 Installation Note
23	Fitting Accessories To Front Channel
25	Fitting Accessories Without Zwifloc
26	Note Taking Space

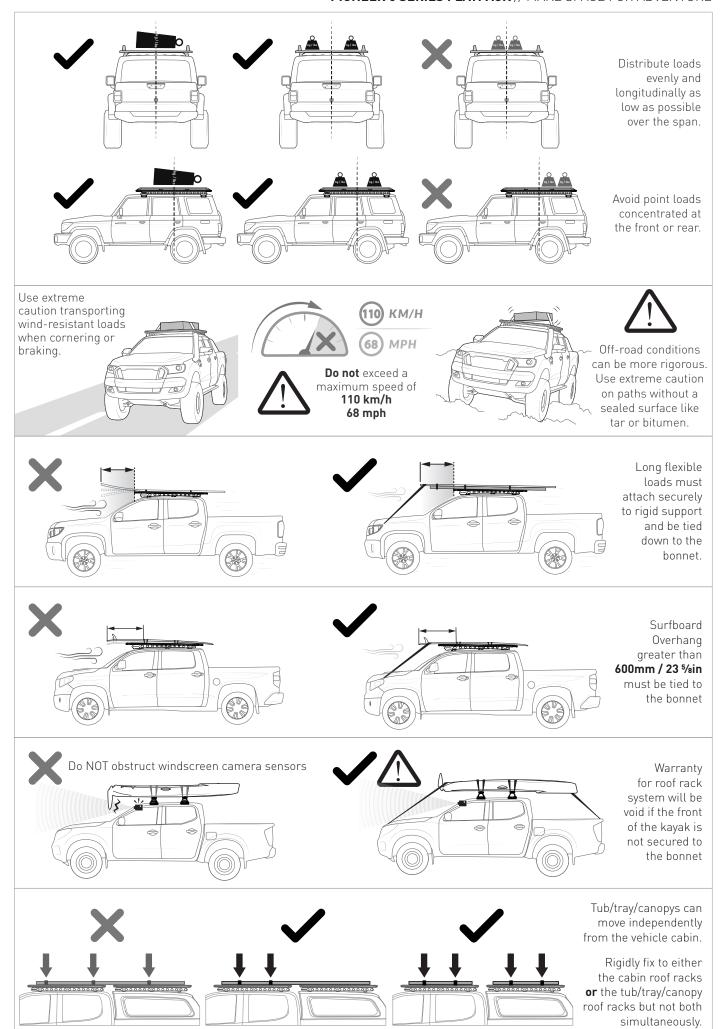

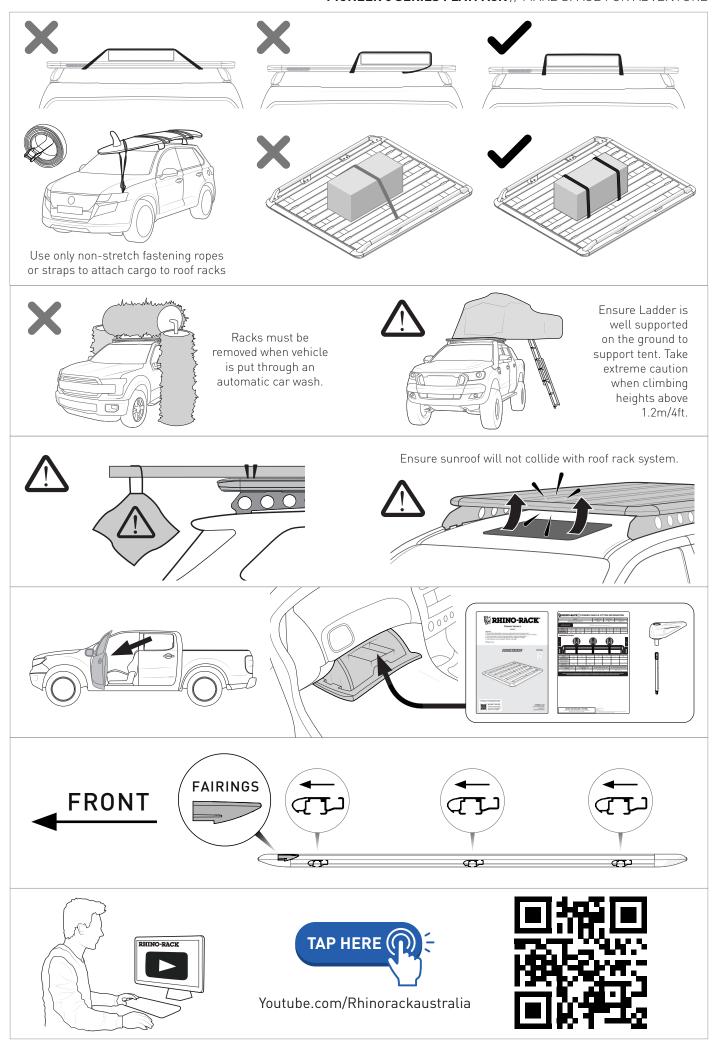

Carrying Capacity

Check the website and the vehicle owners hand book for your vehicle manufacturer's maximum carrying capacity. Load must be evenly distributed over the system.





Cargo Load Limit

Total permissible weight allowed on top, and attached to the rack whilst the vehicle is in motion.



System Weight

Total weight of the rack system. (e.g. Crossbars, Backbone, Platform)



Max System Load Capacity

Please ensure you use the vehicle manufacturer's maximum roof allowance if it is lower than the figure listed in the fitting chart/supplement.



Vehicle Manufacturer's Load Limit

Total permissible weight attached to the rack. This is inclusive of the weight of the rack system.

In Service Maintenance Checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:







Note for Dealers and Fitters

It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Warranty

We love creating our products for you and hope you love using them too. For complete peace of mind, register your product at www.rhinorack.com/warranty. This way, we can quickly help you with any future approved fitment warranty claims.

And remember – never to forget to **Make Space For Adventure!**






Compatibility


COMPLETE <u>BACKBONE</u> / <u>RD TOWER</u> INSTRUCTIONS FIRST BEFORE COMMENCING PLATFORM INSTALLATION




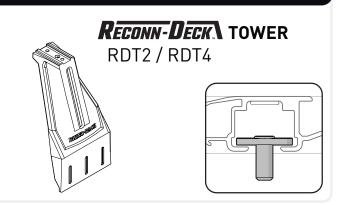


COMPLETE PLATFORM UNDERBAR SETUP BEFORE INSTALLING <u>LEGS</u> TO PLATFORM

 LEGS

 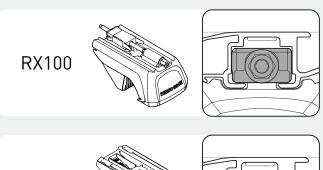


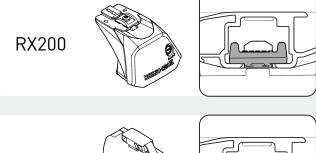

 














IMPORTANT NOTE:


Compatibility of the above components is vehicle dependant. Please check viable fitments for your vehicle by following the "Fit My Vehicle" journey online.











Parts

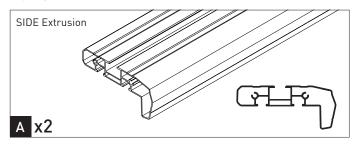


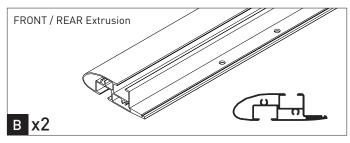


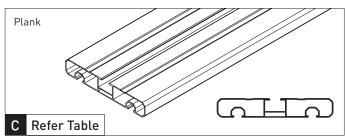


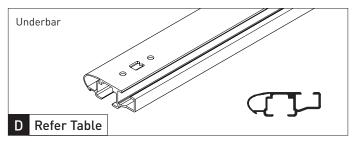


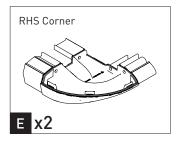


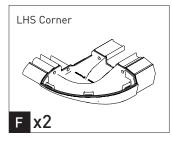


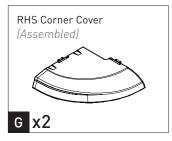

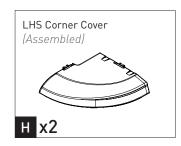


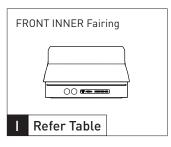


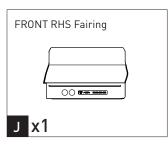


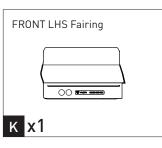





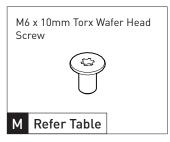


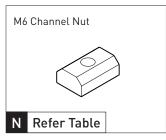

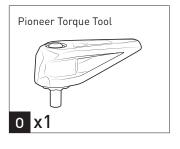


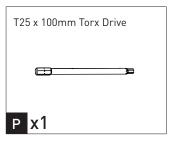

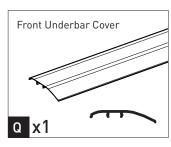

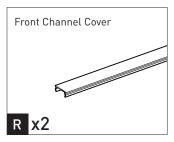



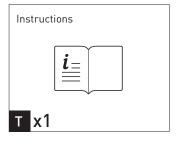


TOOLS REQUIRED:

- T1 Power Drill
- **T2** Measuring Tape
- T3 Pencil / Marker
- T4 Tin Snips / Cutters
- T5 13mm Socket Wrench / Spanner (for Backbone fitments)
- **T6** Flathead screwdriver (for FRONT mounted Accessories)


Variable Parts Table


	c c			M	N	S
62100F	4	3	3	52	52	6
62101F	5	3	4	62	62	6
62102F	4	5	3	76	76	6
62103F	5	5	4	90	90	6
62104F	5	5	4	90	90	N/A
62105F	5	7	4	118	118	N/A
62106F	5	6	4	104	104	N/A
62107F	4	5	3	76	76	N/A
62108F	5	5	4	90	90	N/A
62109F	4	3	3	52	52	6
62110F	5	3	4	62	62	6
62111F	5	3	4	62	62	6
62112F	5	2	4	48	48	N/A
62113F	5	3	4	62	62	N/A
62114F	5	3	4	62	62	N/A
62115F	5	3	4	62	62	N/A

Platform Sizes

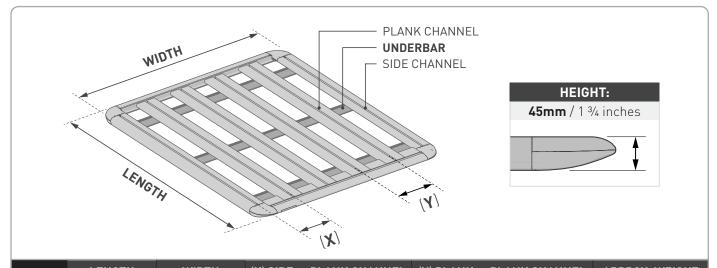



MODEL	LENGTH (mm / inches)	WIDTH (mm / inches)	(X) SIDE to PLANK CHANNEL (mm / inches)	(Y) PLANK to PLANK CHANNEL (mm / inches)	APPROX. WEIGHT (kg / lbs)
62112F	900 / 35 7/16	1430 / 56 5/16	193 / 7 5/8	232 / 9 1/8	12.5 / 27.6
62115F	1100 / 43 5/16	1430 / 56 5/16	193 / 7 5/8	232 / 9 1/8	15.6 / 34.4
62109F	1300 / 51 3/16	1240 / 48 13/16	214 / 8 7/16	232 / 9 1/8	14.8 / 32.6
62110F	1300 / 51 3/16	1380 / 54 5/16	168 / 6 %	232 / 9 1/8	16.9 / 37.3
62111F	1300 / 51 3/16	1430 / 56 5/16	193 / 7 %	232 / 9 1/8	17.1 / 37.7
62100F	1500 / 59 ½16	1240 / 48 ¹³ / ₁₆	214 / 8 7/16	232 / 9 1/8	16.2 / 35.7
62101F	1500 / 59 ½16	1380 / 54 5/16	168 / 6 %	232 / 9 1/8	18.6 / 41.0
62113F	1500 / 59 ½16	1430 / 56 5/16	193 / 7 %	232 / 9 1/8	18.8 / 41.4
62114F	1500 / 59 ½16	1580 / 62 3/16	268 / 10 %16	232 / 9 1/8	19.6 / 43.2
62108F	1800 / 70 1/8	1430 / 56 5/16	193 / 7 %	232 / 9 1/8	23.9 / 52.7
62102F	1900 / 74 ¹³ / ₁₆	1240 / 48 ¹³ / ₁₆	214 / 8 7/16	232 / 9 1/8	21.4 / 47.2
62103F	1900 / 74 ¹³ / ₁₆	1380 / 54 5/16	168 / 6 1/8	232 / 9 1/8	24.5 / 54.0
62107F	2100 / 82 11/16	1240 / 48 ¹³ / ₁₆	214 / 8 7/16	232 / 9 1/8	22.8 / 50.3
62104F	2100 / 82 11/16	1430 / 56 5/16	193 / 7 %	232 / 9 1/8	26.5 / 58.4
62106F	2500 / 98 7/16	1580 / 62 ³ / ₁₆	268 / 10 %16	232 / 9 1/8	32.5 / 71.7
62105F	2700 / 106 5/16	1472 / 57 ¹⁵ / ₁₆	214 / 8 7/16	232 / 9 1/8	34.4 / 75.8

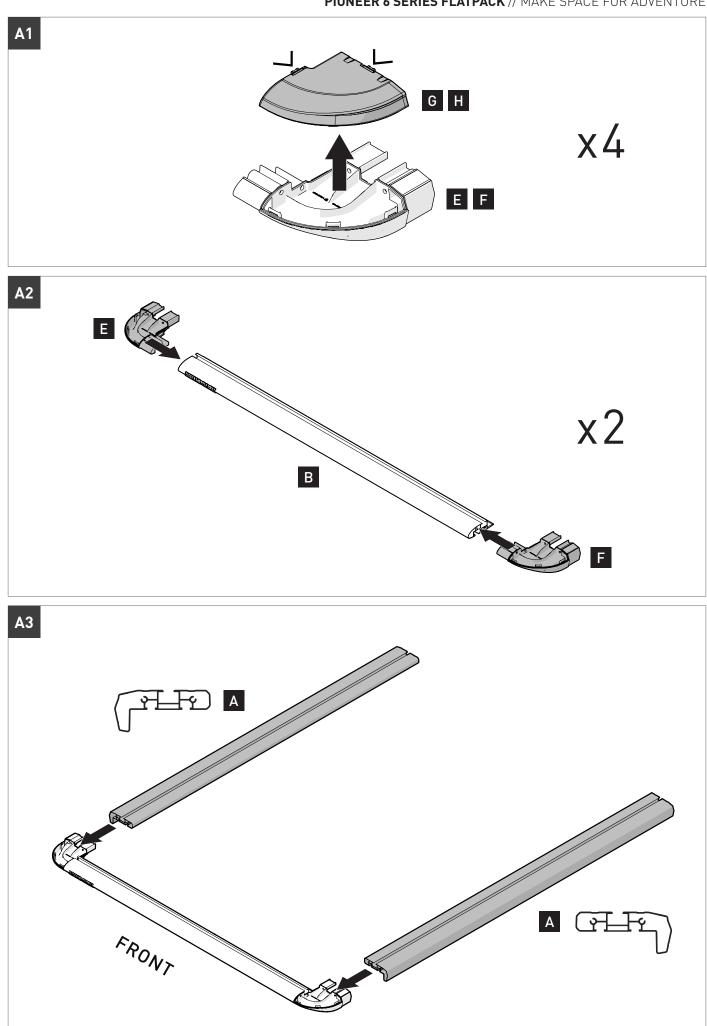

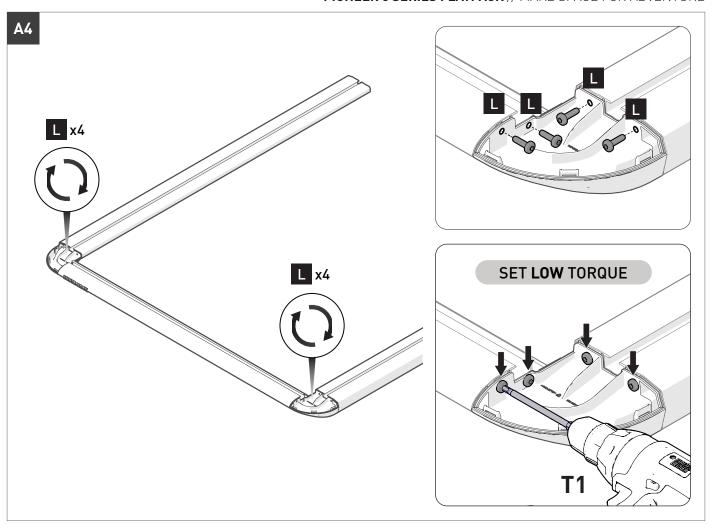





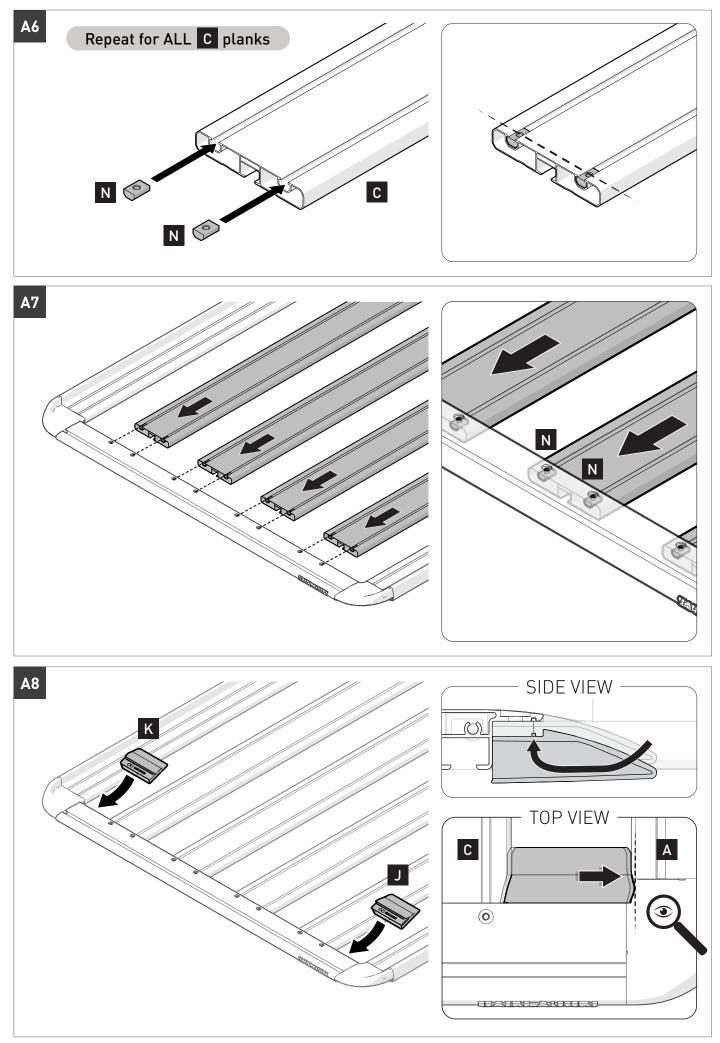


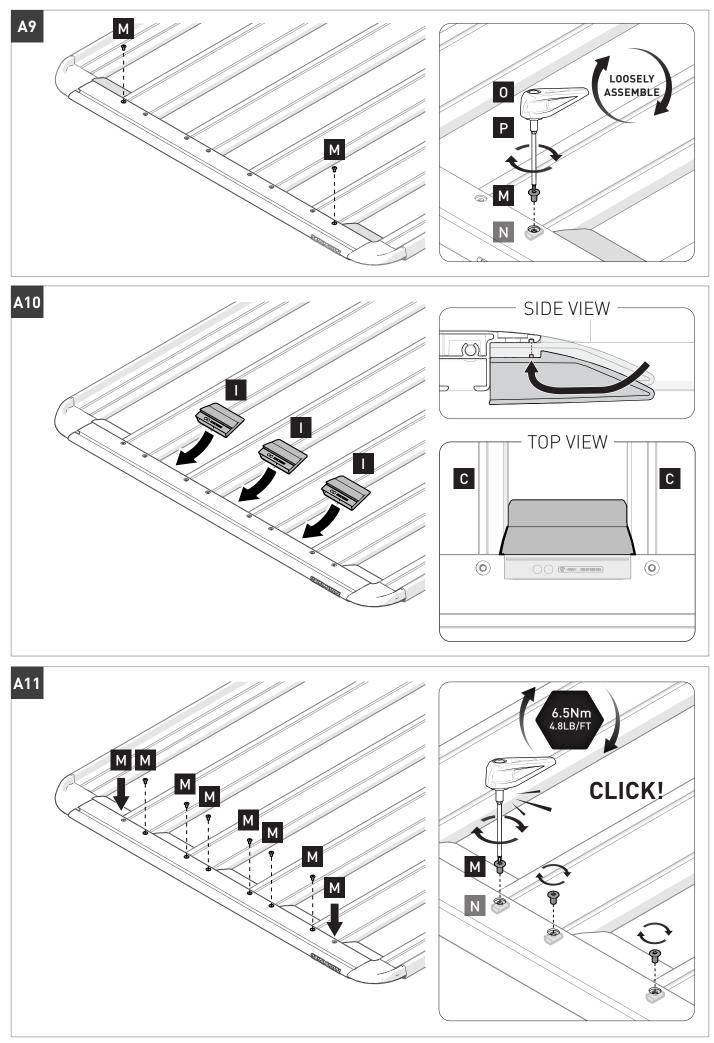



Page 12 of 29

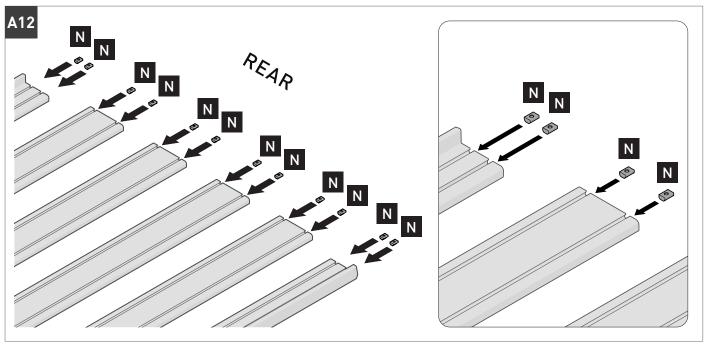


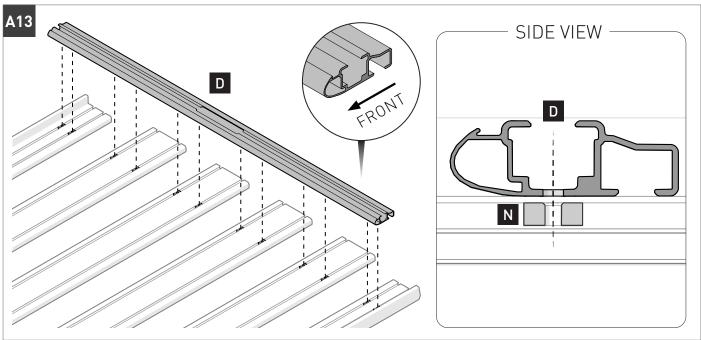


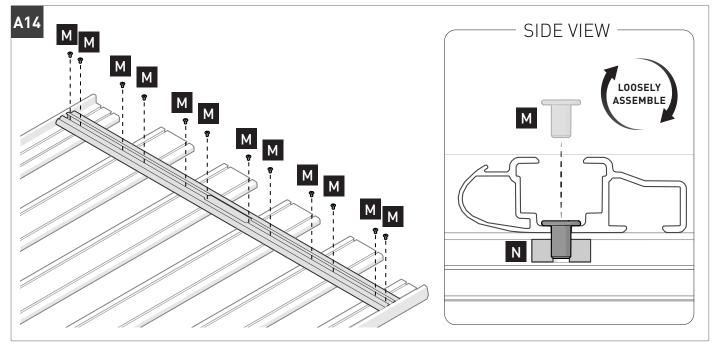

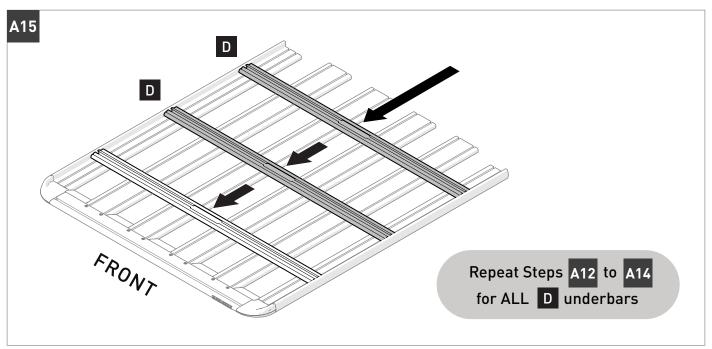


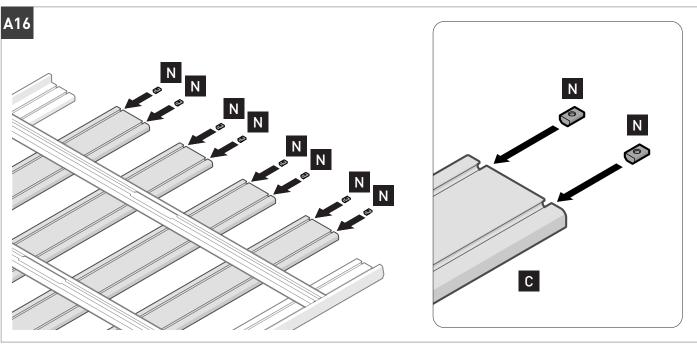


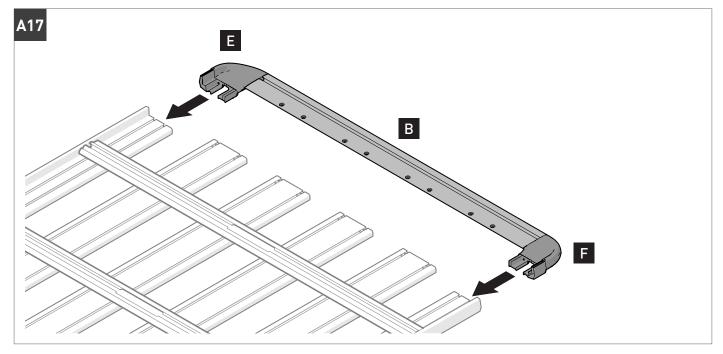


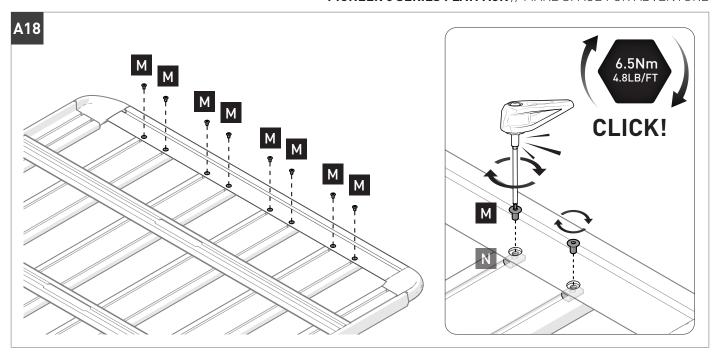





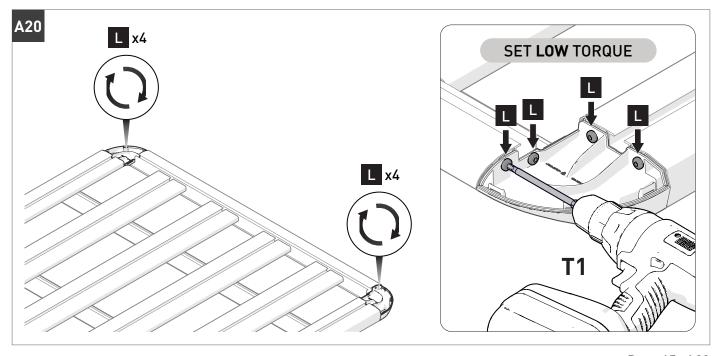


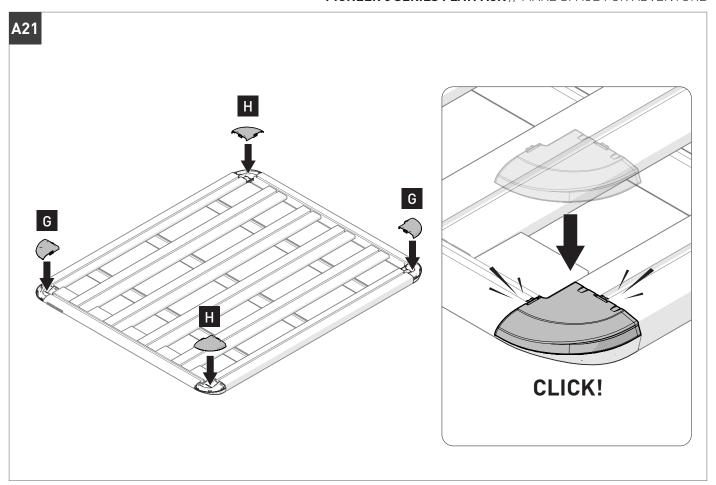

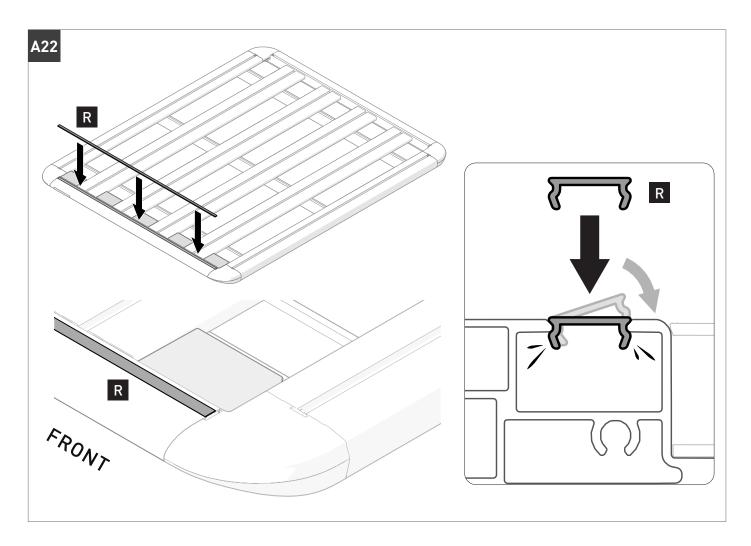


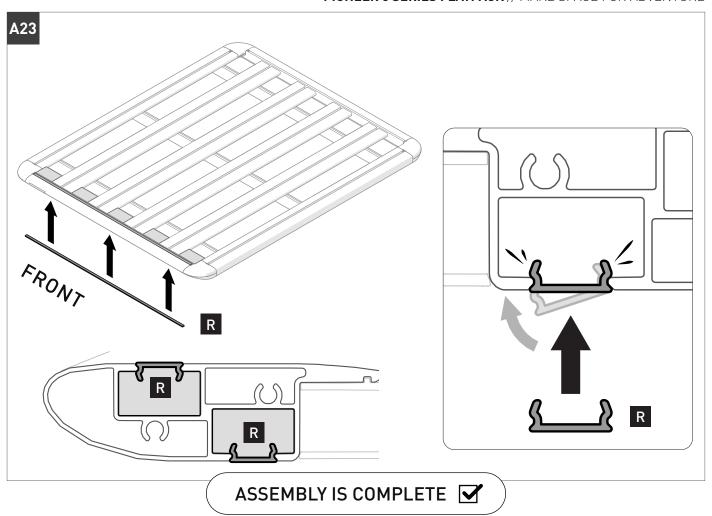

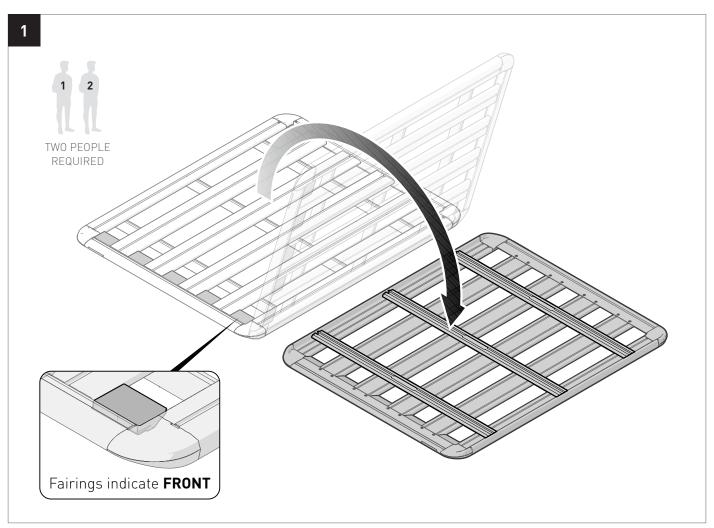

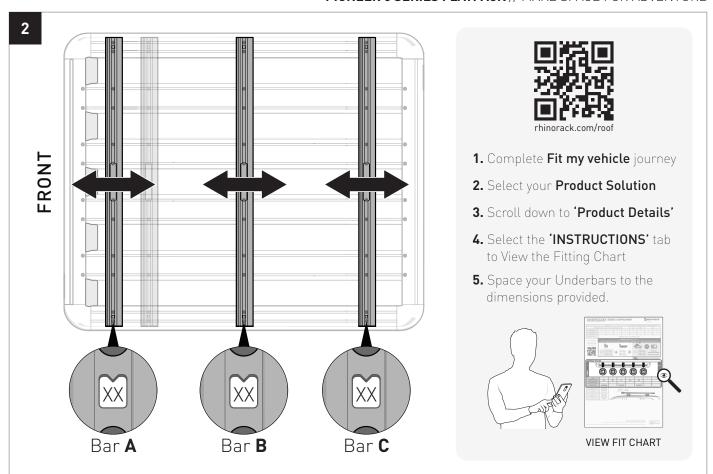


NOTE: Refer to your *Vehicle Specific Pioneer Fit Chart* for your underbar position. The number of underbars varies between platforms.

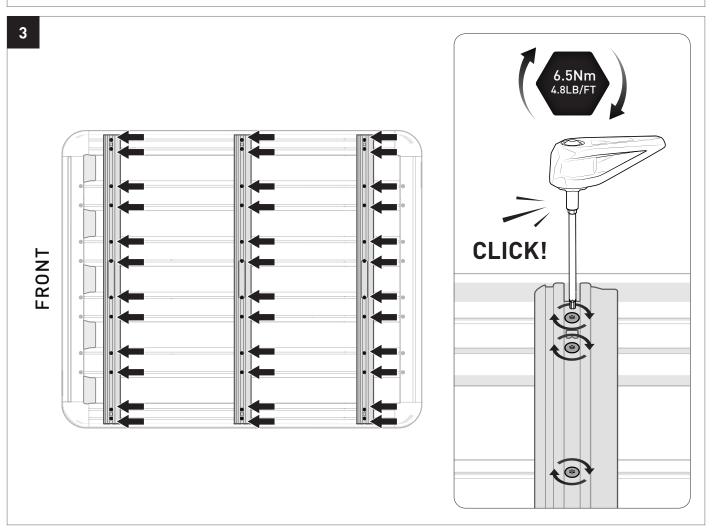


Page 6 for possible leg fitments


PIONEER 6 SERIES FLATPACK // MAKE SPACE FOR ADVENTURE FOR INSTALLATION WITH **LEGS**: **RL** RR **FR** FRONT INSTALL ACCORDING TO <u>LEG</u> INSTRUCTIONS **FRONT VIFW** AND PIONEER FITTING CHART NOTE: Refer to COMPATIBILITY section on


FOR INSTALLATION WITH BACKBONE and RECONN-DECK TOWERS:

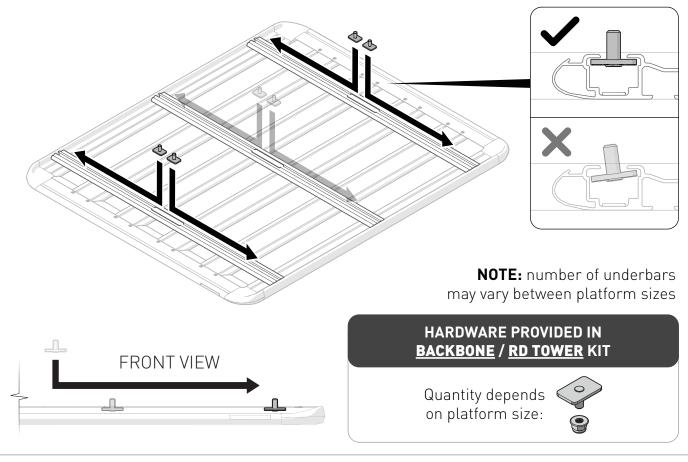

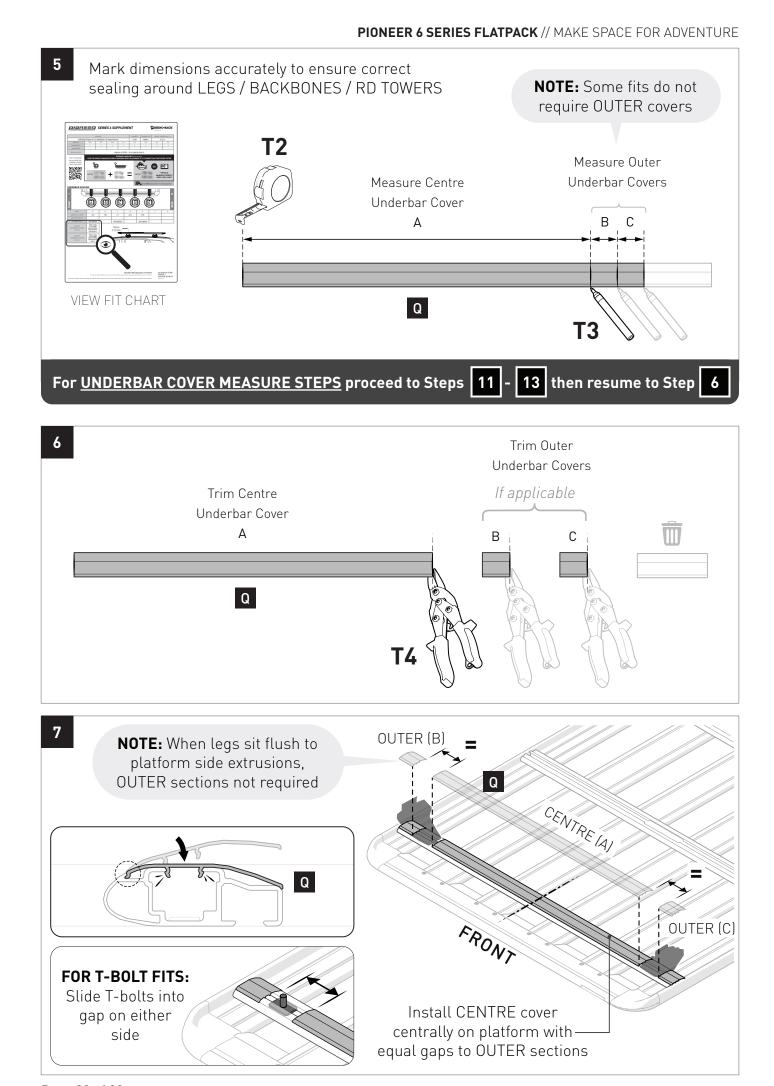


Page 20 of 29

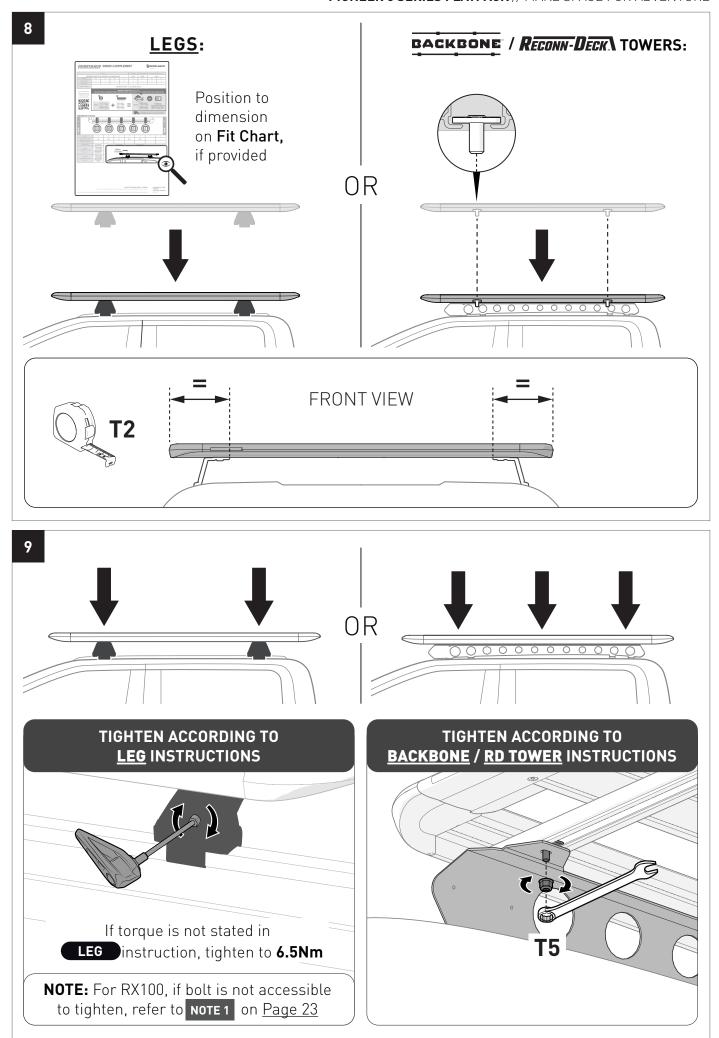


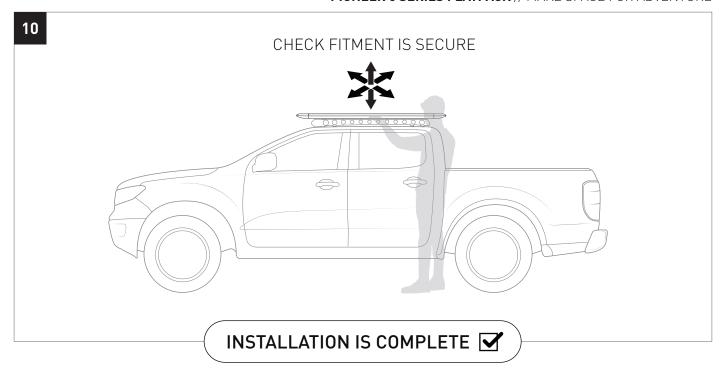


UNDERBAR COVER MEASURE STEPS


For PIONEER FIT CHARTS without centre and outer underbar cover measurements, complete steps | 11 | - | 13 | then resume to step |

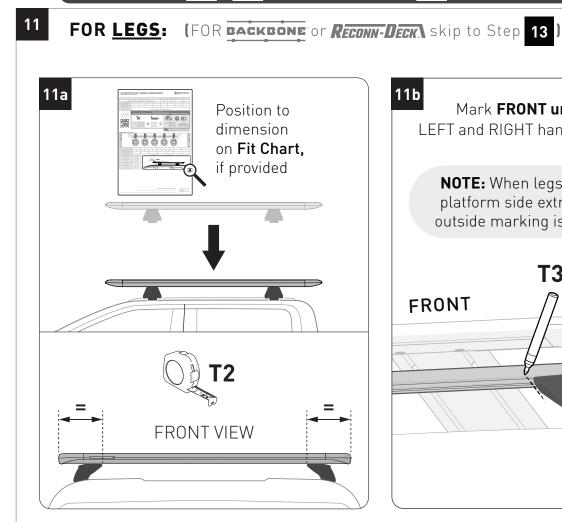


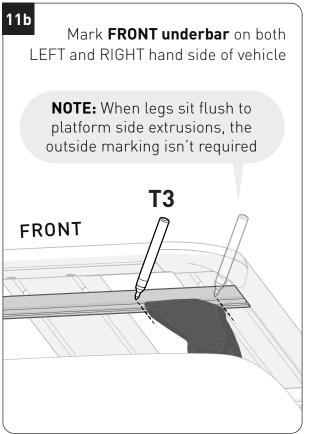


Page 22 of 29

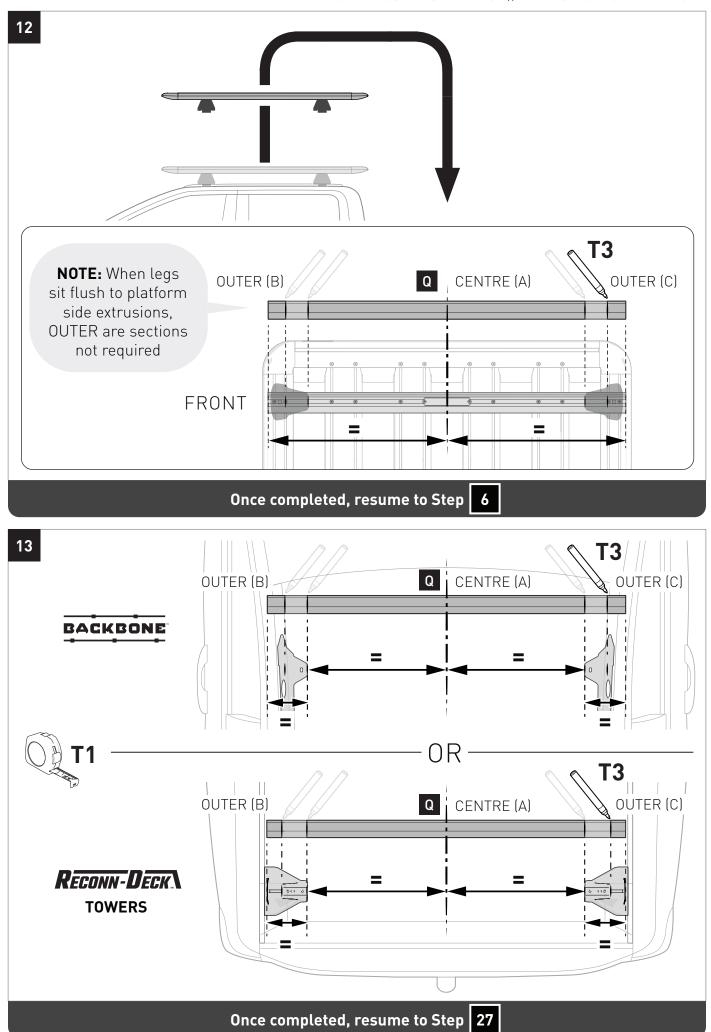

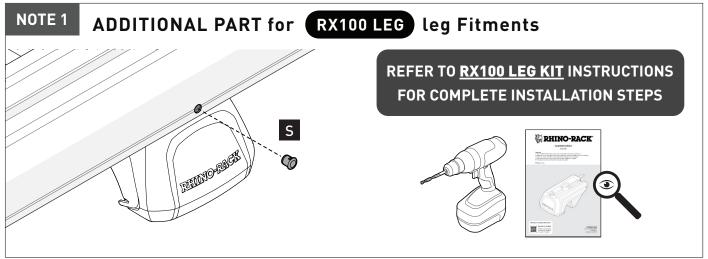


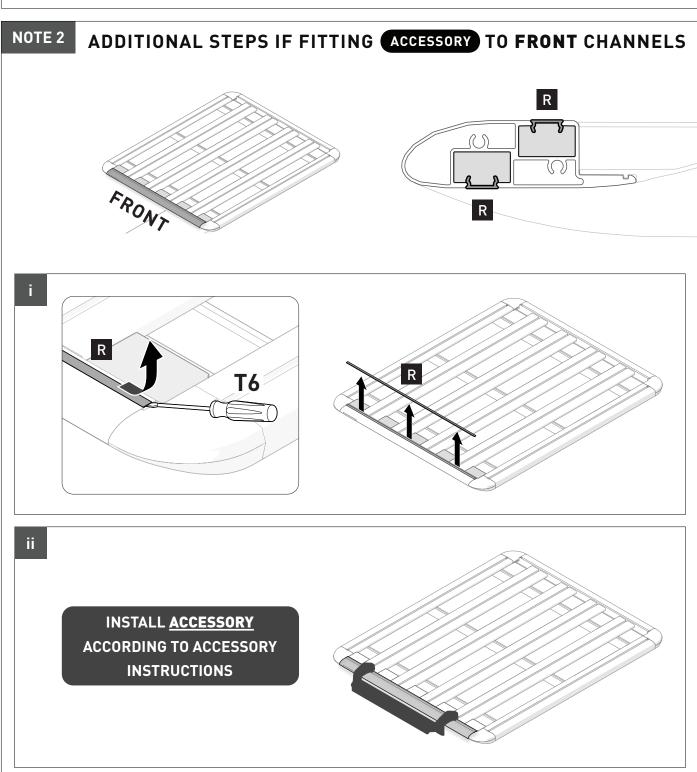

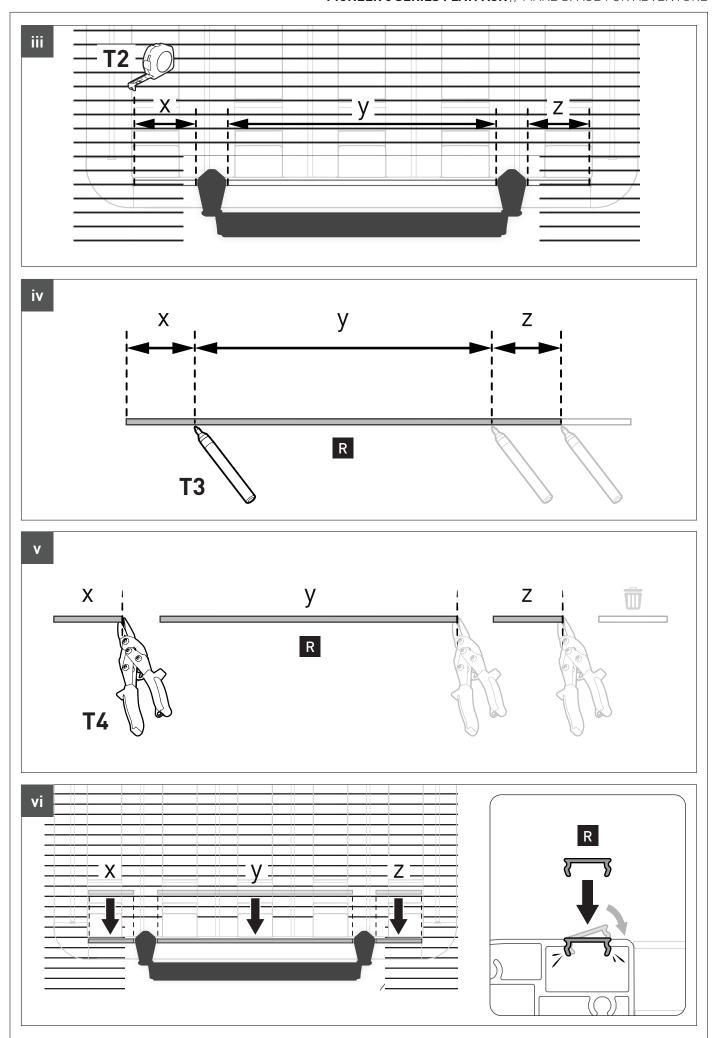


NOTE 3 ADDITIONAL STEPS IF FITTING ACCESSORY WITHOUT ZWIFLOC...


Non-Zwifloc hardware cannot be placed into channels directly.

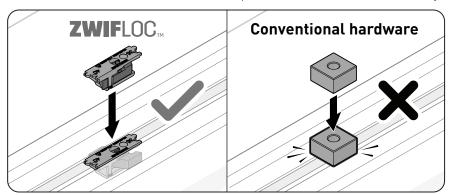



Perimeter channel openings can be accessed via platform corners

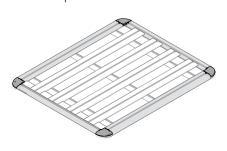


TO GAIN ACCESS TO CHANNEL OPENINGS:

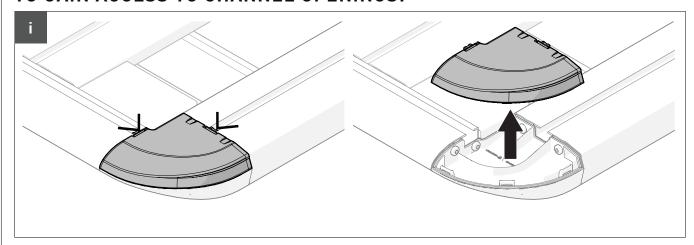

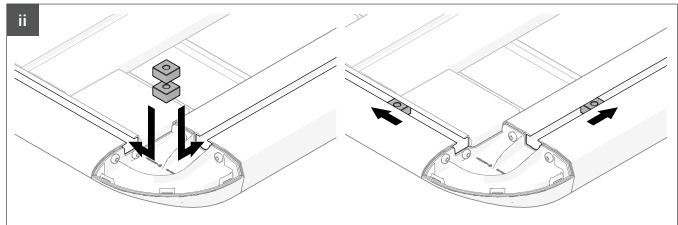

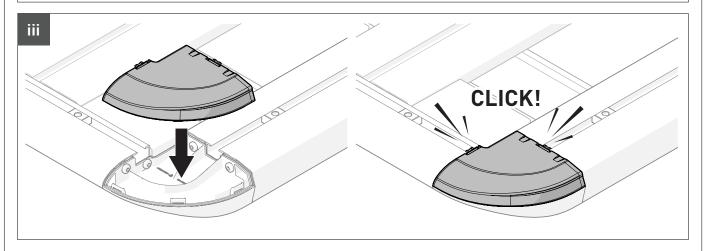

NOTES

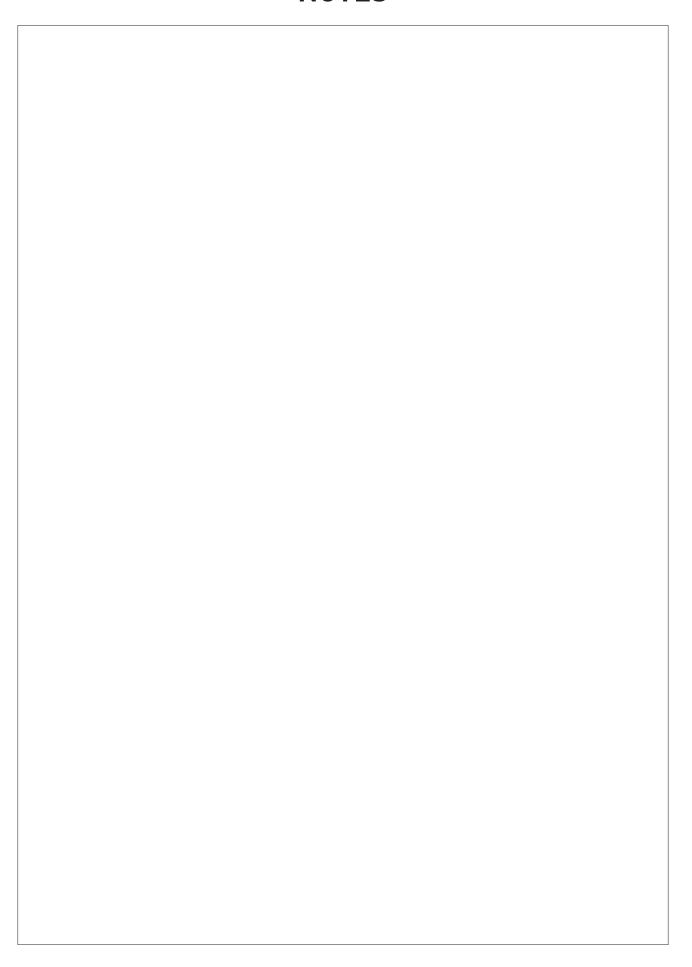

NOTES

·

NOTES



RHINORACK.COM

Rhino-Rack AUSTRALIA

22A Hanson Pl, Eastern Creek, NSW, 2766

Rhino-Rack USA

19822 East 22nd Ave, Aurora, CO, 80011