


Important:

Please read these instructions carefully prior to installation.

Please refer to your fitting instruction to ensure that the racks are installed in the correct locations.

Check the contents of kit before commencing fitment and report any discrepancies. Place these instructions in the vehicle's glove box after installation is complete.

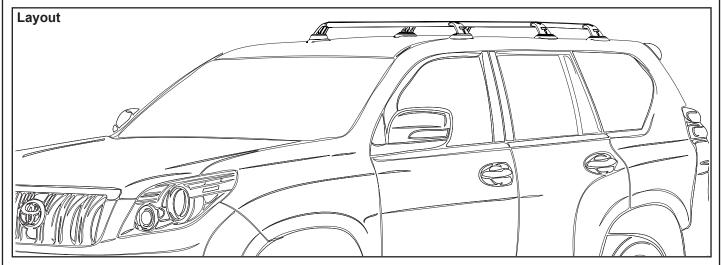

### **Important Information**

Maximum carrying capacity: 100kg evenly distributed over the three (3) cross bars.

#### **Recommendations:**

It is essential that all bolt connections be checked after driving a short distance when you first install your cross bars. Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the cross bars each time they are refitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible. Please remove roof racks when putting vehicle through an automatic car wash.

Use only non-stretch fastening ropes or straps.

#### Sensitivity to cross winds, behaviour in curves and braking:

The handling characteristics of the vehicle, changes when you transport a load on the roof. For safety reasons, we recommend you exercise extreme care when transporting wind-resisting loads; special consideration must be taken into account when braking.

Please remove cross bars when putting vehicle through an automatic car wash.

#### Load rating:

Maximum permissible load is 100kg on 3 cross bars (include the weight of the roof racks, 7.5kg). When cross bars are to be used in off-road conditions, please build a safety factor of 1.5 into this load limit. (66kg for off-road use). Although the roof racks are tested and approved to AS1235-2000, Australian road conditions can be much more rigorous. However, increasing the number of cross bars does not increase the vehicles maximum permissible roof loading.

#### **Note for Dealers and Fitters:**

It is your responsibility to ensure instructions are given to the end user or client

Rhino-Rack 3 Pike Street, Rydalmere, NSW 2116, Australia. (Ph) (02) 9638 4744

(Fax) (02) 9638 4822

Document No: RR246 Prepared By: Andy Wana Authorised By: Gary England

Issue No: 01


Issue Date: 01/03/2010

These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.



### Parts List

Item	Component Name	Qty	Part No.
1	Buffer strip Front 975mm	1	R011
2	Buffer strip Middle 933mm	1	R011
3	Buffer strip Rear 910mm	1	R011
4	Cross Bar 975mm	1	A155
5	Cross Bar 933mm	1	A155
6	Cross Bar 910mm	1	A155
7	10g x 1/2" self tapping screw	6	B045
8	M6 x 27mm Screw	6	B063
9	M6 Spring Washer	6	W004
10	M6 Flat Washer	6	W003
11	Aero Leg	6	M094
12	M8 x 40mm Bolt	12	B162
13	M8 Spring Washer	12	W019
14	M8 Flat Washer	12	W043
15	7mm x 4mm O-Ring	12	C299
16	Front Left Mount Pad	1	M389
17	Front Right Mount Pad	1	M390
18	Middle Left Mount Pad	1	M391
19	Middle Right Mount Pad	1	M392
20	Rear Left Mount Pad	1	M393
21	Rear Right Mount Pad	1	M394
22	Left Pad Mount Skirt	3	M395
23	Right Pad Mount Skirt	3	M396
24	Mounting Pad Washer	12	C588
25	Mounting Pad Cover	6	M126
26	6mm Allen Key	1	H009
27	5mm Security Allen Key	1	Sec-Key-S
28	Fitting Instruction	1	RR246

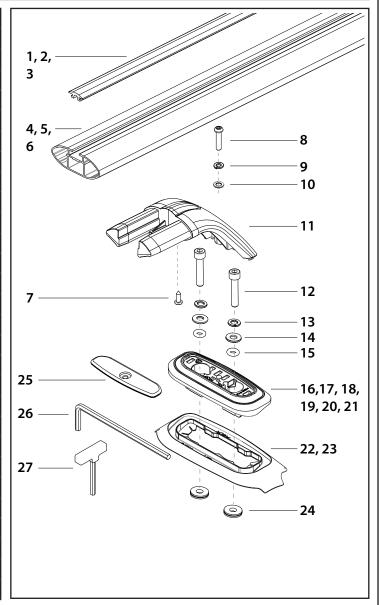

### **Tools Required:**

5mm Security key, included in kit 6mm Allen key, included in kit Flat blade screwdriver Phillips head screwdriver Rubber mallet Socket wrench &13mm socket

1

Remove the roof trim covers with a flat blade screwdriver carefully. Remove all brackets, bolts and washers using a 13mm socket. Store the covers and attachment hardware for future use if needed.

NOTE: The existing bolts and washers are not used to fit the roof rack mounting pads.

