

Reconn Platform


Toyota 4-Runner 63101

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the accessory is installed correctly.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 90 mins



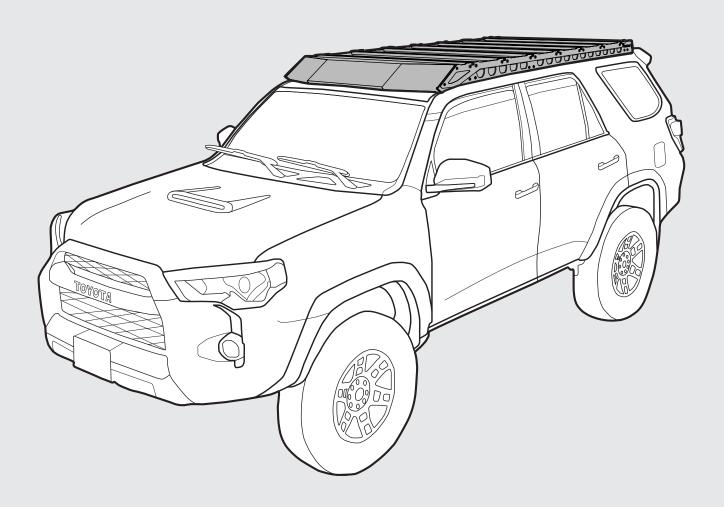


RHINORACK.COM

Document No: 520-RFI-00198

Issue No: 02


Issue Date: 10/04/2025

Toyota 4-Runner

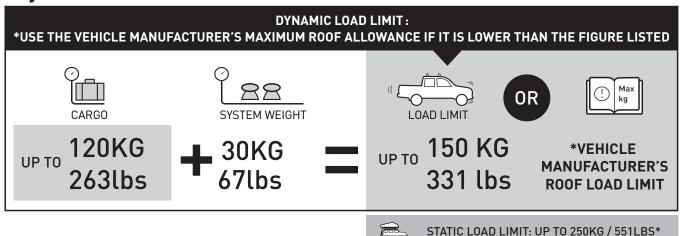



VISIT THE ONLINE CALCULATOR FOR CURRENT SYSTEM LOAD LIMIT DATA

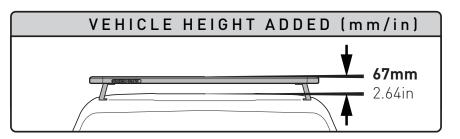


Exercise extreme care when transporting wind-resistant loads. Special consideration must be taken when cornering and braking.



Off-road conditions can be much more rigorous. Extreme care must be taken on any driven path that does not contain a surface protection layer (tar/bitumen).



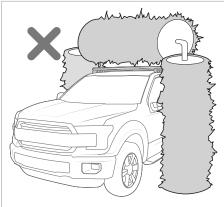

Racks must be removed when vehicle is put through an automatic car wash.





Ensure Ladder is well supported on the ground to support tent. Take extreme caution when climbing heights above 1.2m/4ft.




Do NOT obstruct windscreen camera sensors








Warranty for roof rack system will be void if the front of the kayak is not secured to the bonnet




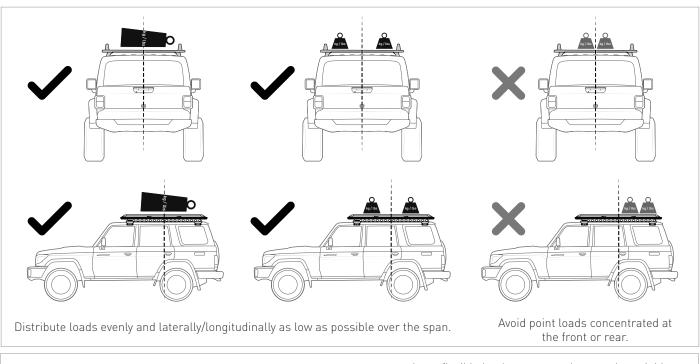

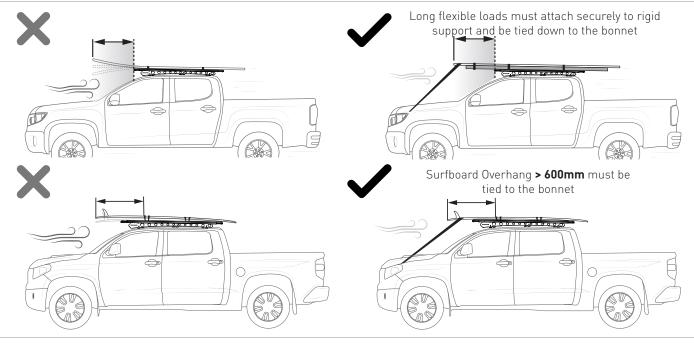

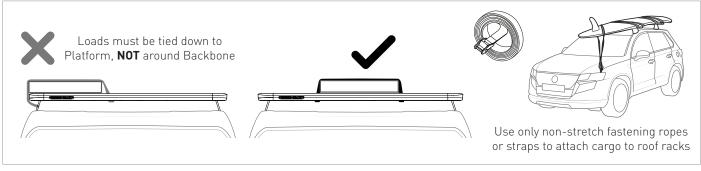

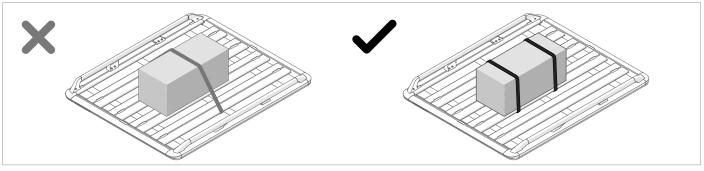

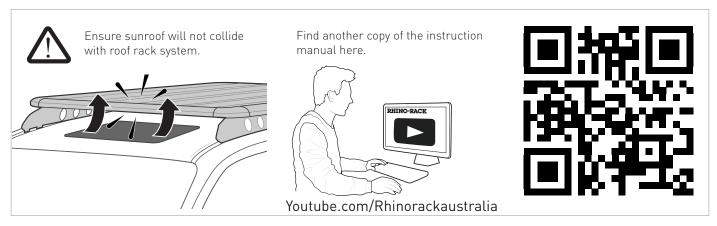

In service maintenance checks

- All bolts should be checked after driving a short distance when you first install your roof racks to ensure none have loosened.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your total vehicle manufacturer's GVM (gross vehicle mass) and gross axle weights are not exceeded (refer to vehicle owner's manual).

Note for Dealers and Fitters

It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be changed or used for any other purpose than intended.

Torque Settings

Throughout this instruction manual, an impact driver can be used to speed up installation. However, it is important to ensure that the final turns are completed with a torque wrench to achieve the required torque rating.

Take caution when using an impact driver, as excessive torque can result in stripped threads.



Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:










What you should have


To complete this build/ fit you will need:

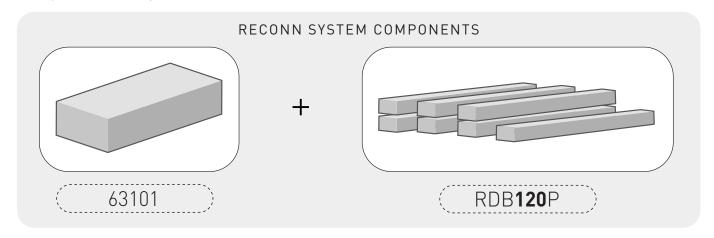


Parts List

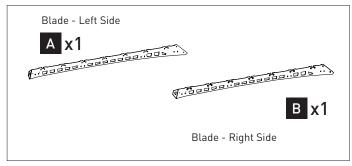


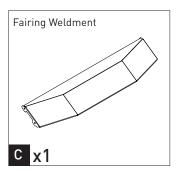


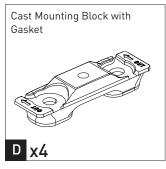

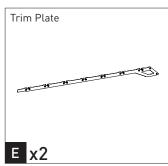




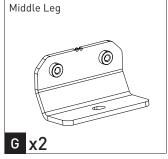

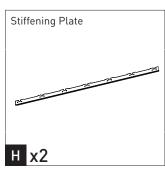



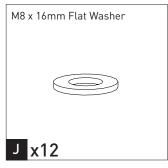



















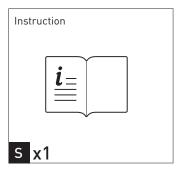

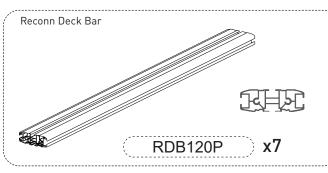

Tools Required:

T1 - Tape Measure

T2 - Cutting Tool

T3 - Marker/Pen

T4 - Flat Head Screw Driver T11 - Torque Wrench

T5 - Impact Driver

T6 - 13mm Socket Wrench

T7 - Cleaning Rag


T8 - Pointed Trim Tool


T9 - Trim Tool - Fork Head


T10 - 12mm Socket Wrench


T12 - Step Ladder




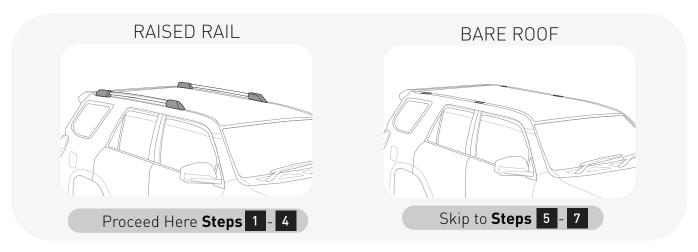


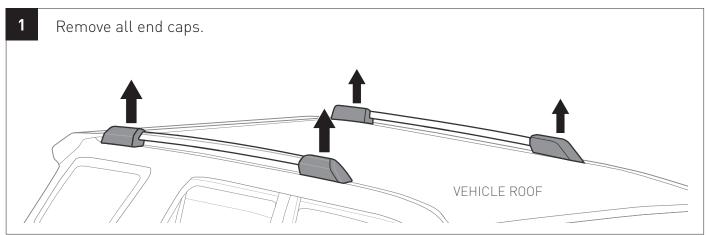


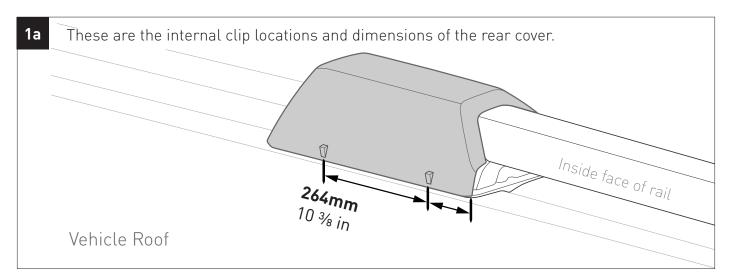

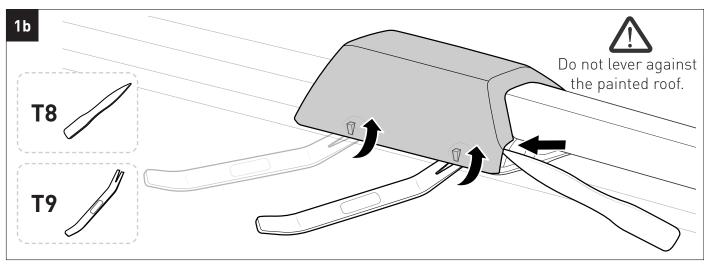


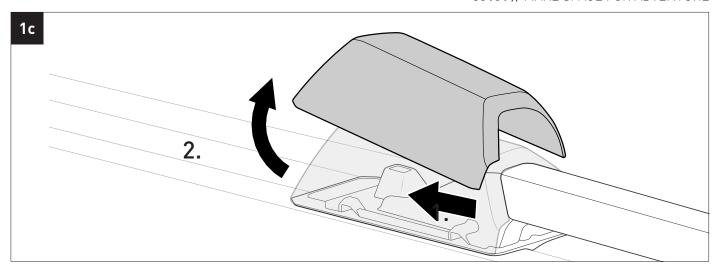

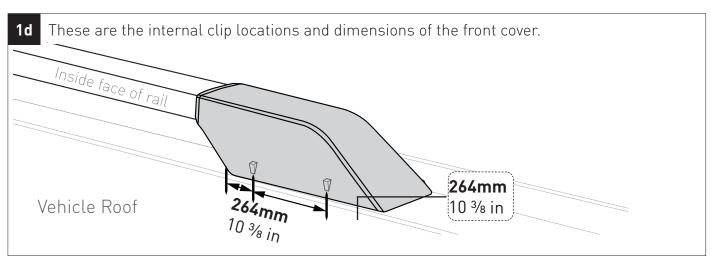


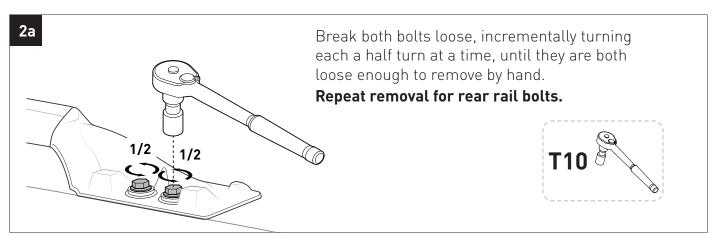





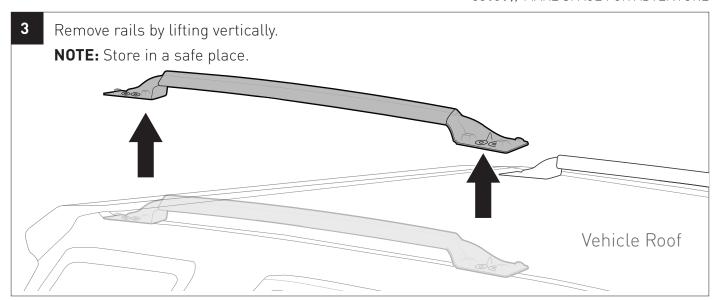


Raised Rail Removal Complete. Skip to step

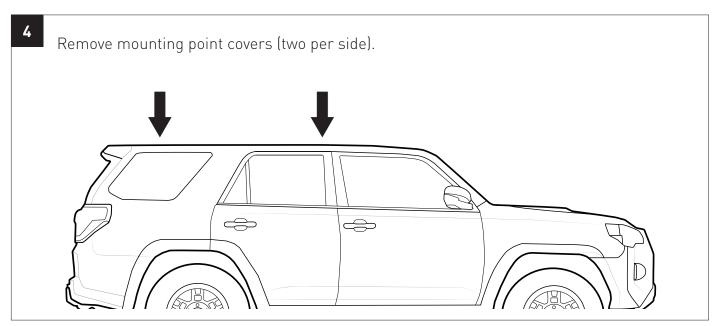


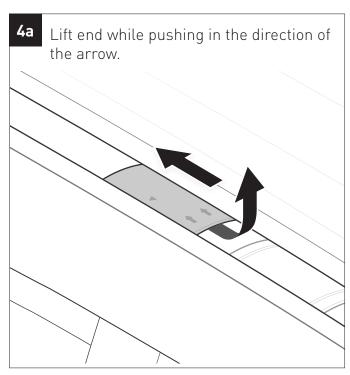

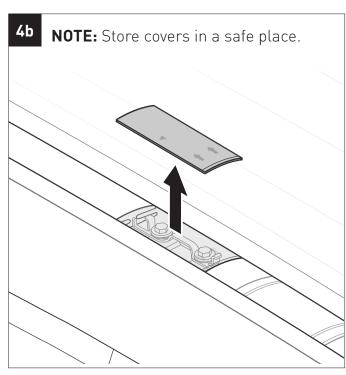

Page 8 of 24




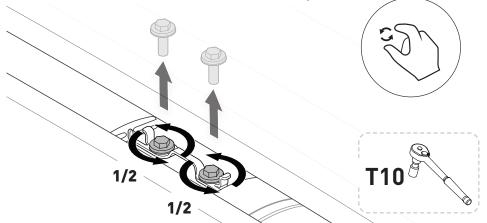





Ensure both bolts are loose before removing either bolt completely.

Failure to do so may lead to the internal threaded roof plate being dislodged.

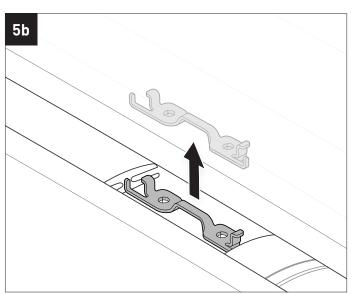


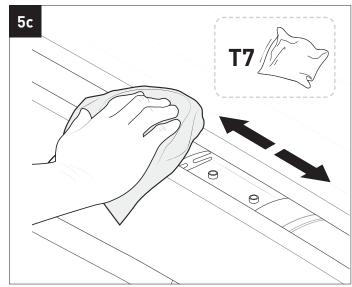



Bare Roof Removal Complete.

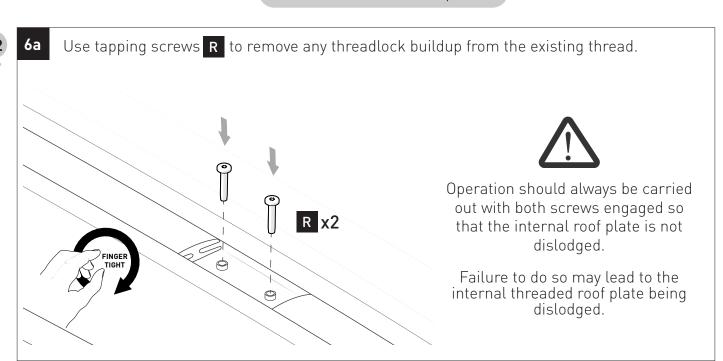


Page 9 of 24

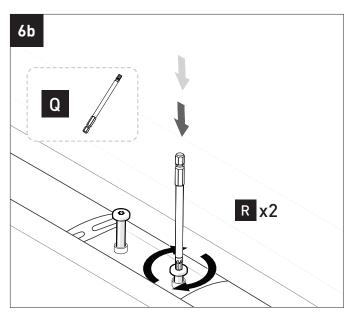


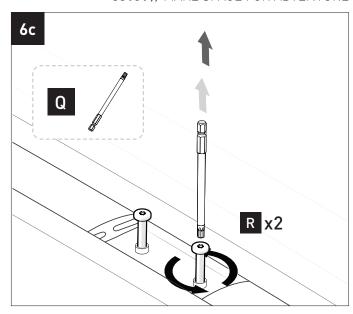


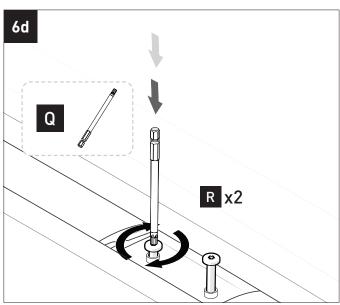


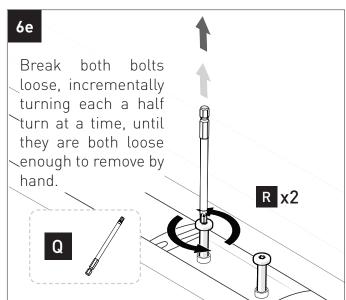



Repeat steps 6a to 6e for all 6 mounting points.

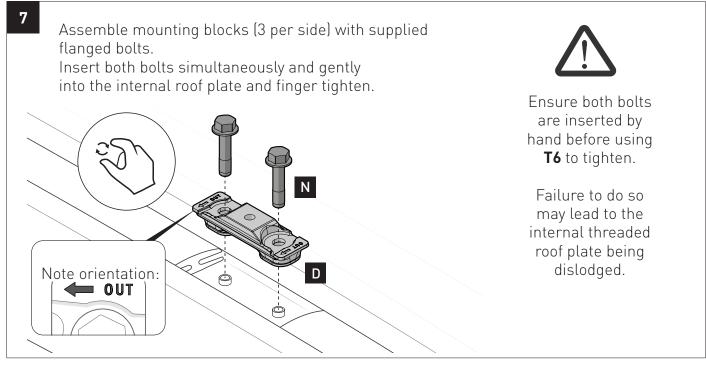


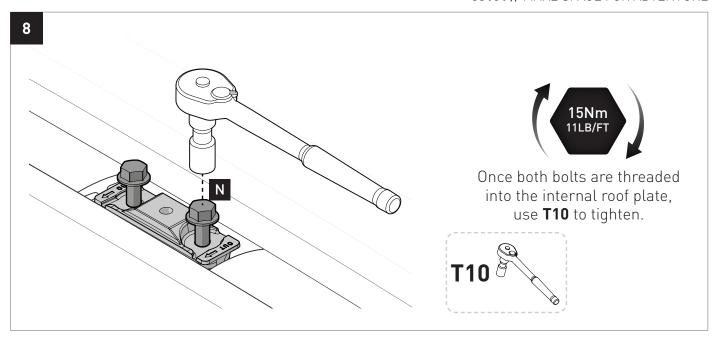


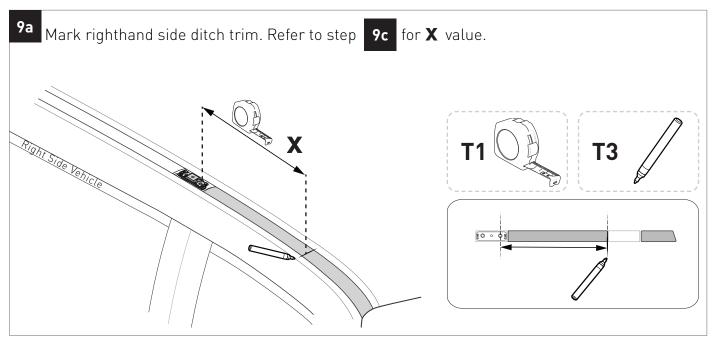


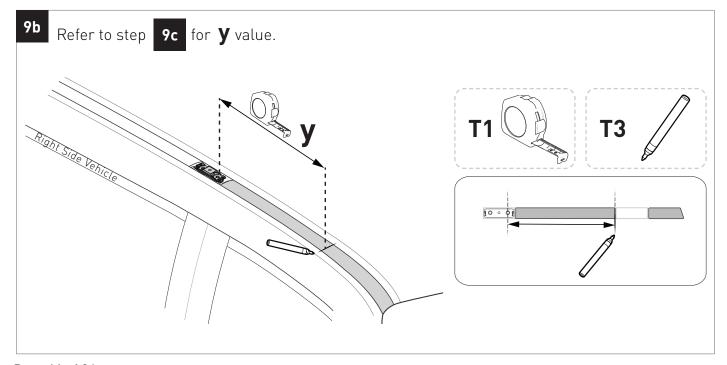


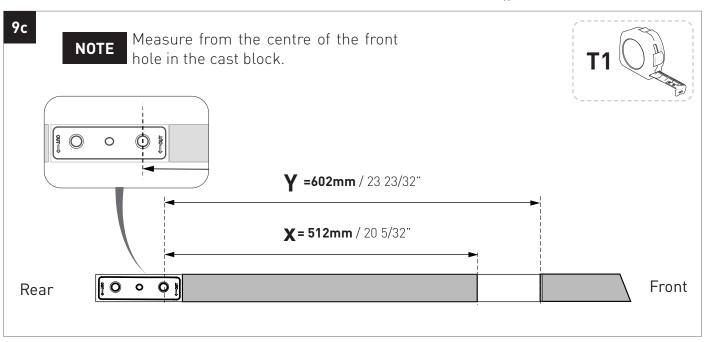


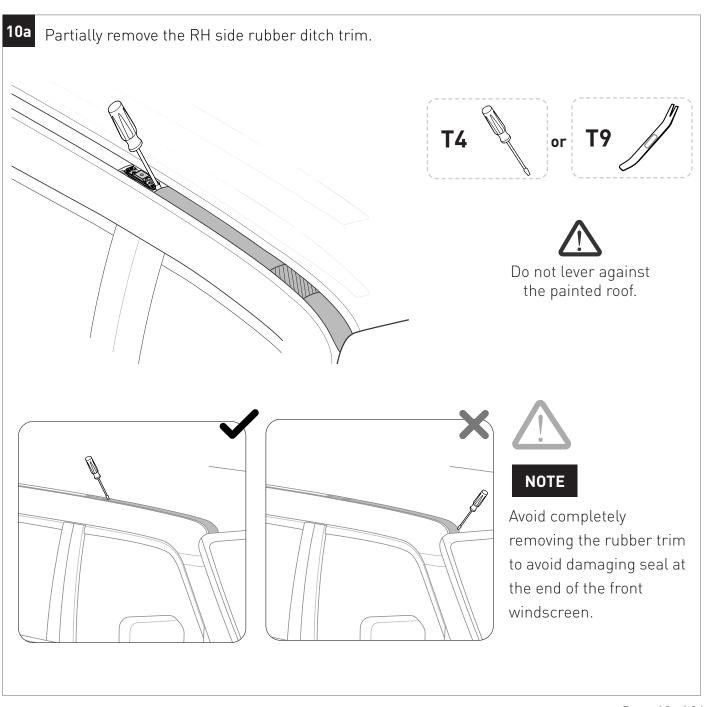

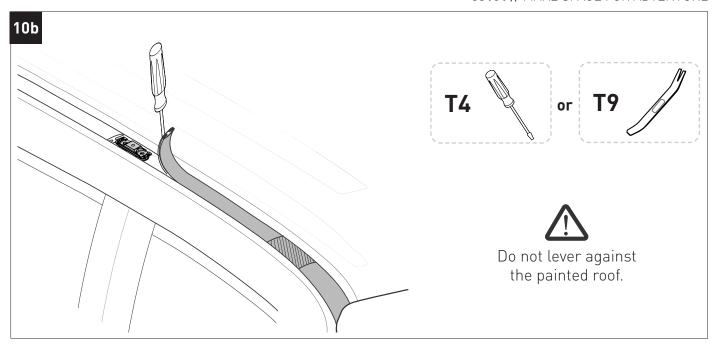


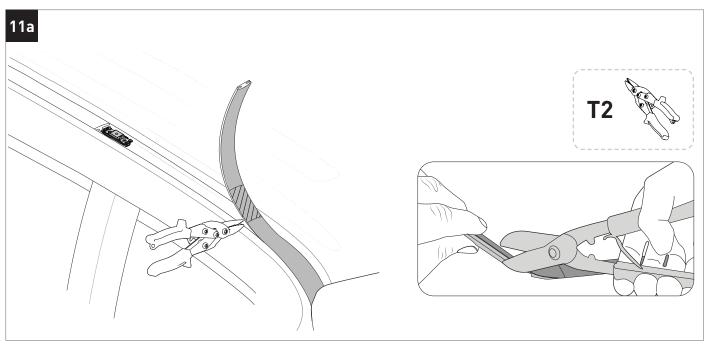


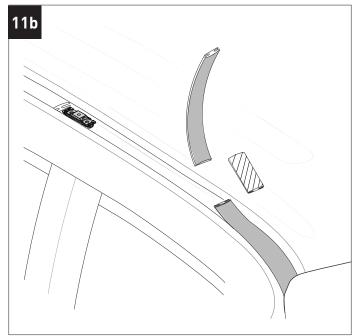


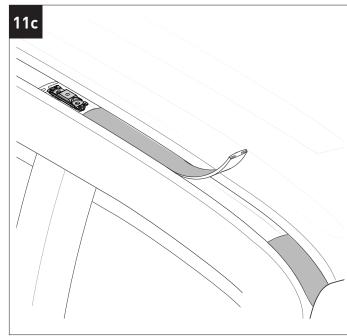



Page 13 of 24

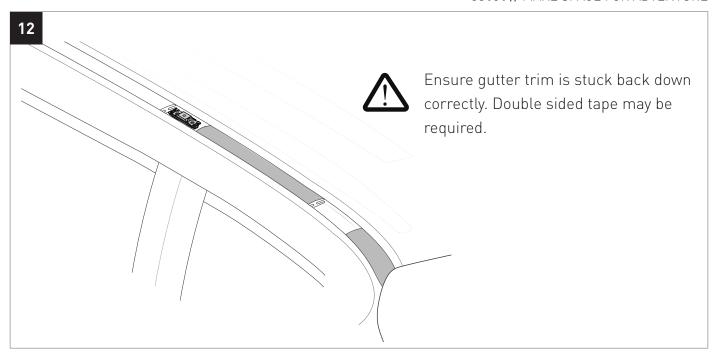


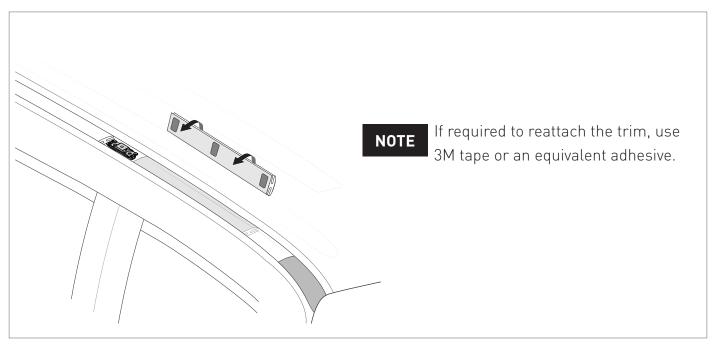


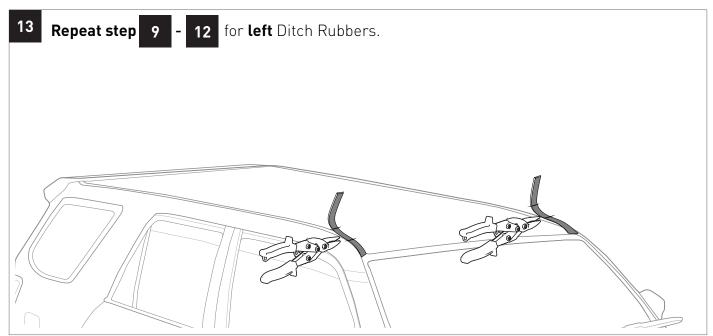


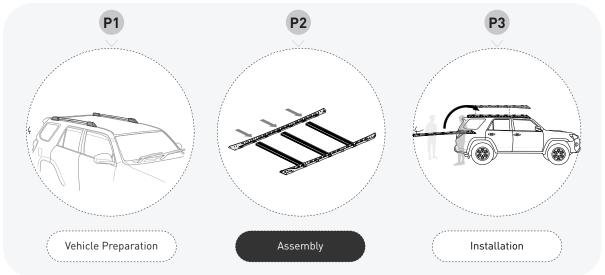


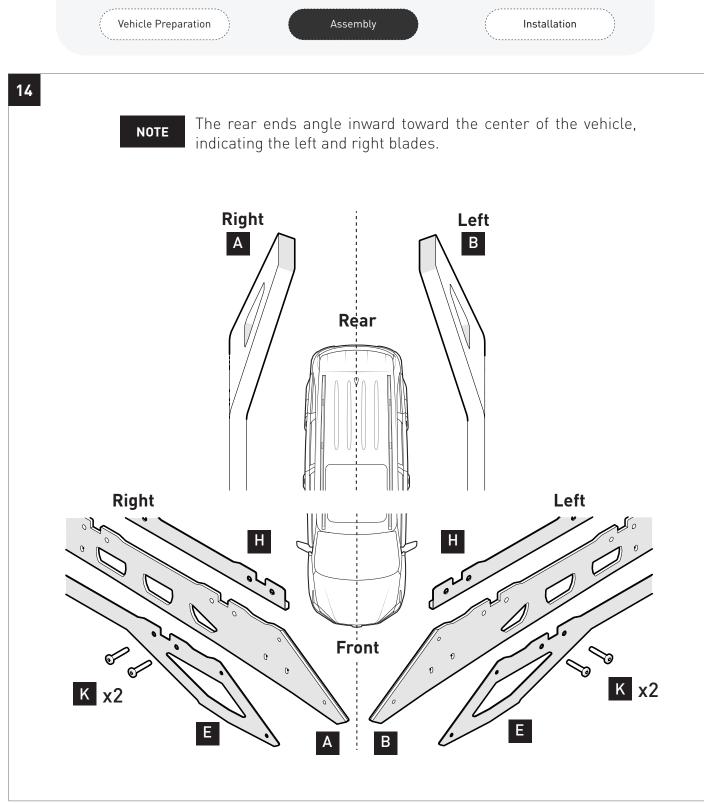


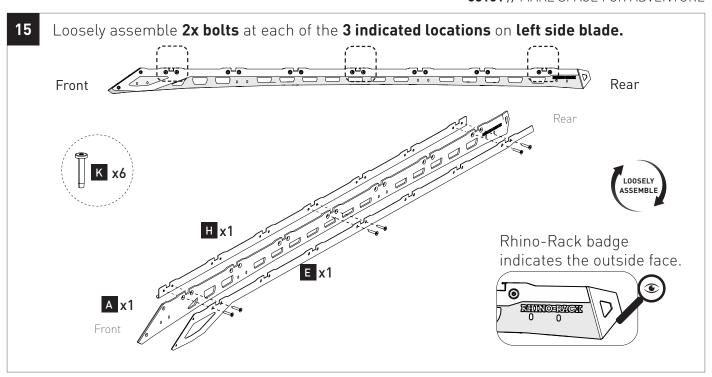


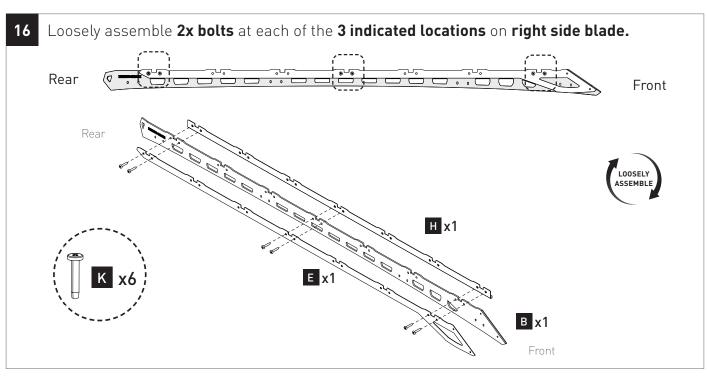


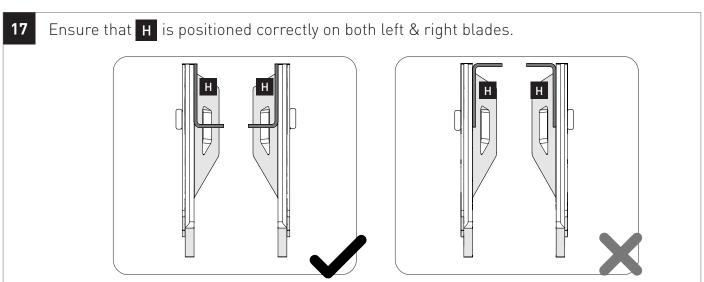


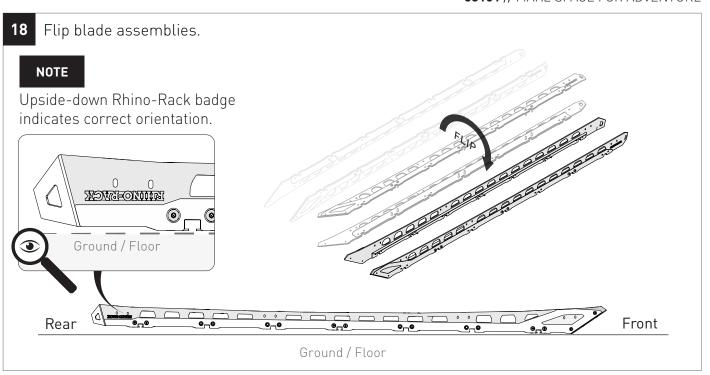


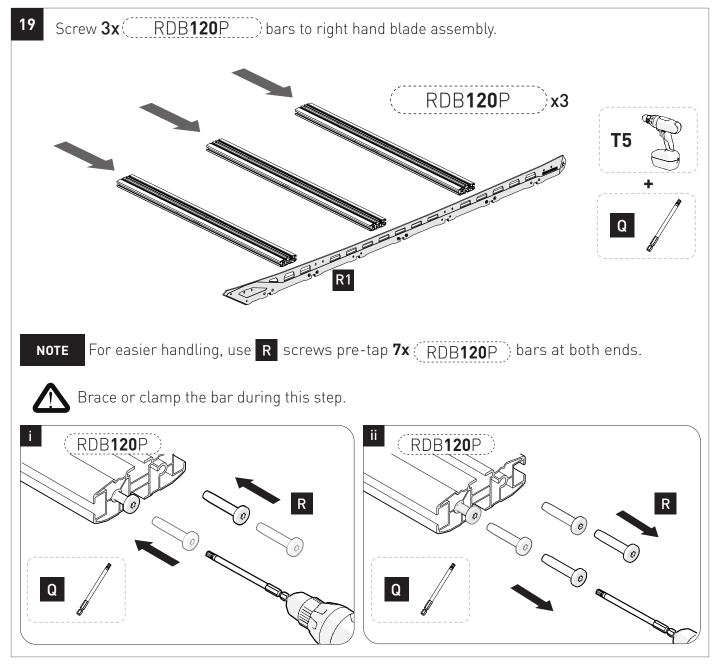

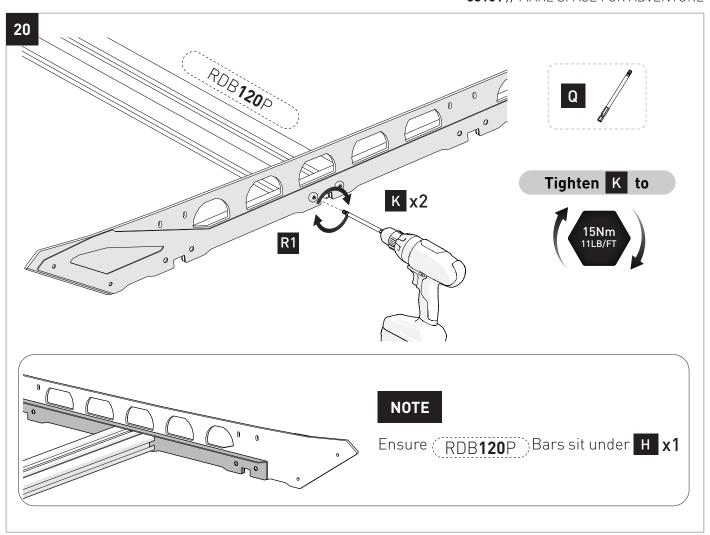


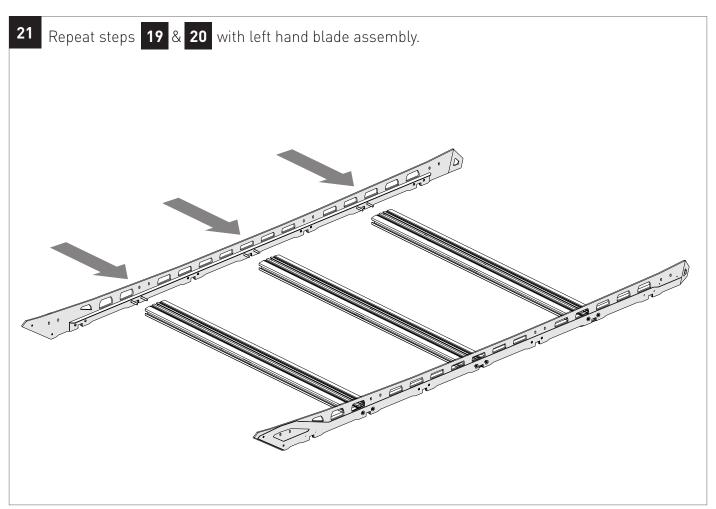


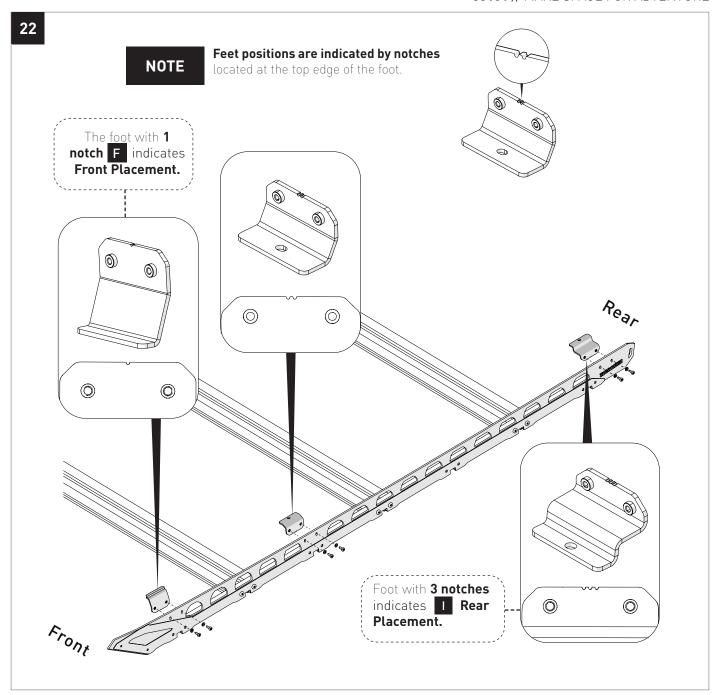


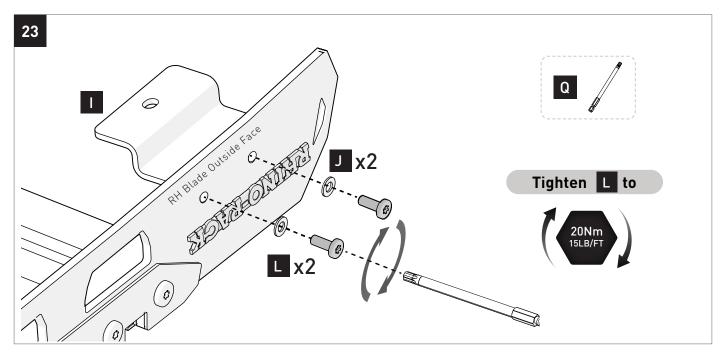


Page 19 of 24

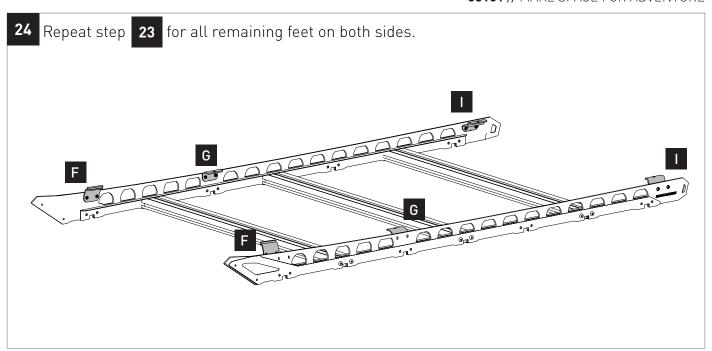


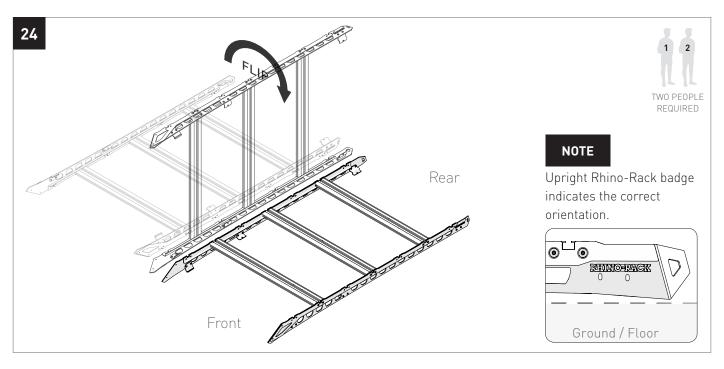


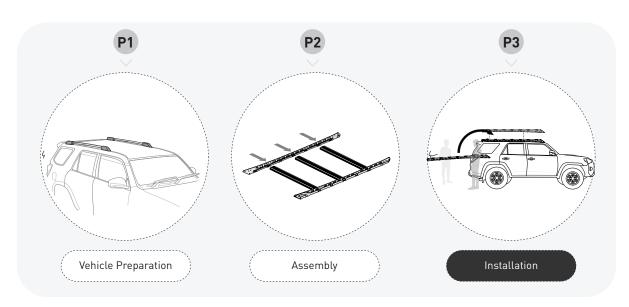





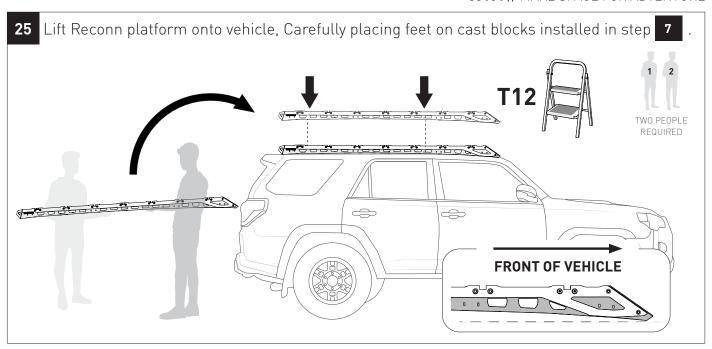


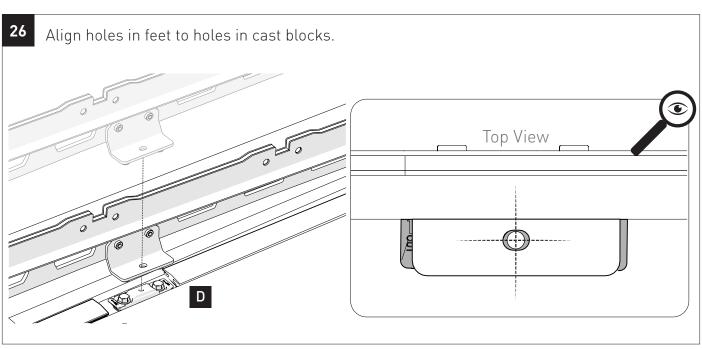


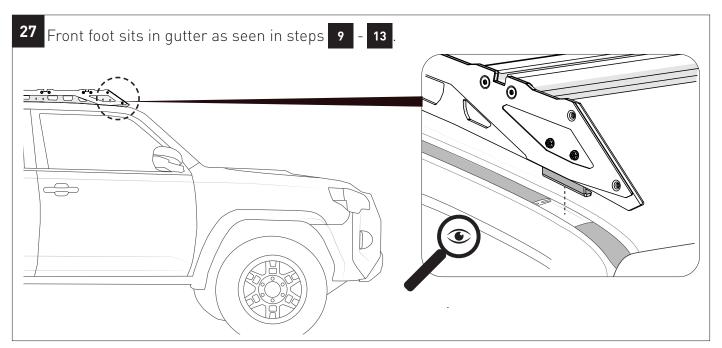


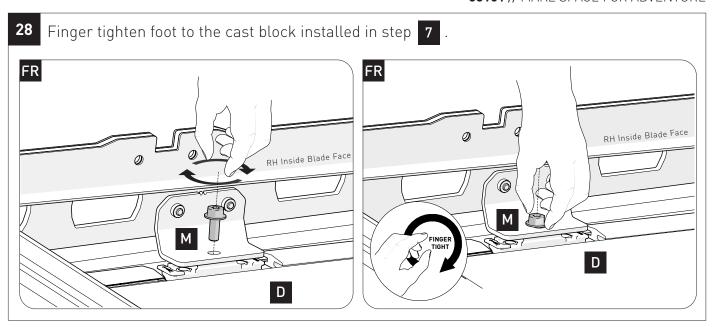


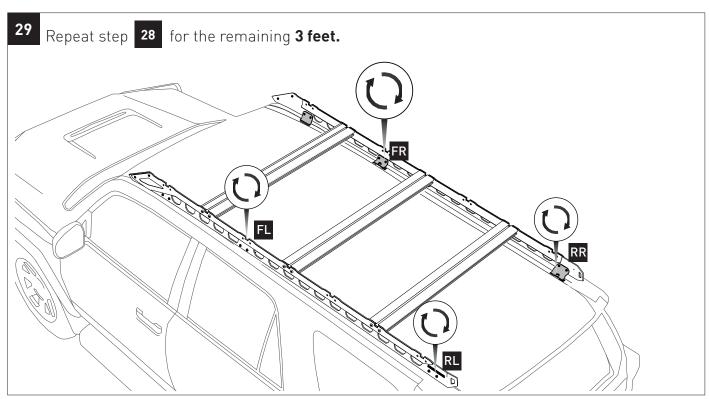


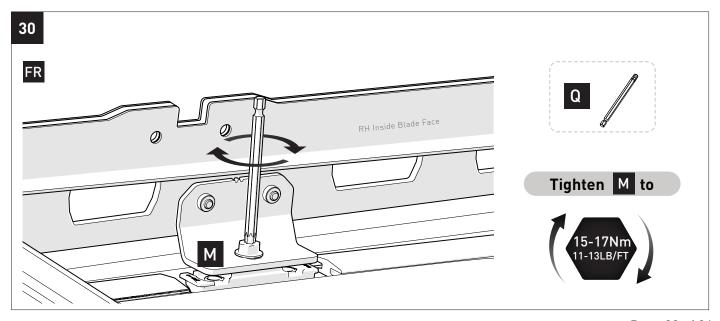


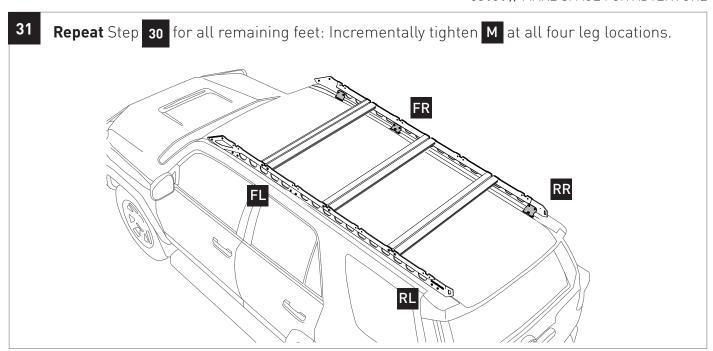


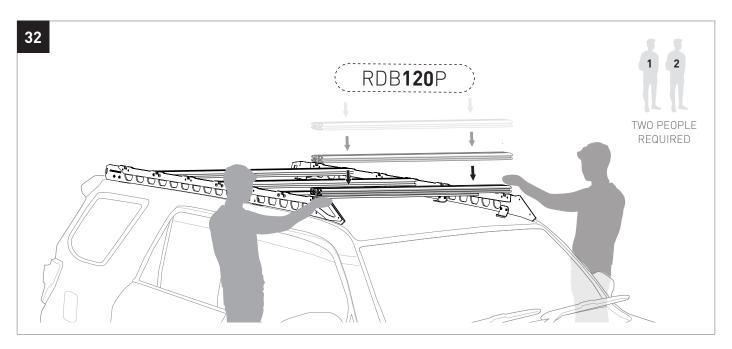

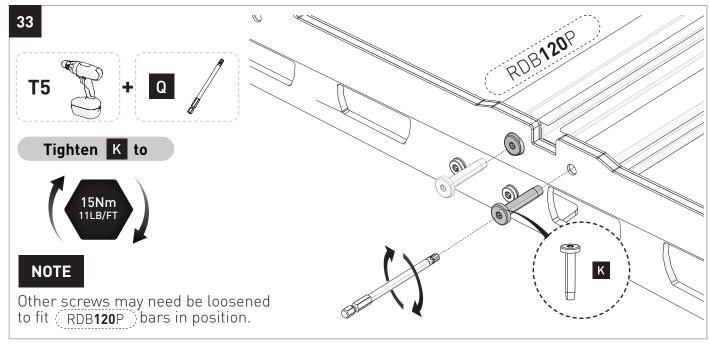

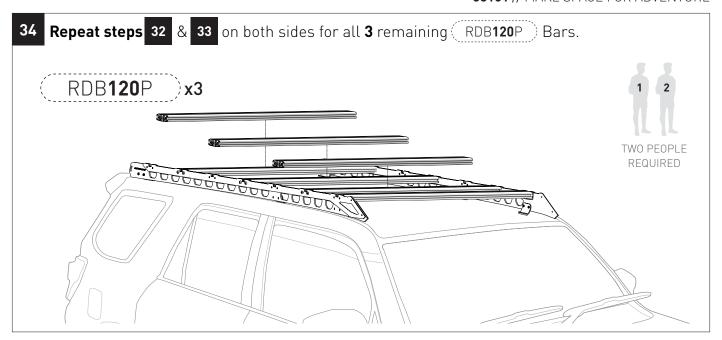

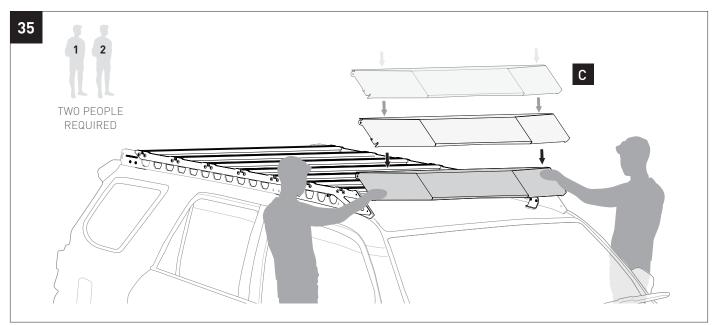

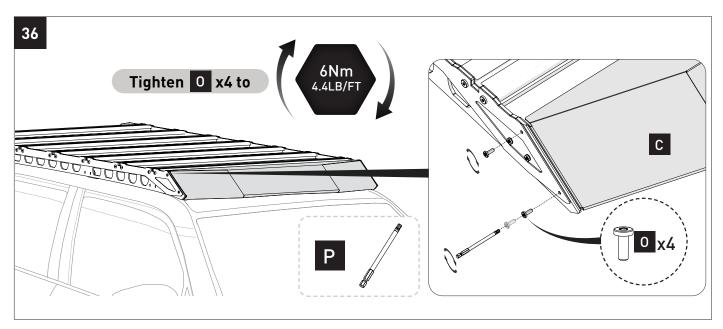



RHINORACK.COM

Rhino-Rack AUSTRALIA

22A Hanson Pl, Eastern Creek, NSW, 2766

Rhino-Rack USA

Unit D, 2450 Airport Blvd, Aurora, CO, 80011