





# RHINO-RACK

## 31127 - Fiamma Awning Bracket


### Parts List

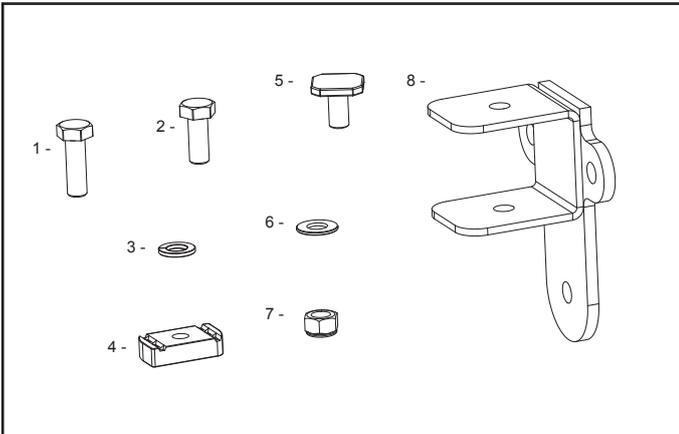

Item	Component	Qty	Part No.
1	M8 x 25mm Hex HD Bolt	6	B169
2	M8 x 20mm Hex HD Bolt	6	B020
3	M8 Spring Washer	6	W019
4	M8 Channel Nut	6	N003
5	M8 x 16mm Square HD T-Bolt	3	B018
6	M8 Flat Washer	15	W020
7	M8 Nyloc Nut	9	N028
8	Fiamma Awning Bracket	3	CA1487
9	Fitting Instructions	1	R833

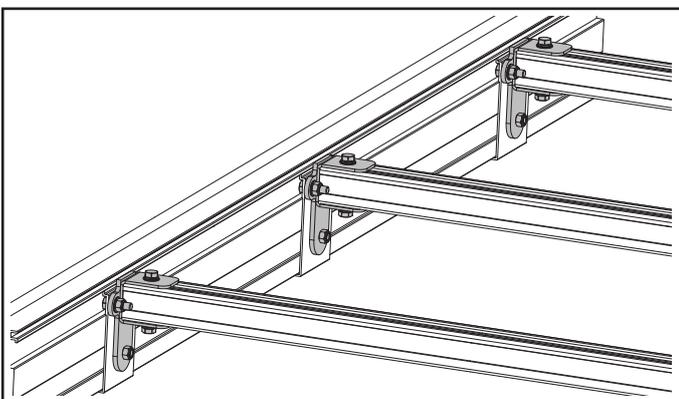


**1** Place the awning bracket on a Fiamma adapter that is secured to the awning such that the bottom hole of the awning bracket is in line with the middle of the bottom channel spacing. Mark the holes using a pencil onto the adapter.

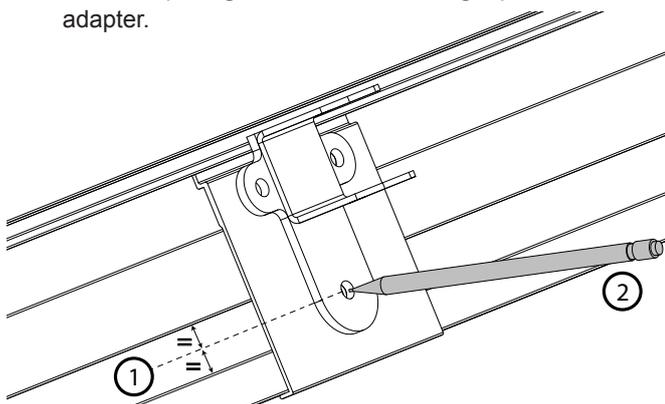


**2** Using a drill with a 8.5mm drill bit, drill through all three traced holes. Repeat for the other Fiamma awning brackets.


**Note:** 8.5mm drilled holes will intersect with existing square holes.

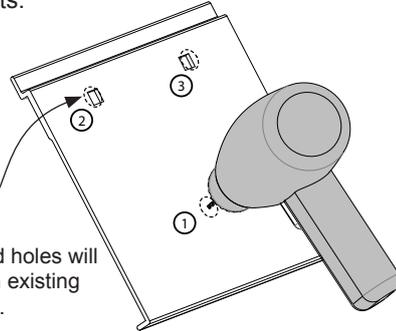

**3** Assemble the hardware onto each of the Fiamma awning brackets with the adapter as shown. Finger tighten.

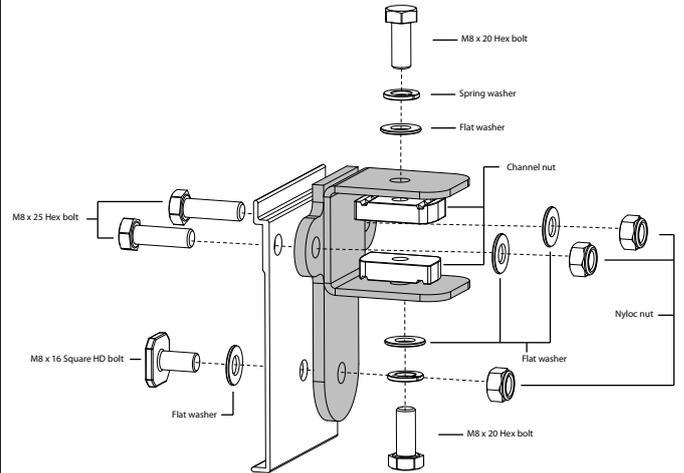

**4** Slide the assembled Fiamma awning bracket unit into the 'C' Channel of the HD bar. Tighten all bolts.

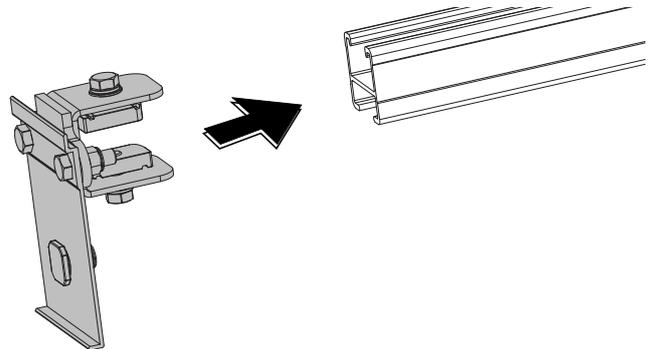

**5** Please refer to Fiamma's fitment instruction to install the Fiamma awning onto the adapter.

Rhino-Rack  
3 Pike Street, Rydalmere,  
NSW 2116, Australia.  
(Ph) (02) 9638 4744  
(Fax) (02) 9638 4822

Document No: R833  
Prepared By: Peter Luu  
Authorised By: Chris Murty  
Issue No: 01  
Issue Date: 16/10/2015

These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.