

CONTROLLED

RHINO-RACK



Yakima Round and Thule Square Bar Fit Kit (32102)

Place these instructions in the vehicle's glove box after installation is complete.

Important: Please read these instructions carefully prior to installation.
Check the contents of kit before commencing fitment and report any discrepancies

Item	Component Name	Qty	Part No.
1	M6 U-bolt	2	C064
2a	European Adapter Block	2	M083
2b	Yakima Adaptor Block	2	M082
3	M6 x 16mm Flat S/S Washer	4	W031
4	M6 Spring S/S Washer	4	W004
5	M6 Stainless Steel Nut	4	N056
6*	M8 x 20 T Bolt	2	B096
7*	M8 x 17 Flat Washer	2	W020
8*	M8 Nyloc Nut	2	N028
9	Sunseeker Steel Mount Leg Bracket	2	C880
10	Fitting Instructions	1	RR216

2 *Supplied in Sunseeker Awning Kit 32132 or 32133

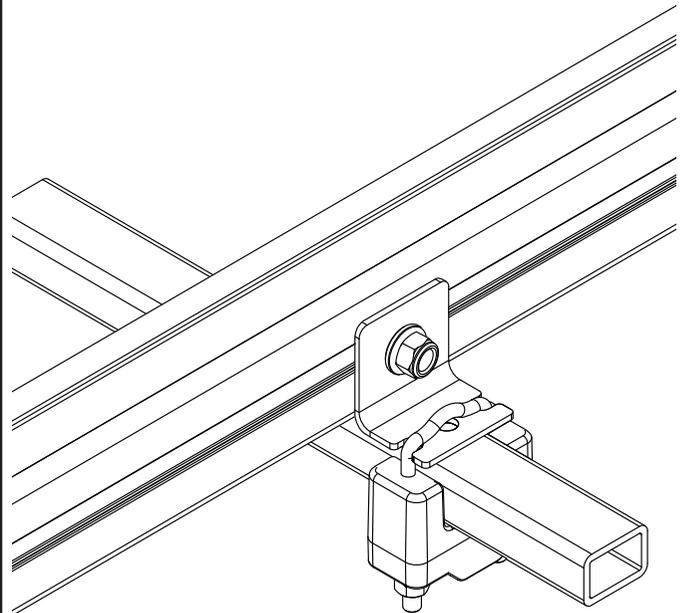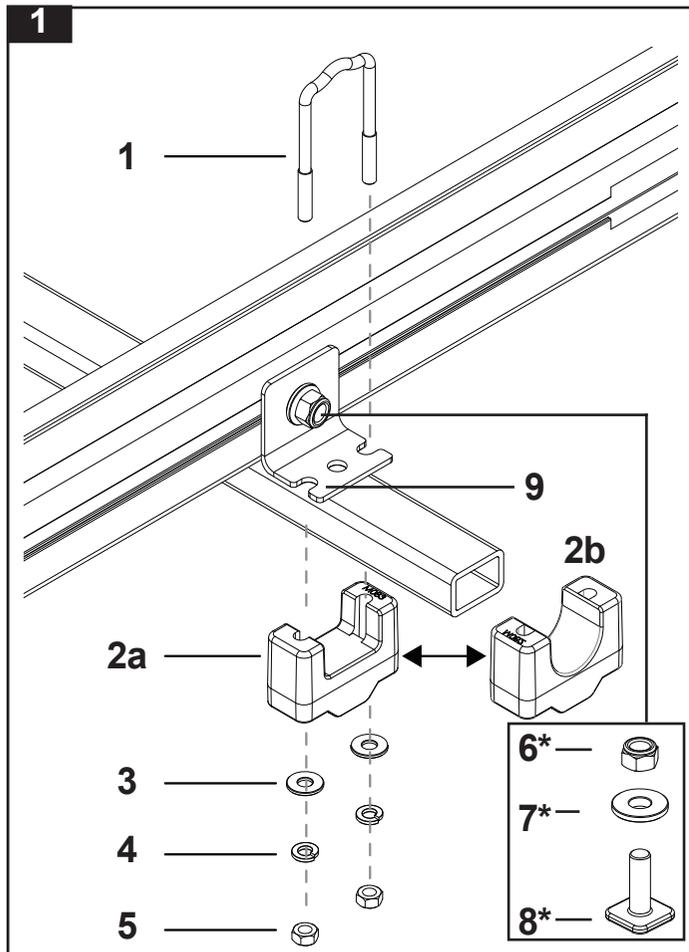

Tighten to 4-5Nm. Check fitting regularly.

Note for Dealers and Fitters:

It is your responsibility to ensure these fitting instructions are given to the end user or client

Rhino-Rack, 22 Hanson St, Eastern Creek

NSW 2766, Australia

(02) 8846 1900

rhinorack.com.au

Document No: RR216

Issue No: 06

Issue Date: 11/04/2019