




RHINO-RACK


43103 - Shovel Holder Pioneer Alloy Tray

Place these instructions in the vehicle's glove box after installation is complete.

Important: Please read these instructions carefully prior to installation.
Please refer to your fitting instruction to ensure that the alloy tray is installed correctly.
Check the contents of this kit before commencing fitment and report any discrepancies.

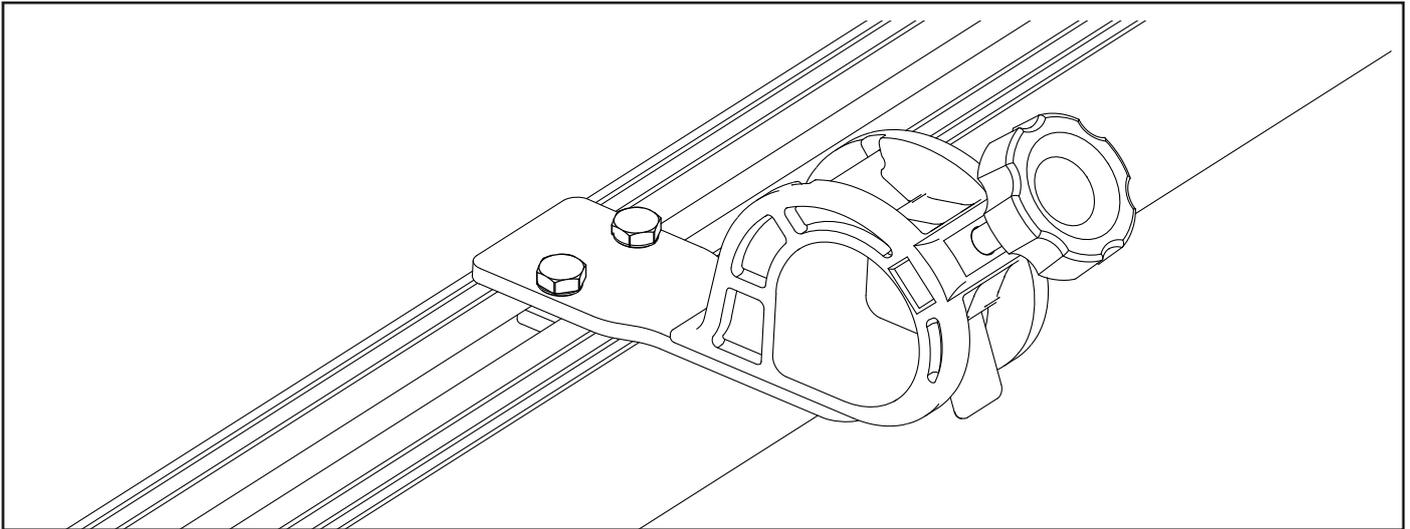

Item	Component Name	QTY	Part No.
1	Shovel Holder Bracket	2	C827
2	Shovel Holder Body	2	M216
3	Shovel Holder Tongue	2	M223
4	Shovel Holder Nut	2	N043
5	Shovel Holder Bolt	2	B146
6	Shovel Holder Support Block	2	M217
7	M6 x 20 Security Screw	2	B062
8	M6 X 20 Hex Bolt	4	B082
9	M6 Spring Washer	6	W004
10	M6 x 12.5 Flat Washer	4	W003
11	M6 X 16 Flat Washer	2	W031
12	M6 Channel Nut	2	N002
13	Plate Nut	2	C838
14	5mm Security Allen Key	1	H021
15	Fitting Instructions	1	RS-395

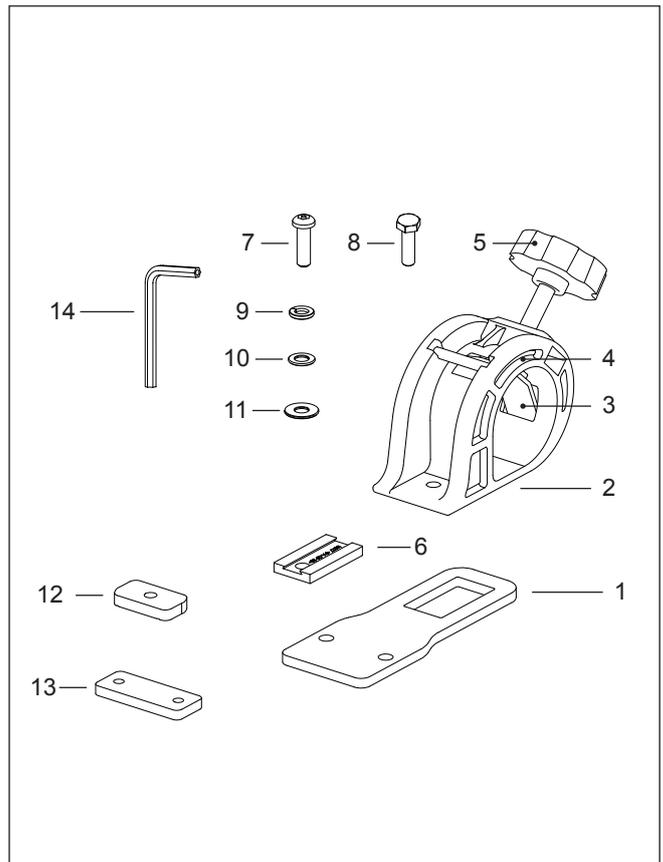

Care Instruction

Clean alloy tray prior to fitting the shovel holder bracket.

Tools Required

Shifting Spanner
Allen Key (provided in kit)

Rhino-Rack
3 Pike Street, Rydalmere,
NSW 2116, Australia.
(Ph) (02) 9638 4744
(Fax) (02) 9638 4822

Document No: RS-395
Prepared By: Will Davis
Authorised By: Chris Murty


Issue No: 04
Issue Date: 15/06/2015

These instructions remain the property of Rhinorack Australia Pty Ltd and may not be used or changed for any other purpose than intended.




43103 - Shovel Holder Pioneer Alloy Tray

- 1 Slide Support Block onto Body:** Slide the support block onto the shovel holder body until the hole lines up with the hole in the body. Make sure that the wedge shape is engaged as shown.

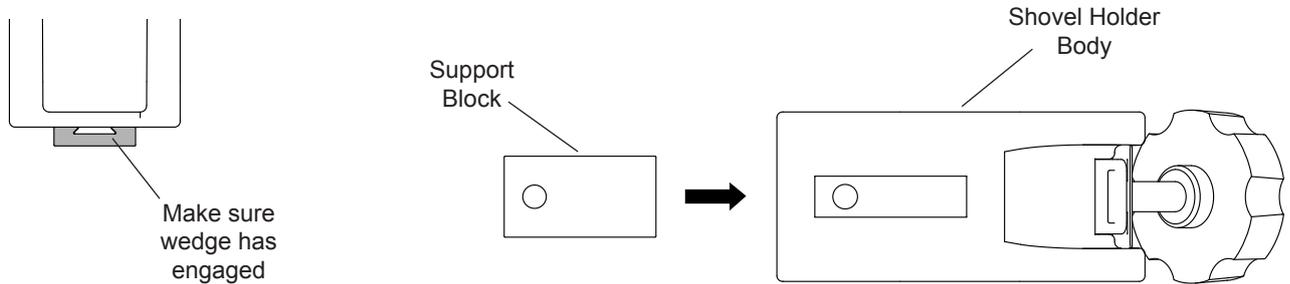

- 2 Assemble Shovel Holder to Bracket:** Fit shovel holder to the bracket with the hardware provided. Be sure when tightening the bolt that the channel nut sits in the correct orientation as shown, you may need a shifting spanner to stop the channel nut from turning.

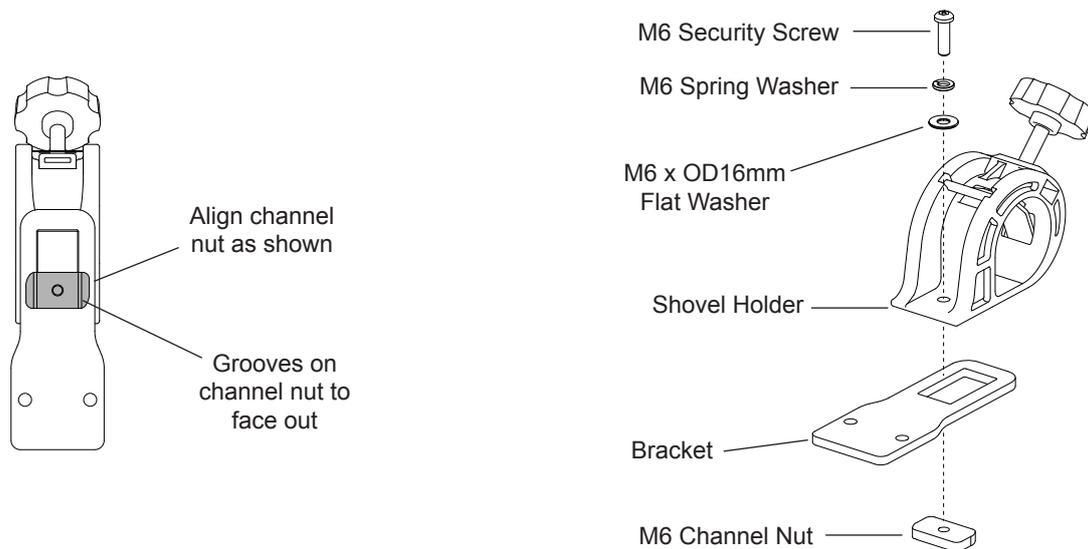

- 3 Attach Bracket to Tray:** Insert plate nut into the cut-out at the front of the alloy tray and slide the plate nut to the desired position. Fit the bracket to the tray with the hardware specified below. Repeat all steps for both shovel holder brackets.

