





# RHINO-RACK®



## LDV Deliver 7 LWB Low Roof Track Mount Supplement

- 1** Using 50 mm wide masking tape, tape over the roof adjacent to the outside edge of the ditch, running along its length.

**Compatible Legs:** RCP58-BK + RX300H/RCH, OR RLT600

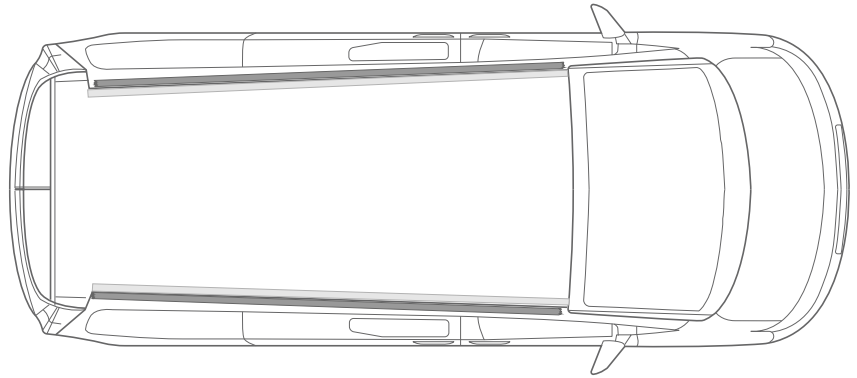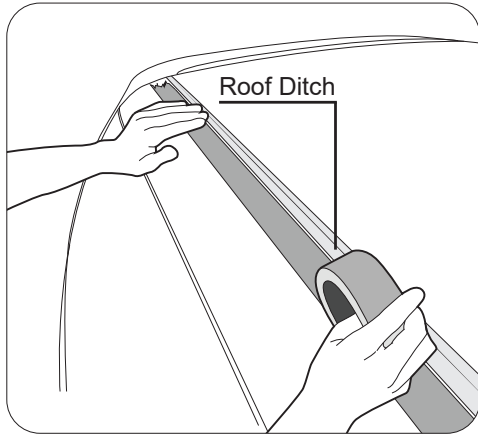

- 2** Place the Tracks on the masking tape 130mm from the end of the Cant Rail. The Track should follow beside the outside edge of the ditch.

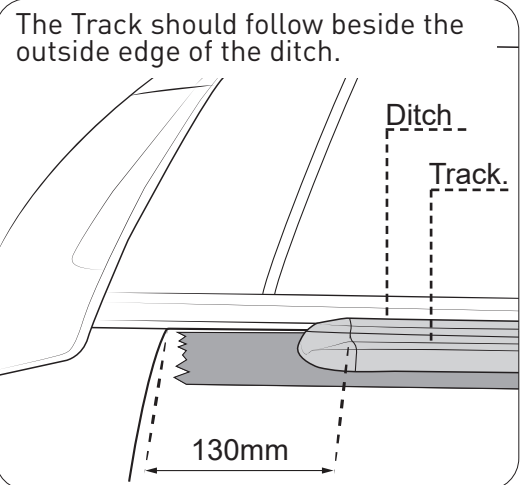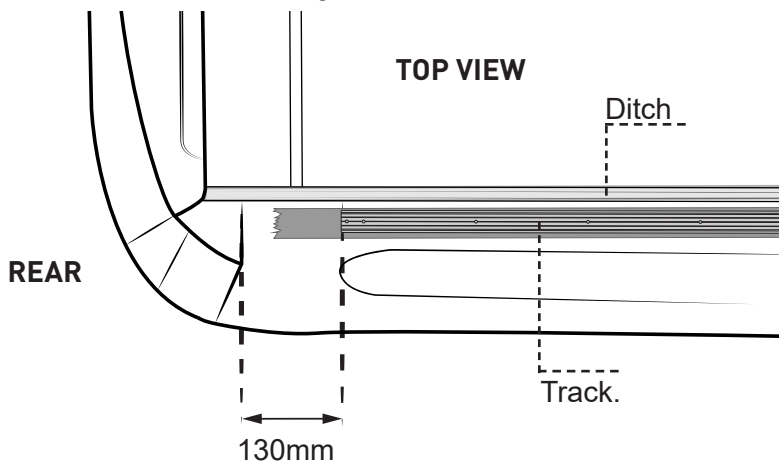

Follow steps **3** onwards from the RTV Track Instruction R865 to complete track installation.

## PLATFORM INSTALLATION



[rhinorack.com/roof](http://rhinorack.com/roof)

1. Complete **Fit my vehicle** journey
2. Select your **Product Solution**
3. Scroll down to '**Product Details**'
4. Select the '**INSTRUCTIONS**' tab to View the Fitting Chart
5. Space your Underbars to the **A, B & C** dimensions provided.

**VIEW FITTING CHART**




# LDV Deliver 7 LWB Low Roof Track Mount Supplement

## CROSSBAR INSTALLATION

**4 BAR**

VA, SPORTZ & RD


**HEIGHT ADDED:** 115 mm

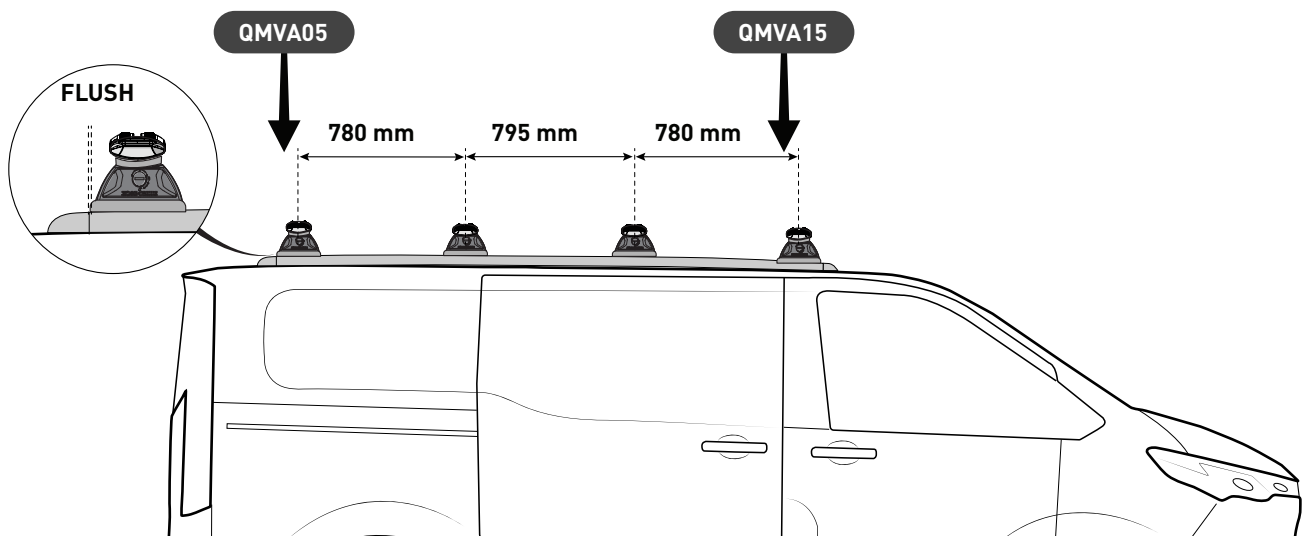

**3 BAR**

VA, SPORTZ & RD


**HEIGHT ADDED:** 115 mm

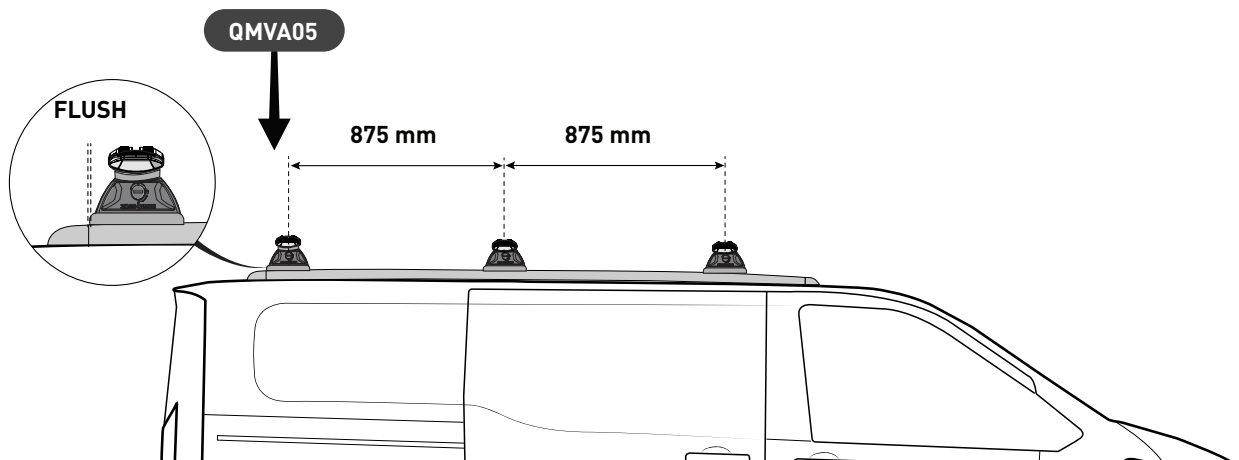

**2 BAR**

VA, SPORTZ & RD

**HEIGHT ADDED:** 115 mm

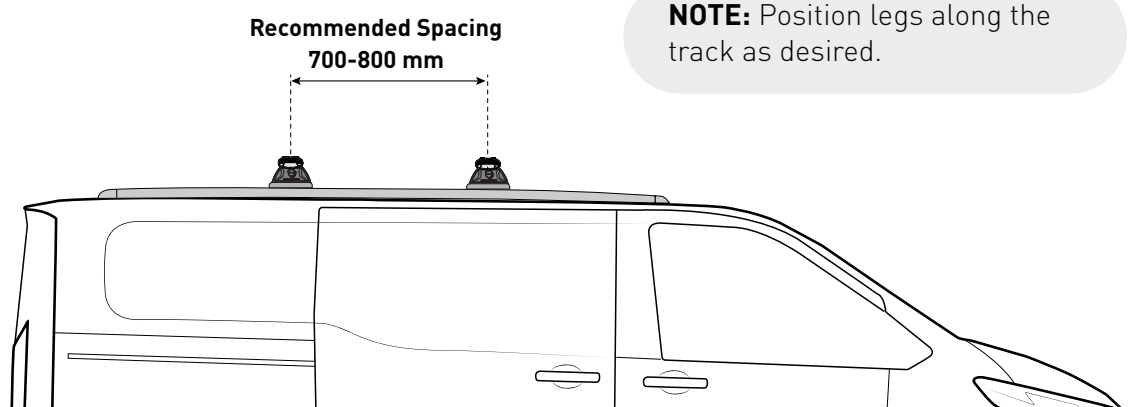

**NOTE:** Position legs along the track as desired.