





RHINO-RACK®



LDV Deliver 7 SWB Low Roof Track Mount Supplement

- 1** Using 50 mm wide masking tape, tape over the roof adjacent to the outside edge of the ditch, running along its length.

Compatible Legs: RCP58-BK + RX300H/RCH, OR RLT600

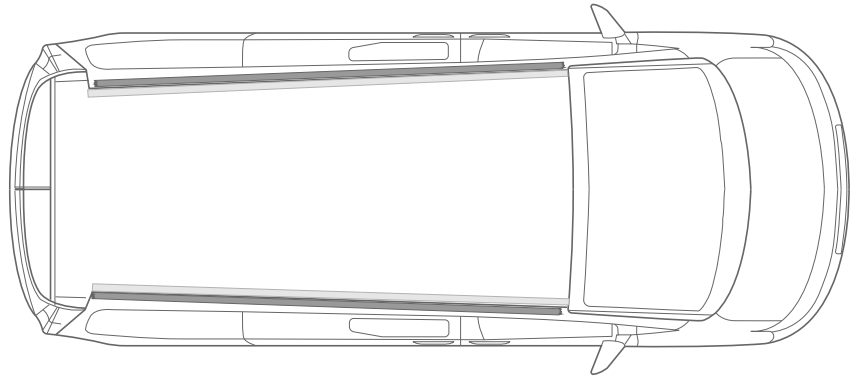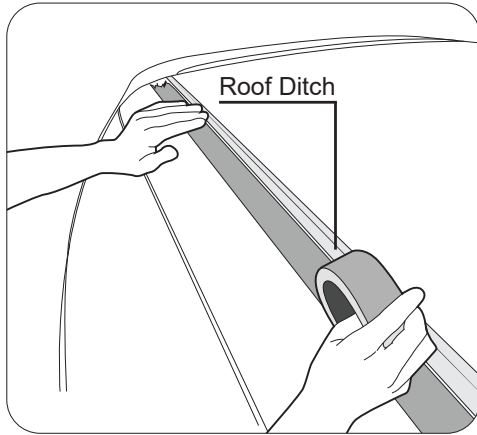

- 2** Place the Tracks on the masking tape 130mm from the end of the Cant Rail. The Track should follow beside the outside edge of the ditch.

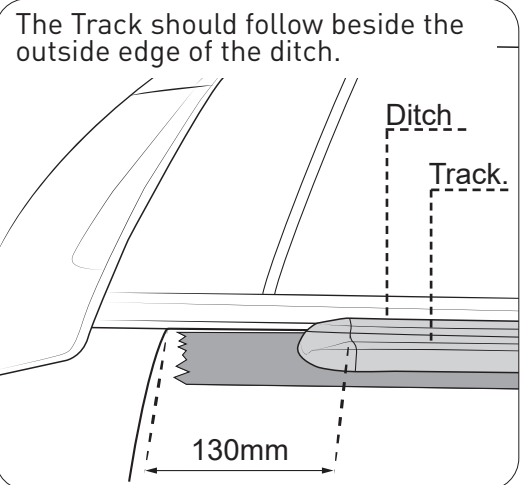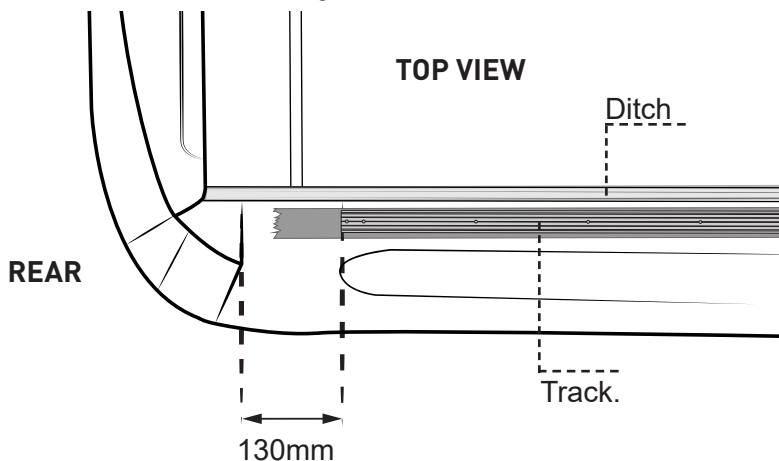

Follow steps **3** onwards from the RTV Track Instruction R865 to complete track installation.

PLATFORM INSTALLATION



rhinorack.com/roof

1. Complete **Fit my vehicle** journey
2. Select your **Product Solution**
3. Scroll down to '**Product Details**'
4. Select the '**INSTRUCTIONS**' tab to View the Fitting Chart
5. Space your Underbars to the **A, B & C** dimensions provided.

RHINO-RACK® PIONEER VEHICLE FITTING INFORMATION									
Vehicle	Model	Year	Weight	Capacity	Weight	Capacity	Weight	Capacity	Weight
LDV Deliver 7 SWB		2019 - 2025	1500kg	1500kg	1500kg	1500kg	1500kg	1500kg	1500kg
<div> <div> <div>1500kg</div> <div>1500kg</div> </div> <div> <div>1500kg</div> <div>1500kg</div> </div> </div>									
UNDERBAR SPACING									
Model	A	B	C	D	E	F	G	H	I
LDV Deliver 7 SWB	1500	1500	1500	1500	1500	1500	1500	1500	1500
LDV Deliver 7 SWB	1500	1500	1500	1500	1500	1500	1500	1500	1500

VIEW FITTING CHART




LDV Deliver 7 SWB Track Mount Supplement

CROSSBAR INSTALLATION

4 BAR

VA, SPORTZ & RD


HEIGHT ADDED: 115 mm

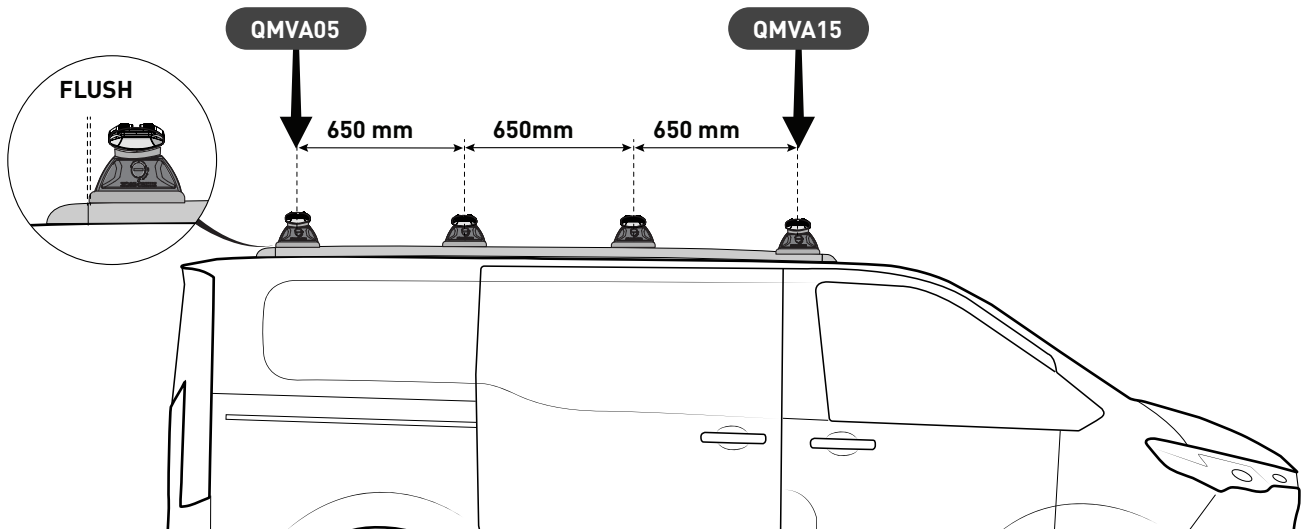

3 BAR

VA, SPORTZ & RD

HEIGHT ADDED: 115 mm

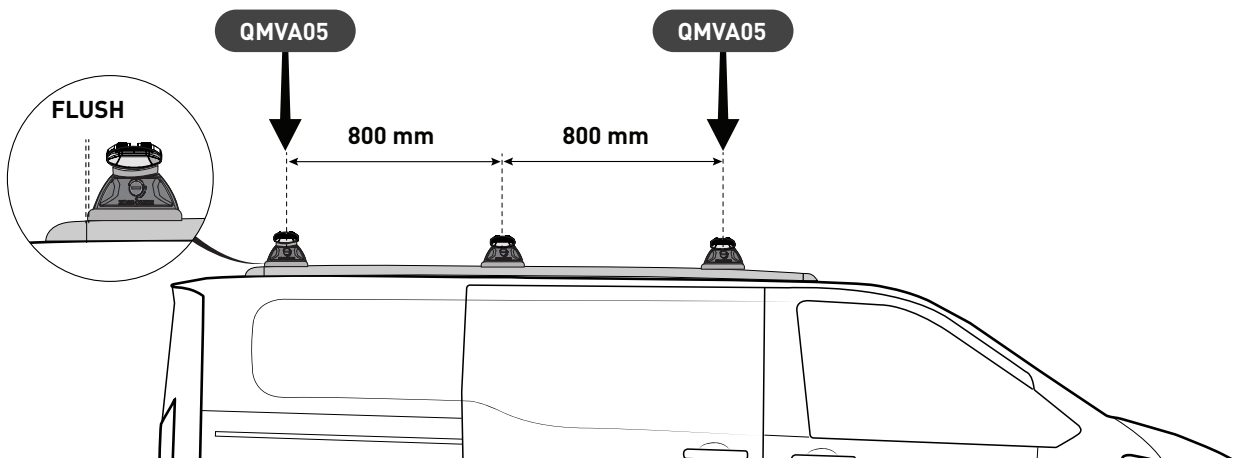

2 BAR

VA, SPORTZ & RD

HEIGHT ADDED: 115 mm

