


**CONTROLLED**


# RHINO-RACK

## Conduit Lower Side Brackets - BC3-LSB

### Parts List

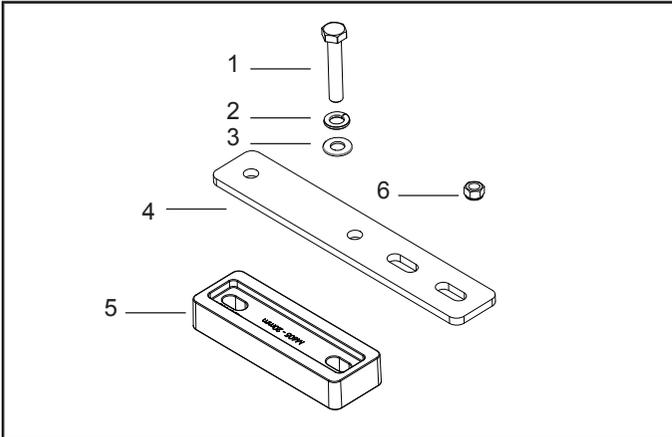

Item	Component	Qty	Part No.
1	M8 x 45mm Hex Bolt	6	B113
2	M8 Spring Washer	6	W019
3	M8 Flat Washer	12	W020
4	Conduit Clamp Spacer Bracket	3	CA1504
5	Ladder Loader Levelling Packer 20mm	3	M605
6	M8 Nyloc Nut	6	N028
7	M8 x 30mm Hex Bolt	6	B175
8	Fitting Instructions	1	R922

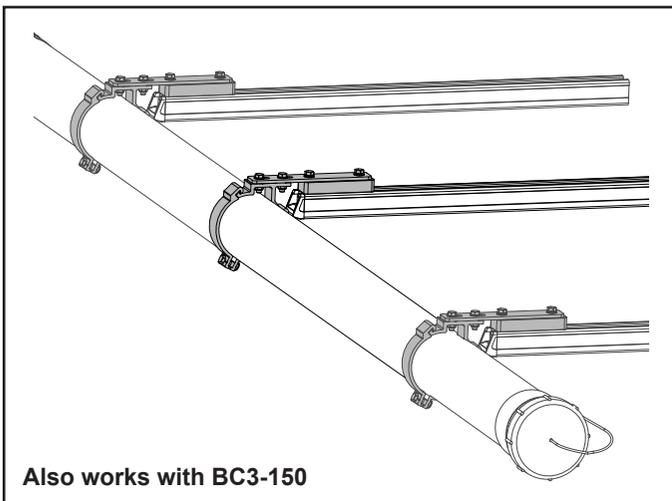

**1** Assemble the spacer kit as shown. Do not tighten hardware at this stage.

Use channel nuts from the conduit clamp kit.

**2** Place the spacer kit into the bar access slot as shown. Finger tighten the bolts.

**3** Using the parts from the conduit clamps kit, assemble it on to the spacer bracket as shown. Finger tighten.

2x M8 x 30mm Hex Bolt  
1x Clamp Assembly

**4** Position the clamps in the preferred position by adjusting the M8 x 30mm bolts and washers in the slots. Tighten all bolts.

Clamp Spacer Bracket Top View:

When using bar end cap:  
Mount clamp outward most position.

When **not** using bar end cap:  
Use inner most slot position.

Rhino-Rack  
3 Pike Street, Rydalmere,  
NSW 2116, Australia.  
(Ph) (02) 9638 4744  
(Fax) (02) 9638 4822

Prepared By: Peter Luu  
Authorised By: Chris Murty  
Issue No: 01  
Issue Date: 28/09/2015

These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.