



RHINO-RACK

EGR-HD


Important: Please read these instructions carefully prior to installation.
Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
Check the contents of kit before commencing fitment and report any discrepancies.
Place these instructions in the vehicle's glove box after installation is complete.

Care Instruction: Clean ute posts prior to installation of the Heavy Duty cross bar.


Parts List

Item	Component Name	Qty	Part No.
1	M8 Channel Nut	2	N003
2	M8 Flat Washer	2	W043
3	M8 Spring Washer	2	W019
4	M8 x 20mm Hex Bolt	2	B020
5	Fitting Instruction	1	R335


Tools Required: 13mm Spanner

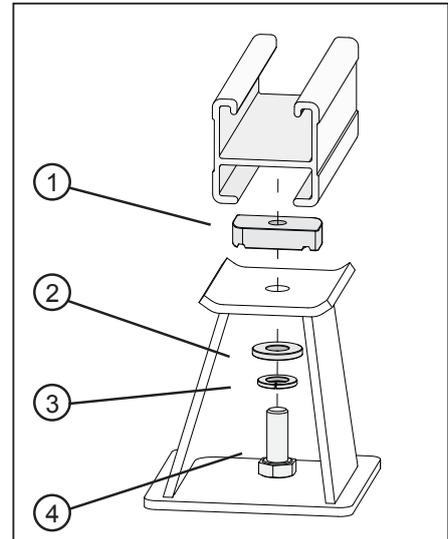

1 Fix the M8 x 20mm Hex Bolt, both Washers and M8 Channel Nut onto the EGR post as shown. Make sure the channels on the M8 Channel Nut are facing downwards.

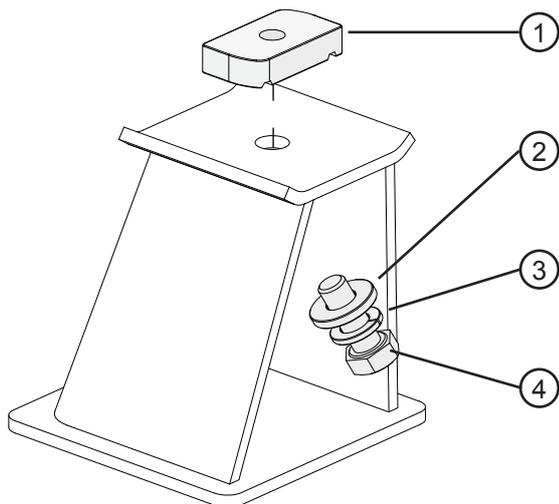

2 Slide Rhino Heavy Duty Bar onto channel nut as shown and tighten with the 13mm Spanner.

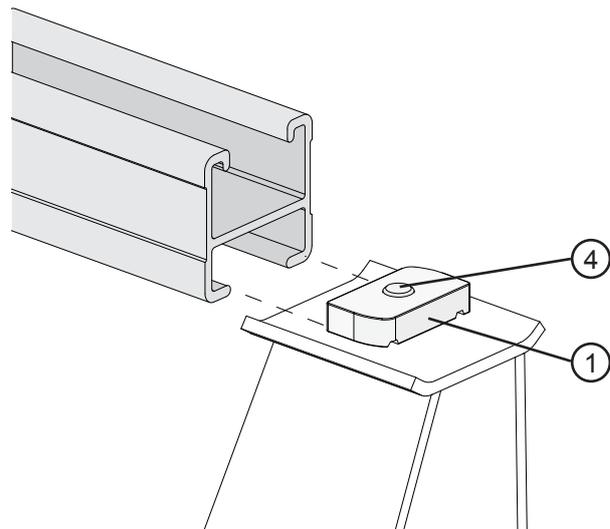

Rhino-Rack
3 Pike Street, Rydalmere,
NSW 2116, Australia.
(Ph) (02) 9638 4744
09/10/2013
(Fax) (02) 9638 4822

Document No: R335
Prepared By: Sam Whelan
Authorised By: Chris Murty

Issue No: 01
Issue Date: 05/11/13

These instructions remain the property of Rhinorack Australia Pty Ltd and may not be used or changed for any other purpose than intended.