



RHINO-RACK

EGR-VA


Important: Please read these instructions carefully prior to installation.
Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
Check the contents of kit before commencing fitment and report any discrepancies.
Place these instructions in the vehicle's glove box after installation is complete.

Care Instruction: Clean ute posts prior to installation of the Vortex Aero Cross Bar.


Parts List

Item	Component Name	Qty	Part No.
1	M6 Plate Nut	2	N068
2	2mm HDPE Spacer - Black	2	CA1261
3	M6 Flat Washer	2	W031
4	M6 Spring Washer	2	W004
5	M6 x 20mm Hex Bolt	2	B082
6	Fitting Instruction	1	R336


Tools Required: 10mm Spanner

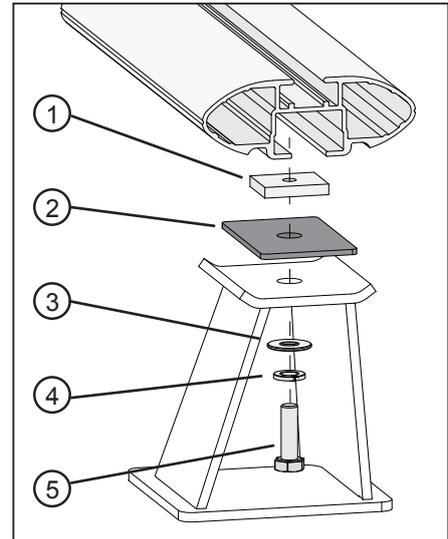

1 Fix the M6 x 20mm Hex Bolt, both Washers, 2mm HDPE Spacer and M6 Plate Nut onto the EGR post as shown.

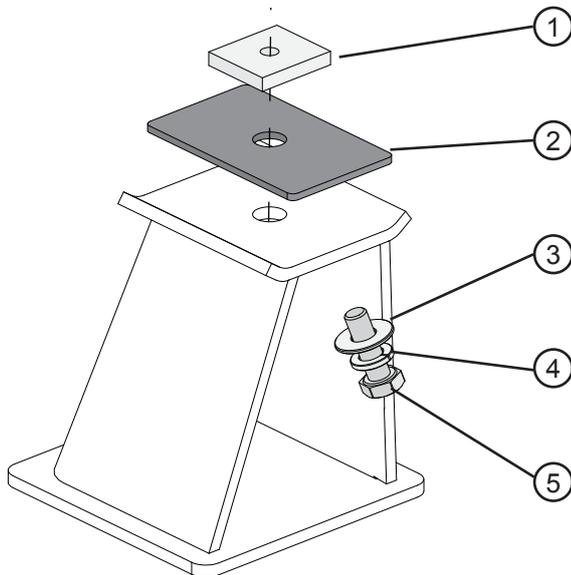

2 Slide the Rhino Vortex Aero Bar onto M6 Plate Nut as shown and tighten with the 10mm Spanner.

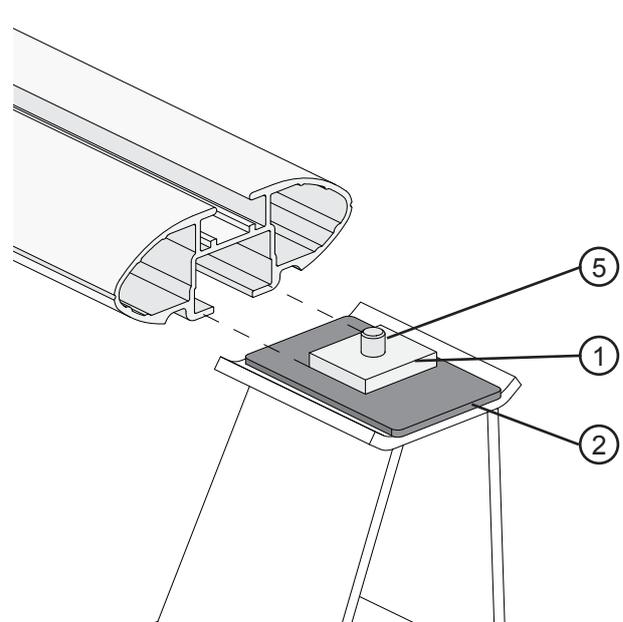

Rhino-Rack
3 Pike Street, Rydalmere,
NSW 2116, Australia.
(Ph) (02) 9638 4744
09/10/2013
(Fax) (02) 9638 4822

Document No: R336
Prepared By: Sam Whelan
Authorised By: Chris Murty

Issue No: 01
Issue Date: 06/11/13

These instructions remain the property of Rhinorack Australia Pty Ltd and may not be used or changed for any other purpose than intended.