



RHINO-RACK


Aerodynamic & Heavy Duty Roof Rack Systems

LHSPIV Rhino Leg Offset Spacer

Important: Please read these instructions carefully prior to installation. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations. Check the contents of kit before commencing fitment and report any discrepancies. Place these instructions in the vehicle's glove box after installation is complete.

Parts List

| Item | Component Name | Qty | Part No. |
|------|-------------------------|-----|----------|
| 1 | M10 x 35mm Hex Bolt | 4 | B079 |
| 2 | Nylon Leg Offset Spacer | 4 | M292 |
| 3 | Fitting Instruction | 1 | RR150 |

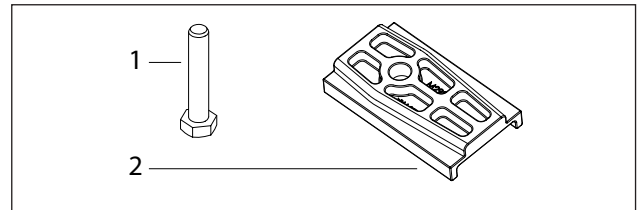

NOTE: Can be used on RLTP or RLTF track mount legs.

1

Remove the M10 x 25mm bolt. Re-fit with the Leg Offset Spacer and longer M10 x 35mm bolt along with the existing washers and channel nut. Install the cross bar and leg as normal.

2

Straight Track, no need for adaptor.

Curved Track, without adaptor. Cross bar at too severe an angle.

Curved Track, with adaptor. The cross bar remains perpendicular to the vehicle centre line which is ideal.

The Leg Offset Spacer allows cross bars to be mounted perpendicular to the vehicle centre line on tracks that curve towards the front or rear of the vehicle. The adaptor allows a maximum rotation of 5° while still maintaining sufficient load bearing area.

Maximum rotation of 5° in either direction.

Rhino-Rack
 3 Pike Street, Rydalmere,
 NSW 2116, Australia.
 (Ph) (02) 9638 4744
 (Fax) (02) 9638 4822

Document No: RR-150
 Prepared By: Craig Jones
 Authorised By: Gary England

Issue No: 01
 Issue Date: 22/02/2007

These instructions remain the property of Fetovu Pty Ltd T/as Rhino-Rack and may not be used or changed for any other purpose than intended.