






**Fitting Chart - TOYOTA Land Cruiser 4dr 4WD 200 Series**

**PIONEER 41102** (1928 x 1236mm) (6' 3 29/32" x 4' 21/32")  
**PIONEER 42102B** (1928 x 1236mm) (6' 3 29/32" x 4' 21/32")  
**PIONEER 45102B** (1928 x 1236mm) (6' 3 29/32" x 4' 21/32")

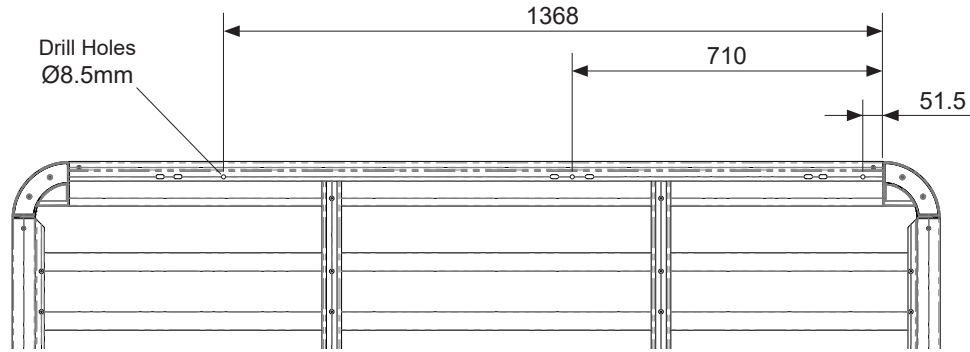

Front of Tray

Front Crossbar			Middle Crossbar			Rear Crossbar			Approx. Overall Vehicle Height
Front Slot	Dim. A	Leg Height Spacer	Middle Slot	Dim. A	Leg Height Spacer	Rear Slot	Dim. A	Leg Height Spacer	
Drill Hole Ø8.5mm	125mm (4 59/64")	QMPS10	Drill Hole Ø8.5mm	135mm (5 5/16")	QMHD10	Drill Hole Ø8.5mm	145mm (5 45/64")	QMHD10	

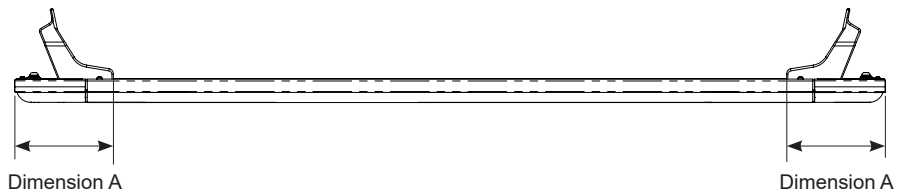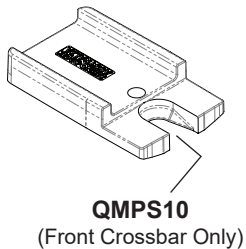

Country	Vehicle	Running Date	Vehicle Load Rating (kg/lbs)	Fit Kit
<b>Australia &amp; NZ</b>	TOYOTA Land Cruiser 4dr 4WD 200 Series	11/07 - on	125 / 275	1 x RCP17-BK 1 x RCH6 2 x QMHD10 1 x QMPS10
<b>Canada, USA &amp; South America</b>	TOYOTA Land Cruiser 4dr SUV 200 Series	2008 - on		
<b>South Africa</b>	TOYOTA Land Cruiser 4dr SUV 200 Series	2011 - on		
<b>UK &amp; Europe</b>	TOYOTA Land Cruiser 4dr 4WD 200 Series	11/07 - on		

**Note for Dealers and Fitters:**

It is your responsibility to ensure these fitting instructions are given to the end user or client

Rhino-Rack, 22 Hanson St, Eastern Creek

NSW 2766, Australia

(02) 8846 1900

rhinorack.com.au

Document No: R1506

Prepared By: Kayle Everett

Authorised By: Nicholas Clarke

Issue No: 03

Issue Date: 22/11/2018

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.