

RHINO-RACK | PIONEER VEHICLE FITTING INFORMATION

VEHICLE	PIONEER SIZE	CONNECTOR	HEIGHT ADDED (mm / in)
AUDI Q7 4L 4WD/SUV Flush Rail 5 dr	52101	SX027	

IMPORTANT NOTES


Pioneer Tray covers the factory sunroof. - Do not operate sunroof

REGION	AUS	NZ	USA	CA	SA	UK	EU	ZA
AVAILABILITY	✓	✓	✓	✓	×	✓	✓	✓
RUNNING DATES	09/06 - 08/15	09/06 - 08/15	2007 - 2015	2007 - 2015	-	2007 - 2015	2007 - 2015	2007 -

UNDERBAR SPACING

CONNECTOR


SX

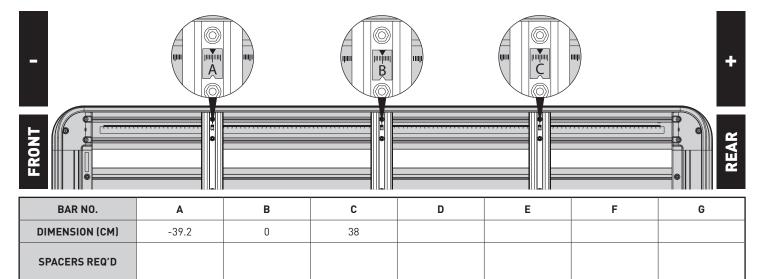

VEHICLE LOAD LIMIT (VLL) (kg / lbs)	SYSTEM WEIGHT (SW) (kg / lbs)	ON-ROAD CARGO ALLOW. (OR)	OFF-ROAD CARGO ALLOW. (OFR)	
Up to 100 / 220.5 *	23 / 50.7	OR = VLL - SW	OFR = OR / 1.5	

SX

*CHECK YOUR VEHICLE OWNERS HAND BOOK FOR VEHICLE MAXIMUM CARRYING CAPACITY. PLEASE ENSURE YOU USE THE VEHICLE MANUFACTURERS MAXIMUM ROOF ALLOWANCE IF IT IS LOWER THAN THE FIGURE LISTED IN THIS INSTRUCTION.

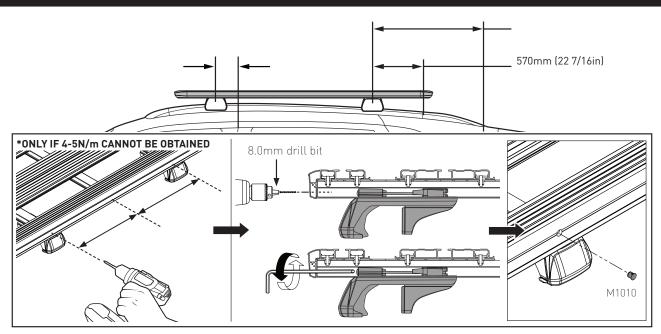

NOTES FOR DEALERS / FITTERS

It is your responsibility to ensure these fitting instructions are given to the end user or client.

Document No: R2137 Issue Date: 20-Nov-20

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Page 1 of 1 rhinorack.com