




RHINO-RACK

Rhino-Rack 3 Bike Carrier Ball Mount (RBC007)

Rhino-Rack 4 Bike Carrier Ball Mount (RBC008)

Important: Please read these instructions carefully prior to installation.
Please refer to your fitting instruction to ensure that the bike rack is installed in the correct locations.
Check the contents of kit before commencing fitment and report any discrepancies.
Place these instructions in the vehicle's glove box after installation is complete.

Layout

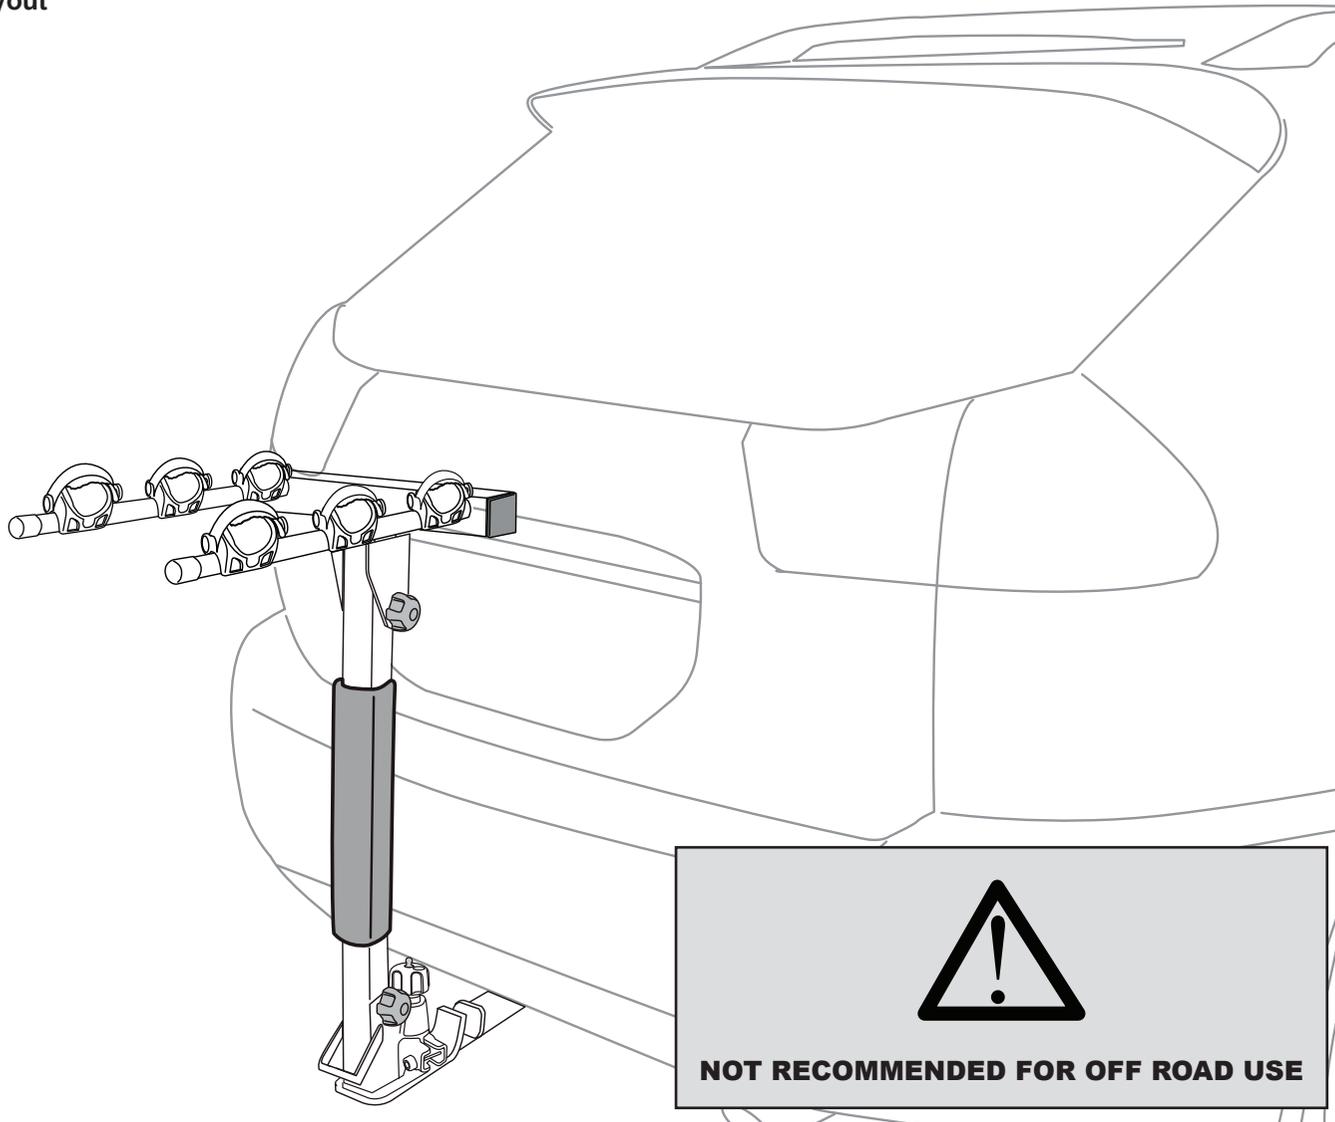

Important Information

Please remove bike rack when putting vehicle through an automatic car wash.

Note for Dealers and Fitters

It is your responsibility to ensure this fitting instruction is given to the end user or client

Rhino-Rack
3 Pike Street, Rydalmere,
NSW 2116, Australia.
(Ph) (02) 9638 4744
(Fax) (02) 9638 4822

Document No: RR236
Prepared By: Andy Wana
Authorised By: Gary England

Fit Time 10min
Issue No: 05
Issue Date: 29/01/2016

These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.




Rhino-Rack 3 Bike Carrier Ball Mount (RBC007)

Rhino-Rack 4 Bike Carrier Ball Mount (RBC008)


Parts List

Item	Component Name	Qty
1	Bike Rack	1
2	Keys	1
3	Tie Down Straps	2
4	Spanner	1
5	Fastener Set	1
6	Fitting Instruction	1

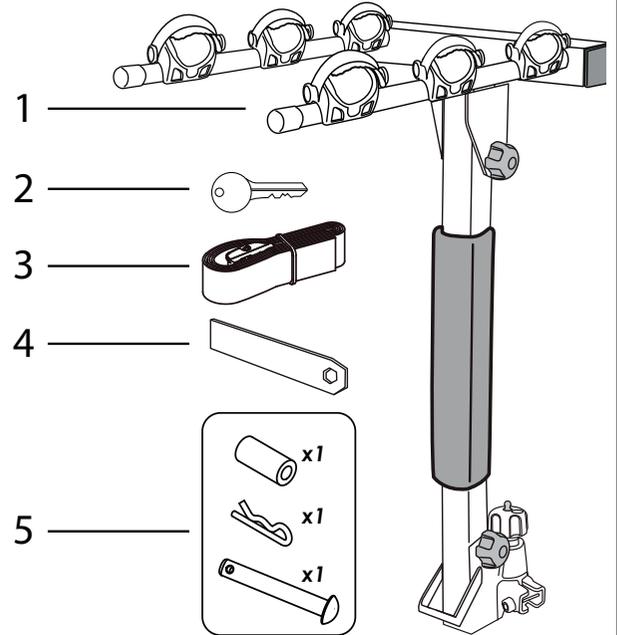

RBC007


Carry up to
3 bicycles ONLY

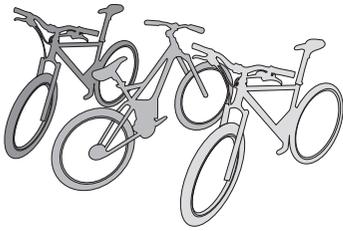



Load capacity up
to 45kg ONLY

RBC008

Carry up to
4 bicycles ONLY




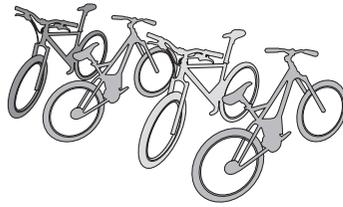


Load capacity up
to 60kg ONLY

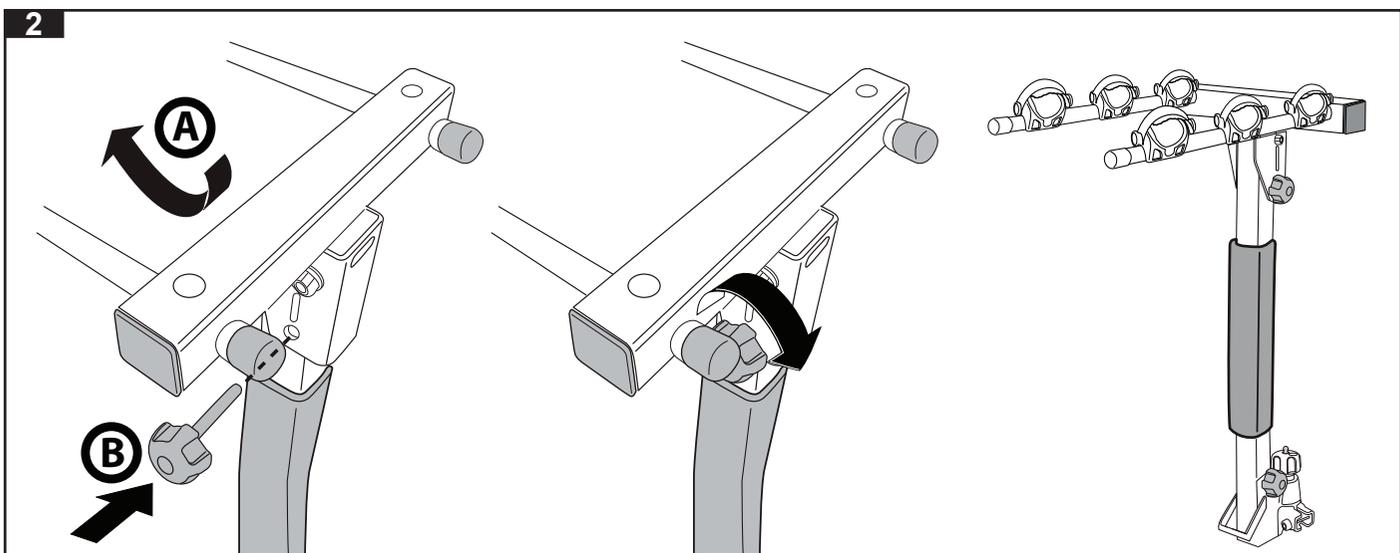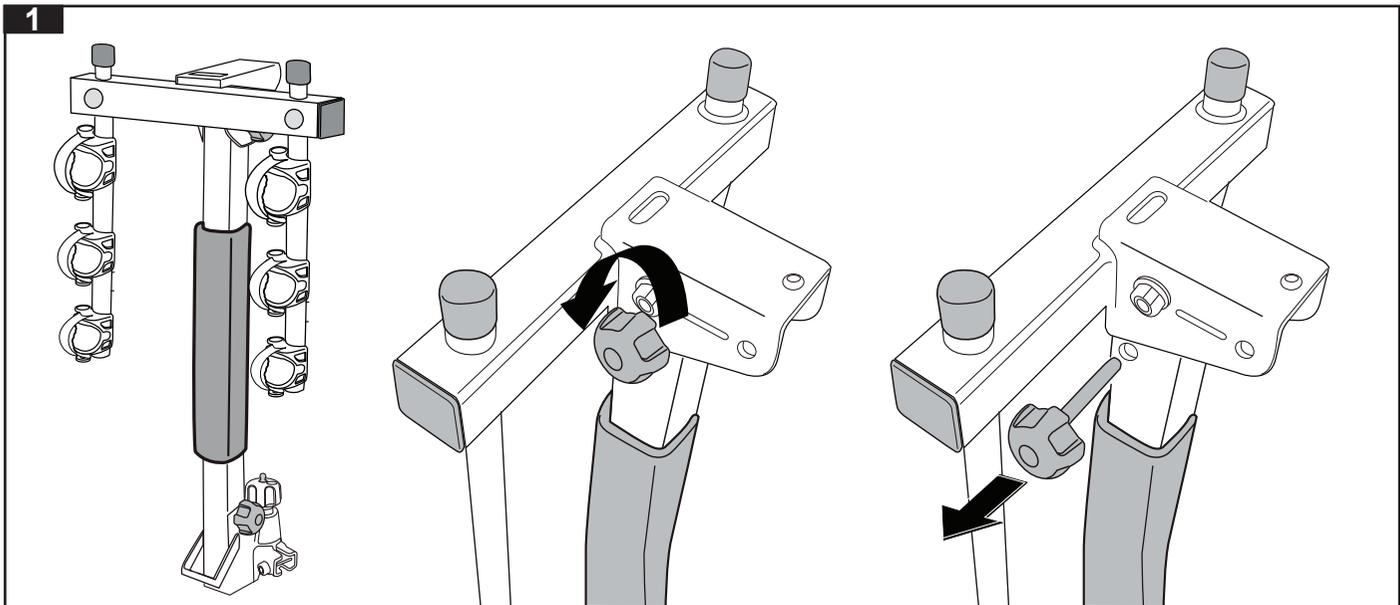





Rhino-Rack 3 Bike Carrier Ball Mount (RBC007) Rhino-Rack 4 Bike Carrier Ball Mount (RBC008)

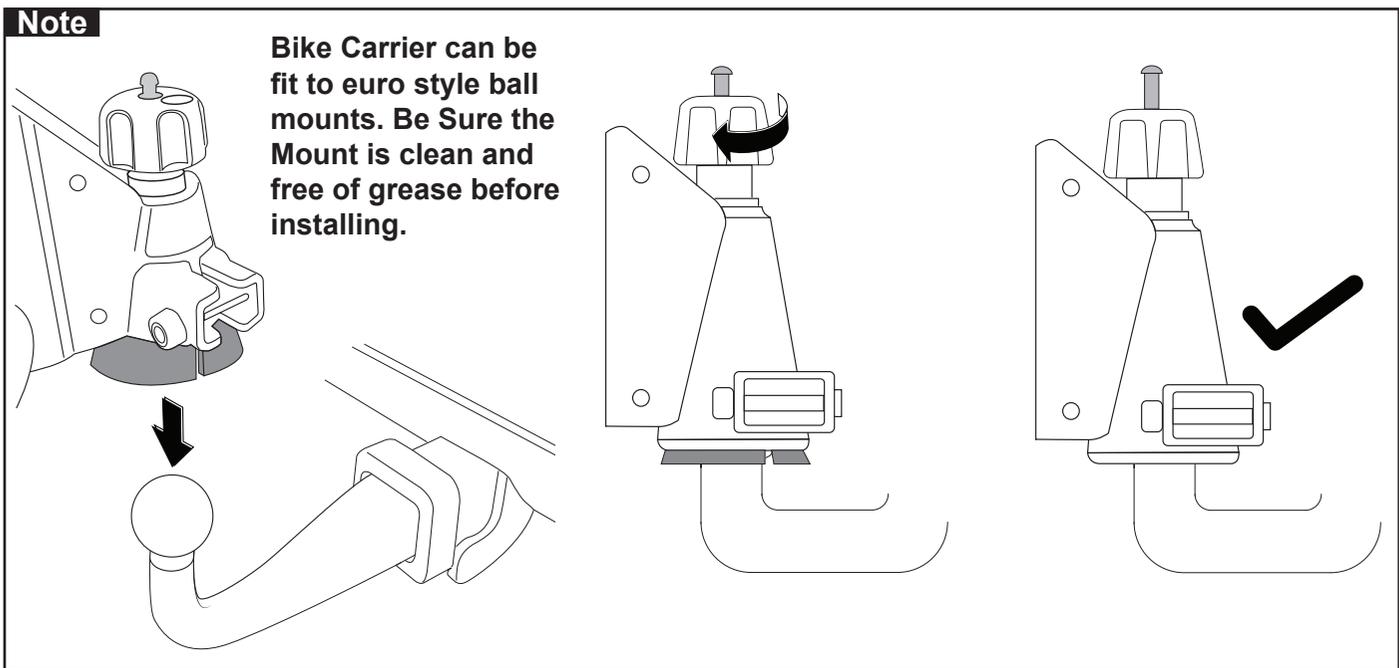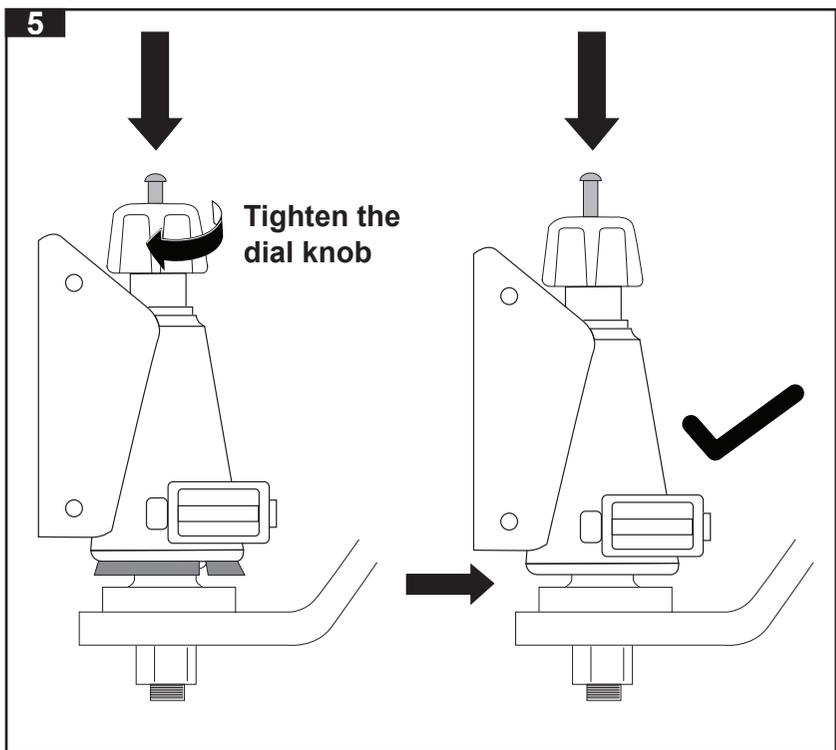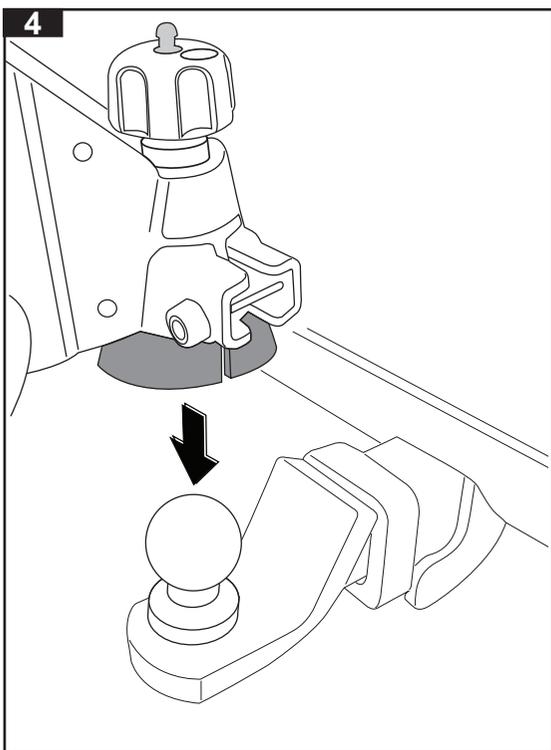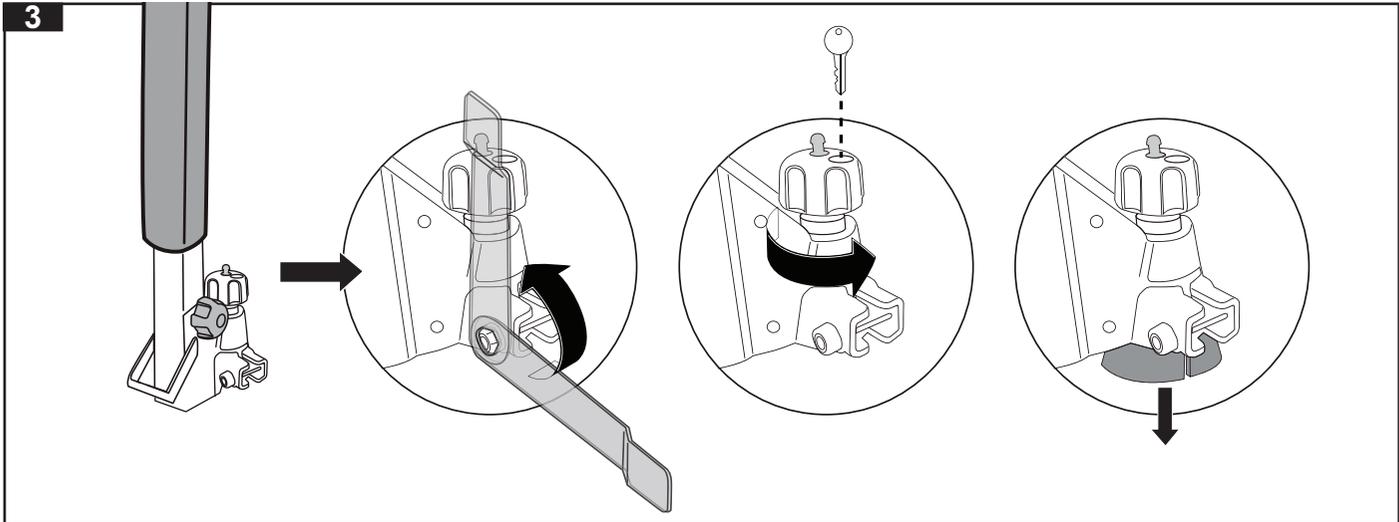



Rhino-Rack 3 Bike Carrier Ball Mount (RBC007) Rhino-Rack 4 Bike Carrier Ball Mount (RBC008)

6

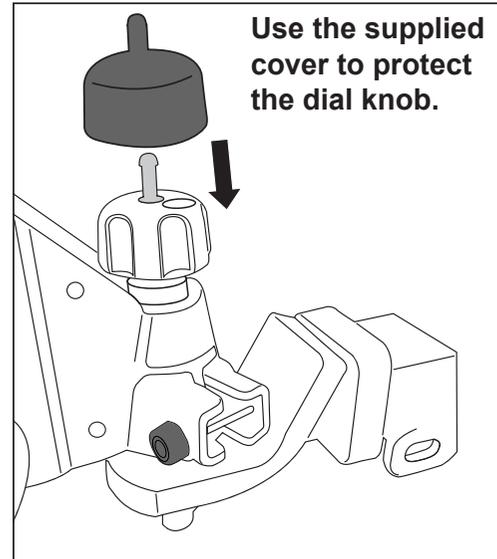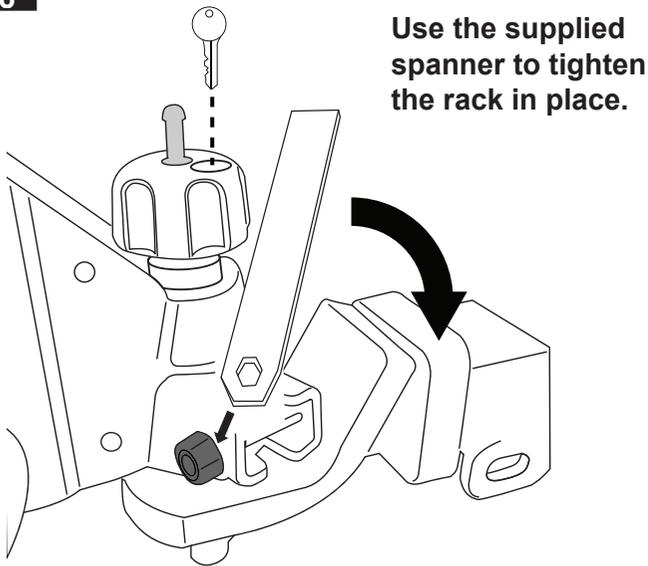






7

Step 1 : Undo the locking bolt as shown (Fastener set - item 5)

Step 2 + 3 : Wedge the spacer and insert pin as shown

Step 4 : Insert locking pin

Step 5 : Place pole in upright position, insert locking bolt and tighten

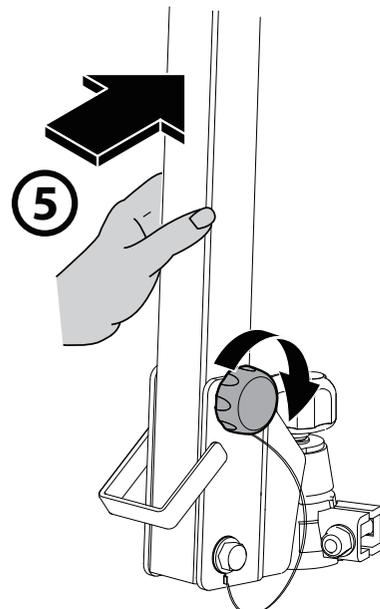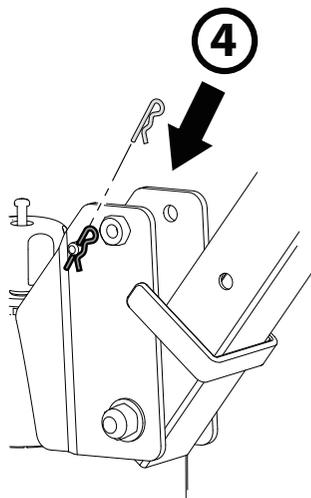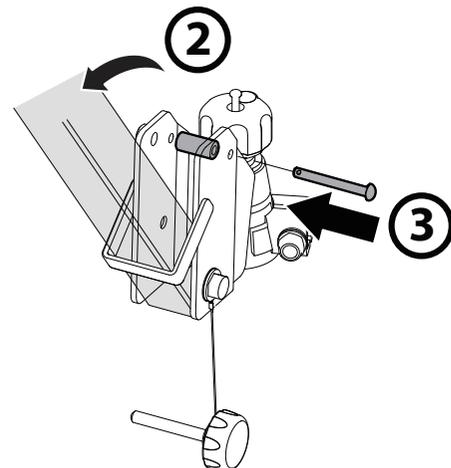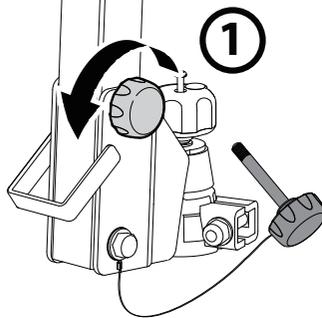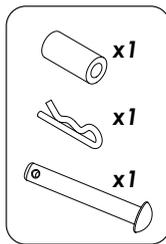





Rhino-Rack 3 Bike Carrier Ball Mount (RBC007)

Rhino-Rack 4 Bike Carrier Ball Mount (RBC008)

8

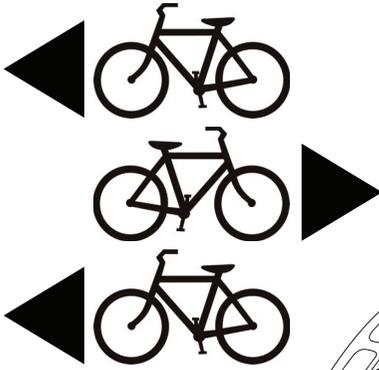


Place bicycles as shown on the left. Note the direction each bicycle is facing when mounted on the rack.

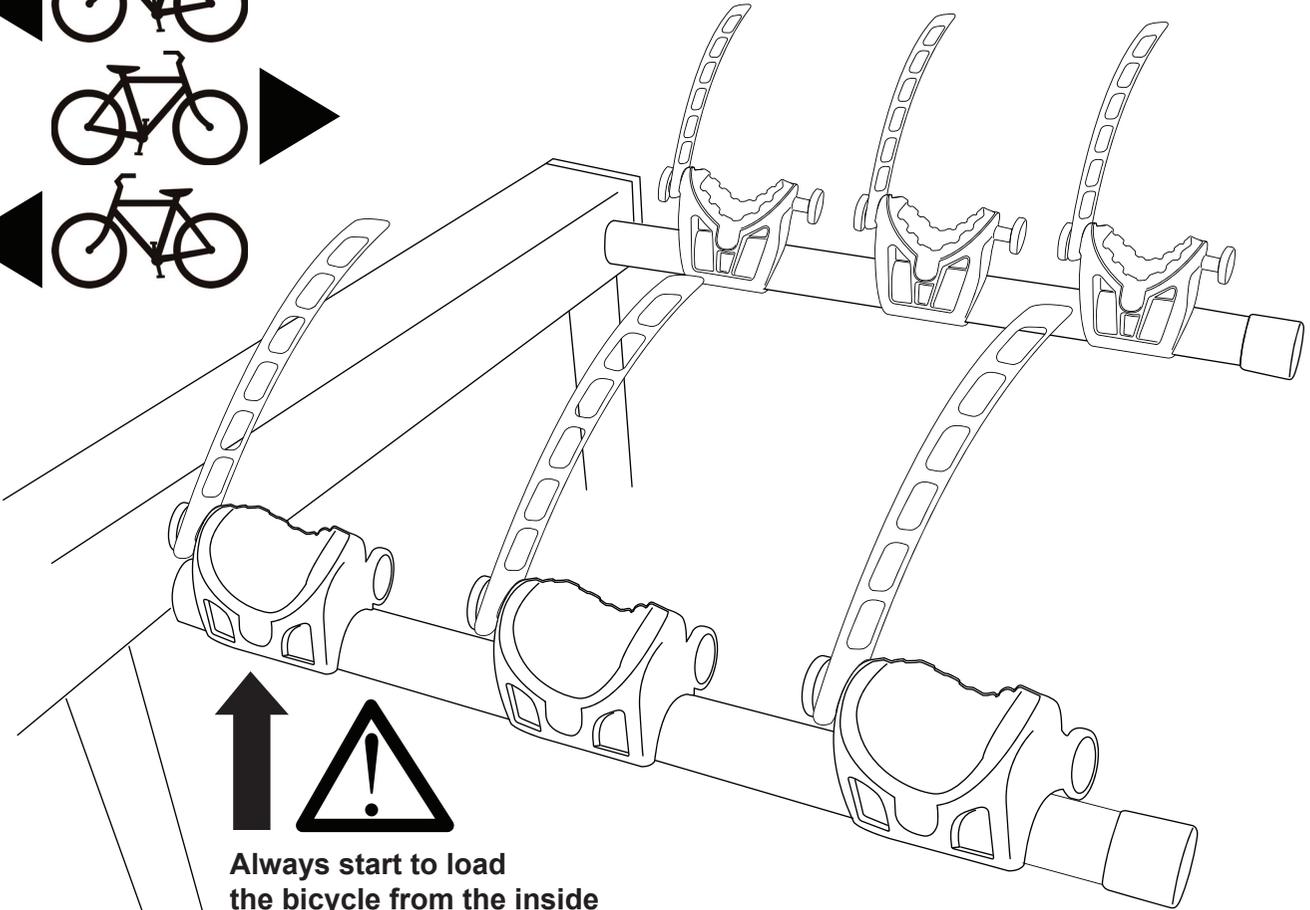

Always start to load the bicycle from the inside

9

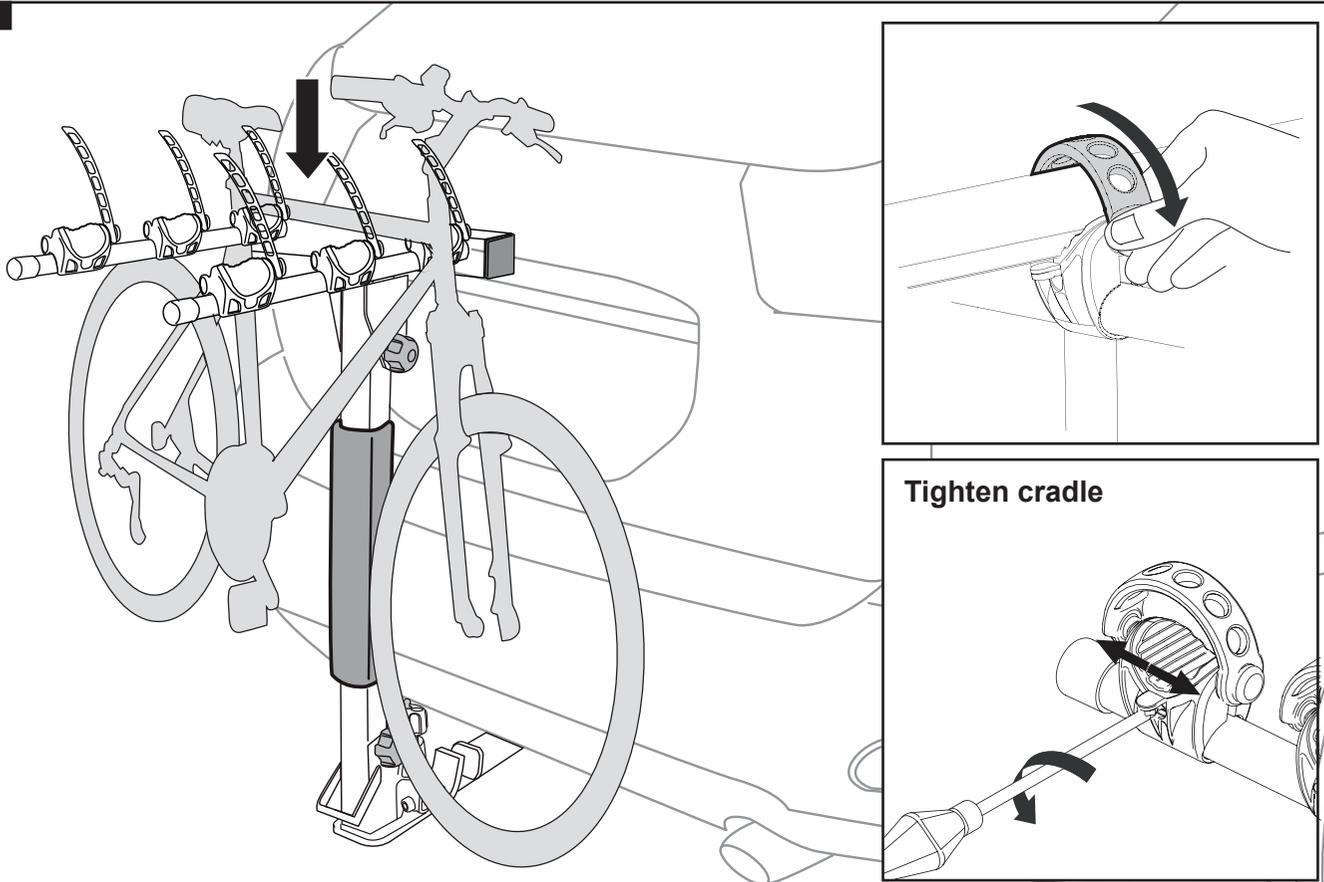


Tighten cradle




Rhino-Rack 3 Bike Carrier Ball Mount (RBC007) Rhino-Rack 4 Bike Carrier Ball Mount (RBC008)

10

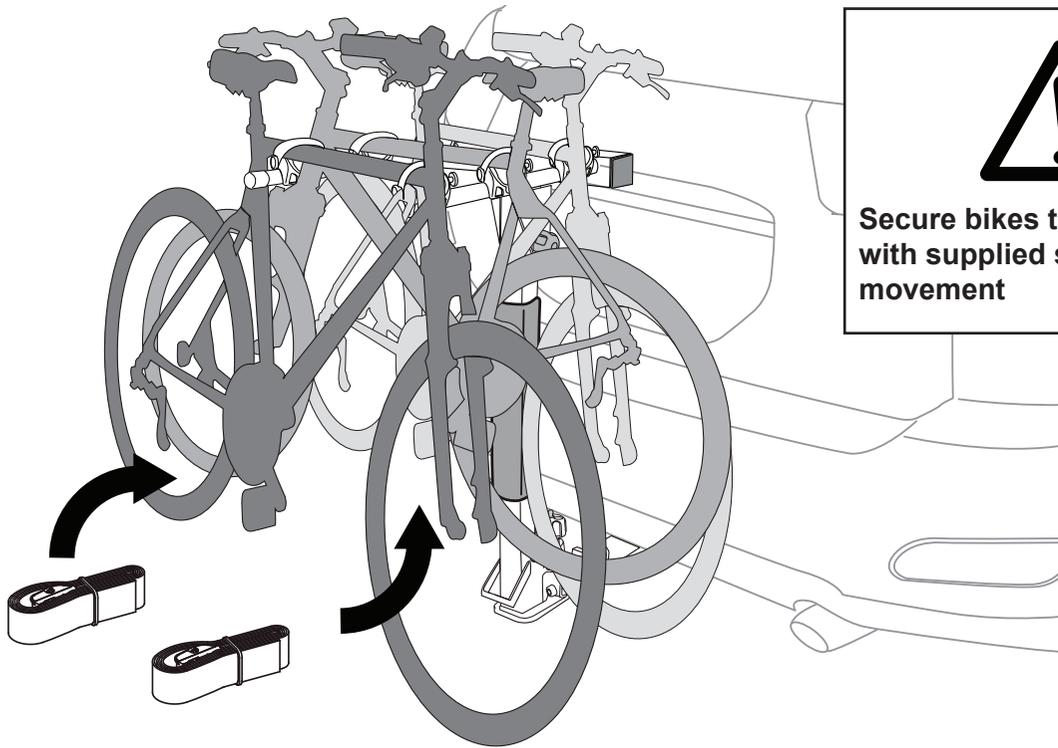


Secure bikes to bike carrier with supplied straps to avoid movement

11

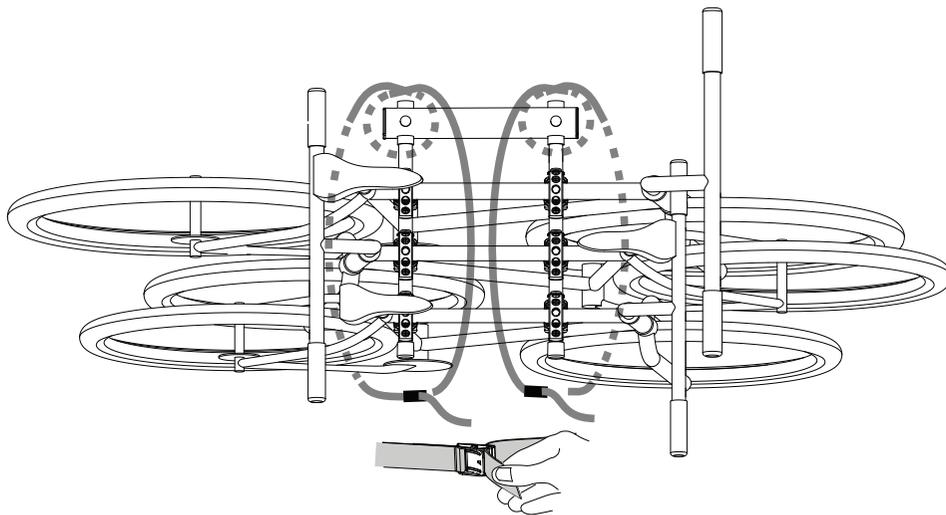

12

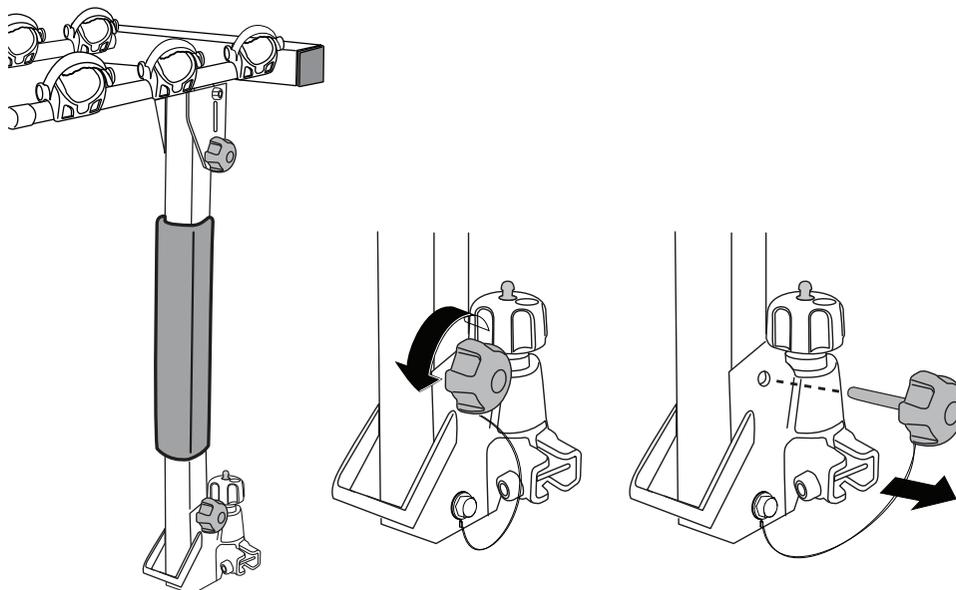





Rhino-Rack 3 Bike Carrier Ball Mount (RBC007) Rhino-Rack 4 Bike Carrier Ball Mount (RBC008)

Note

When the carrier is fitted to a euro style tow mount, loop the straps through the bike frame both front and rear. Tie these straps off towards the outer edges of the vehicle. This will prevent any swivel when in use.

Top View: Tie off the bike frame at suitable locations towards the outer edge of the vehicle.

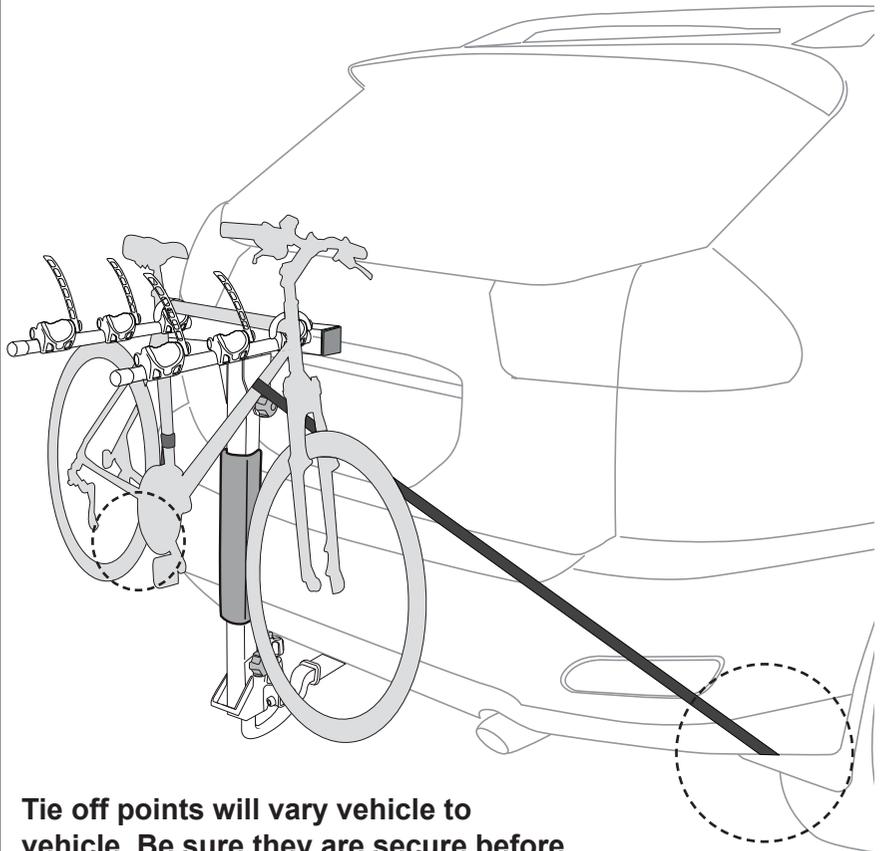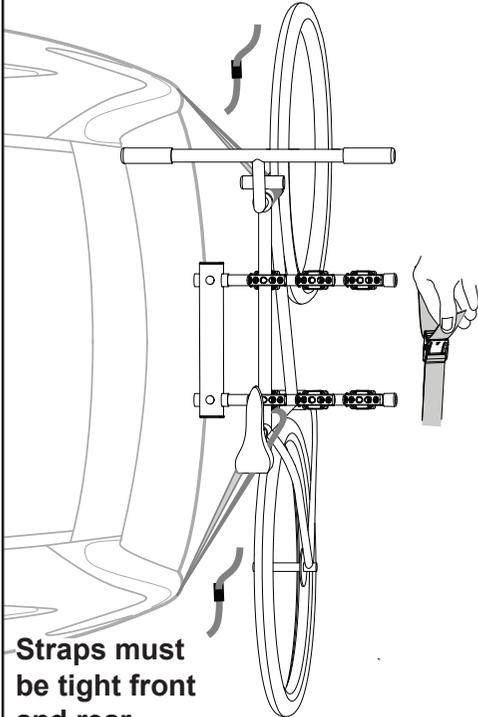

13

Tilt the bike rack as shown for access to tailgate when rack is in use.

