




RHINO-RACK

Rhino-Rack Wrap Pads (RWP01 / RWP02)

Important: Please read these instructions carefully prior to installation. Please refer to your fitting instruction to ensure that the anchor strap is installed in the correct location. Check the contents of kit before commencing fitment and report any discrepancies. Place these instructions in the vehicle's glove box after installation is complete.

Layout

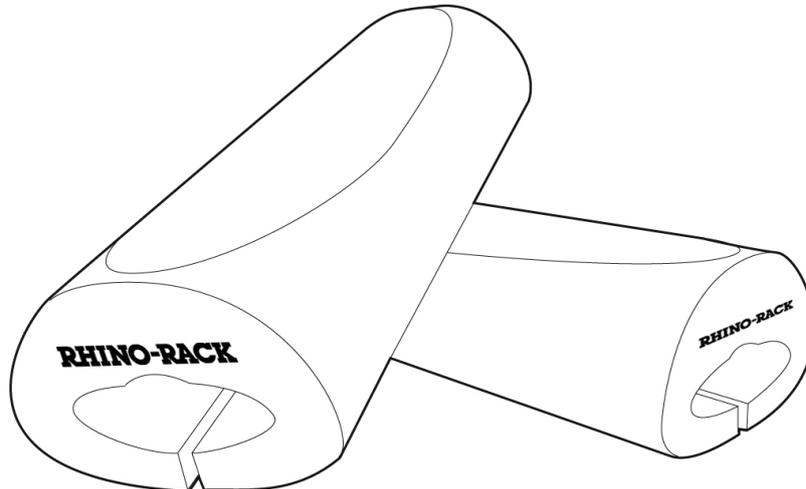

Parts List

Item	Component Name	Qty	Part No
1a	Foam Pad (Aero) RWP01	2	CA1129
1b	Foam Pad (Euro Square) RWP02	2	CA1208
2	Fitting Instruction	1	R176

Care Instruction: Wash and clean vehicle roof racks prior to fitment


Warning:

It is important that all roof racks and accessories are installed and attached correctly. Failure to follow the correct attachments could result in an accident, serious injury or death to others. The driver of the vehicle is responsible for securing the roof racks and accessories, checking the attachments, periodically checking bolt torque and visual inspection of all components for wear and damage. Do not attempt to fit the roof rack system or accessory to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer or retailer from where they were purchased.


Use only non-stretch fastening ropes or straps.

Note for Dealers and Fitters

It is your responsibility to ensure this fitting instruction is given to the end user or client

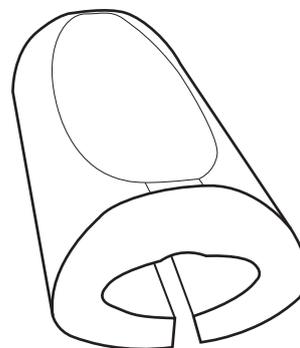

RWP01
Width: 380mm (15")

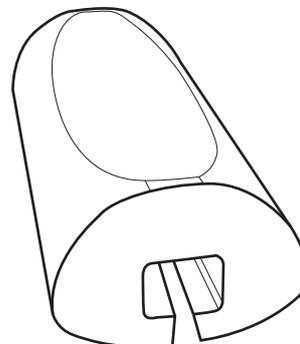

RWP02
Width: 380mm (15")

Important Information

Rhino-Rack
3 Pike Street, Rydalmere,
NSW 2116, Australia.
(Ph) (02) 9638 4744 (Fax) (02) 9638 4822









Document No: R176
Prepared By: Andy Wana
Authorised By: Chris Murty

Issue No: 02
Issue Date: 8/7/2013


These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.



Rhino-Rack Wrap Pads (RWP01 / RWP02)

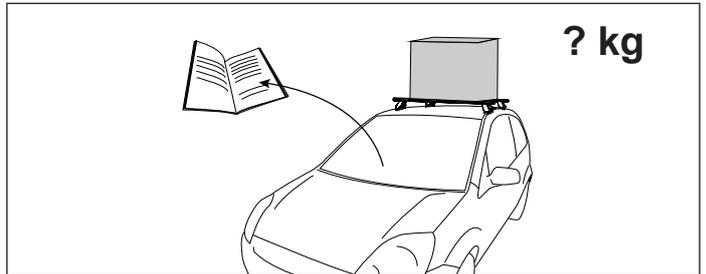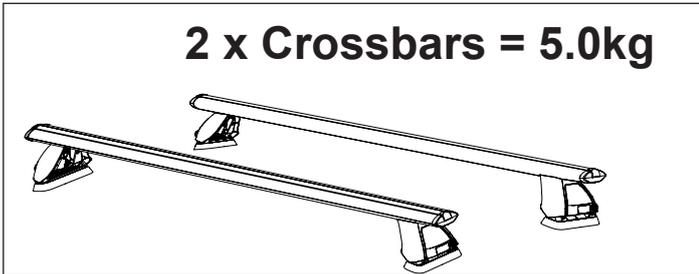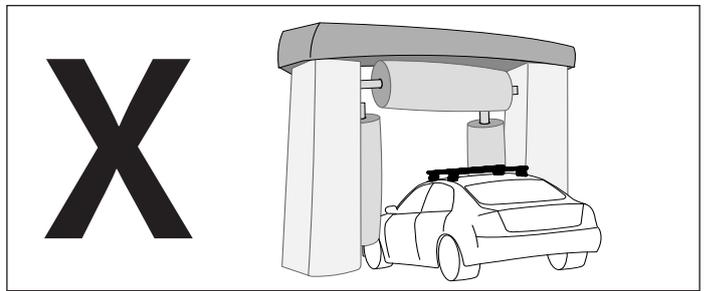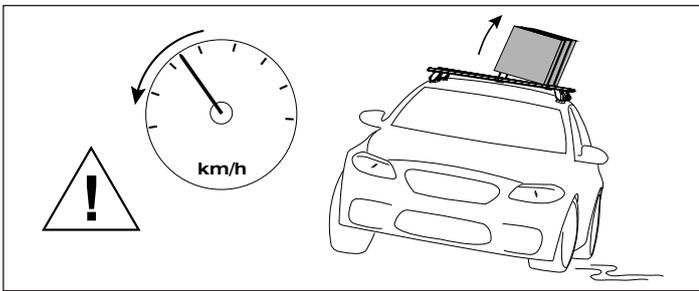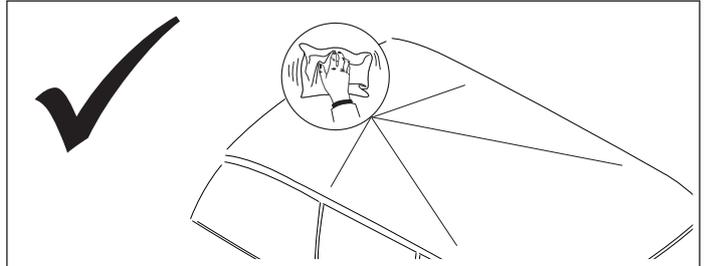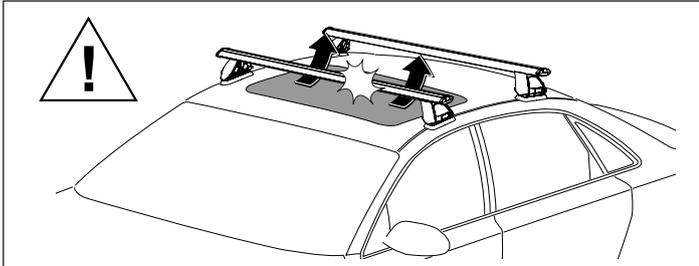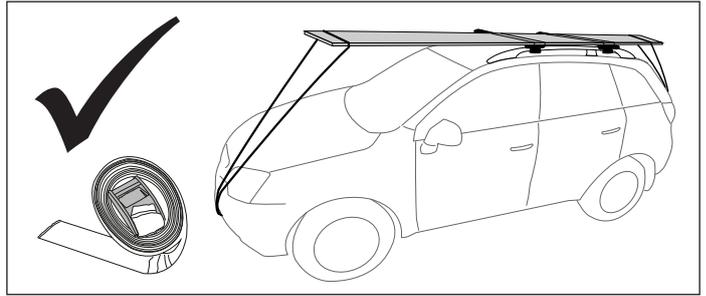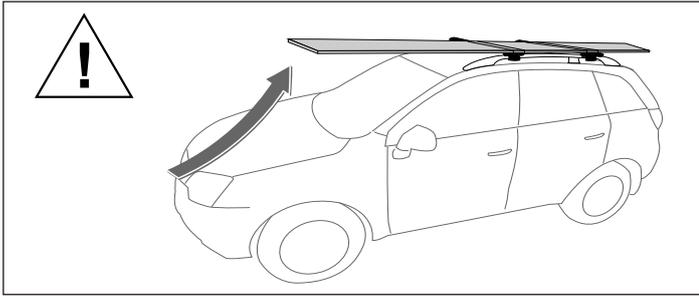

When these roof racks are to be used on a vehicle that is driven off sealed roads, the manufacturer maximum roof load rating (to be found in the vehicles User Manual) should be **halved**. Do not forget to subtract 7.5kg from your maximum carrying capacity due to the weight of the crossbars and legs.



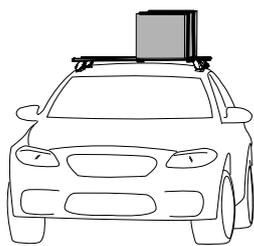


60kg load rating (Urban road) = **30kg load rating** (Off road - 60kg / 2)



WARNING! Important Load Carrying Instructions

With utility vehicles, the cabin and the canopy move independently. Roof racks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roof racks or the canopy roof racks.

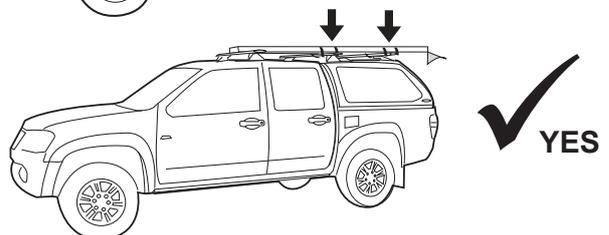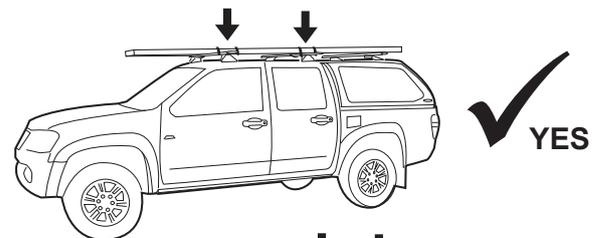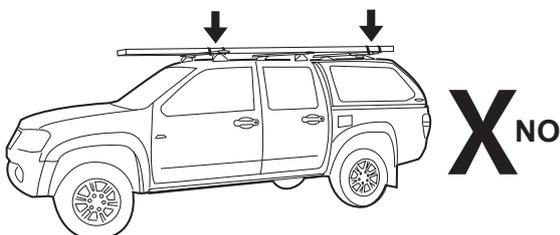



Rhino-Rack Wrap Pads (RWP01 / RWP02)

Fitting instructions

- Ensure you have the correct pad that suits your roofbar (Rhino-Rack Aero bar pictured)
- We recommend you clean your roof racks prior to fitting the foam pads.
- Follow images to guide you in fitting the Wrap Pads.
- To remove pads from vehicle, follow the steps in reverse.
- Rhino-Rack Wrap Pad will remain attached to the vehicle until such time that you wish to remove them.
- The process of fitting the pads to the roofbar will stretch the pad slightly. It will return to its original shape and provide best fit in about 15 minutes.

