

## **Guidelines**

- Maximum weight: 35lb per bike
- Compatible with RockyMounts™ DriveShaft Track, HotRod and LoBall series bike mounts
- After loading a bicycle, shake fork side to side to ensure assembly is tight and secure
- Not recommended for use on trailers
- Not intended for offroad use
- Trimming may be required for trucks with spay-on bedliners

### Parts Included

A: 60" Track with End Caps

**B**: Mounting Bracket

C: M8x16 Allen Bolt

D: M8 Flat Washer

E: M6x18 Allen Bolt


F: M6 Flat Washer

G: Track Plate

H: T40 Torx Wrench

I: M5 Allen Wrench


J: M6 Allen Wrench

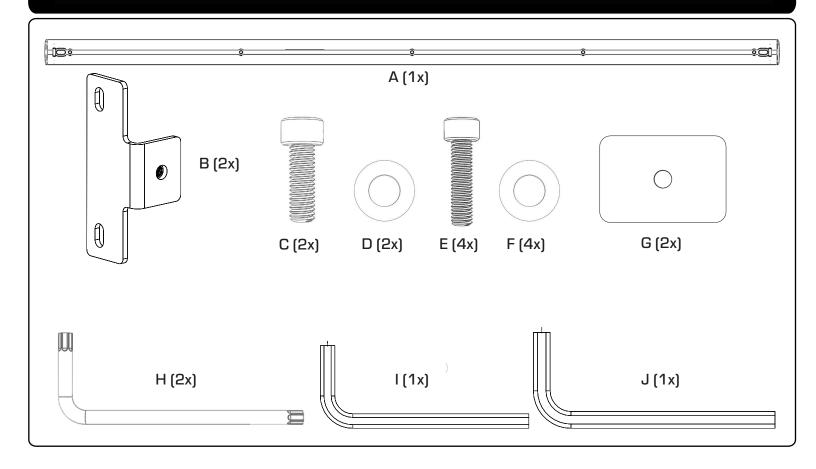


## Assembly Instructions

# 1 Install Mounting Brackets Unscrew M8 bolts and remove each front tie down cleat using


T40 torx wrench. Reinstall each tie down cleat over a mounting bracket using the original bolts.

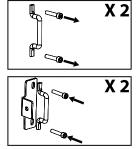



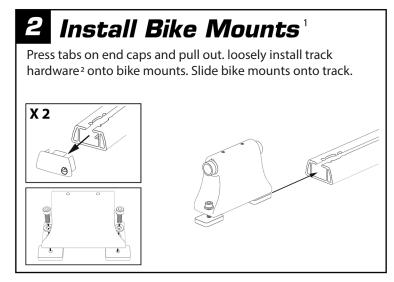

# Reinstall two end caps. Install track to mounting brackets using an M8x16 Allen bolt with an M8 washer on each side.

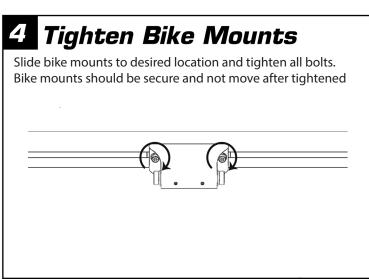

- 1. Bike mounts not included.
- 2. Track hardware provided: M6x18 Allen bolt (x4), M6 Flat Washer (x4), Track Plate (x4)

# Warnings

Remove Baby Seats, Panniers, U-Locks, or items that could detach from the bicycle.

Check all fastenings before each use.

Once a year, remove track from car. Clean and inspect for damage.

Remove bikes before entering a car wash.

# **Limited Lifetime Warranty**

At RockyMounts<sup>™</sup> we offer a Limited Lifetime Warranty for products purchased after January 1, 2014 to the original owner. For details of the Warranty, guidelines, and how to make a claim please see rockymounts.com/warranty

# **Technical Support**

Please call us at 303-402-0190 or email at ride@rockymounts.com for questions regarding use, assembly, and support