




RHINO-RACK

CONTROLLED

QMFK19

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Remove roof plugs.
 - Attach Rubber Skirt to RLT600 base.
 - Use M6 x 20mm Security Screw through centre of RLT600 base to fasten.
 - Attach RLT600 Leg Kit as per instructions.

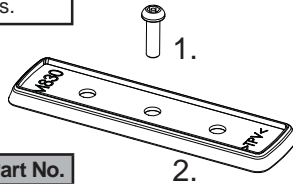

Item	Components	Qty	Part No.
1	M6 x 20mm Security Screw	2	B062
2	Rubber Skirt - Low	2	M830
3	Instruction	1	R1138

Issue 1: 16 Sept 2016

Document No: R1138




RHINO-RACK

CONTROLLED

QMFK19

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Remove roof plugs.
 - Attach Rubber Skirt to RLT600 base.
 - Use M6 x 20mm Security Screw through centre of RLT600 base to fasten.
 - Attach RLT600 Leg Kit as per instructions.

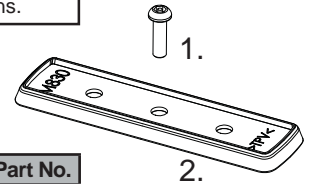

Item	Components	Qty	Part No.
1	M6 x 20mm Security Screw	2	B062
2	Rubber Skirt - Low	2	M830
3	Instruction	1	R1138

Issue 1: 16 Sept 2016

Document No: R1138




RHINO-RACK

CONTROLLED

QMFK19

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Remove roof plugs.
 - Attach Rubber Skirt to RLT600 base.
 - Use M6 x 20mm Security Screw through centre of RLT600 base to fasten.
 - Attach RLT600 Leg Kit as per instructions.

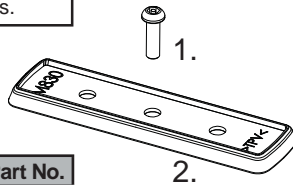

Item	Components	Qty	Part No.
1	M6 x 20mm Security Screw	2	B062
2	Rubber Skirt - Low	2	M830
3	Instruction	1	R1138

Issue 1: 16 Sept 2016

Document No: R1138




RHINO-RACK

CONTROLLED

QMFK19

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Remove roof plugs.
 - Attach Rubber Skirt to RLT600 base.
 - Use M6 x 20mm Security Screw through centre of RLT600 base to fasten.
 - Attach RLT600 Leg Kit as per instructions.

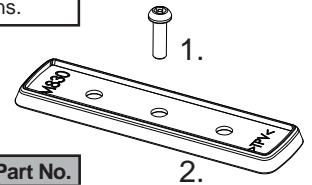

Item	Components	Qty	Part No.
1	M6 x 20mm Security Screw	2	B062
2	Rubber Skirt - Low	2	M830
3	Instruction	1	R1138

Issue 1: 16 Sept 2016

Document No: R1138




RHINO-RACK

CONTROLLED

QMFK19

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Remove roof plugs.
 - Attach Rubber Skirt to RLT600 base.
 - Use M6 x 20mm Security Screw through centre of RLT600 base to fasten.
 - Attach RLT600 Leg Kit as per instructions.

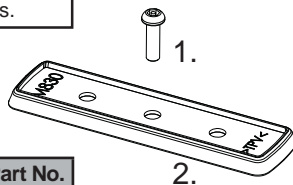

Item	Components	Qty	Part No.
1	M6 x 20mm Security Screw	2	B062
2	Rubber Skirt - Low	2	M830
3	Instruction	1	R1138

Issue 1: 16 Sept 2016

Document No: R1138




RHINO-RACK

CONTROLLED

QMFK19

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Remove roof plugs.
 - Attach Rubber Skirt to RLT600 base.
 - Use M6 x 20mm Security Screw through centre of RLT600 base to fasten.
 - Attach RLT600 Leg Kit as per instructions.

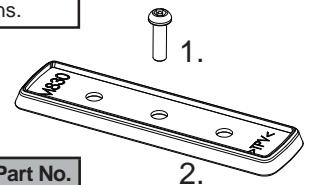

Item	Components	Qty	Part No.
1	M6 x 20mm Security Screw	2	B062
2	Rubber Skirt - Low	2	M830
3	Instruction	1	R1138

Issue 1: 16 Sept 2016

Document No: R1138