

Vehicle	Date	Crossbar	FRONT CROSSBAR					REAR CROSSBAR						
			Front Right Pad/Clamp	Front Left Pad/Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction	Rear Right Pad/Clamp	Rear Left Pad/Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction
VW Golf MkIV (1J) 5dr hatch	98-04	1180mm	M365 114450/ 117203	M365 114450/ 117202	144mm	89mm	856mm / 33,45/64"	OUT	M365 114450/ 117197	M365 114450/ 117196	125mm	70mm	818mm / 32,13/64"	OUT
			Arrow FORWARD						Arrow FORWARD					
VW Golf City MkIV (1J) 5dr hatch	07-10	1180mm	M365 114450/ 117203	M365 114450/ 117202	144mm	89mm	856mm / 33,45/64"	OUT	M365 114450/ 117197	M365 114450/ 117196	125mm	70mm	818mm / 32,13/64"	OUT
			Arrow FORWARD						Arrow FORWARD					
VW Bora MkIV (1J) 4dr sedan	99-07	1180mm	M365 114450/ 117203	M365 114450/ 117202	145mm	90mm	858mm / 33,25/32"	OUT	M365 114450/ 117197	M365 114450/ 117196	140mm	85mm	848mm / 33,25/64"	OUT
			Arrow FORWARD						Arrow FORWARD					
VW Jetta MkIV 4dr sedan	99-05	1180mm	M365 114450/ 117203	M365 114450/ 117202	145mm	90mm	858mm / 33,25/32"	OUT	M365 114450/ 117197	M365 114450/ 117196	140mm	85mm	848mm / 33,25/64"	OUT
			Arrow FORWARD						Arrow FORWARD					
VW Jetta City MkIV 4dr sedan	07-10	1180mm	M365 114450/ 117203	M365 114450/ 117202	145mm	90mm	858mm / 33,25/32"	OUT	M365 114450/ 117197	M365 114450/ 117196	140mm	85mm	848mm / 33,25/64"	OUT
			Arrow FORWARD						Arrow FORWARD					



DK092 Rhino-Rack VA, Aero, Euro & HD crossbar instruction

CONTROLLED


Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.

Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.







Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

Open doors. Pull rubber body seal down. Attach protective strip. Hook metal clamp. Tighten racks. Re-fit rubber door seal.

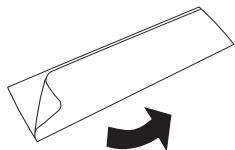

Part numbers shown on inside of lower clamp.

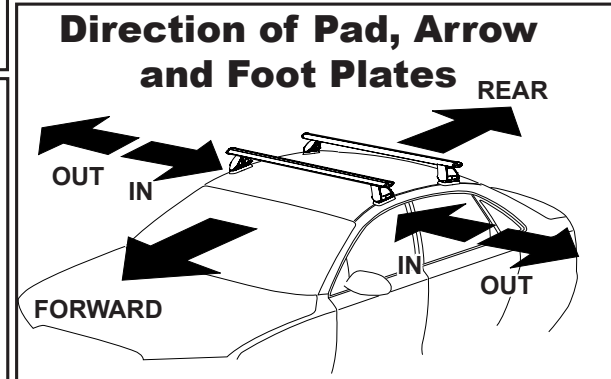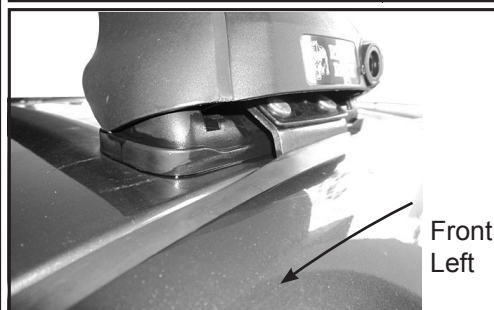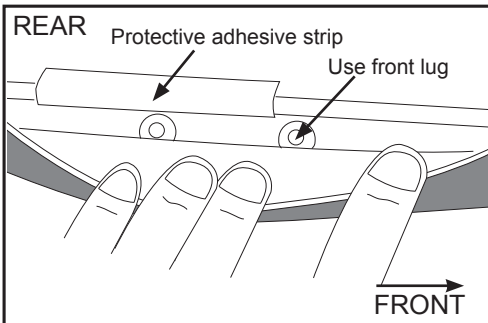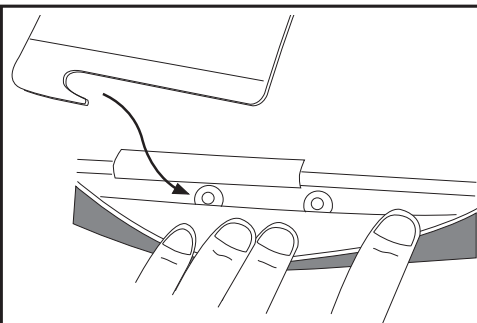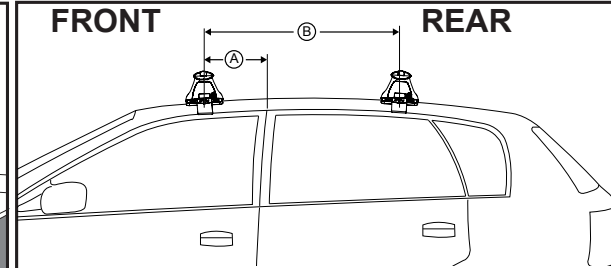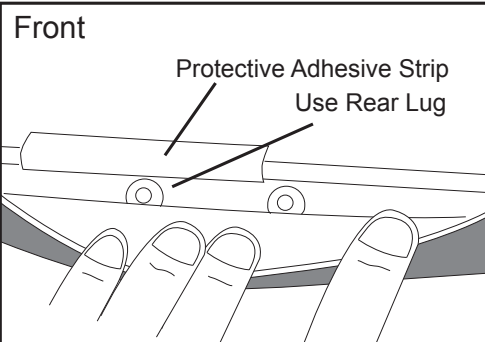

VEHICLE	Date	Front Measurement A	Measurement B	Load Rating (includes racks 5kg/11lbs)
VW Golf MkIV (1J) 5dr hatch	98-04	350mm / 13,25/32"	700mm / 27,9/16"	75kg / 165lbs
VW Golf City MkIV (1J) 5dr hatch	07-10	350mm / 13,25/32"	700mm / 27,9/16"	75kg / 165lbs
VW Bora MkIV (1J) 4dr sedan	99-07	340mm / 13,25/64"	700mm / 27,9/16"	75kg / 165lbs
VW Jetta MkIV 4dr sedan	99-05	340mm / 13,25/64"	700mm / 27,9/16"	75kg / 165lbs
VW Jetta City MkIV 4dr sedan	07-10	340mm / 13,25/64"	700mm / 27,9/16"	75kg / 165lbs