




RHINO-RACK®

BASE KIT RCP94-BK

Important:

1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
3. Check the contents of kit before commencing fitment and report any discrepancies.
4. These instructions must be followed for warranty to be upheld.

Fit Time: 30 mins

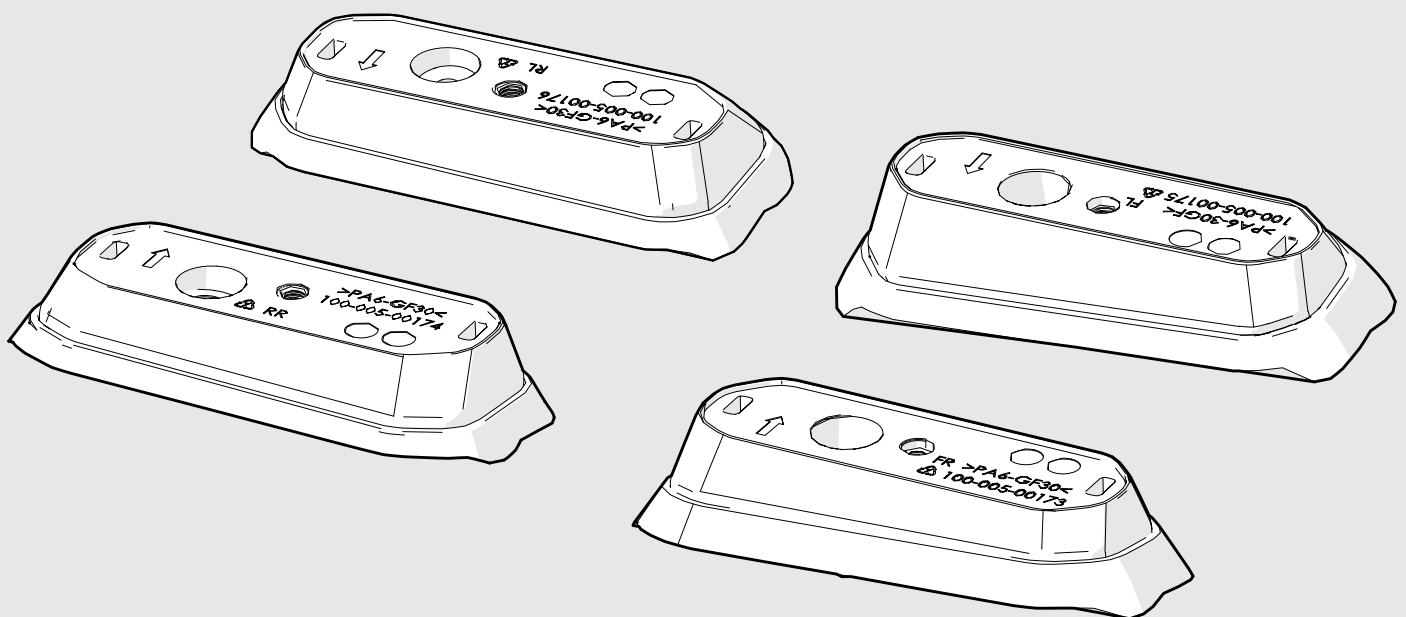

Thank you for choosing Rhino-Rack!



WELCOME TO THE HERD.


For peace of mind register your product by heading to rhinorack.com/register

RHINORACK.COM

Doc. No: 520-RFI-00201

Issue No: 01


Issue Date: 18/03/2026

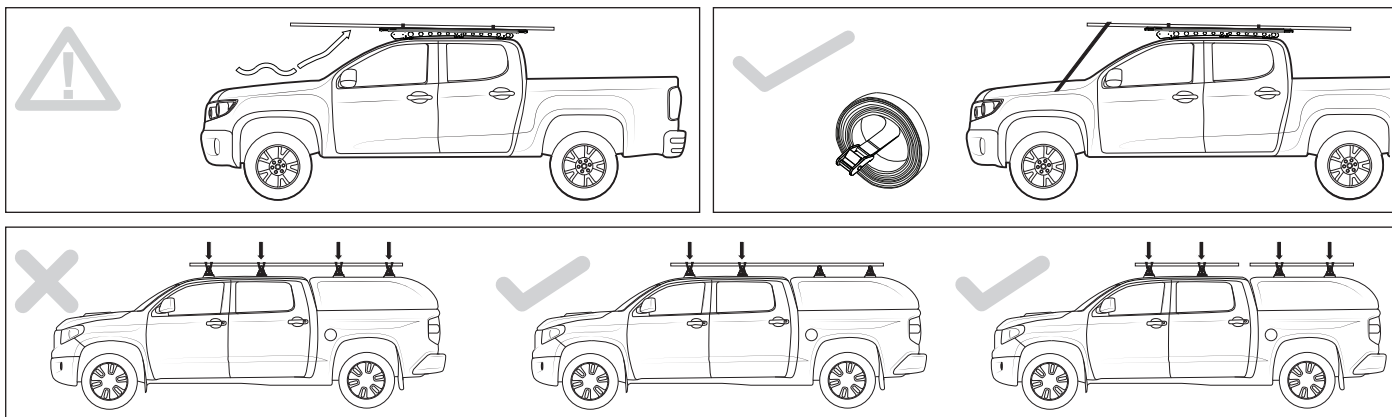

Max system load capacity (incl. system weight), refer to vehicle specific fit sheet.

Check your vehicle owners hand book for vehicle maximum carrying capacity. Please ensure you use the vehicle manufacturers maximum roof allowance if it is lower than the figure listed in these instructions.

Load must be evenly distributed over the system.

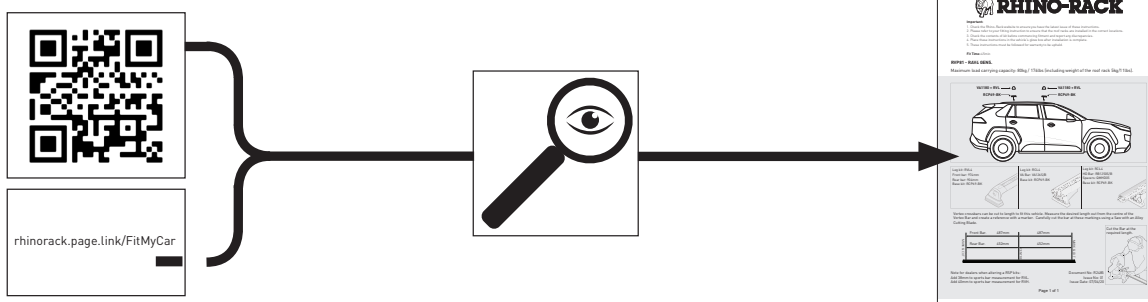

Off Road: Any driven path taken that does not contain a surface protection layer (tar/bitumen).

Vehicle Load Limit: Total permissible weight attached to the roof of the car. This is inclusive of the weight of the roof rack system.

System Load Limit: Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is in motion.

Static Allowance: Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is stationary.

Torque Settings

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings - M6: 4-5Nm (3-4lbs/ft), M8: 8-10Nm (6-7.5lbs/ft) and M10: 16-18Nm (12-13lbs/ft).

Warning

- Check part number/ or kit is correct for use with your vehicle.
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.
- Although the system is tested and approved to AS1235-2000 / ISO 11154, off-road conditions can be much more rigorous. Extreme care must be taken in off road conditions.
- Roof racks must be removed when vehicle is put through an automatic car wash.
- With utility vehicles, the cabin and the canopy move independently. Roof racks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roof racks or the canopy roof racks.
- Always ensure you fasten your load securely.
- Use only non-stretch fastening ropes or straps to attach cargo to your load.
- Clean vehicle/ rails before fitting roof rack.

In service maintenance checks


- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.

Note for Dealers and Fitters

It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.


Parts List

Front Right Pad (FR)




A x1

Front Left Pad (FL)




B x1

Rear Right Pad (RR)




C x1

Rear Left Pad (RL)



D x1

Front Right Base




E x1

Front Left Base




F x1

Rear Right Base




G x1

Rear Left Base



H x1

M6 x 25mm Hex Head
Flanged Bolt



I x4

M6 x 25mm Pan Head
Bolt with Blue Threadlock



J x4

M6 x 16mm Flat Washer



K x4

T30x100mm Torx Bit




L x1

Torque Limiting Tool




M x1

Instruction




N x1


- 1** Identify the location of the **four M6 mounting-points**. Each mounting point is concealed beneath a **sliding plastic cover**. Store the caps in a safe place.

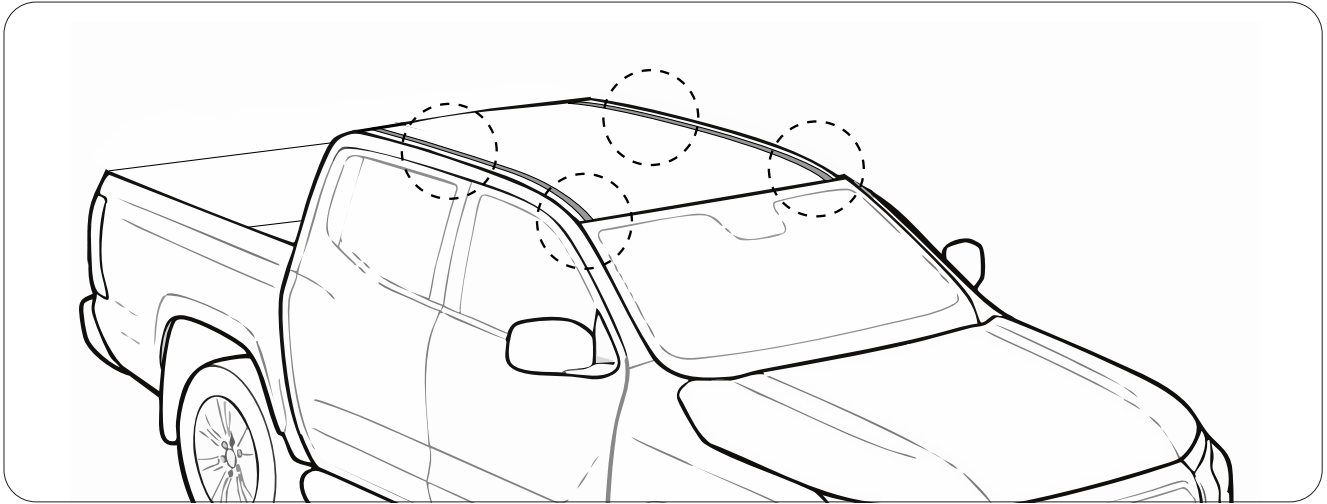


- 1a** Slide the cap in the **direction the arrows are pointing** and **lift** to remove the caps.

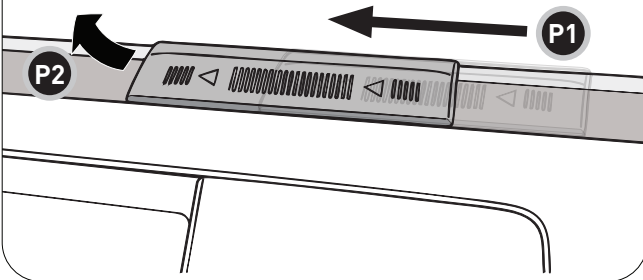

- 1b** Once the caps are removed. Identify the **M6 mounting points**.

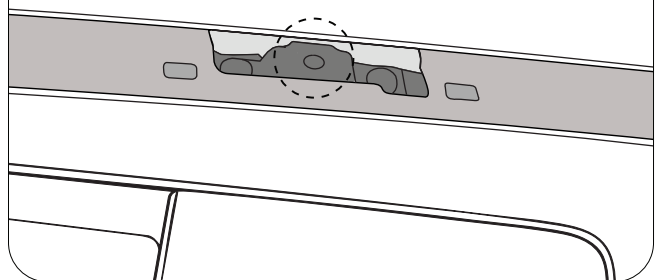


- 2** Assemble the corresponding bases and pads.

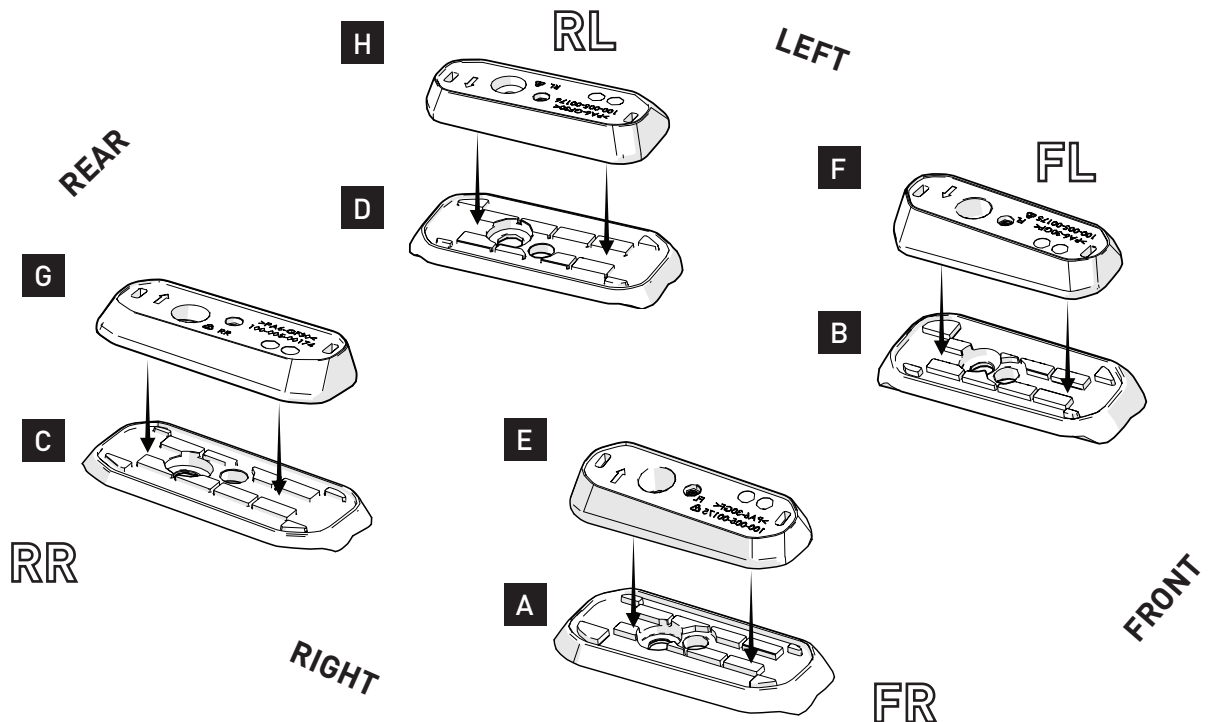


NOTE: If installing a single cross bar, use only the bases and pads for the relevant position on the vehicle.

- 3** Loosely assemble the **K** and **J** into the pad and top.

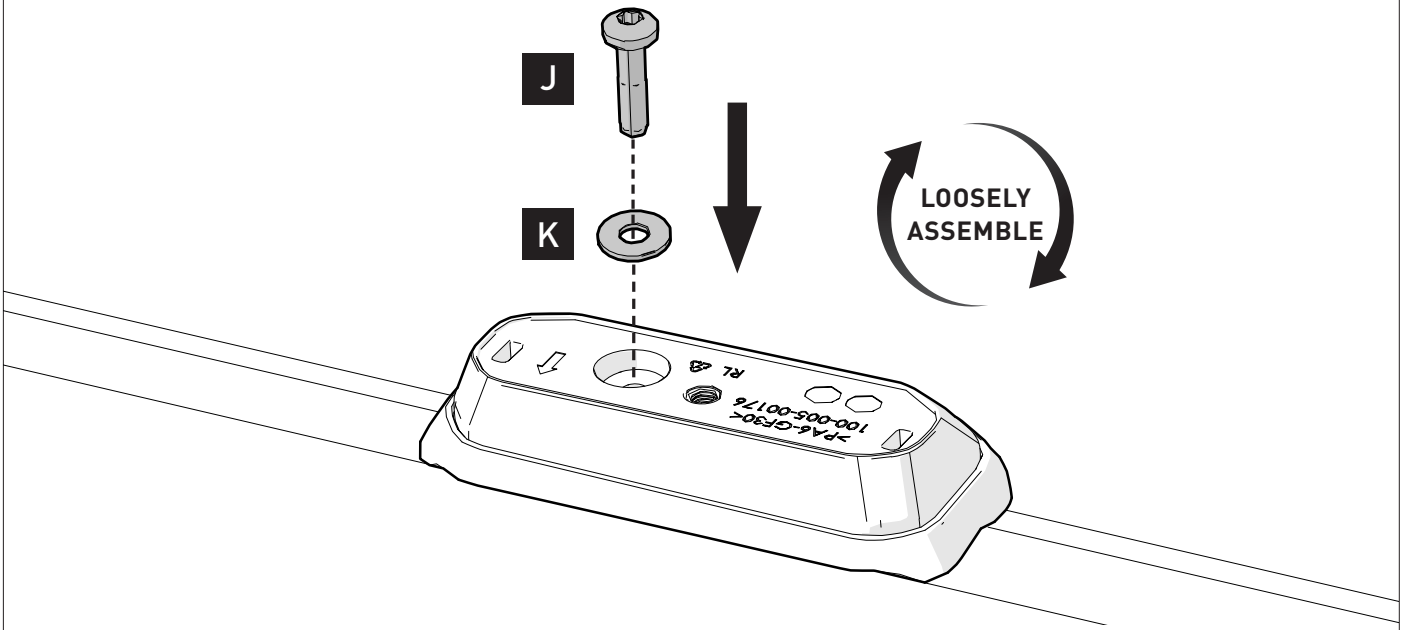

- 4** With supplied torque tool, tighten the bolts until **M** clicks, signifying **J** is torqued to spec.

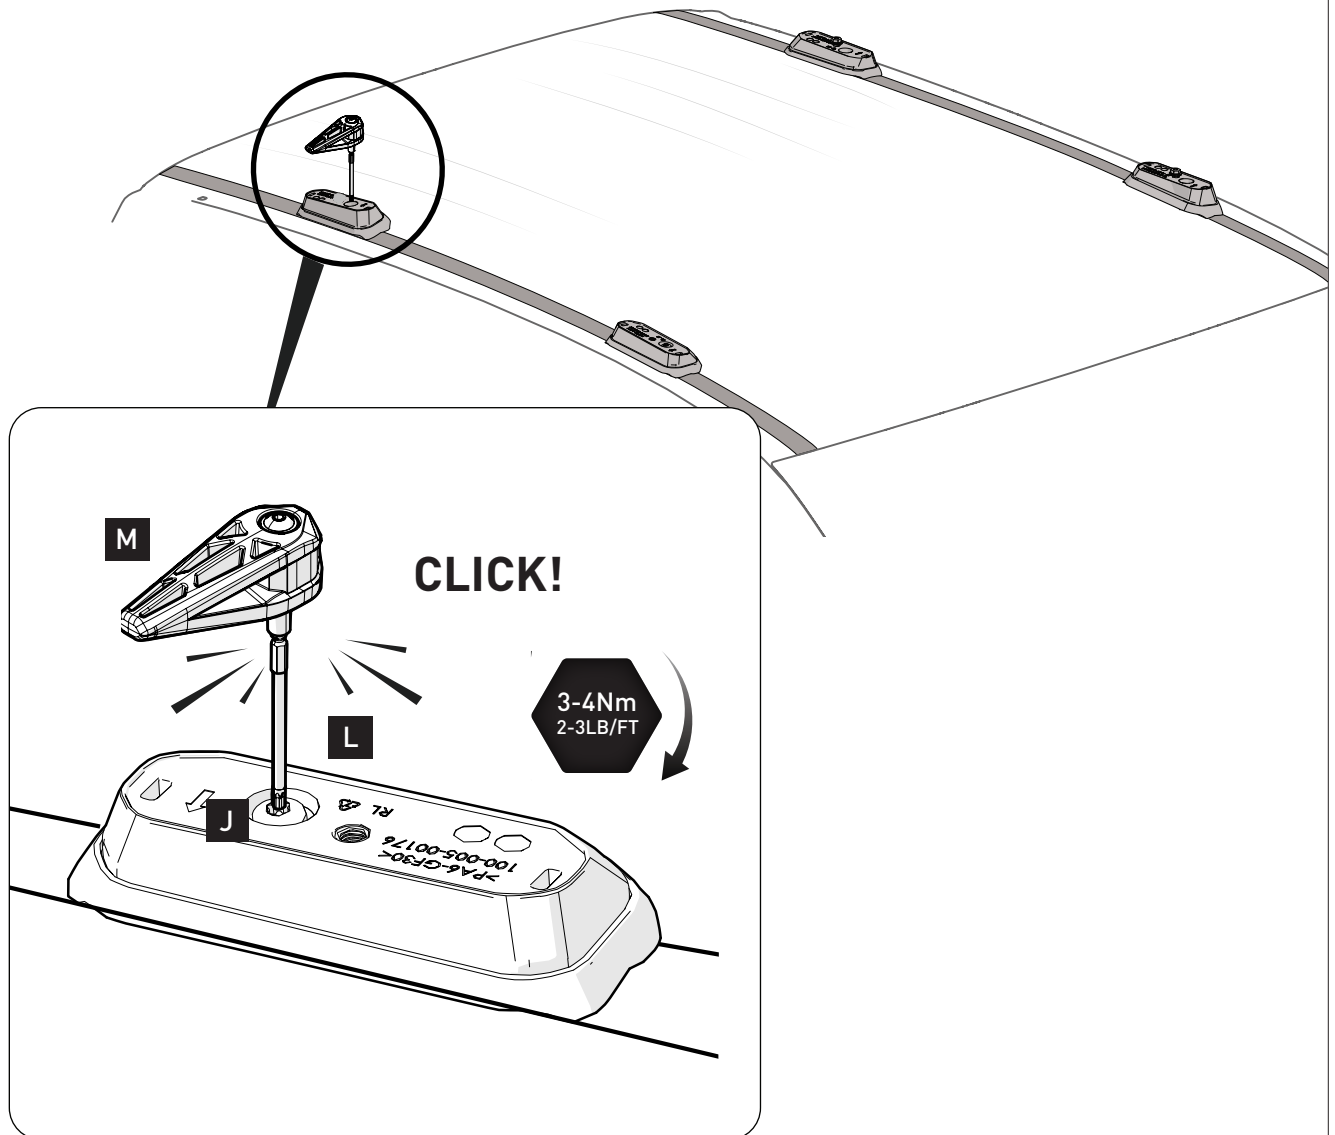

5


Either the leg or backbone kit can now be attached on top of the installed RCP94 base kit.

Follow the instructions supplied with the leg or backbone kit to complete the installation.

NOTE:

The four M6x25mm Hex Head Flanged Bolts **I** supplied in this kit will be required to complete the installation of your leg or backbone.

RX300

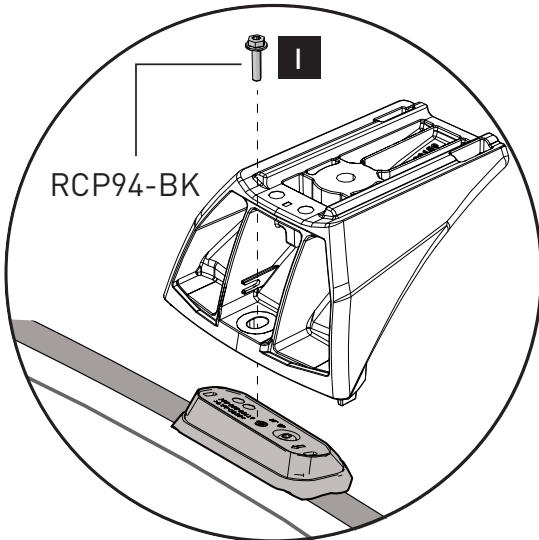

RMTB2 Backbone

