




CONTROLLED

RHINO-RACK

Leg Kit - Jeep JK Pioneer Fit Kit

Parts List

Parts List		4dr JK	2dr JK	Part No.
1	Low Leg Kit (x4 legs)	0	1	RCL4
2	Low Leg kit (x6 legs)	1	0	RCL6
3	Pioneer 10mm Spacer Kit	2	2	QMPS10
4	20mm Spacer Kit	1	0	QMHD20
5	Jeep Hardware Fit Kit	1	1	SUB0800
6	Instructions	1	1	R1813

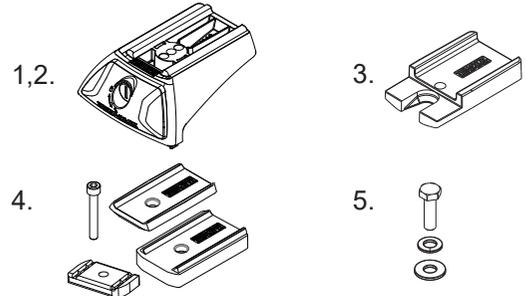


Note: The following instructions provide information relating to the RLCP38/RLCP39 fitting a Pioneer Platform, Tray or Tradie Tray to the Jeep JK Backbone. **These kits are sold separately.**






Tools Required: 1 - 10mm Socket Wrench. 2 - Pliers.

Instructions

- 1** The legs of the system must have their locator tabs removed before installing them to the vehicle. Using pliers, grip and twist off the two tabs on the underside of the legs. File down any additional material as required.

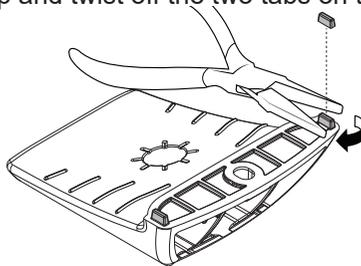

The underside of the leg should be flat. File down any material still present after cutting.

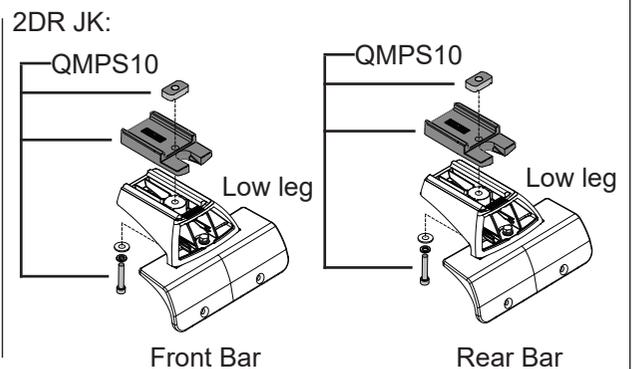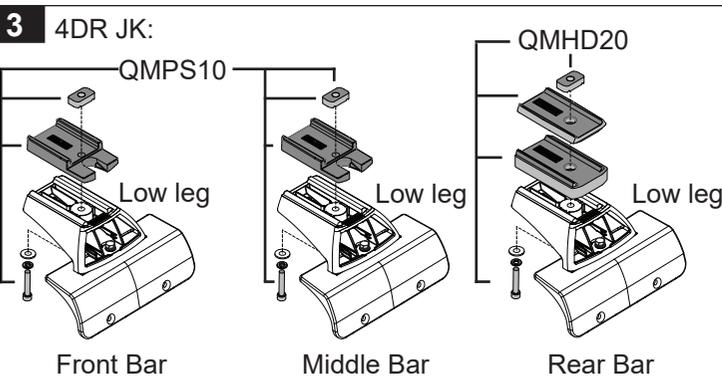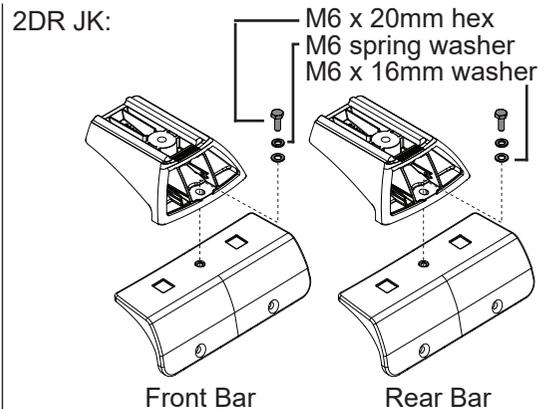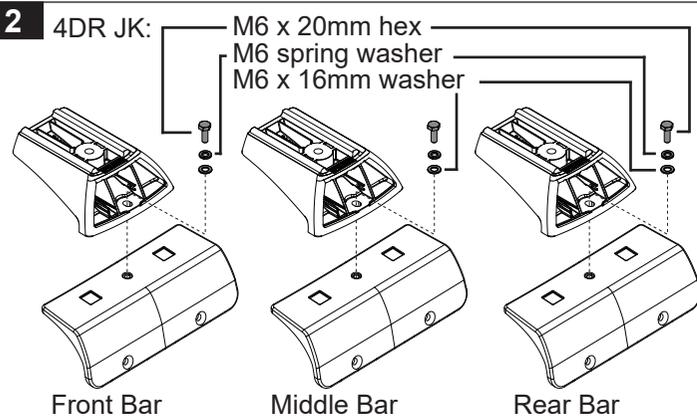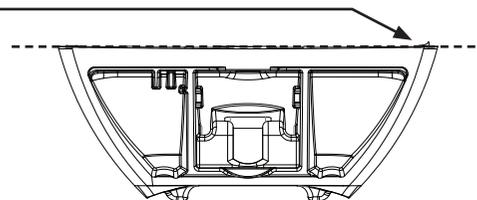

Rhino-Rack
22 Hanson Place, Eastern Creek
NSW 2766, Australia.
(Ph) (02) 8846 1900

Document No: R1813
Prepared By: Kayle Everett
Authorised By: Nicholas Clarke

Fit Time: 20min
Issue No: 02
Issue Date: 28/08/2018

These instructions remain the property of Rhinorack Australia Pty Ltd and may not be used or changed for any other purpose than intended.