Flush rail removal

R5255

Important:

1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
2. Please refer to your fitting instruction to ensure that the accessory is installed in the correctly.
3. Check the contents of kit before commencing fitment and report any discrepancies.
4. Place these instructions in the vehicle's glove box after installation is complete.
5. These instructions must be followed for warranty to be upheld.

Fit Time: 10 min

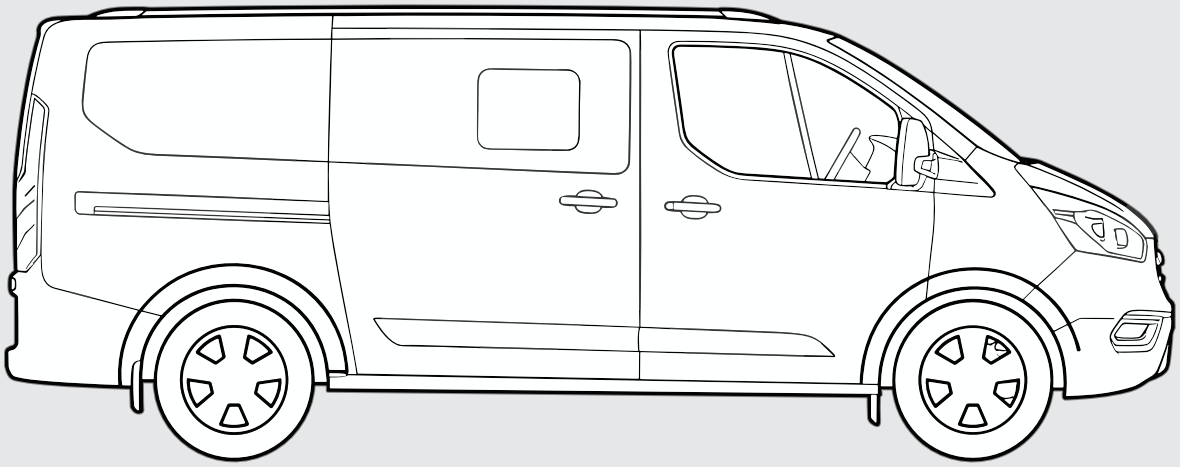

Rhino-Rack AUSTRALIA
22A Hanson Pl,
Eastern Creek, NSW, 2766

Rhino-Rack USA
19822 E 22nd Ave,
Aurora, CO 80011

Document No: R5255
Issue No: 03
Issue Date: 03/05/2021

TOOLS REQUIRED:

T1 - T40 Torx **T2** - T30 Torx
T3 - Sealant

1 Identify the position of the screw covers.

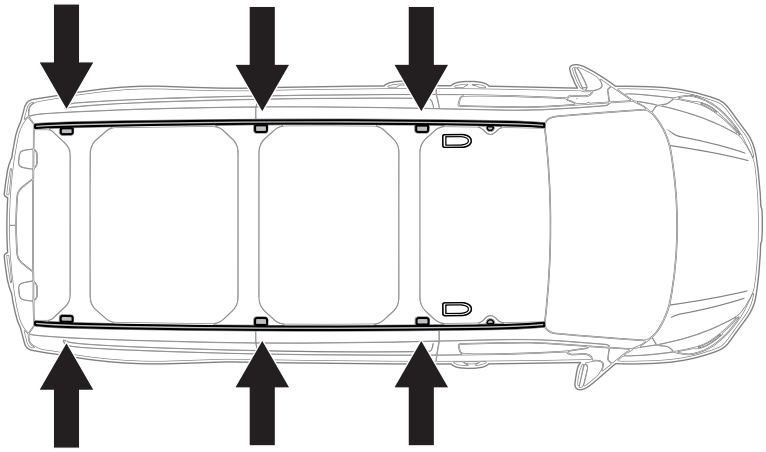

1a Gently pry off the cover revealing the torx bolt beneath.

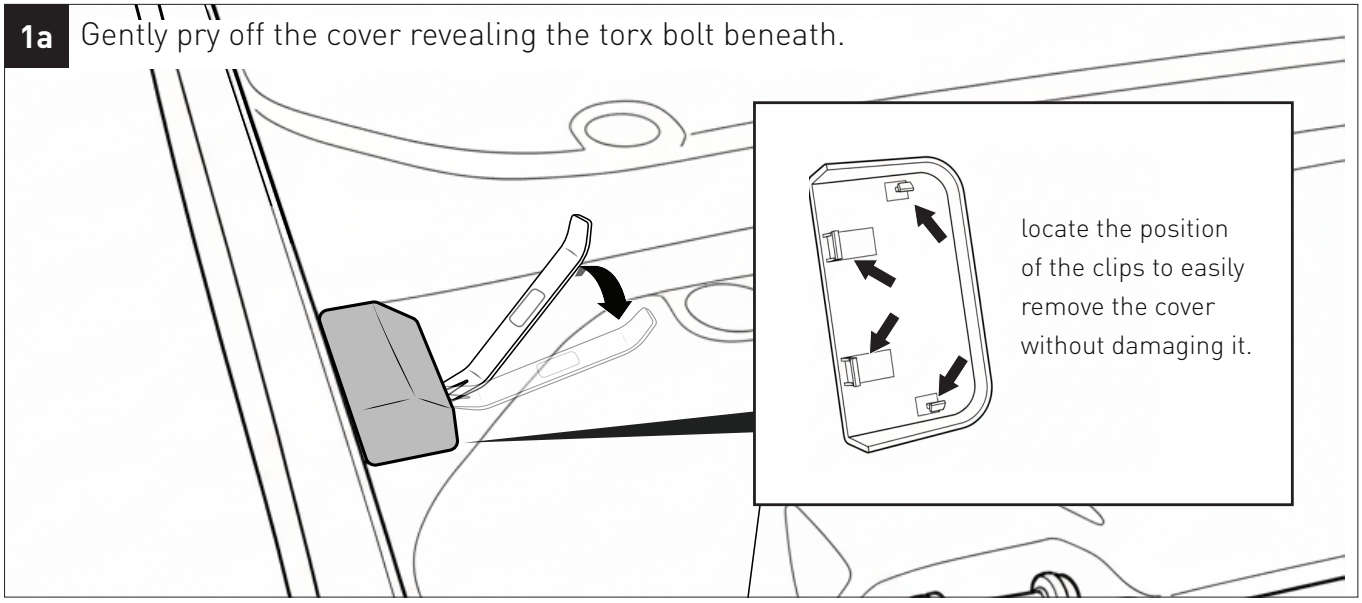

1b

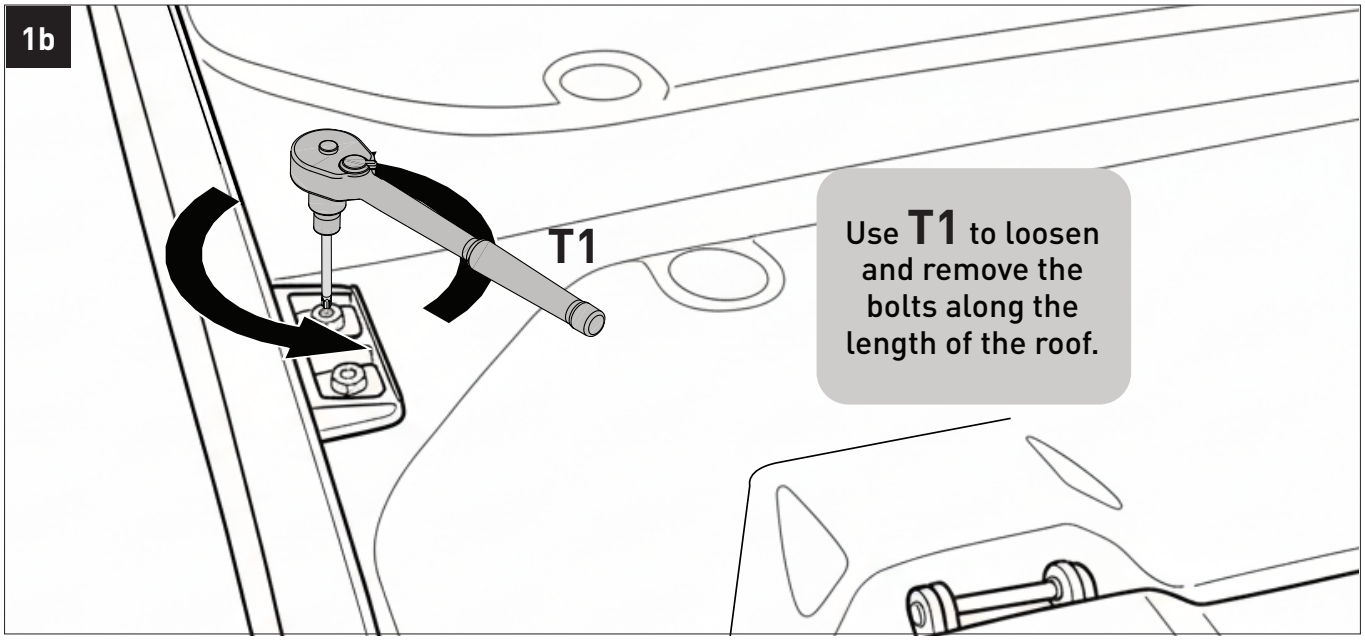

2 Identify the position of the front screw covers.

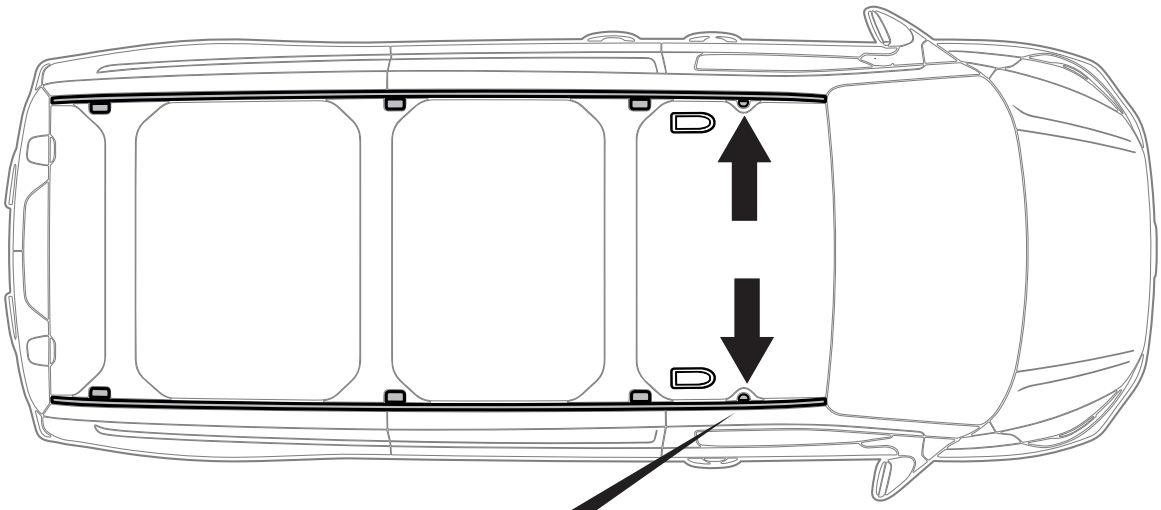

2a Gently pry off the cover revealing the torx bolt beneath.

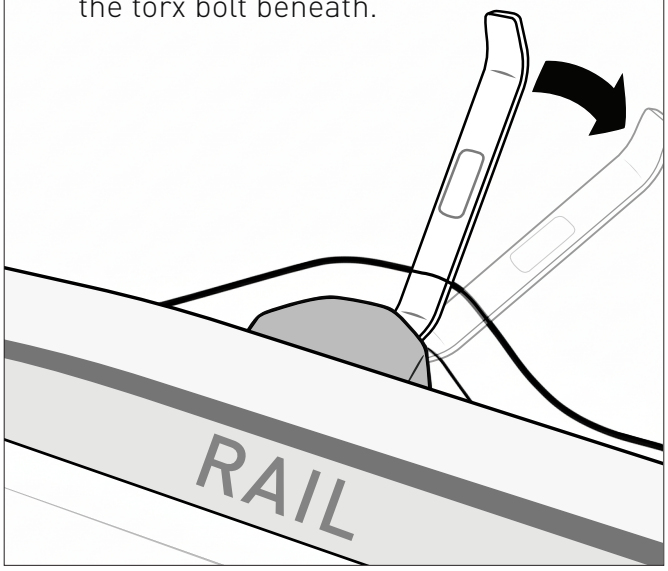

2b Using **T1** remove and set aside the bolt and washer.

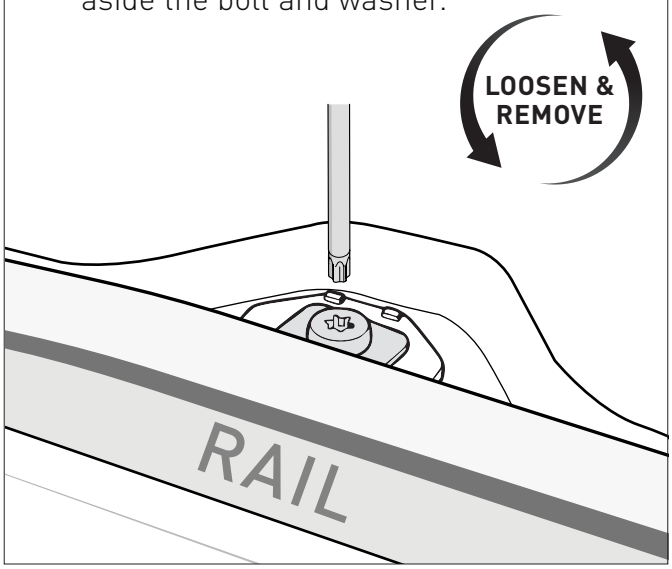

3 Remove the flush rails.

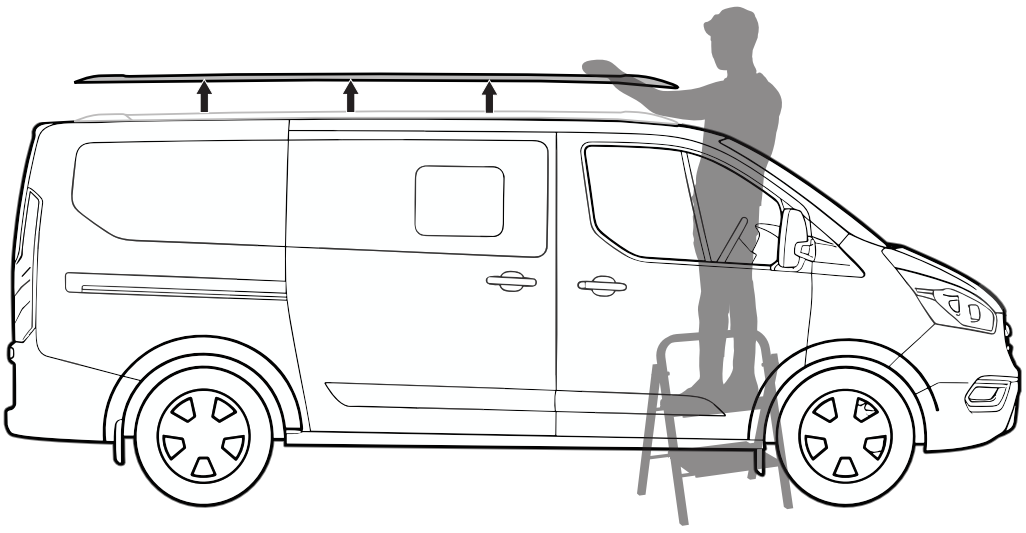

4 Using **T2**, remove and set aside the bolt.

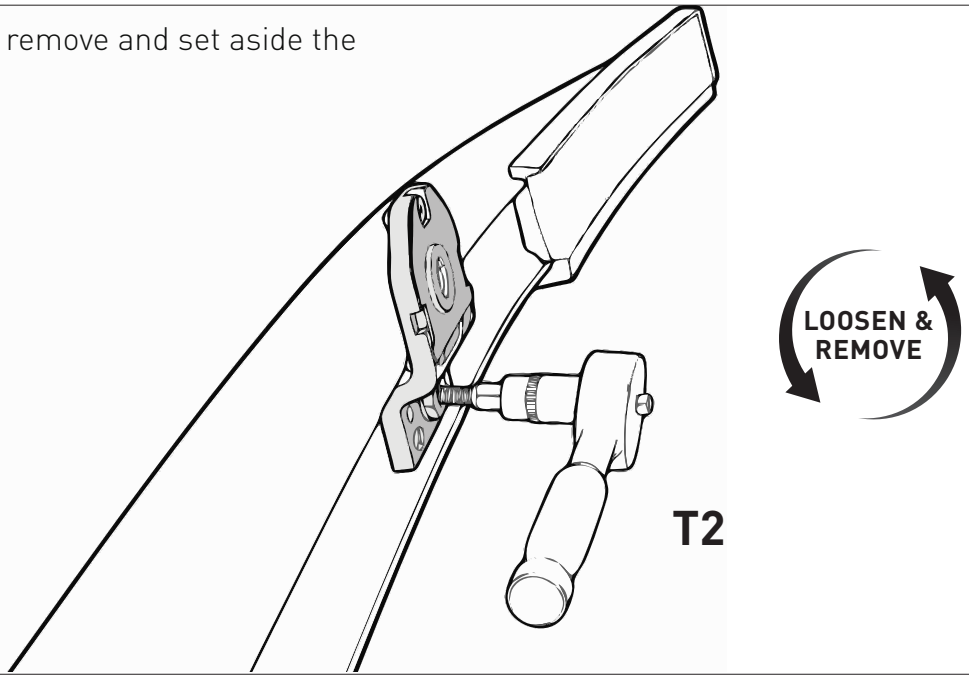

5

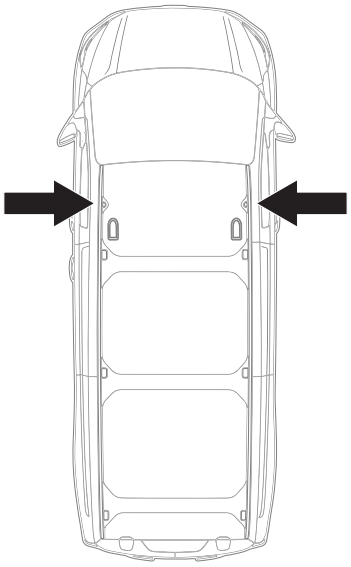

5a

Completely fill the cavity and surrounding area with waterproof sealant.

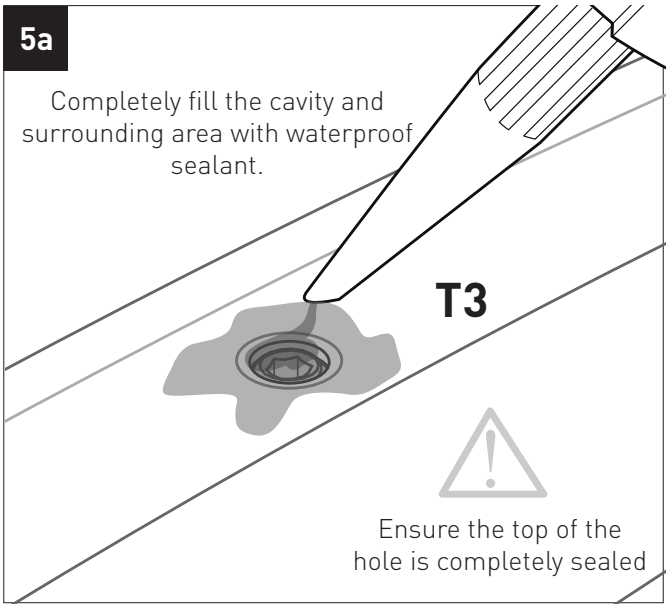

5b

SIDE VIEW
CROSS SECTION

Apply sealant over the hole and around the surrounding roof skin.

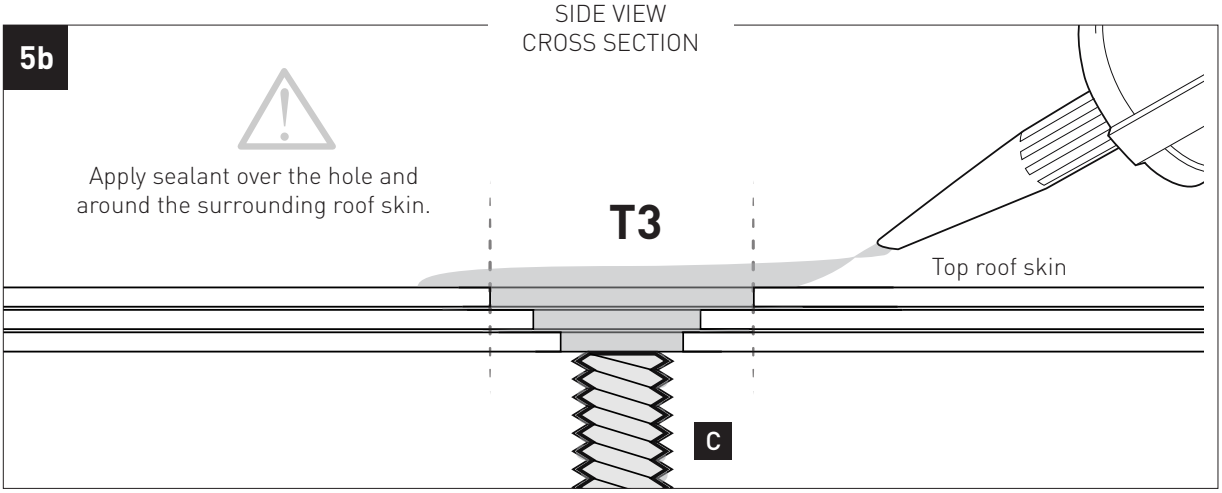

6a Apply sealant between the bolt and rectangular washer.

Place the bolt in position

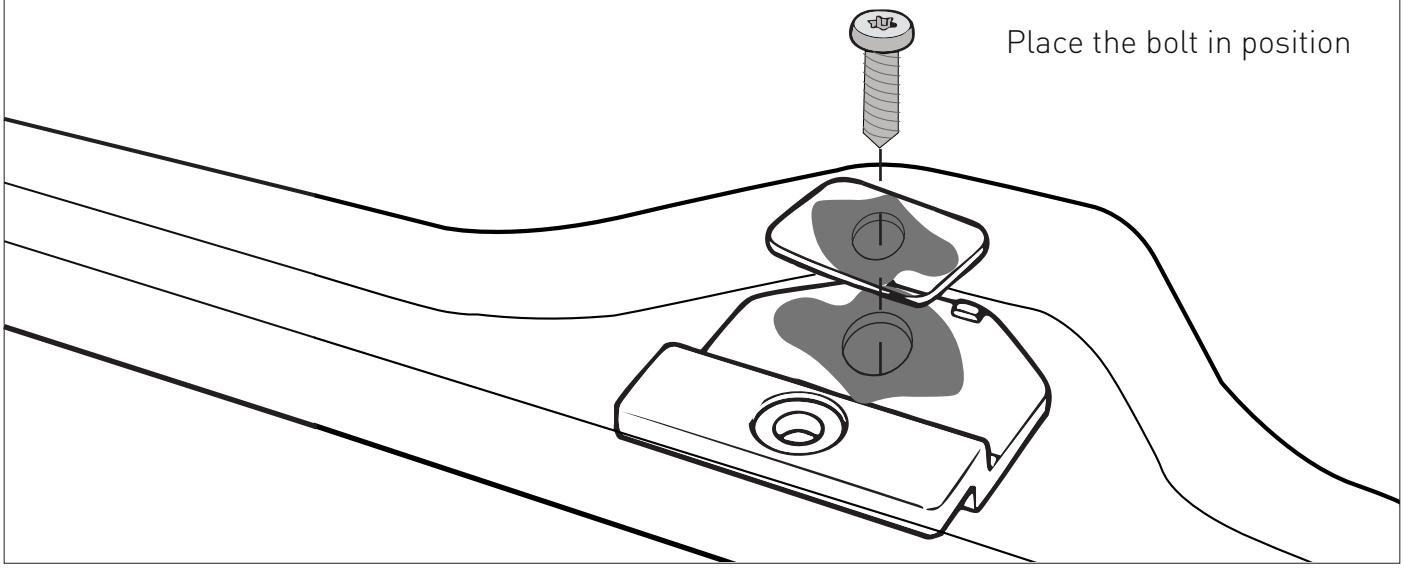

6b Tighten the bolt using **T1.**

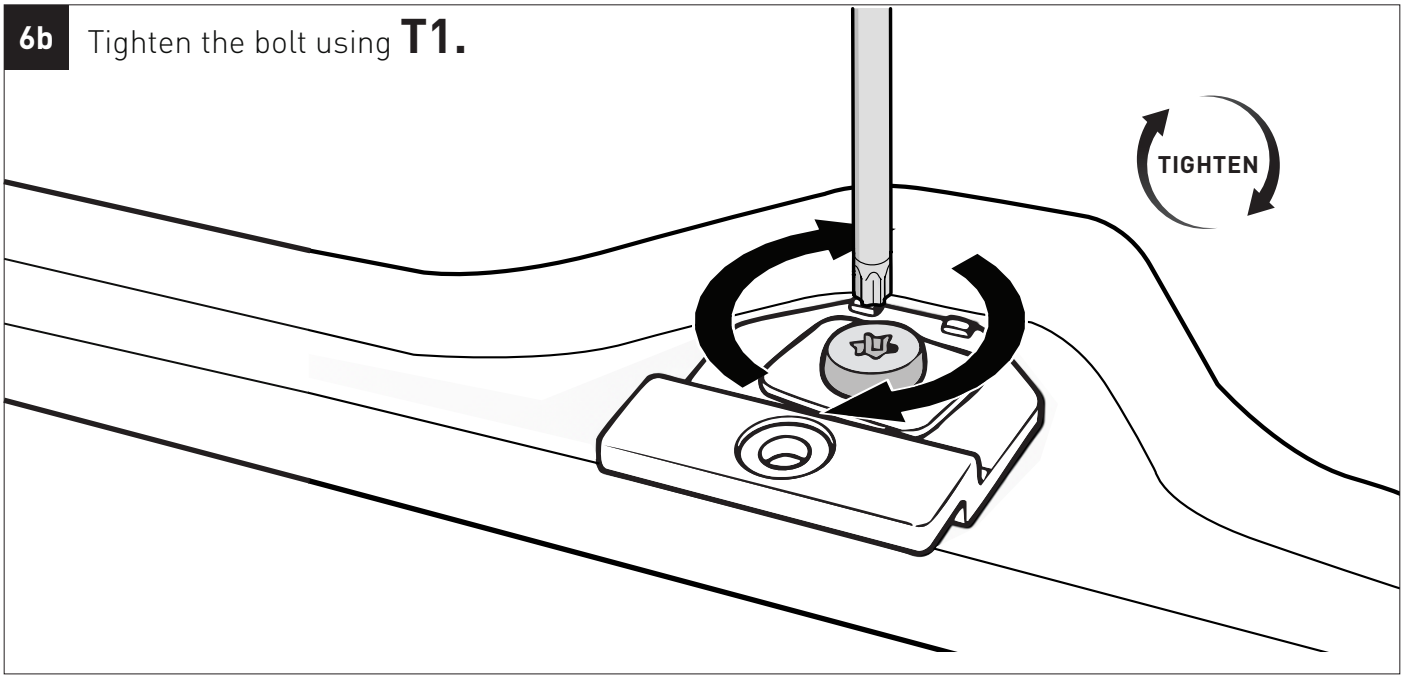

6c Place the clip over the bolt and clip it into place.

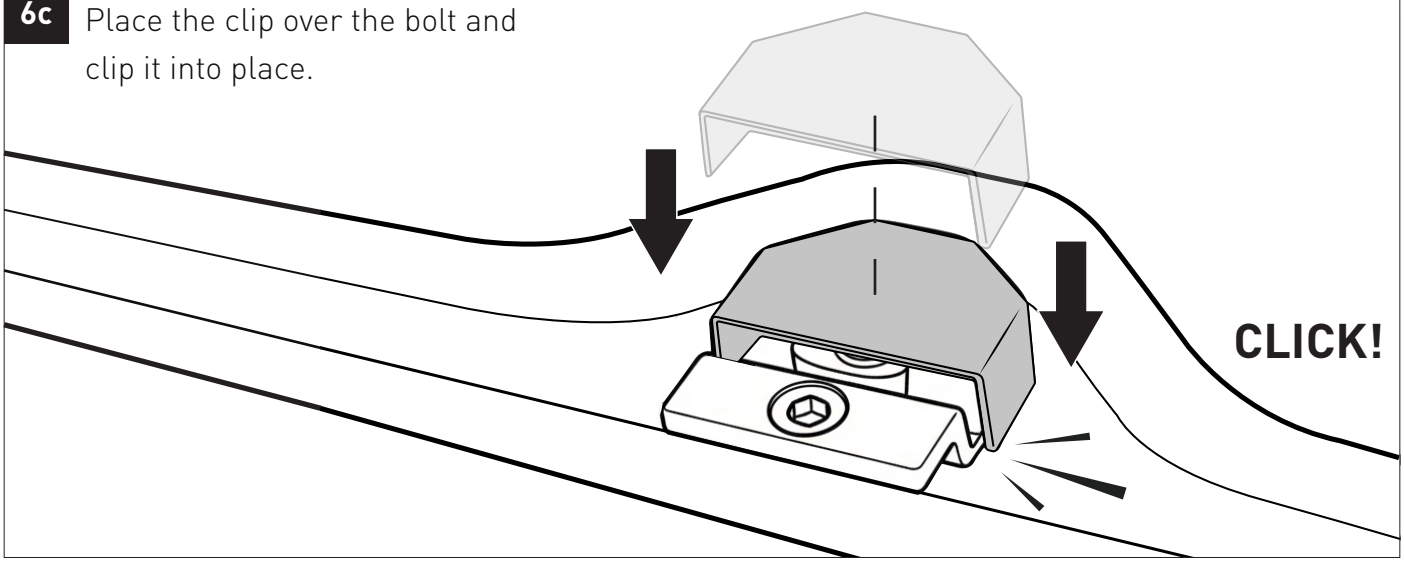

Continue the installation using instruction RLTPFTC from step 3 onwards.