

RHINO-RACK®

Suzuki Jimny JB74 3dr and 5dr Overland Kit

ROLS1

Important:

1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
2. Please refer to your fitting instruction to ensure that the product is installed correctly.
3. Check the contents of kit before commencing fitment and report any discrepancies.
4. Place these instructions in the vehicle's glove box after installation is complete.
5. These instructions must be followed for warranty to be upheld.


Fit Time: 45 mins



INSTALLER
SKILL LEVEL



Overland Kit suits both
3 door and 5 door


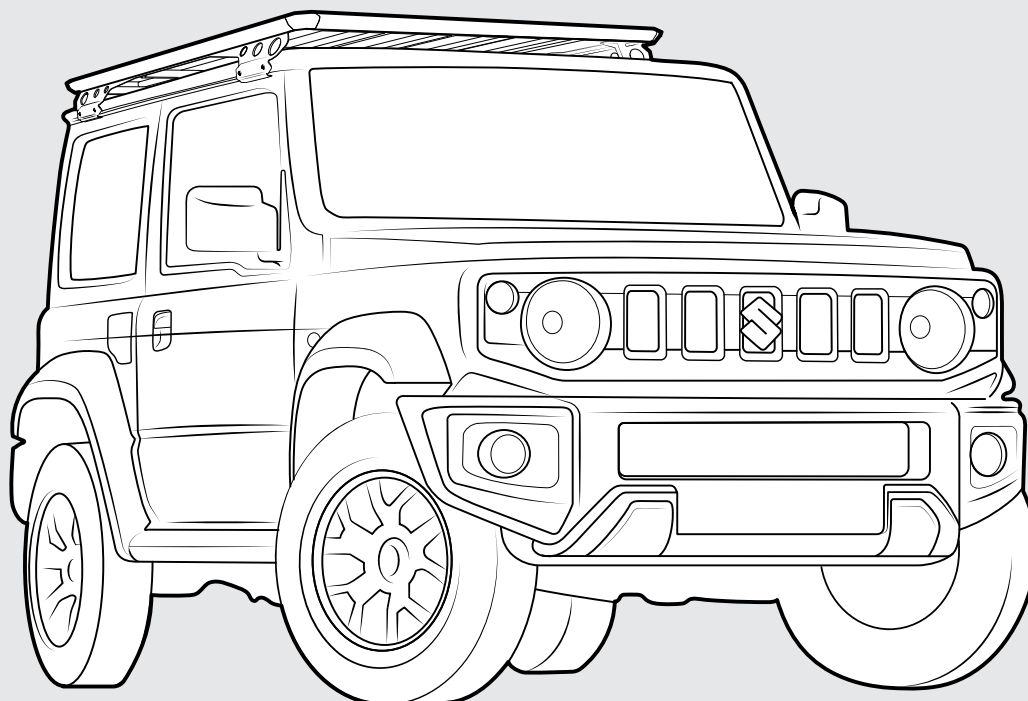


RHINORACK.COM

Rhino-Rack AUSTRALIA
22A Hanson Pl,
Eastern Creek, NSW, 2766

Rhino-Rack USA
Unit D, 2450 Airport Blvd,
Aurora, CO, 80011


Document No: 520-RFI-00115
Issue No: 02
Issue Date: 05/04/2024

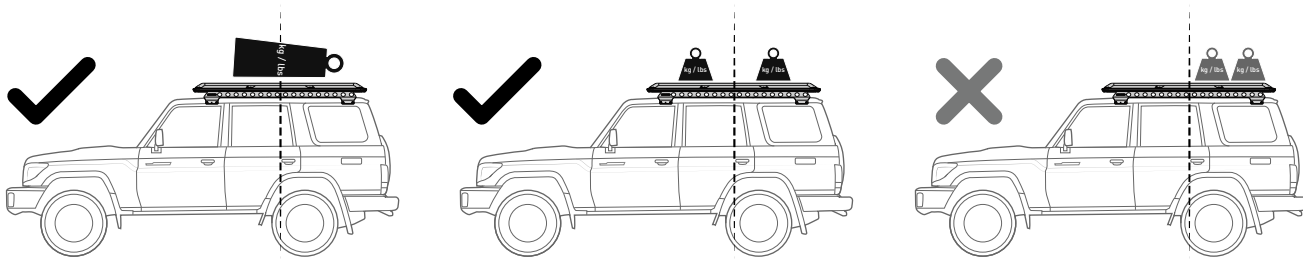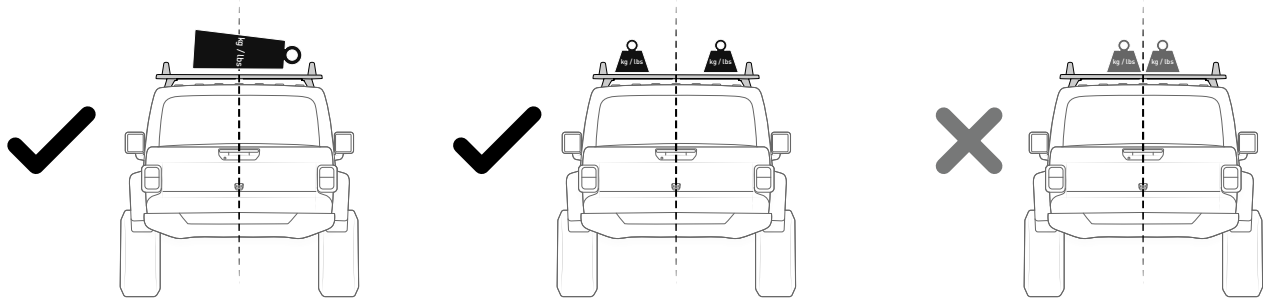



Distribute loads evenly and laterally/longitudinally as low as possible over the span.

Avoid point loads concentrated at the front or rear.



Exercise extreme care when transporting wind-resistant loads. Special consideration must be taken when cornering and braking.

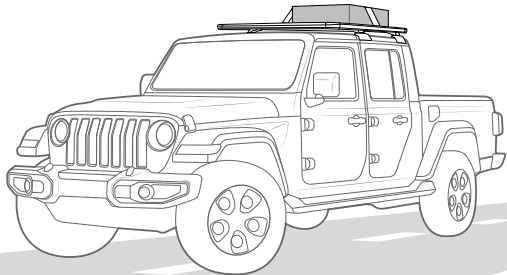

Off-road conditions can be much more rigorous. Extreme care must be taken on any driven path that does not contain a surface protection layer (tar/bitumen).

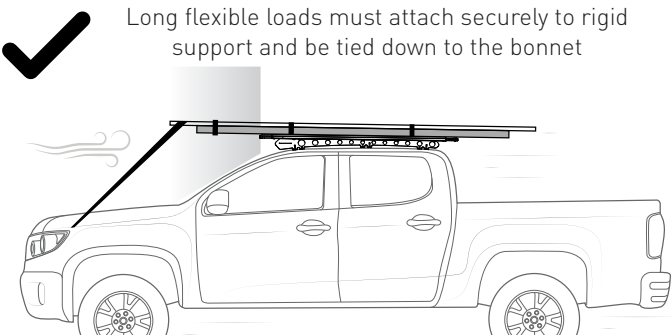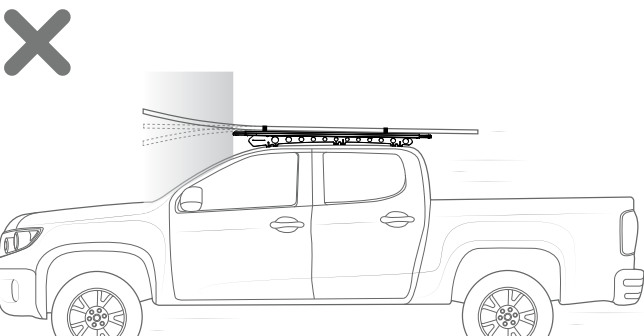




Long flexible loads must attach securely to rigid support and be tied down to the bonnet

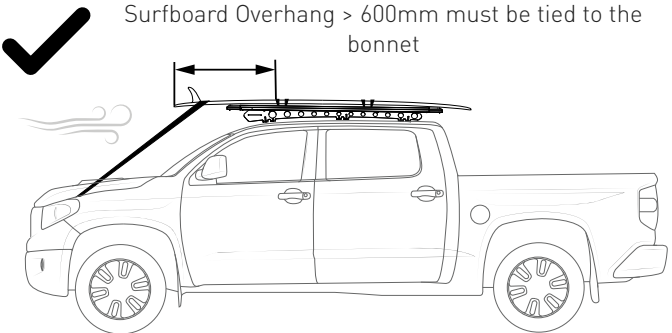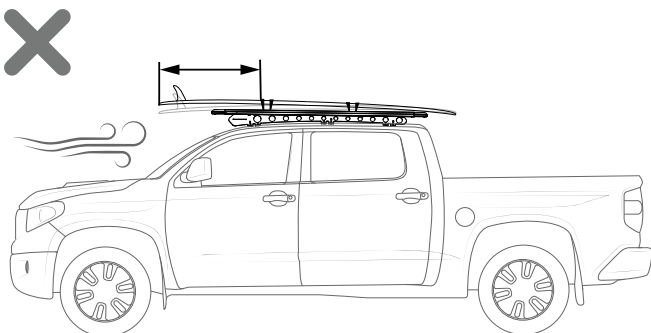



Surfboard Overhang > 600mm must be tied to the bonnet




Loads must be tied down to Platform, not around legs

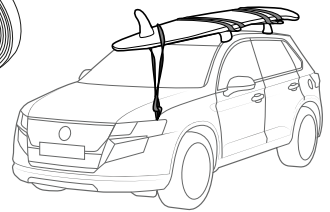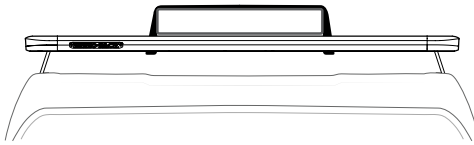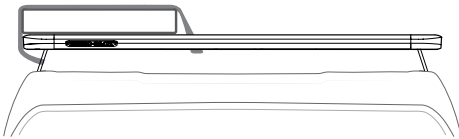



Use only non-stretch fastening ropes or straps to attach cargo to roof racks

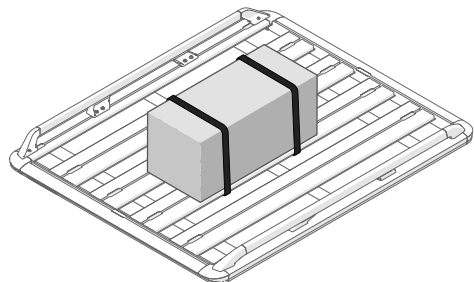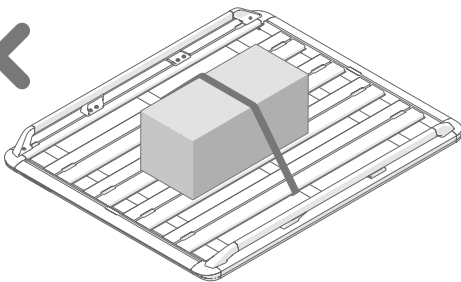


Do NOT obstruct windscreen camera sensors

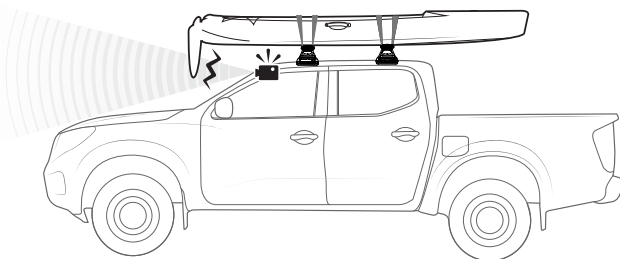




Warranty for roof rack system will be void if the front of the kayak is not secured to the bonnet

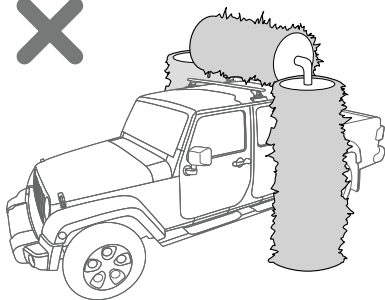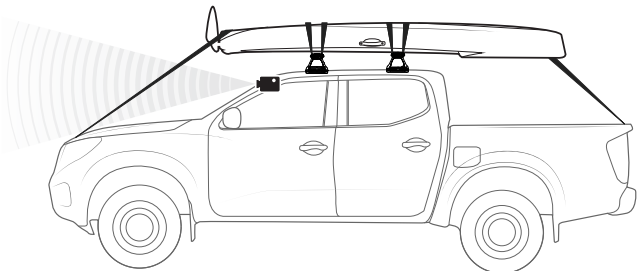


Racks must be removed when vehicle is put through an automatic car wash.

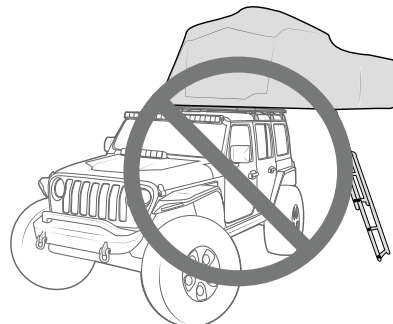

Manufacturers Roof load limit does not support the use of Rooftop tents

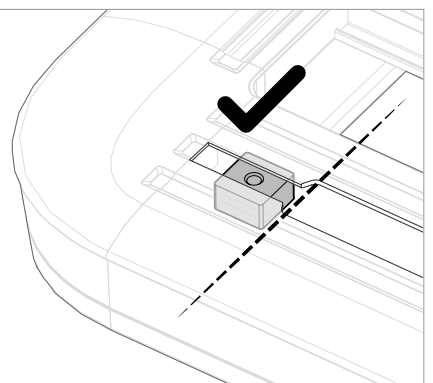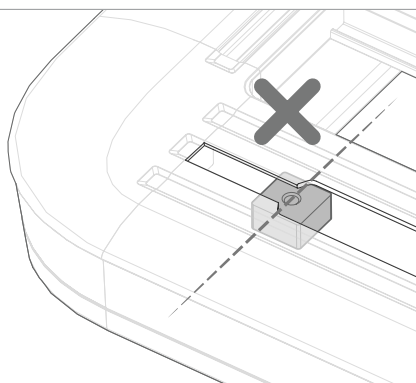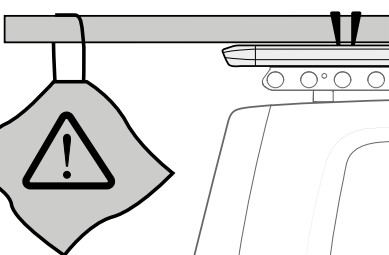

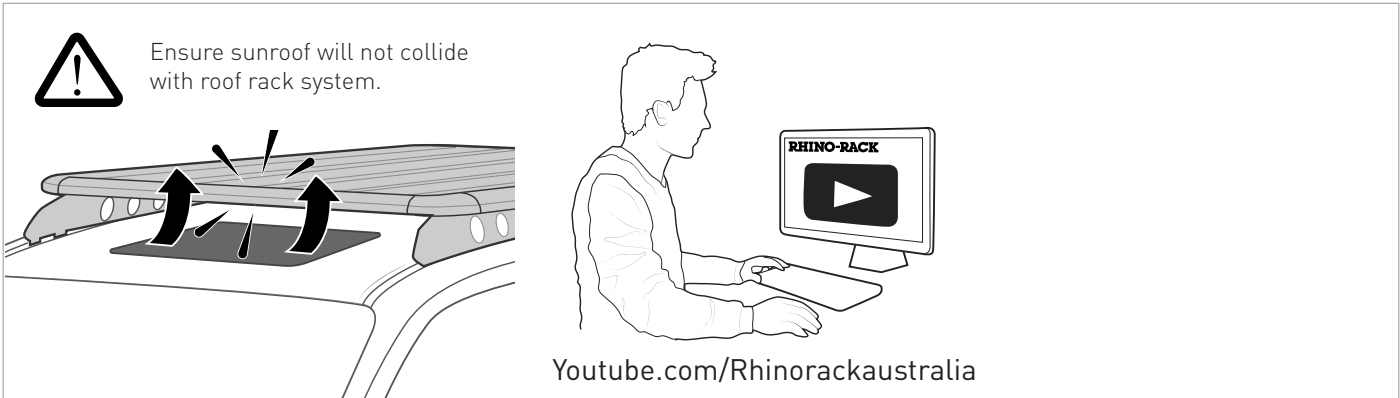

In service maintenance checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).



Torque Settings:
Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:



Note for Dealers and Fitters

It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.













VISIT THE ONLINE
CALCULATOR FOR
CURRENT SYSTEM
LOAD LIMIT DATA

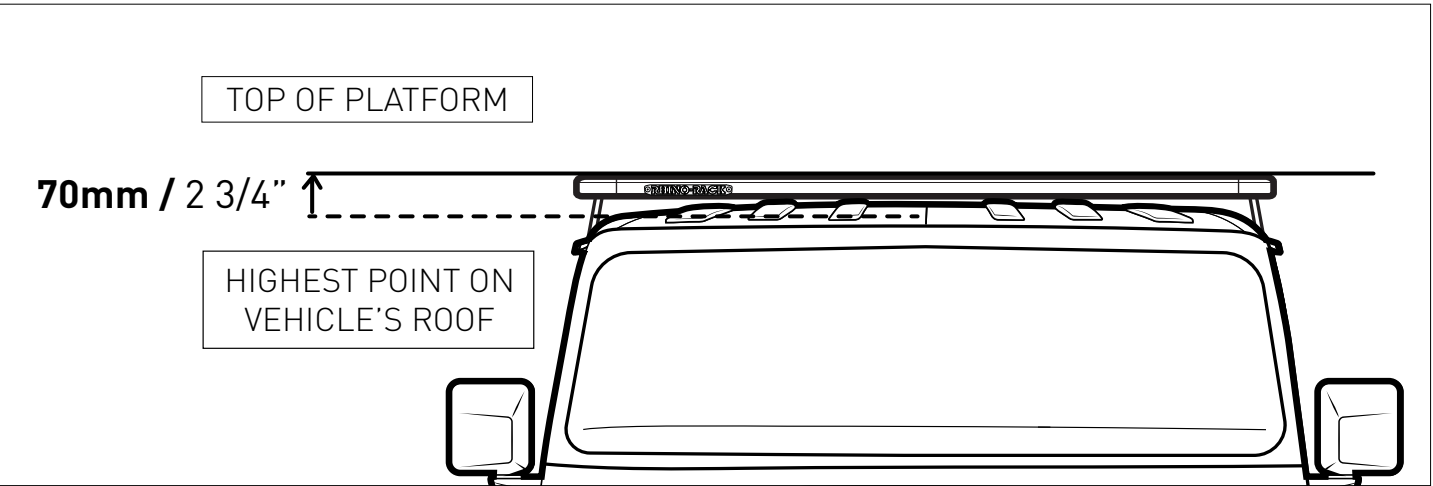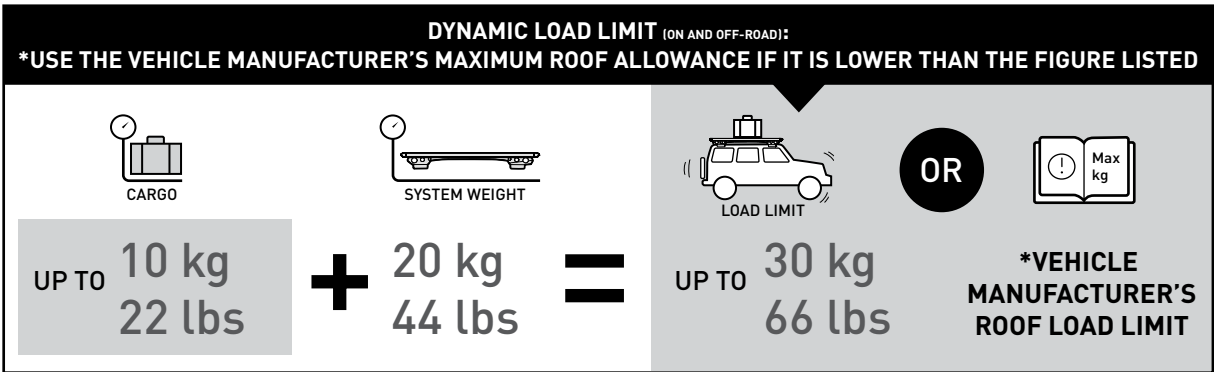

Parts List





P1

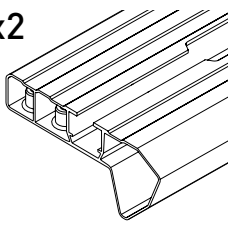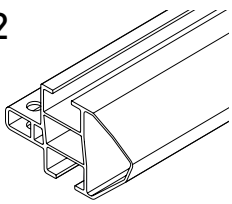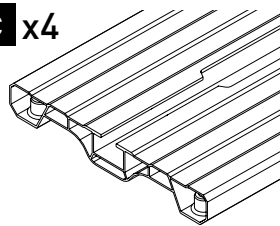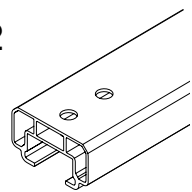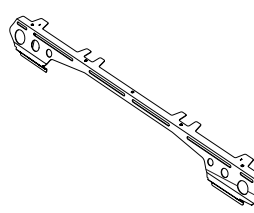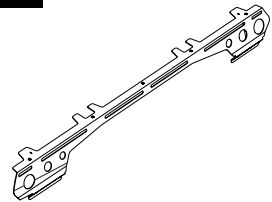Platform Assembly

Side Extrusion A x2 	Front/Rear Extrusion B x2 	Plank C x4 	Underbar D x2 
LHS Backbone E x1 	RHS Backbone F x1 	RHS Corner Base 100-005-00001 G x2 	RHS Corner Cover 100-003-00001 H x2 
LHS Corner Base 100-005-00002 I x2 	LHS Corner Cover 100-003-00002 J x2 	M6 x 25mm Hex Head Flanged Bolt K x48 	M6 x 12mm Hex Head Flanged Bolt L x4 





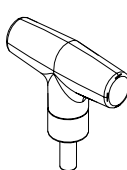

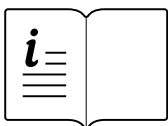
P2

Backbone Installation





M6 x 16mm Hex Head Flanged Bolt M x4 	M6 x 19mm Flat Washer N x4 	150mm Generic Pinch Weld O x4 	M6 x 12mm Hex Head Flanged Bolt L x10 
---	---	---	--




P3

Vehicle Installation

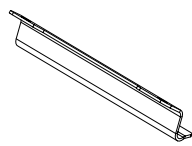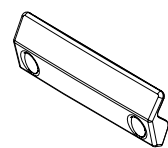M6 x 25mm Hex Head Flanged Bolt K x8 	Gutter Backbone Strap P x4 	Gutter Backbone Clamp Q x4 	10mm Socket Hex Driver R x1 
Torque Tool S x1 	Torx Key (T30) T x1 	Instructions U x1 	Tools Required T1 - Socket Wrench T2 - Tape Measure


P1
▼

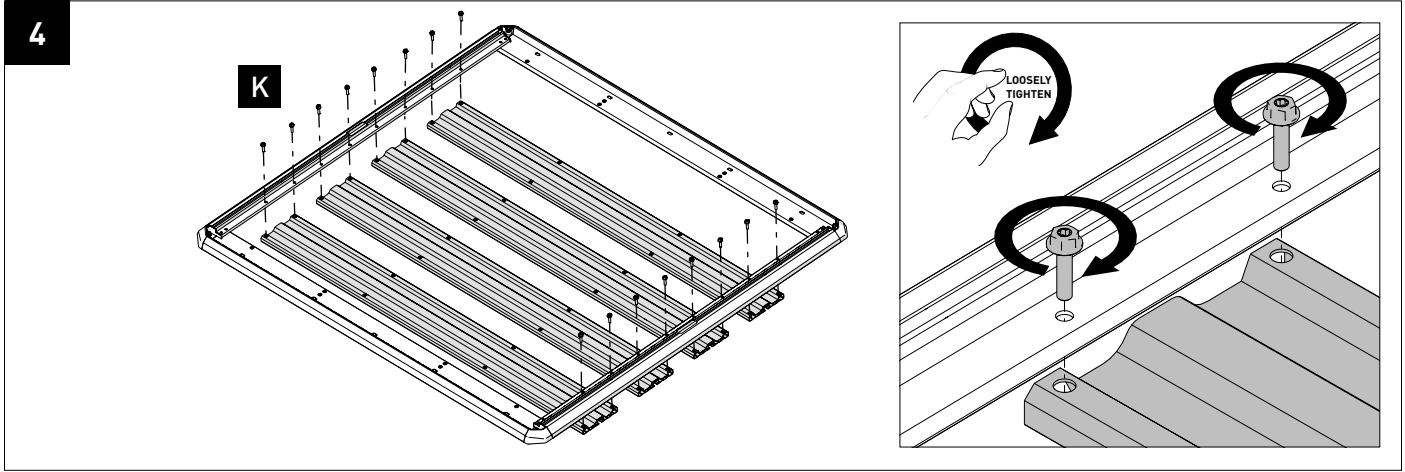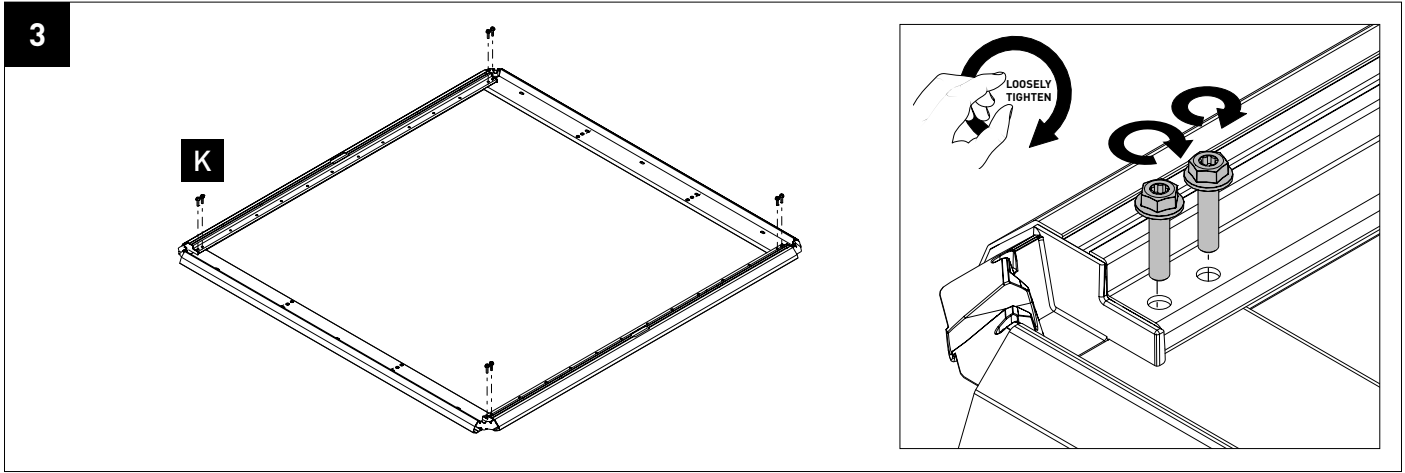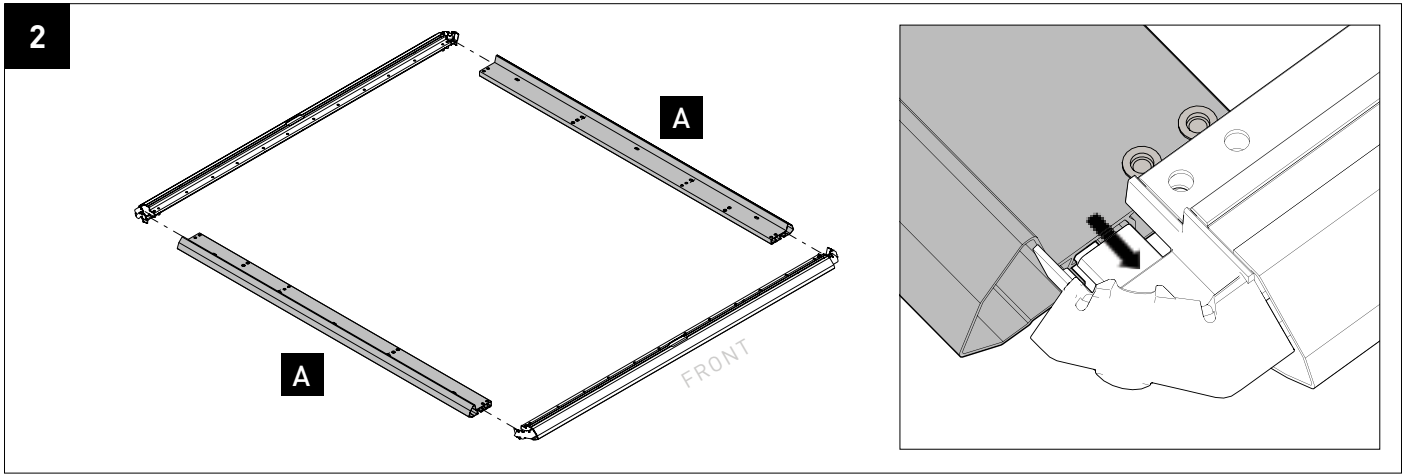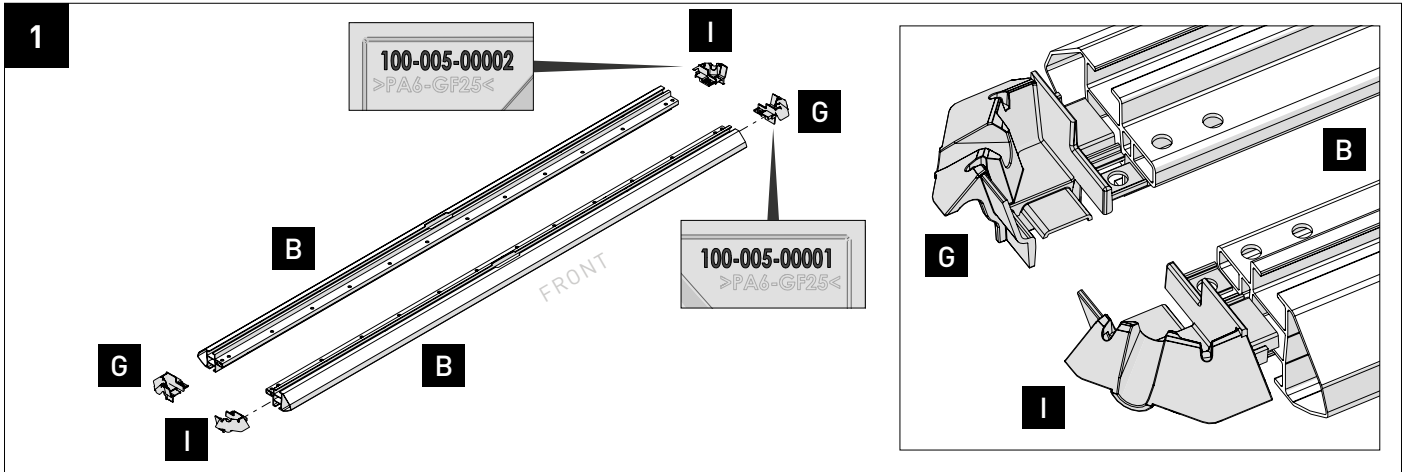

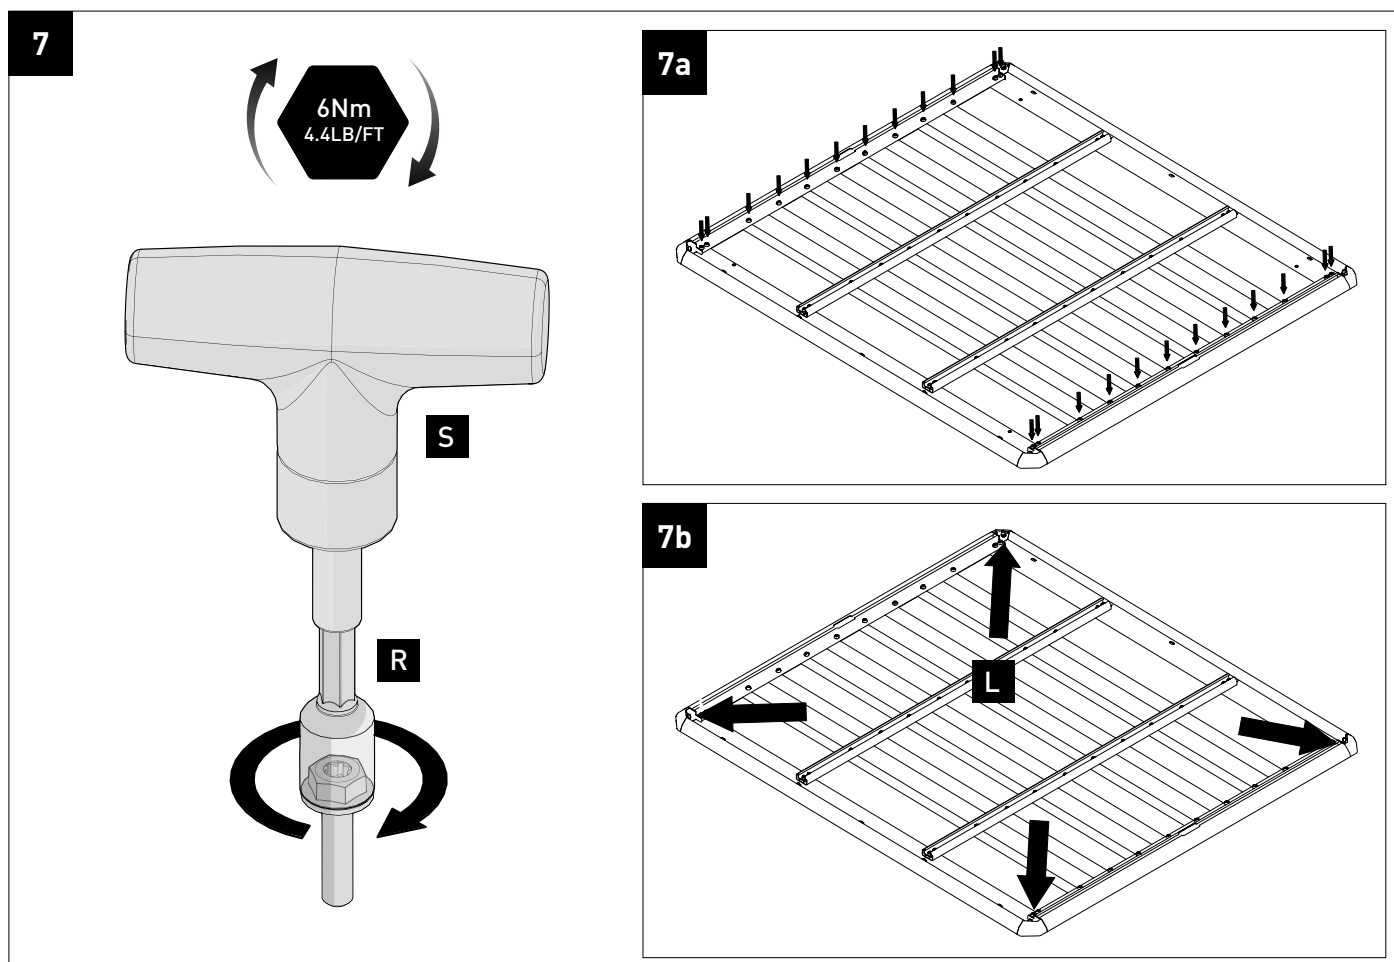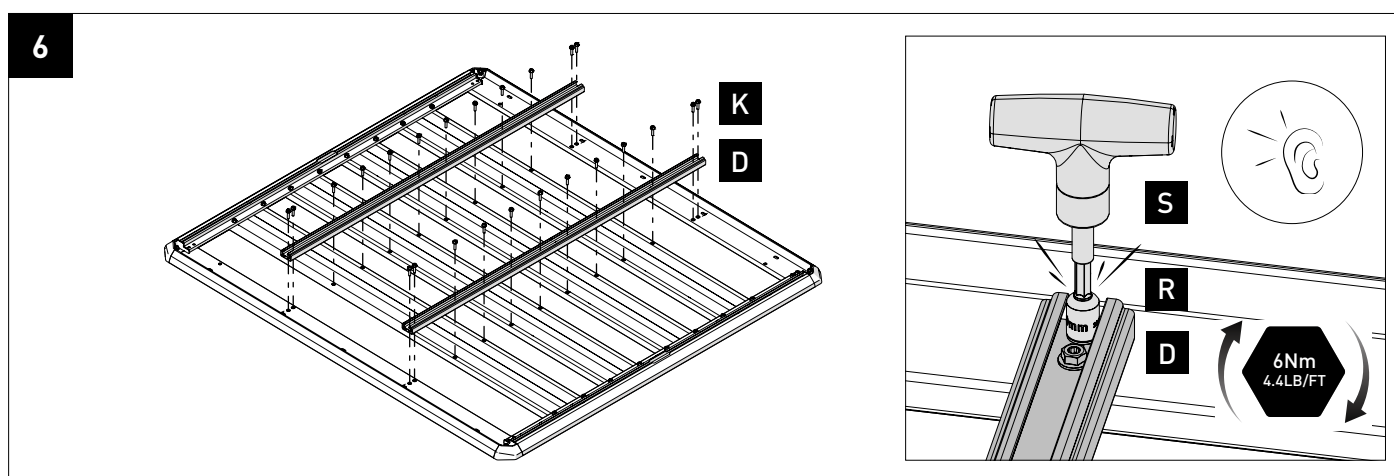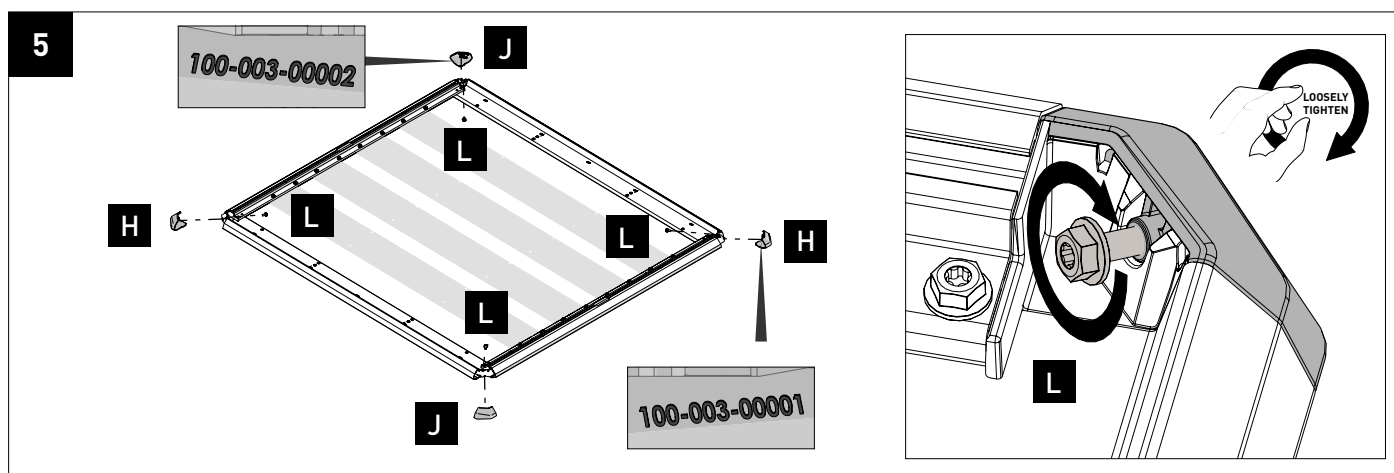


P2
▼


8

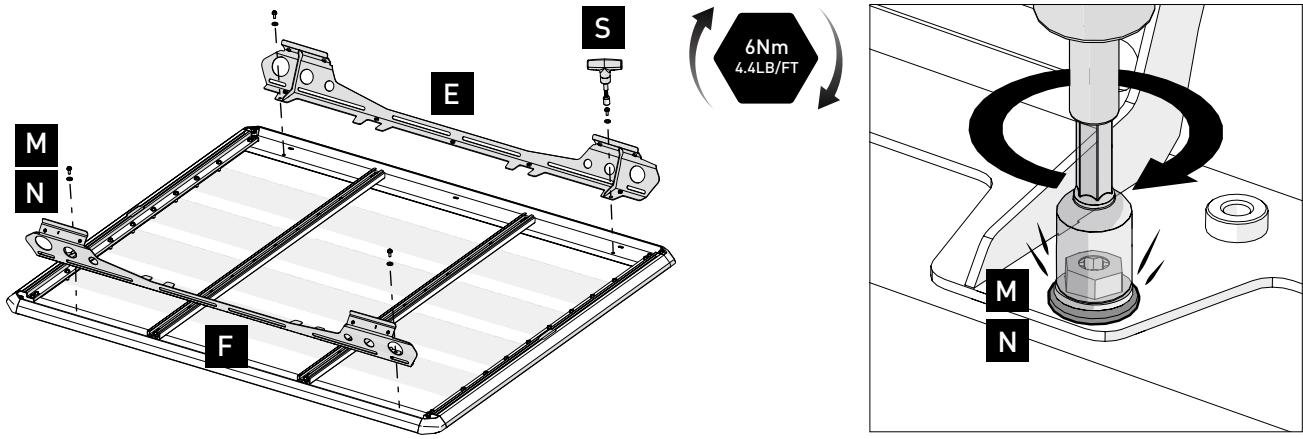


9

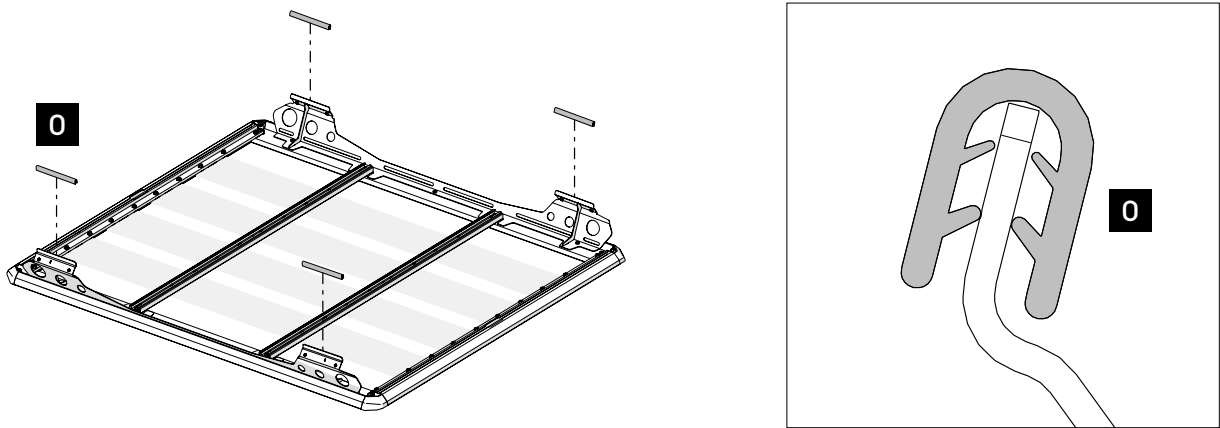

10

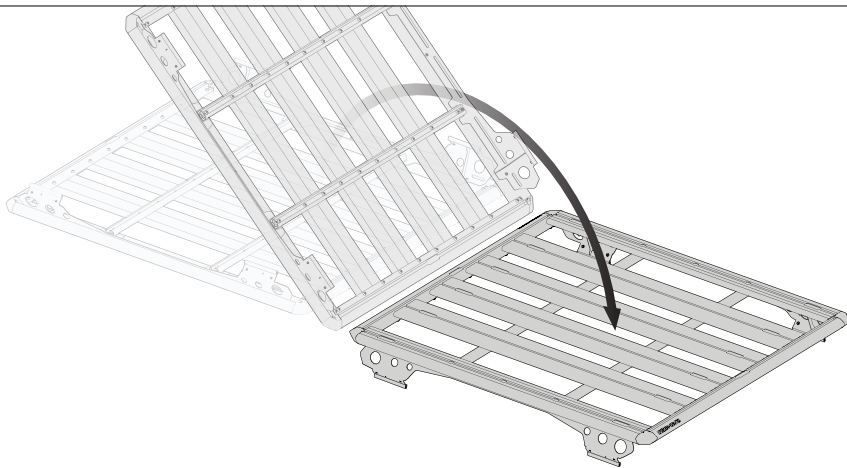


11

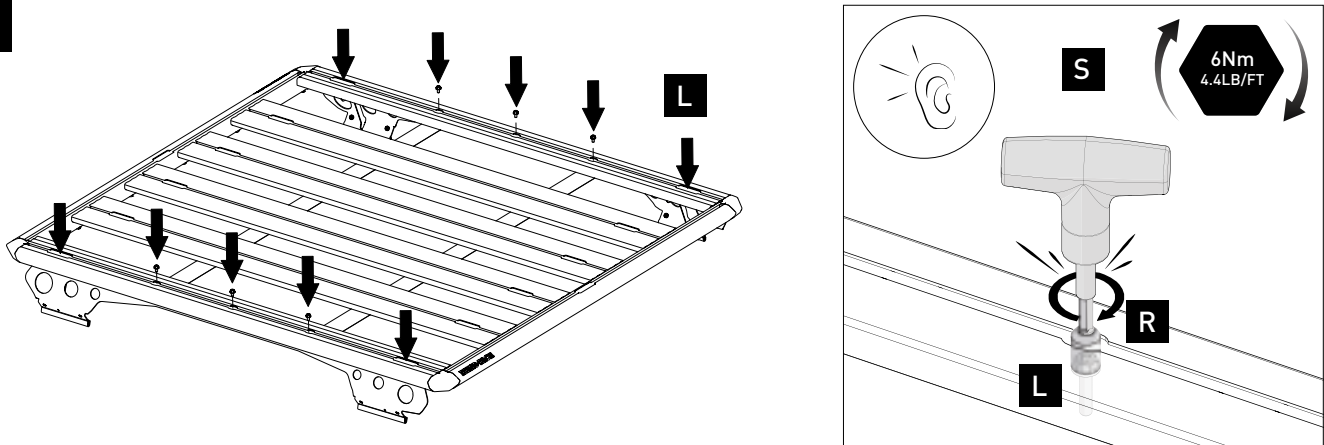


P3
✓

12

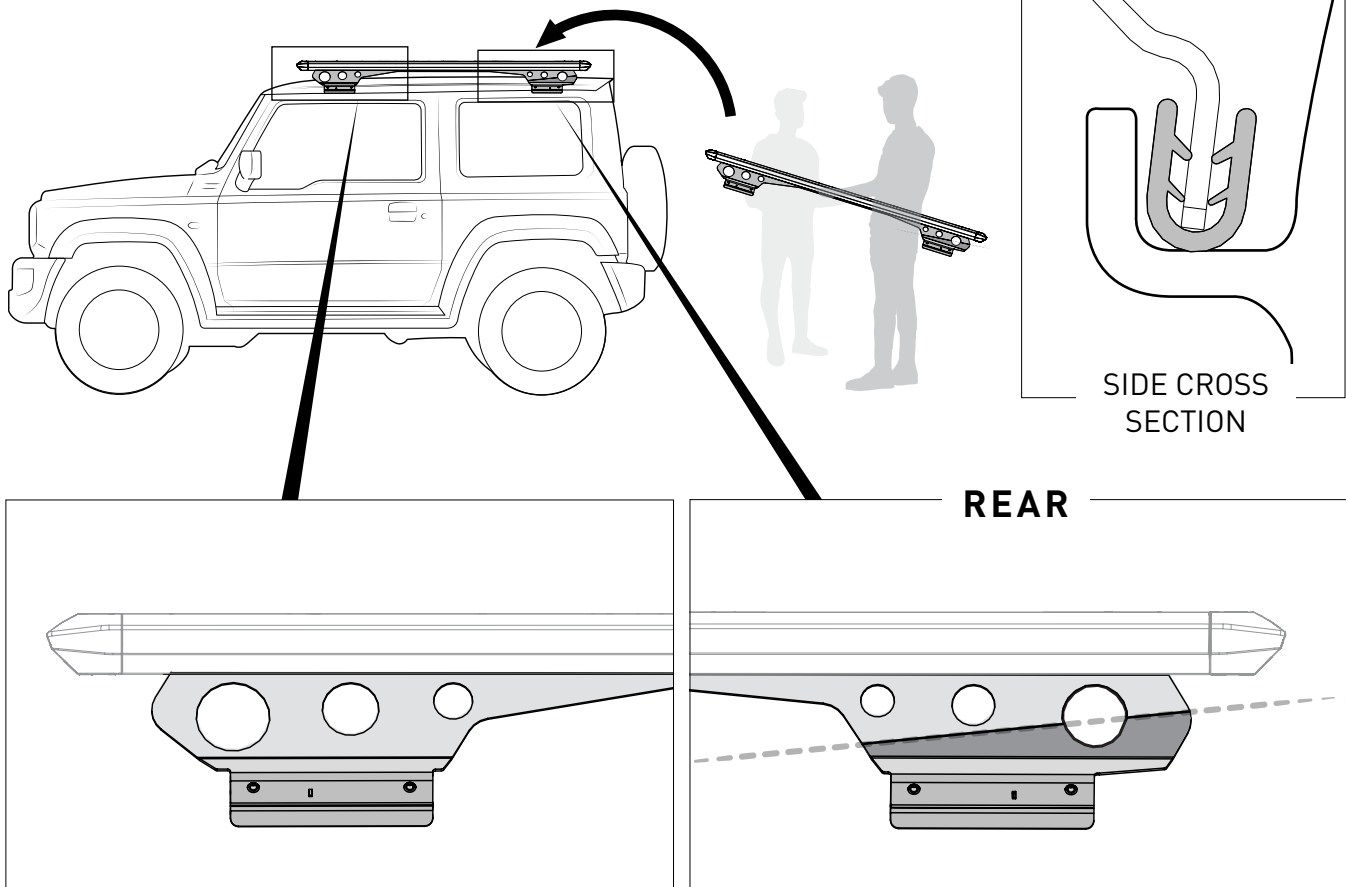





13

3 door position:

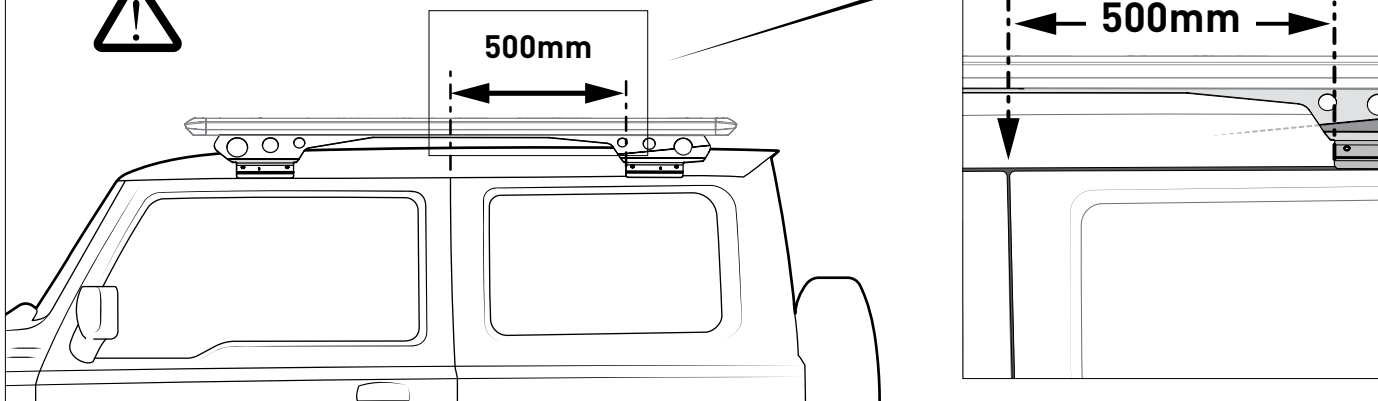


5 door position:

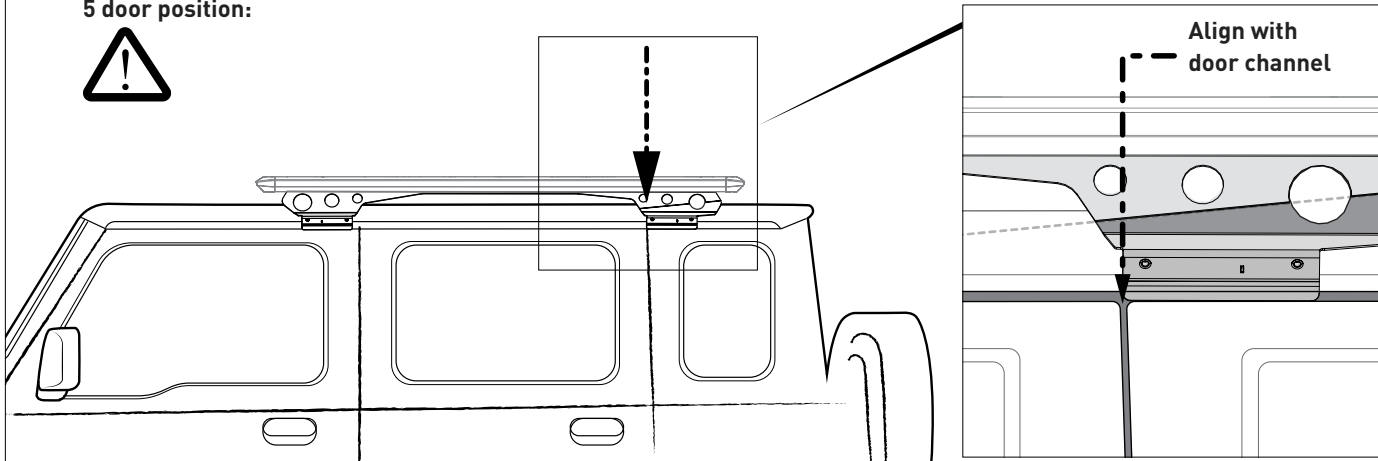

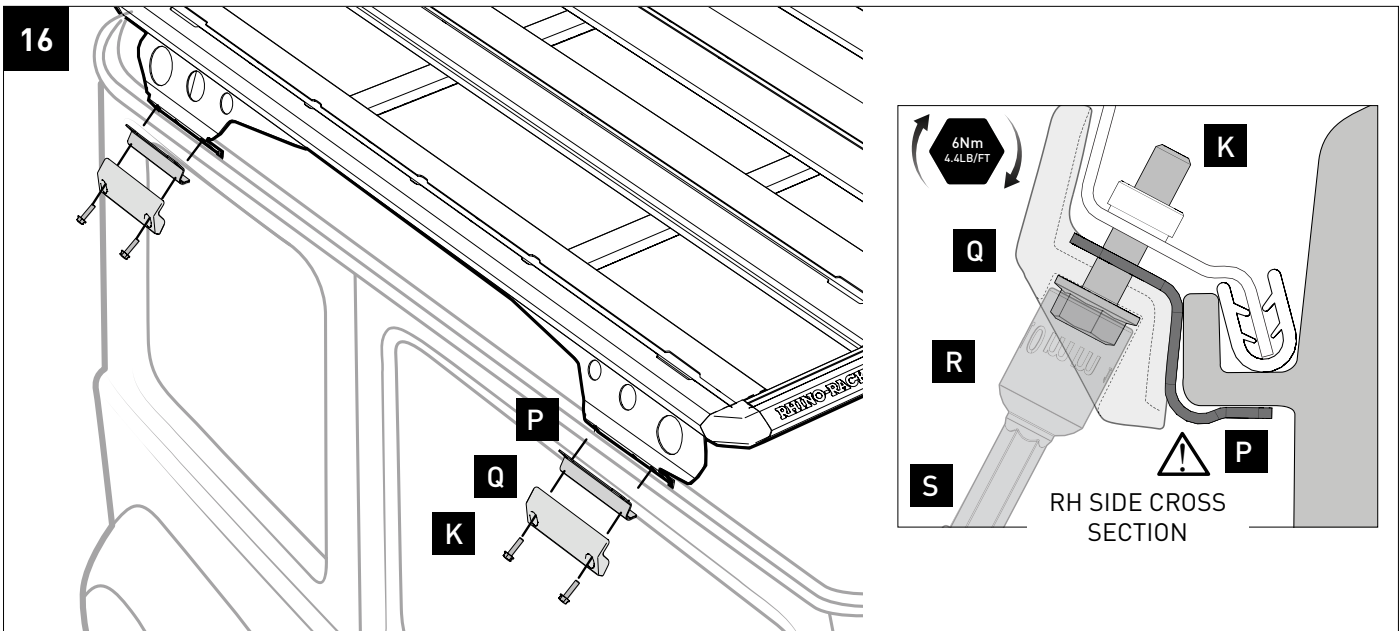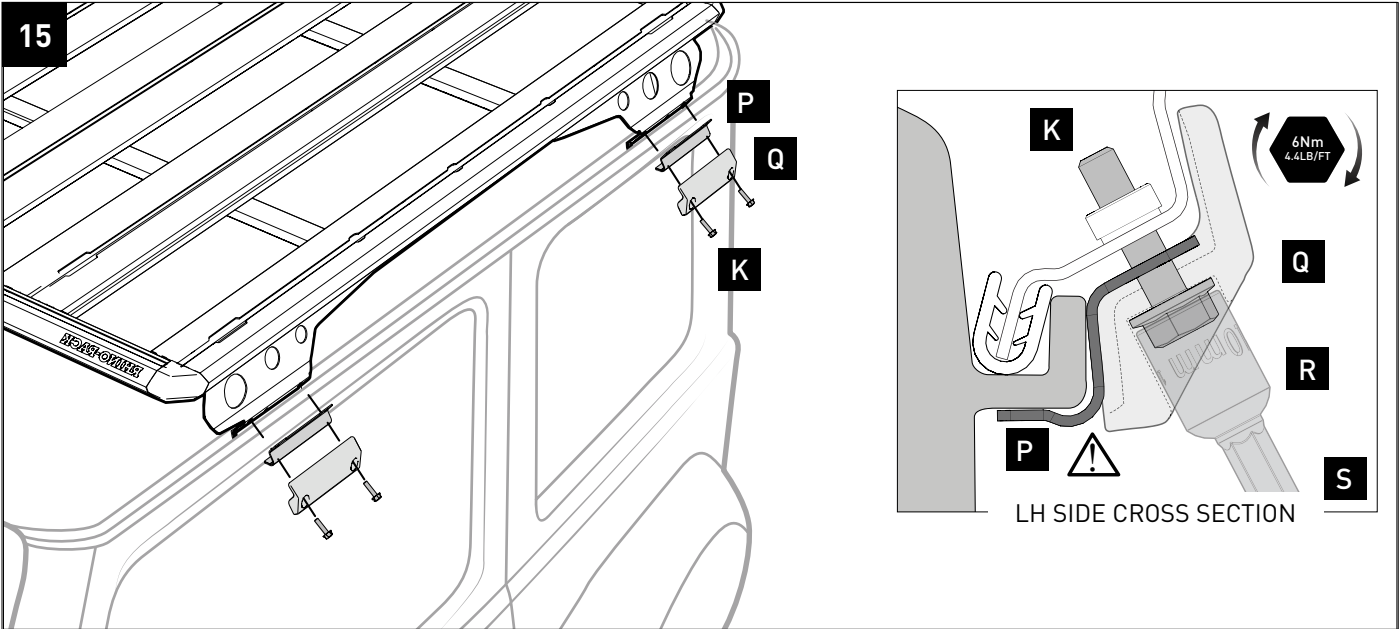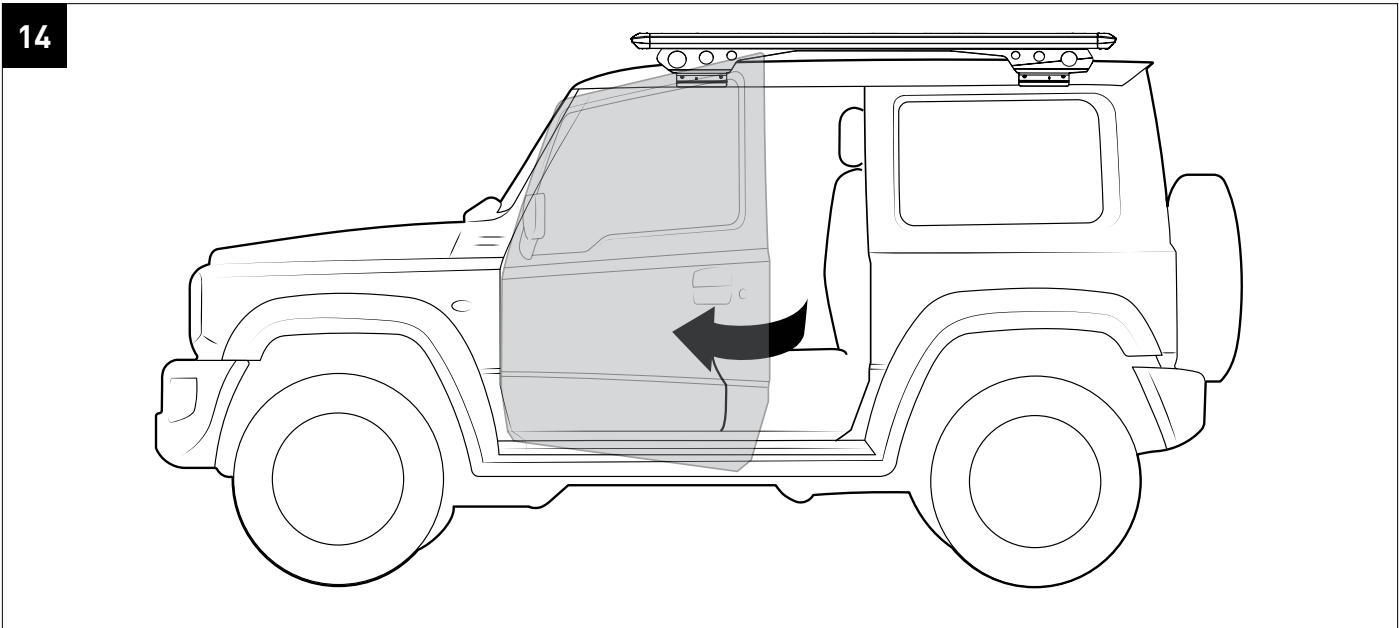



17

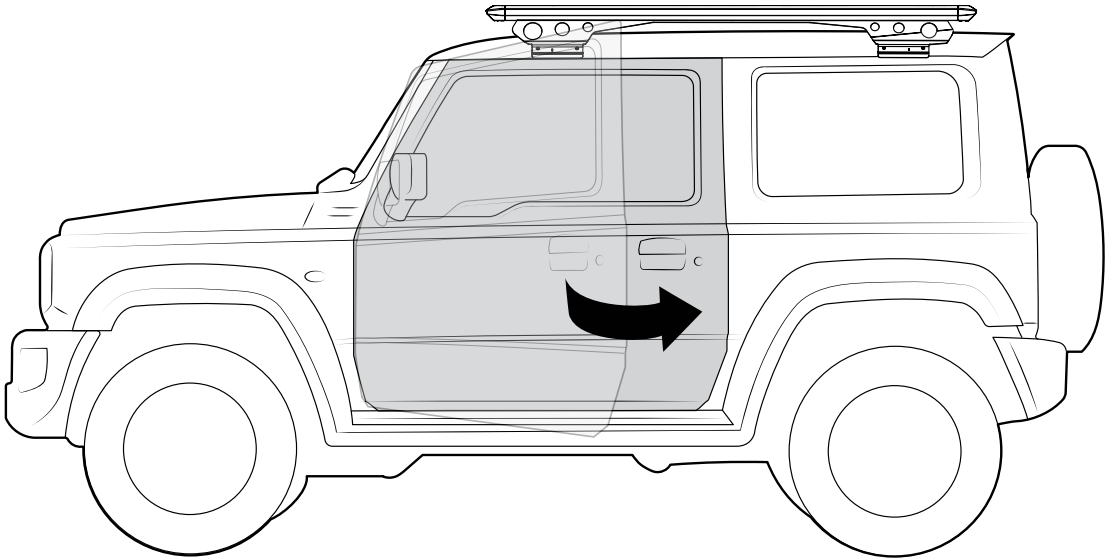

MAINTENANCE

Use **T** to retighten bolts at steps **4 - 8** Use **R** & **S** to retighten bolts at steps **15** & **16**

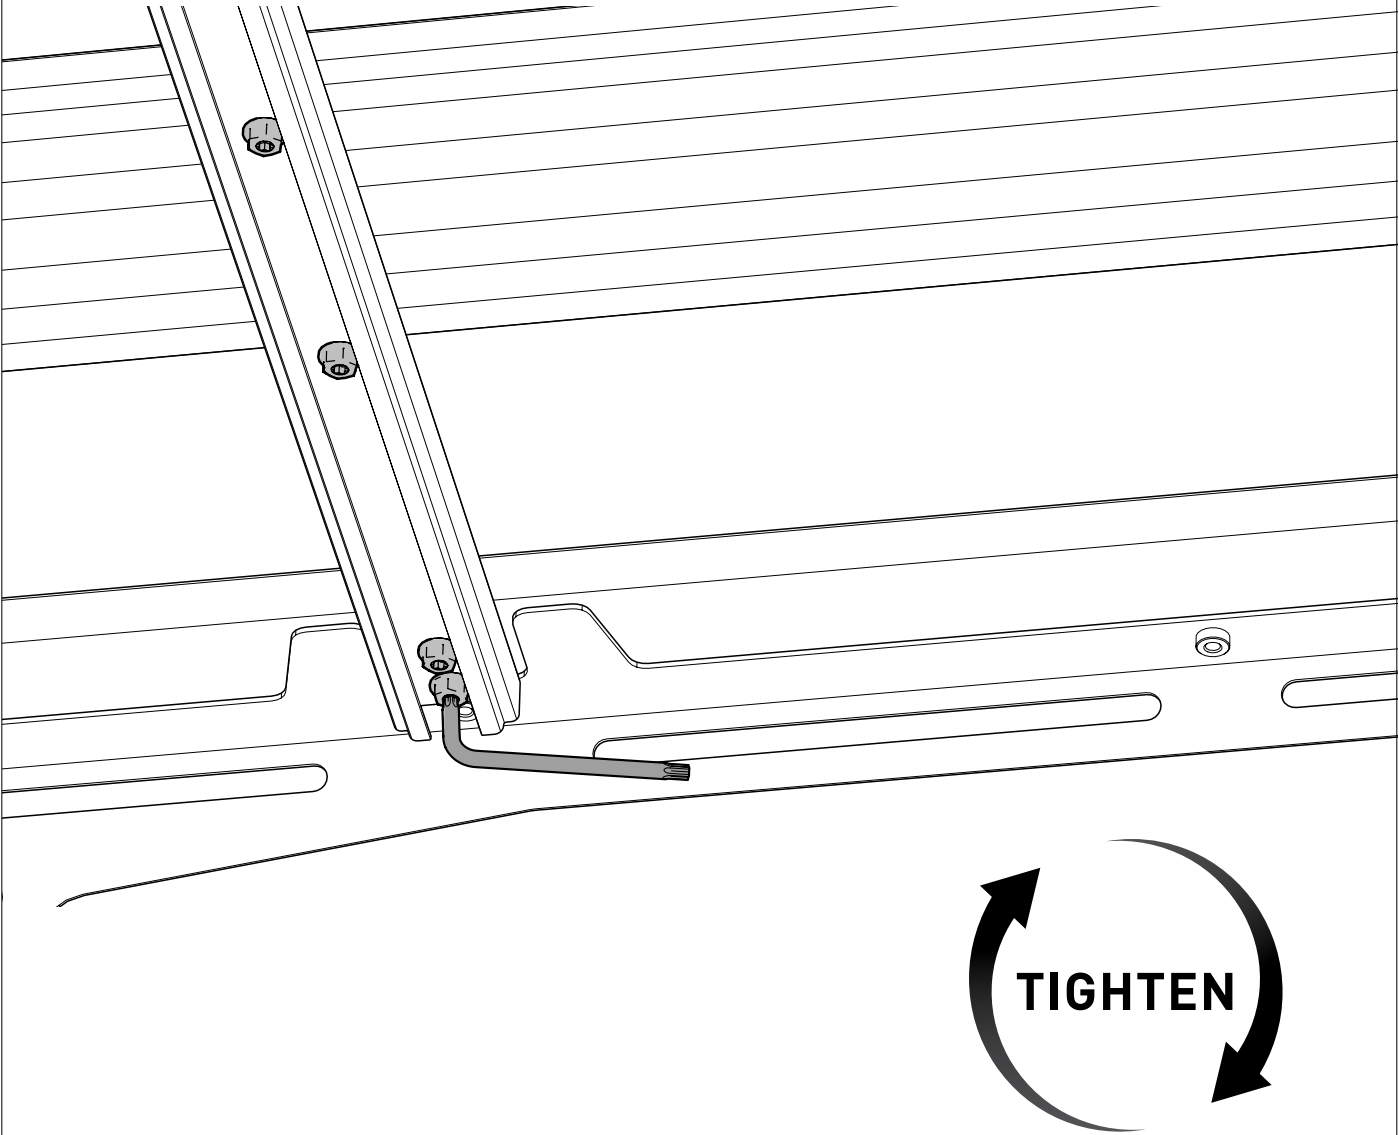

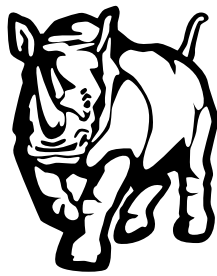

RHINO-RACK®

MAKE SPACE FOR ADVENTURE

RHINORACK.COM

Rhino-Rack AUSTRALIA

22A Hanson Pl,
Eastern Creek, NSW, 2766

Rhino-Rack USA

19822 E 22nd Ave,
Aurora, CO, 80011