



RHINO-RACK

RVP08, RVP11 Supplement - VW Caddy, Renault Kangoo, Nissan Kubistar

Important: Please read these instructions carefully prior to installation.
Please refer to your fitting instruction to ensure that the Roof Rack System is installed in the correct location.
Check the contents of kit before commencing fitment and report any discrepancies.
Place these instructions in the vehicle's glove box after installation is complete.

Maximum load carrying capacity (VW Caddy): 100kg/ 220lbs - 2 crossbars.
(Renault Kangoo/ Nissan Kubistar: 80kg/176lbs - 2 crossbars.

Leg kit: RVL4
Front bar: 883mm (Caddy)
Rear bar: 846mm (Caddy)
Front bar: 818mm (Kangoo/ Kubistar)
Rear bar: 818mm (Kangoo/ Kubistar)
Base kit: RCP08-BK (Caddy)
Base kit: RCP08-BK (Kangoo/ Kubistar)


Leg kit: RCL4
VA Bar: VA126S/B
Base kit: RCP08-BK

Leg kit: RCL4
HD Bar: RB1250S/B
Spacers: QMHD05
Base kit: RCP08-BK

Note Vortex crossbars can be cut to length to fit this vehicle. Measure the desired length out **from the centre of the Vortex Bar** and create a reference with a marker. Carefully cut the bar at these markings using a Saw with an Alloy Cutting Blade.

| | | | | |
|------------|-------------------|---------|---------|---------------------------|
| MARK & CUT | Front Bar. | 441.5mm | 441.5mm | Caddy Kangoo/ Kubistar |
| | | 409mm | 409mm | |
| | Rear Bar. | 423mm | 423mm | Caddy Kangoo/ Kubistar |
| | | 409mm | 409mm | |

Cut the Bar at the required length.

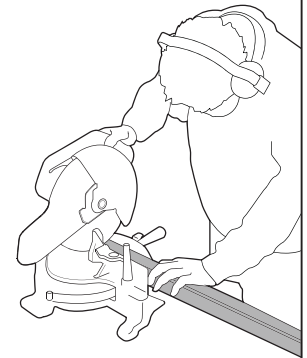

Note for dealers when altering a RSP kits:

Add 38mm to sports bar measurement for RVL.
Add 40mm to sports bar measurement for RVH.

Prepared By: Kayle Everett Authorised: Chris Murty Document: R1381 Date: 01/06/17 Issue: 01