



RHINO-RACK

RVP13 Supplement - Jeep Commander


Important: Please read these instructions carefully prior to installation.
Please refer to your fitting instruction to ensure that the Roof Rack System is installed in the correct location.
Check the contents of kit before commencing fitment and report any discrepancies.
Place these instructions in the vehicle's glove box after installation is complete.

Maximum load carrying capacity: 68kg/ 149lbs - 2 crossbars.


Leg kit: RVL4
Front bar: 1152mm
Rear bar: 1115mm
Base kit: RCP13-BK




Leg kit: RCL4
VA Bar: VA137S/B
Base kit: RCP13-BK

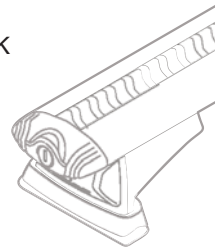


Leg kit: RCL4
HD Bar: RB1375S/B
Spacers: QMHD05
Base kit: RCP13-BK

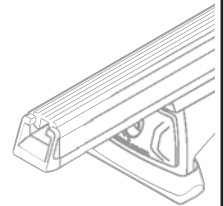


1 Assemble the crossbars and base kits as per corresponding instructions. Fit to vehicle as shown in RCP13-BK. Before tightening make sure the cross bars are parallel across the vehicle. Place the cross bars in the correct position. **Front** pad is 360mm from edge of plastic roof rail cover. **Rear** pad is 340mm from edge of plastic roof rail cover.

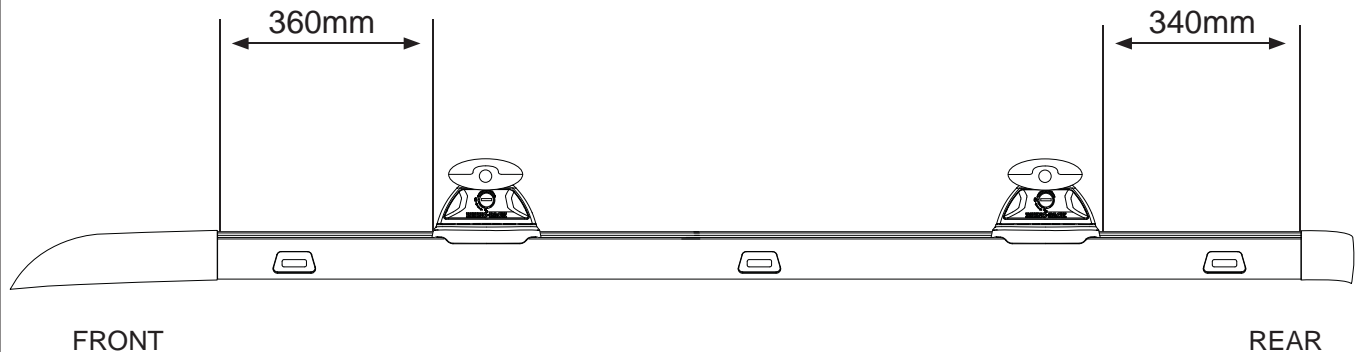

Note Vortex crossbars can be cut to length to fit this vehicle. Measure the desired length out **from the centre of the Vortex Bar** and create a reference with a marker. Carefully cut the bar at these markings using a Saw with an Alloy Cutting Blade.

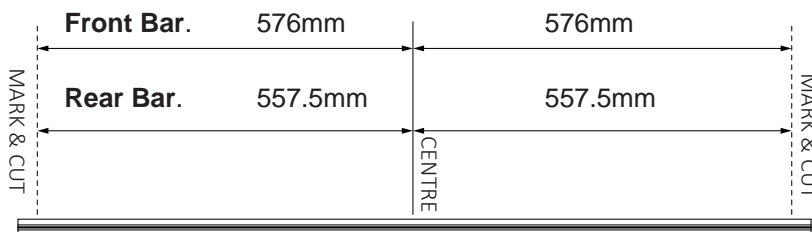

Cut the Bar at the required length.

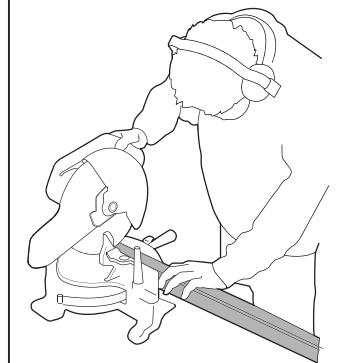

Note for dealers when altering a RSP kits:
Add 38mm to sports bar measurement for RVL.
Add 40mm to sports bar measurement for RVH.