

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.


Fit Time: 45min

RVP79 - Cadillac XT5 2017 on .

Maximum load carrying capacity: 100kg / 220lbs (including weight of the roof rack 5kg/11lbs).



Vortex crossbars can be cut to length to fit this vehicle. Measure the desired length out from the centre of the Vortex Bar and create a reference with a marker. Carefully cut the bar at these markings using a Saw with an Alloy Cutting Blade.

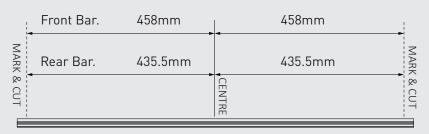



Note for dealers when altering a RSP kits: Add 38mm to sports bar measurement for RVL. Add 40mm to sports bar measurement for RVH. Document No: R2497 Issue No: 01 Issue Date: 16/04/20