





| VEHICLE | | KIT | CROSSBAR |
|--------------------------|-----------|-------|----------|
| Holden Rodeo Crew Cab RA | | DK131 | SZ126 |
| RUNNING DATES | 2003-2008 | | |
| VEHICLE NOTES | | | |

- 1 Open doors. Pull front and rear rubber door seal down to fit metal strap.

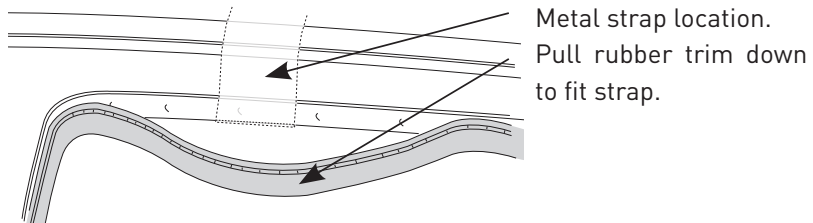

- 2 Re-fit the rubber strip over metal strap.

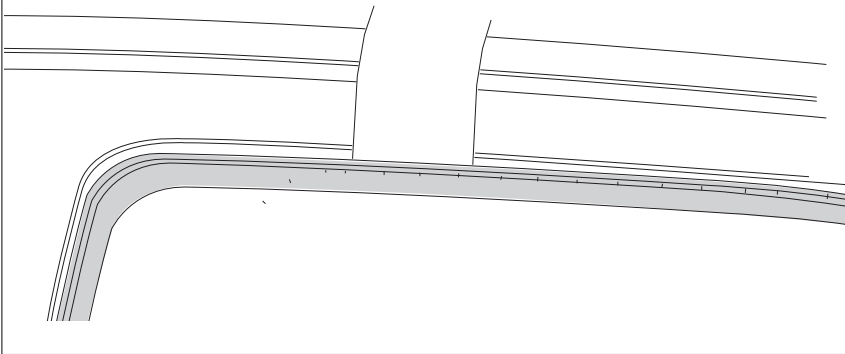

NOTES FOR DEALERS / FITTERS

It is your responsibility to ensure these fitting instructions are given to the end user or client.

Document No: R4274
Issue No: 1
Issue Date: 18-Dec-24