






Fitting Chart - TOYOTA Land Cruiser 4dr 4WD 200 Series

PIONEER 41102	(1928 x 1236mm)	(6' 3 29/32" x 4' 21/32")
PIONEER 42102B	(1928 x 1236mm)	(6' 3 29/32" x 4' 21/32")
PIONEER 45102B	(1928 x 1236mm)	(6' 3 29/32" x 4' 21/32")

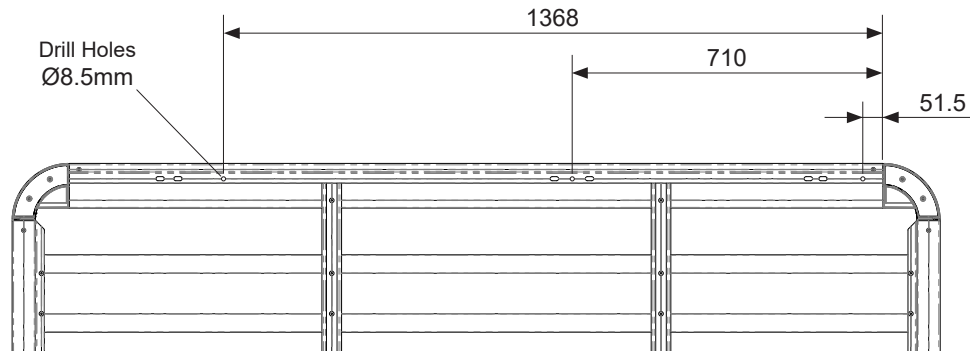


Front of Tray

Front Crossbar			Middle Crossbar			Rear Crossbar			Approx. Overall Vehicle Height
Front Slot	Dim. A	Leg Height Spacer	Middle Slot	Dim. A	Leg Height Spacer	Rear Slot	Dim. A	Leg Height Spacer	
Drill Hole Ø8.5mm	125mm (4 59/64")	PLHSPAIR (Cut)	Drill Hole Ø8.5mm	135mm (5 5/16")	LHSPAIR	Drill Hole Ø8.5mm	145mm (5 45/64")	LHSPAIR	

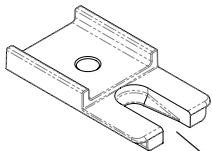Cut PLHSPAIR
(Front Crossbar Only)

Dimension A



Dimension A

Country	Vehicle	Running Date	Vehicle Load Rating (kg/lbs)	Fit Kit
Australia & NZ	TOYOTA Land Cruiser 4dr 4WD 200 Series	11/07 - on	125 / 275	1 x RLCP17 2 x LHSPAIR 1 x PLHSPAIR
Canada, USA & South America	TOYOTA Land Cruiser 4dr SUV 200 Series	2008 - on		
South Africa	TOYOTA Land Cruiser 4dr SUV 200 Series	2011 - on		
UK & Europe	TOYOTA Land Cruiser 4dr 4WD 200 Series	11/07 - on		

Rhino-Rack
3 Pike Street, Rydalmere,
NSW 2116, Australia.
(Ph) (02) 9638 4744
(Fax) (02) 9638 4822

Document No: R1446
Prepared By: Nigel Greig
Authorised By: Chris Murty

Issue No: 1
Issue Date: 07/08/2017

These instructions remain the property of Rhinorack Australia Pty Ltd and may not be used or changed for any other purpose than intended.