



DK051 Rhino-Rack VA, Aero, Euro & HD crossbar instruction









IDENTIFICATION CHART

VA crossbar AERO crossbar

EURO crossbar

HD crossbar

						AERU	crossdar EURO crossdar HD crossdar							
			FRONT CROSSBAR					REAR CROSSBAR						
			Figure		VA	AERO EURO	HD				VA VA	AERO EURO	HD	
Vehicle	Date	Crossbar	Front Right Pad/ Clamp	Front Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction	Rear Right Pad/ Clamp	Rear Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction
Ford Laser Sedan	10/94- 03/99	1180mm	M3 SUB	0146	181mm	126mm	930mm	OUT	M366 SUB0145 Arrow FORWARD		171mm	116mm	910mm	OUT
			Arr FORV											
			_											




DK051 Rhino-Rack VA, Aero, Euro & HD crossbar instruction


Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.

Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

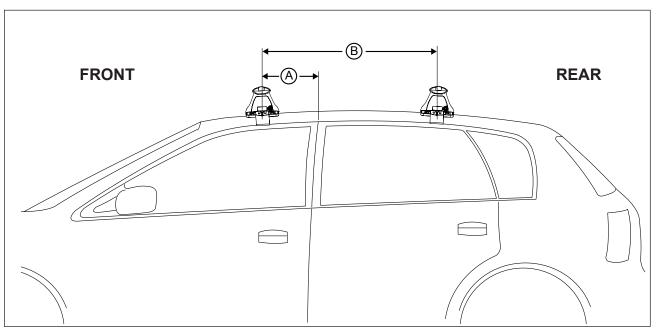

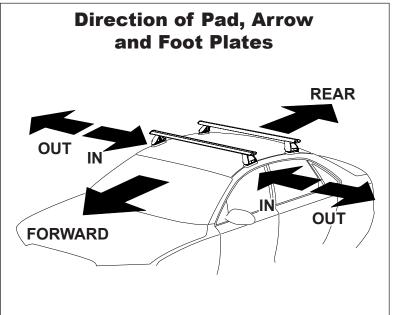

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)
Ford Laser Sedan	10/94-03/99	300mm	700mm	75kg

Document No. RS223 Issue Date: 19 December 2013 Page 2 of 2