



## **DK063 Rhino-Rack** VA, Aero, Euro & HD crossbar instruction

## **IDENTIFICATION CHART**









VA crossbar

AERO crossbar

EURO crossbar

HD crossbar

			FRONT CROSSBAR						REAR CROSSBAR					
					VA	AERO EURO	HD.				VA	AERO EURO	<b>II</b> D	
Vehicle	Date	Crossbar	Front Right Pad/ Clamp	Front Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance ( x )	Foot plate arrow direction	Rear Right Pad/ Clamp	Rear Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance ( x )	Foot plate arrow direction
Ford Laser Liata Hatch	10/94- 03/99	1180mm	M3 SUB(	0149 ow	175mm	120mm	918mm	OUT	M366 SUB0145 Arrow		182mm	127mm	932mm	OUT
			FORV	VARD					FORV	VARD I				




## DK063 Rhino-Rack VA, Aero, Euro & HD crossbar instruction


Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.

**Measurement B**: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

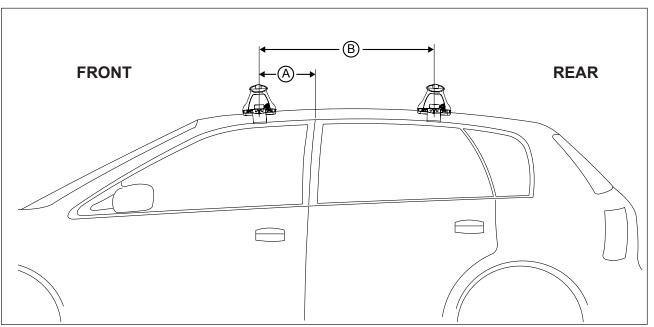

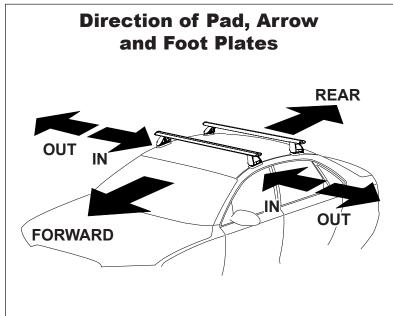

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)	
Ford Laser Liata Hatch	10/94-03/99	300mm	600mm	75kg / 165lbs	

Document No. RS235 Issue Date: 20 December 2013 Page 2 of 2