





# DK177 Rhino-Rack VA, Aero, Euro & HD crossbar instruction


## IDENTIFICATION CHART

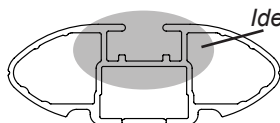


VA crossbar

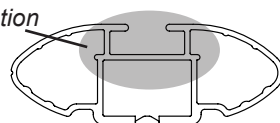

AERO crossbar





EURO crossbar




HD crossbar

### FRONT CROSSBAR

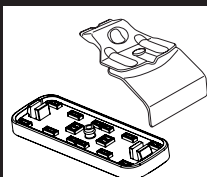

VA

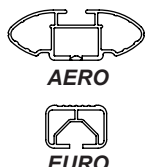


AERO

EURO





HD



Foot plate  
arrow  
direction

### REAR CROSSBAR

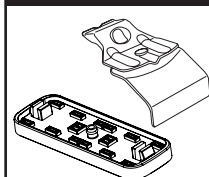

VA




AERO

EURO



HD



Foot plate  
arrow  
direction

Vehicle	Date	Crossbar	Front Right Pad/ Clamp	Front Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance ( x )	Foot plate arrow direction	Rear Right Pad/ Clamp	Rear Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance ( x )	Foot plate arrow direction
Acura RDX 5dr SUV	07-12	1375mm	M366 SUB0150		172mm	117mm	1107mm / 43,37/64"	OUT	M367 SUB0257		143mm	88mm	1049mm / 41,19/64"	IN
			Arrow FORWARD						Arrow FORWARD					



## DK177 Rhino-Rack VA, Aero, Euro & HD crossbar instruction

**Measurement A:** CENTRE of door jamb to CENTRE arrow of leg foot plate.

**Measurement B:** CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.



**Carrying capacity:** Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.



### Acura RDX

FRONT Foot plate arrow OUT.

REAR Foot plate arrow IN.

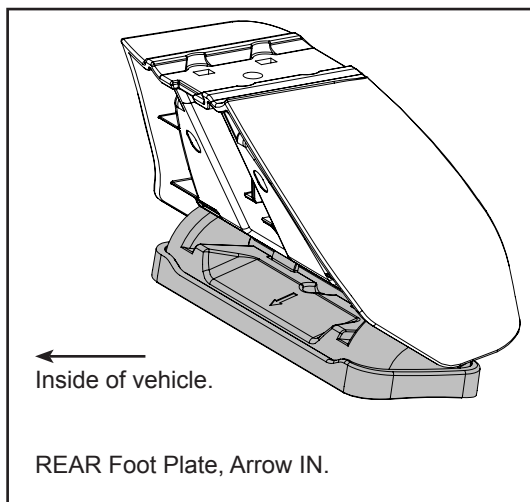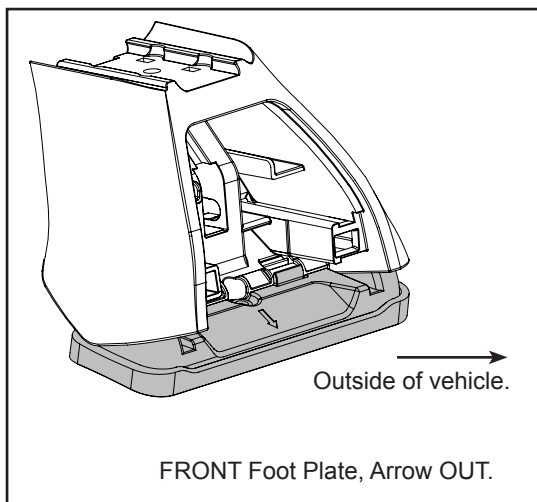

### Direction of Pad, Arrow and Foot Plates

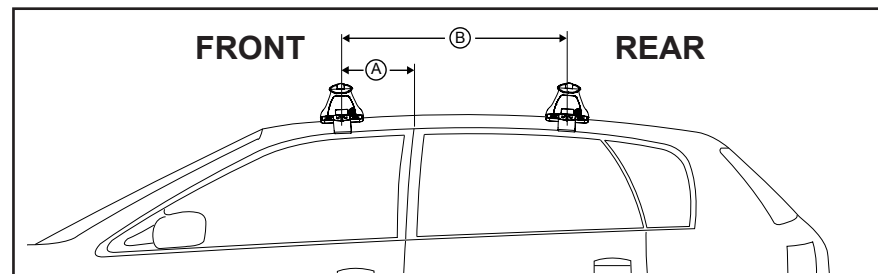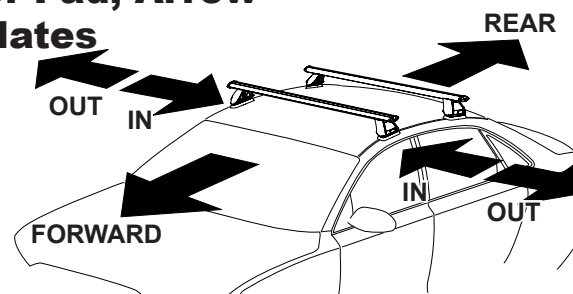

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)
Acura RDX 5dr SUV	07-12	250mm / 9,27/32"	650mm / 25,19/32"	50kg / 110lbs